

Updating 4 Series Firmware

4 Series VLite/firmware Instructions.

Once units have been updated to version 2.3.169, they will need to continue running version 2.3.169 or later.

When using VLite to update firmware, the VLite file is a .jar file that is a Java application (not the firmware file), and therefore should never be uploaded directly to any unit via their web interface.

Firmware Update Guide (which includes instructions on running the VLite .jar file):

Download link: [Update Guide](#)

Installation Instructions:

This software can be used to configure and control the endpoints (including auto discovery of the units, firmware updates, drag and drop routing, presets, etc.). Download and launch this jar file on a laptop or PC. Details about the VLite software can be found in the manuals. The latest java JRE runtime is a prerequisite on the machine running VLite, it can be found here: [Java Download](#)

1. Create a read/write folder on your C:/ drive and name it VLite.
2. Make sure the folder has read/write access.
3. Cut and paste the VLite jar file you download to that folder and launch the VLite .jar file from there.
4. Copy URL (Your computer IP address, port 8080 (default)) and paste into a web browser (Chrome recommended) to access the VLite UI.

Please contact support@visionary-av.com with any questions.