



Hewlett Packard
Enterprise

MLNX-OS for HPE StoreFabric M-Series Ethernet Switch User Manual

Rev 4.70

Software Version 3.6.4120

Part Number: 882263-001

Published: August 2017

Edition: 1

Notices

© Copyright 2017 Hewlett Packard Enterprise Development LP

The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein

Links to third-party websites take you outside the Hewlett Packard Enterprise website. Hewlett Packard Enterprise has no control over and is not responsible for information outside the Hewlett Packard Enterprise website.

Confidential computer software. Valid license from Hewlett Packard Enterprise required for possession, use, or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the US Government under vendor's standard commercial license.

Mellanox®, Mellanox logo, ConnectX®, MLNX-OS®, SwitchX®, Virtual Protocol Interconnect® are registered trademarks of Mellanox Technologies, Ltd.

All other trademarks are property of their respective owners.

For the most updated list of Mellanox trademarks, visit <http://www.mellanox.com/page/trademarks>

Table of Contents

Document Revision History	3
About this Manual	6
Chapter 1 Introduction	9
1.1 System Features	9
1.2 Ethernet Features.....	10
Chapter 2 Getting Started.	12
2.1 Configuring the Switch for the First Time.....	12
2.1.1 Re-Running the Wizard.....	18
2.2 Starting the Command Line (CLI).....	18
2.3 Starting the Web User Interface (WebUI)	19
2.4 Licenses	20
2.4.1 Installing MLNX-OS® License (CLI)	21
2.4.2 Installing MLNX-OS License (Web).....	21
2.4.3 Autopass License Support	24
2.4.4 Retrieving a Lost License Key	24
2.4.5 Commands.....	25
Chapter 3 User Interfaces	30
3.1 Command Line Interface Overview.....	30
3.1.1 CLI Modes	30
3.1.2 Syntax Conventions.....	31
3.1.3 Getting Help.....	31
3.1.4 Prompt and Response Conventions.....	32
3.1.5 Using the “no” Form	33
3.1.6 Parameter Key.....	34
3.1.7 CLI Pipeline Operator Commands	35
3.1.7.1 “include” and “exclude” CLI Filtration Options.....	35
3.1.7.2 “watch” CLI Monitoring Option	36
3.1.7.3 “json-print” CLI Option	37
3.1.8 CLI Shortcuts	38
3.2 Web Interface Overview	39
3.2.1 Setup Menu	40
3.2.2 System Menu.....	41
3.2.3 Security Menu	42
3.2.4 Ports Menu	42
3.2.5 Status Menu.....	43
3.2.6 ETH Mgmt	44

3.2.7	IP Route	44
3.3	Secure Shell (SSH)	45
3.3.1	Adding a Host and Providing an SSH Key	45
3.3.2	Retrieving Return Codes when Executing Remote Commands	45
3.4	Management Information Bases (MIBs)	46
3.5	Commands	49
3.5.1	CLI Session	49
3.5.2	Banner	61
3.5.3	SSH	69
3.5.4	Remote Login	87
3.5.5	Web Interface	90

Chapter 4 System Management 105

4.1	Management Interface	105
4.1.1	Configuring Management Interfaces with Static IP Addresses	105
4.1.2	Configuring IPv6 Address on the Management Interface	105
4.1.3	Dynamic Host Configuration Protocol (DHCP)	106
4.1.4	Default Gateway	106
4.1.5	In-Band Management	106
4.1.6	Configuring Hostname via DHCP (DHCP Client Option 12)	107
4.1.7	Commands	108
4.1.7.1	Interface	108
4.1.7.2	Hostname Resolution	133
4.1.7.3	Routing	140
4.1.7.4	Network to Media Resolution (ARP & NDP)	144
4.1.7.5	DHCP	150
4.1.7.6	General IPv6 Commands	153
4.1.7.7	IP Diagnostic Tools	154
4.2	NTP, Clock & Time Zones	159
4.2.1	NTP Authenticate	159
4.2.2	NTP Authentication Key	159
4.2.3	Commands	160
4.3	PTP	178
4.3.1	Precision Time Protocol principles	178
4.3.2	Clock types and operation modes	180
4.3.3	PTP domains	180
4.3.3.1	Boundary Clock	181
4.3.4	PTP Commands	183
4.3.5	PTP Show Commands	192
4.4	Software Management	197
4.4.1	Upgrading MLNX-OS Software	197
4.4.2	Upgrading MLNX-OS HA Groups	201

4.4.3	Deleting Unused Images	201
4.4.4	Downgrading MLNX-OS Software	202
4.4.4.1	Downloading Image	203
4.4.4.2	Downgrading Image	203
4.4.4.3	Switching to Partition with Older Software Version	205
4.4.5	Upgrading System Firmware	206
4.4.5.1	After Updating MLNX-OS Software	206
4.4.5.2	Importing Firmware and Changing the Default Firmware	206
4.4.6	Commands	208
4.5	Configuration Management	221
4.5.1	Saving a Configuration File	221
4.5.2	Loading a Configuration File	221
4.5.3	Restoring Factory Default Configuration	221
4.5.4	Managing Configuration Files	222
4.5.4.1	BIN Configuration Files	222
4.5.4.2	Text Configuration Files	223
4.5.5	Commands	224
4.5.5.1	File System	224
4.5.5.2	Configuration Files	234
4.6	Logging	255
4.6.1	Monitor	255
4.6.2	Remote Logging	255
4.6.3	Commands	256
4.7	Debugging	280
4.7.1	Commands	281
4.8	Link Diagnostic Per Port	295
4.8.1	General	295
4.8.2	List of Possible Output Messages	295
4.8.3	Commands	296
4.9	Signal Degradation Monitoring	298
4.9.1	General	298
4.9.2	Effective-BER Monitoring	298
4.10	Event Notifications	301
4.10.1	Supported Events	301
4.10.2	Terminal Notifications	302
4.10.3	Email Notifications	303
4.10.4	Commands	305
4.10.4.1	Email Notification	305
4.11	Telemetry	324
4.11.1	Commands	325
4.12	User Management and Security	347

4.12.1	User Accounts	347
4.12.2	Authentication, Authorization and Accounting (AAA)	347
4.12.2.1	User Re-authentication	348
4.12.2.2	RADIUS	348
4.12.2.3	TACACS+	348
4.12.2.4	LDAP	348
4.12.3	System Secure Mode	349
4.12.4	Commands	351
4.12.4.1	User Accounts	351
4.12.4.2	AAA Methods	356
4.12.4.3	RADIUS	371
4.12.4.4	TACACS+	375
4.12.4.5	LDAP	379
4.12.4.6	System Secure Mode	397
4.13	Cryptographic (X.509, IPsec) and Encryption	399
4.13.1	System File Encryption	399
4.13.1.1	Commands	400
4.14	Scheduled Jobs	417
4.14.1	Commands	417
4.15	Statistics and Alarms	427
4.15.1	Commands	427
4.16	Chassis Management	448
4.16.1	System Health Monitor	448
4.16.1.1	Re-Notification on Errors	448
4.16.1.2	System Health Monitor Alerts Scenarios	449
4.16.2	Power Management	455
4.16.2.1	Width Reduction Power Saving	455
4.16.3	Monitoring Environmental Conditions	457
4.16.4	USB Access	459
4.16.5	Unit Identification LED	460
4.16.6	System Reboot	460
4.16.6.1	Rebooting 1U Switches	460
4.16.7	Commands	461
4.16.7.1	Chassis Management	461
4.17	Network Management Interfaces	488
4.17.1	SNMP	488
4.17.1.1	Standard MIBs	488
4.17.1.2	Private MIB	490
4.17.1.3	Mellanox Private Traps	490
4.17.1.4	Configuring SNMP	491
4.17.1.5	Configuring an SNMPv3 User	491
4.17.1.6	Configuring an SNMP Notification	492

4.17.1.7	SNMP SET Operations	494
4.17.1.8	IF-MIB and Interface Information.	499
4.17.2	JSON API	499
4.17.2.1	Authentication	499
4.17.2.2	Sending the Request	500
4.17.2.3	JSON Request Format.	500
4.17.2.4	JSON Response Format	502
4.17.2.5	Supported Commands	505
4.17.2.6	JSON Examples.	506
4.17.2.7	JSON Request Using WebUI	512
4.17.3	XML API	513
4.17.4	Commands	514
4.17.4.1	SNMP Commands	514
4.17.4.2	XML API Commands	534
4.17.4.3	JSON API Commands	536
4.18	Puppet Agent	539
4.18.1	Setting the Puppet Server	539
4.18.2	Accepting the Switch Request	539
4.18.3	Installing Modules on the Puppet Server	540
4.18.4	Writing Configuration Classes	540
4.18.5	Supported Configuration Capabilities.	543
4.18.5.1	Ethernet and Port-Channel Interface Capabilities	543
4.18.5.2	VLAN Capabilities.	543
4.18.5.3	Layer 2 Ethernet Interface Capabilities	543
4.18.5.4	LAG (Port-Channel) Capabilities	544
4.18.5.5	Layer 3 Interface Capabilities	544
4.18.5.6	OSPF Interface Capabilities	544
4.18.5.7	OSPF Area Capabilities	546
4.18.5.8	Router OSPF Capabilities.	546
4.18.5.9	Protocol LLDP, SNMP, IP Routing and Spanning Tree Capabilities	546
4.18.5.10	Fetches Image Capabilities	546
4.18.5.11	Installed Image Capabilities	547
4.18.6	Supported Resources for Each Type	547
4.18.7	Troubleshooting	549
4.18.7.1	Switch and Server Clocks are not Synchronized	549
4.18.7.2	Outdated or Invalid SSL Certificates Either on the Switch or the Server	549
4.18.7.3	Communications Issue	549
4.18.8	Commands	550
4.19	IP Table Filtering	558
4.19.1	Configuring IP Table Filtering.	558
4.19.2	Modifying IP Table Filtering.	560
4.19.3	Rate-limit Rule Configuration	560
4.19.4	Commands	561

4.20	Resource Scale	567
4.20.1	Ethernet Resources	567
4.20.1.1	Strict Mode	567
4.20.1.2	Loose Mode – SwitchX®	568
4.20.1.3	Loose Mode – Spectrum™	568
4.20.2	Commands	569
4.21	Linux Dockers	571
4.21.1	Commands	572
Chapter 5	Ethernet Switching	588
5.1	Interface	588
5.1.1	Break-Out Cables	588
5.1.1.1	Changing the Module Type to a Split Mode	589
5.1.1.2	Unsplitting a Split Port	590
5.1.2	56GbE Link Speed	590
5.1.3	Transceiver Information	591
5.1.4	High Power Transceivers	592
5.1.5	Forward Error Correction	592
5.1.6	Commands	593
5.2	Interface Isolation	622
5.2.1	Configuring Isolated Interfaces	622
5.2.2	Commands	623
5.3	Link Aggregation Group (LAG)	630
5.3.1	Configuring Static Link Aggregation Group (LAG)	630
5.3.2	Configuring Link Aggregation Control Protocol (LACP)	630
5.3.3	Commands	631
5.4	MLAG	652
5.4.1	MLAG Keepalive and Failover	654
5.4.2	Unicast and Multicast Sync	654
5.4.3	MLAG Port Sync	654
5.4.4	MLAG Virtual System-MAC	655
5.4.5	Upgrading MLAG Pair	655
5.4.6	Configuring MLAG	655
5.4.7	Commands	659
5.5	VLANs	678
5.5.1	Configuring Access Mode and Assigning Port VLAN ID (PVID)	678
5.5.2	Configuring Hybrid Mode and Assigning Port VLAN ID (PVID)	679
5.5.3	Configuring Trunk Mode VLAN Membership	679
5.5.4	Configuring Hybrid Mode VLAN Membership	680
5.5.5	Commands	681
5.6	Voice VLAN	692
5.6.1	Configuring Voice VLAN	693

5.6.2	Limitations	696
5.7	QinQ	697
5.7.1	QinQ Operation Modes	697
5.7.2	Configuring QinQ	697
5.7.3	Commands	699
5.8	MAC Address Table	701
5.8.1	Configuring Unicast Static MAC Address	701
5.8.2	MAC Learning Considerations	701
5.8.3	Commands	702
5.9	Spanning Tree	710
5.9.1	Port Priority and Cost	710
5.9.2	Port Type	710
5.9.3	BPDU Filter	711
5.9.4	BPDU Guard	711
5.9.5	Loop Guard	711
5.9.6	Root Guard	712
5.9.7	MSTP	712
5.9.8	RPVST	712
5.9.8.1	RPVST and VLAN Limitations	713
5.9.8.2	RPVST and RSTP Interoperability	714
5.9.9	Commands	714
5.10	OpenFlow	748
5.10.1	Flow Table	748
5.10.2	OpenFlow 1.3 Support	749
5.10.2.1	ACL Rule Tables (0-249)	750
5.10.2.2	FDB Table (250)	753
5.10.2.3	Router Table (251)	754
5.10.3	Configuring OpenFlow	754
5.10.4	Configuring Secure Connection to OpenFlow	755
5.10.5	Commands	758
5.11	VXLAN	791
5.11.1	Configuring VXLAN	791
5.11.2	VMware Network Virtualization and Security Platform (NSX) Configuration 793	
5.11.2.1	Hardware Topology	793
5.11.2.2	Switch Configuration	794
5.11.3	NSX Manager Configuration	796
5.11.3.1	Adding Hosts to Replication Cluster	796
5.11.3.2	Adding the HPE M-series Switch to NSX	797
5.11.4	Mapping a Logical Switch to a Physical Switch Port	797
5.11.5	Commands	799
5.12	IGMP Snooping	818

5.12.1	Configuring IGMP Snooping.	818
5.12.2	Defining a Multicast Router Port on a VLAN	818
5.12.3	IGMP Snooping Querier	820
5.12.4	Commands	821
5.13	Link Layer Discovery Protocol (LLDP)	841
5.13.1	Configuring LLDP.	841
5.13.2	DCBX	842
5.13.3	Commands	842
5.14	Quality of Service (QoS)	859
5.14.1	QoS Classification	859
5.14.1.1	Trust Levels.	859
5.14.1.2	Switch Priority to IEEE Priority Mapping	860
5.14.1.3	Default QoS Configuration	860
5.14.2	QoS Rewrite	861
5.14.2.1	Switch-priority to PCP,DEI Re-marking Mapping	861
5.14.2.2	Switch-priority to DSCP Re-marking Mapping.	861
5.14.2.3	DSCP to Switch-priority in Router	861
5.14.2.4	Default Configuration	861
5.14.3	Queuing and Scheduling (ETS) for SwitchX.	862
5.14.4	Queuing and Scheduling (ETS) for Spectrum	863
5.14.4.1	Traffic Class	864
5.14.4.2	Multicast Aware Traffic Class Mapping	864
5.14.4.3	Traffic Shapers	864
5.14.4.4	Default Shaper Configuration.	864
5.14.5	RED and ECN	865
5.14.6	Commands	867
5.14.6.1	QoS Classification	867
5.14.6.2	QoS Rewrite	878
5.14.6.3	Queuing and Scheduling (ETS)	883
5.14.6.4	RED & ECN	896
5.15	Access Control List	899
5.15.1	Configuring Access Control List	899
5.15.2	ACL Actions	899
5.15.3	Commands	900
5.16	Port Mirroring	914
5.16.1	Mirroring Sessions	914
5.16.1.1	Source Interface.	915
5.16.1.2	Destination Interface.	916
5.16.1.3	Header Format.	916
5.16.1.4	Congestion Control	917
5.16.1.5	Truncation	917
5.16.2	Configuring Mirroring Sessions	917

5.16.3	Verifying Mirroring Sessions	920
5.16.4	Commands	920
5.16.4.1	Config	920
5.16.4.2	Config Monitor Session	922
5.16.4.3	Show	929
5.17	sFlow	931
5.17.1	Flow Samples	931
5.17.2	Statistical Samples	932
5.17.3	sFlow Datagrams	932
5.17.4	Sampled Interfaces	932
5.17.5	Configuring sFlow	932
5.17.6	Verifying sFlow	934
5.17.7	Commands	934
5.17.7.1	Config	934
5.17.7.2	Config sFlow	938
5.17.7.3	Show	946
5.18	Transport Applications	947
5.18.1	RDMA over Converged Ethernet (RoCE)	947
5.18.1.1	RoCE Overview	947
5.18.1.2	RoCE Configuration	948
5.18.1.3	Configuring Switch Systems	949
5.18.1.4	Configuring Router (PFC only)	949
5.18.1.5	Configuring the RoCE Mode	949
5.19	802.1x Protocol	951
5.19.1	802.1x Operating Modes	952
5.19.2	Configuring 802.1x	952
5.19.3	Commands	953
5.20	Priority Flow Control	969
5.20.1	Flow Control Threshold Configuration for Spectrum	970
5.20.2	Commands	971
5.21	Shared Buffers	976
5.21.1	Packet Buffering Classification	976
5.21.2	Buffering Allocation	977
5.21.3	Pools	978
5.21.4	Default Configurations	978
5.21.4.1	Default Lossy Configuration	978
5.21.4.2	Default Lossless Configuration	979
5.21.5	Configuration Example	979
5.21.6	Commands	981
5.22	Storm Control	993
5.22.1	General	993
5.22.2	Commands	993

5.23	Store-and-Forward	996
5.24		996
5.24.1	General	996
5.24.2	Commands	997
Chapter 6	IP Routing	999
6.1	General	999
6.1.1	IP Interfaces	999
6.1.1.1	Configuring a VLAN Interface	999
6.1.1.2	Configuring a Loopback Interface	1000
6.1.1.3	Configuring a Router Port Interface	1001
6.1.2	Equal Cost Multi-Path Routing (ECMP)	1002
6.1.2.1	Hash Functions	1003
6.1.3	Virtual Routing and Forwarding	1004
6.1.4	Commands	1005
6.1.4.1	General	1005
6.1.4.2	IP Interfaces	1015
6.1.4.3	Interface VLAN	1017
6.1.4.4	Loopback Interface	1028
6.1.4.5	Routing and ECMP	1032
6.1.4.6	Network to Media Resolution (ARP)	1037
6.1.4.7	IP Diagnostic Tools	1042
6.1.4.8	QoS	1046
6.2	IPv6	1047
6.2.1	Neighbor Discovery Protocol	1047
6.2.2	Configuring IPv6	1048
6.2.3	Commands	1050
6.3	OSPF	1081
6.3.1	Router ID	1081
6.3.2	ECMP	1081
6.3.3	Configuring OSPF	1082
6.3.4	Verifying OSPF	1083
6.3.5	Commands	1086
6.3.5.1	Config	1086
6.3.5.2	Config Router	1088
6.3.5.3	Interface	1100
6.3.5.4	Show	1113
6.4	BGP	1124
6.4.1	State Machine	1124
6.4.2	Default Address Family	1124
6.4.3	Default Route Originate	1125
6.4.4	Peer Groups and Update Groups	1125
6.4.5	Configuring BGP	1125

6.4.6	Verifying BGP	1126
6.4.7	Commands	1128
6.4.7.1	Config	1128
6.4.7.2	Config Router	1131
6.4.7.3	Show	1184
6.4.8	IP AS-Path Access-List	1198
6.4.8.1	Commands	1198
6.4.9	IP Community-List	1200
6.4.9.1	Commands	1200
6.5	BFD Infrastructure	1203
6.5.1	Session Establishment	1203
6.5.2	Interaction with Protocols	1203
6.5.3	Config Commands	1205
6.5.4	Interface Commands	1207
6.6	Policy Rules	1213
6.6.1	Route Map	1213
6.6.1.1	Commands	1214
6.6.2	IP Prefix-List	1244
6.6.2.1	Commands	1245
6.7	Multicast (IGMP and PIM)	1247
6.7.1	Basic PIM-SM	1247
6.7.2	Source-Specific Multicast (SSM)	1248
6.7.3	Bootstrap Router	1248
6.7.4	Configuring Multicast	1249
6.7.4.1	Configuring IGMP	1249
6.7.4.2	Verifying IGMP	1249
6.7.4.3	Configuring PIM	1250
6.7.5	Commands	1252
6.7.5.1	PIM	1252
6.7.5.2	Multicast	1277
6.7.5.3	IGMP	1281
6.8	VRRP	1295
6.8.1	Load Balancing	1295
6.8.2	Configuring VRRP	1296
6.8.3	Verifying VRRP	1298
6.8.4	Commands	1299
6.9	MAGP	1310
6.9.1	Configuring MAGP	1310
6.9.2	Commands	1312
6.10	DHCP Relay	1318
6.10.1	DHCP-R Virtual Routing and Forwarding (VRF) Auto-Helper	1318
6.10.2	Commands	1319

6.10.2.1 Interface Commands	1328
6.10.2.2 Show Commands	1329
6.10.3 DHCPv6 Relay	1331
6.10.3.1 Config Commands	1331
6.10.3.2 Show Commands	1339
Appendix A Enhancing System Security According to NIST SP 800-131A .	1344
A.1 Overview	1344
A.2 Web Certificate	1344
A.3 SNMP	1345
A.4 SSH	1345
A.5 HTTPS	1346
A.6 LDAP	1347
Appendix B Mellanox NEO™ on Switch	1349
B.1 Deploying Mellanox NEO™ on a MLNX-OS® Switch	1349
B.2 Getting Familiar with Mellanox NEO GUI	1350
B.3 Account Password, General Information, User Manual and Log-out Menu	1350
B.4 Network Notifications Icon	1351
B.5 Main Tabs/Categories/Navigator Buttons	1351
B.6 Fabric Dashboard for On-Screen Status Monitoring	1354
B.7 Last 24 Hours Events	1355
6.10.4 Devices Heatmap	1355
6.10.5 Fabric Utilization	1358
6.10.6 Top Alerted Devices	1358
6.10.7 Recent Activity	1359
Appendix C Show Commands Supported by JSON API	1360
Support and other resources	1363
Customer self repair	1364
Remote support	1364
Websites	1366

List of Figures

Figure 1:	Managing an Ethernet Fabric Using MLNX-OS	11
Figure 2:	Console Ports SX10xx Systems	12
Figure 3:	MLNX-OS Login Window	19
Figure 4:	Display After Login	20
Figure 5:	No Licenses Installed	22
Figure 6:	Enter License Key(s) in Text Box	23
Figure 7:	Installed License	23
Figure 8:	WebUI	40
Figure 9:	Index Scheme	46
Figure 10:	PTP clock synchronization example	179
Figure 11:	Boundary Clock Master/Slave functionality	181
Figure 12:	JSON API WebUI Example	513
Figure 13:	Accepting an Agent Request through the Console	540
Figure 14:	Break-Out Cable	588
Figure 15:	Interface Isolation Example	622
Figure 16:	Basic MLAG Setup	652
Figure 17:	Basic MLAG Topology	655
Figure 18:	Tagging Voice Packets with a Different VLAN ID	692
Figure 19:	MAC Learning Disable Example Case	701
Figure 20:	RPVST Network Config	713
Figure 21:	RPVST and RSTP Cluster	714
Figure 22:	MLNX-OS and OpenFlow Pipeline	749
Figure 23:	RED/ECN Drop Profiles	865
Figure 24:	Overview of Mirroring Functionality	914
Figure 25:	Mirror to Analyzer Mapping	914
Figure 26:	Header Format Options	917
Figure 27:	Mirroring Session	918
Figure 28:	sFlow Functionality Overview	931
Figure 29:	RoCEv2 and RoCE Frame Format Differences	947
Figure 30:	RoCEv2 Protocol Stack	948
Figure 31:	Xon/Xoff Configuration	971
Figure 32:	ECMP	1002
Figure 33:	Multiple Hash Functions	1003
Figure 34:	IPv6 Network	1048

Figure 35: OSPF Basic Topology	1082
Figure 36: Basic BGP Configuration	1125
Figure 37: Common VRRP Configuration with Load Balancing	1296
Figure 38: NEO GUI	1351
Figure 39: NEO Jobs	1353
Figure 40: Fabric Dashboard	1355
Figure 41: 24-Hour View	1355
Figure 42: Device Heatmap	1356
Figure 43: Device Heatmap Dialog	1356
Figure 44: Device Heatmap Dialog Example	1357
Figure 45: Device Heatmap Example	1357
Figure 46: Device Heatmap Key	1357
Figure 47: NEO Fabric Utilization Display	1358
Figure 48: Fabric Utilization of Device per Category	1358
Figure 49: Top Alerted Devices	1359
Figure 50: Recent Activity Examples	1359

List of Tables

Table 1:	Reference Documents	6
Table 2:	Glossary	6
Table 3:	General System Features	9
Table 4:	Ethernet Features	10
Table 5:	Serial Terminal Program Configuration for x86 Based Systems	13
Table 6:	Configuration Wizard Session - IP Configuration by DHCP	13
Table 7:	Configuration Wizard Session - IP Zeroconf Configuration	16
Table 8:	Configuration Wizard Session - Static IP Configuration	17
Table 9:	MLNX-OS Licenses	20
Table 10:	CLI Modes and Config Context	30
Table 11:	Syntax Conventions	31
Table 12:	Angled Brackets Parameter Description	34
Table 13:	CLI Keyboard Shortcuts	38
Table 14:	WebUI Setup Submenus	40
Table 15:	WebUI System Submenus	41
Table 16:	WebUI Security Submenus	42
Table 17:	WebUI Ports Submenus	42
Table 18:	WebUI Status Submenus	43
Table 19:	WebUI ETH Mgmt Submenus	44
Table 20:	WebUI IP Route Submenus	44
Table 21:	Module Type	46
Table 22:	Device Type	46
Table 23:	Sensor Type	47
Table 24:	PTP message formats	179
Table 25:	default ptp profile attributes	181
Table 26:	Supported Event Notifications and MIB Mapping	301
Table 27:	User Roles (Accounts) and Default Passwords	347
Table 28:	Chassis Manager Information	448
Table 29:	System Health Monitor Alerts Scenarios	449
Table 30:	LWR Configuration Behavior	456
Table 31:	Standard MIBs – Textual Conventions and Conformance MIBs	488
Table 32:	Standard MIBs – Chassis and Switch	488

Table 33: Private MIBs Supported.....	490
Table 34: SNMP Traps	490
Table 35: Supported SET OIDs.....	495
Table 36: Ethernet and Port-Channel Interface Capabilities	543
Table 37: VLAN Capabilities.....	543
Table 38: L2 Ethernet and Port-Channel Interface Capabilities	543
Table 39: LAG Capabilities	544
Table 40: L3 Interface Capabilities	544
Table 41: OSPF Interface Capabilities.....	544
Table 42: OSPF Area Capabilities.....	546
Table 43: Router OSPF Capabilities.....	546
Table 44: Protocol Enable/Disable Capabilities	546
Table 45: Fetched Image Capabilities.....	546
Table 46: Installed Image Capabilities	547
Table 47: Fetched Image Capabilities.....	547
Table 48: Number of Resources per Node in Strict Mode	567
Table 49: Number of Resources per Node in Strict Mode for SwitchX Based Systems ...	568
Table 50: Number of Resources per Node in Strict Mode for Spectrum Based Systems ..	568
Table 51: LR4/ER4 switch support	592
Table 52: Supported VLANs by RPVST per Switch System	713
Table 53: OpenFlow 1.3 Pipeline Capabilities Summary Table	750
Table 54: Packet Classification Rules	859
Table 55: Default QoS Configuration	860
Table 56: Default Shaper Configuration	864
Table 57: Mirroring Parameters	915
Table 58: List of Statistical Counters.....	932
Table 59: Navigator Tabs	1351
Table 60: Job States	1353
Table 61: Recent Activity Icon Description.....	1359
Table 62: JSON API Show Commands.....	1360

Document Revision History

Rev 4.70

Software Ver. 3.6.4120 – August 29, 2017

- No changed to the User Manual, only updated software and firmware version.

Software Ver. 3.6.4116 – August 21, 2017

- No changed to the User Manual, only updated software and firmware version.

Software Ver. 3.6.4114 – August 20, 2017

- No changed to the User Manual, only updated software version.

Software Ver. 3.6.4112 – August 17, 2017

- No changed to the User Manual, only updated software version.

Software Ver. 3.6.4110 – August 13, 2017

- Updated section [Section 2.4, “Licenses,” on page 20](#)
- Updated the following figures:
 - [Figure 3, “MLNX-OS Login Window,” on page 19](#)
 - [Figure 4, “Display After Login,” on page 20](#)
 - [Figure 5, “No Licenses Installed,” on page 22](#)
 - [Figure 6, “Enter License Key\(s\) in Text Box,” on page 23](#)
 - [Figure 5, “No Licenses Installed,” on page 22](#)
 - [Figure 12, “JSON API WebUI Example,” on page 513](#)
- Updated section [Section 5.4.6, “Configuring MLAG,” on page 655](#)
- Updated section [Section 6.2, “IPv6,” on page 1047](#)
- Updated section [Section 5.22, “Storm Control,” on page 993](#)
- Updated section [Section 5.23, “Store-and-Forward,” on page 996](#)
- Updated section [Section 3.2, “Web Interface Overview,” on page 39](#): added Setup-Json API / Port-telemetry
- Renamed web page name from "Logs" to "Logging" under the Setup tab in [Section 3.2.1, “Setup Menu,” on page 40](#)
- Added the following Commands:
 - [“protocol ptp” on page 183](#)

- [“ptp domain” on page 184](#)
- [“ptp priority” on page 185](#)
- [“interface ethernet ptp enable” on page 186](#)
- [“interface ethernet ptp announce interval” on page 187](#)
- [“interface ethernet ptp announce timeout” on page 188](#)
- [“interface ethernet ptp delay-mechanism” on page 189](#)
- [“interface ethernet ptp delay-req interval” on page 190](#)
- [“interface ethernet ptp sync interval” on page 191](#)
- [“show ptp” on page 192](#)
- [“show ptp clock” on page 193](#)
- [“show ptp clock parent” on page 194](#)
- [“show ptp interface ethernet” on page 195](#)
- [“show ptp interface ethernet counters” on page 196](#)
- [“show interfaces ethernet link-diagnostics” on page 296](#)
- [“interface ethernet signal-degrade” on page 299](#)
- [“show interfaces ethernet signal-degrade” on page 300](#)
- [“docker label” on page 583](#)
- [“docker copy-sdk” on page 584](#)
- [“show docker labels” on page 587](#)
- [“Show spanning-tree vlan topo-change-history” on page 745](#)
- [“Show spanning-tree mst topo-change-history” on page 746](#)
- [“show spanning-tree topo-change-history” on page 747](#)
- [“bgp default” on page 1183](#)
- [“show ip bgp update-group” on page 1197](#)
- Added the following sections:
 - [“Signal Degradation Monitoring” on page 298](#)
 - [“BFD Infrastructure” on page 1203](#)
 - [“Basic PIM-SM” on page 1247](#)
 - [“Source-Specific Multicast \(SSM\)” on page 1248](#)
- Updated the following Commands:
 - [“start” on page 580](#)
 - [“show interfaces ethernet” on page 608](#)
 - [“show spanning-tree detail” on page 739](#)

- [“storm-control level” on page 993](#)
- [“show storm-control” on page 995](#)
- [“switchmode store-and-forward” on page 997](#)
- [“ipv6 address” on page 1051](#)
- [“ipv6 nd prefix” on page 1055](#)
- [“ipv6 nd ra dns-server” on page 1057](#)
- [“ipv6 nd ra lifetime” on page 1063](#)
- [“clear ipv6 neighbors” on page 1072](#)
- [“ipv6 route” on page 1073](#)
- [“show ipv6 interface” on page 1076](#)
- [“show ipv6 route” on page 1079](#)
- [“neighbor activate” on page 1176](#)
- [“neighbor default-originate” on page 1177](#)
- [“show ip bgp paths” on page 1192](#)

Removed the following sections:

- Bidirectional PIM
- PIM Load-Sharing

Removed the following commands:

- ip pim bidir shutdown
- ip pim multipath rp
- ip pim border

Software Ver. 3.6.4006 – July 02, 2017

Initial release of this MLNX-OS software version

About this Manual

This manual provides general information about MLNX-OS features, their configuration and CLI commands as well as initial switch setup.

Intended Audience

This manual is intended for network administrators who are responsible for configuring and managing Mellanox Technologies' SwitchX based Switch Platforms.

Related Documentation

The following table lists the documents referenced in this *User's Manual*.

Table 1 - Reference Documents

Document Name	Description
System Hardware User Manual	This document contains hardware descriptions, LED assignments and hardware specifications among other things.
Switch Product Release Notes	Please look up the relevant SwitchX®-based switch system/series release note file
Mellanox Virtual Modular Switch Reference Guide	This reference architecture provides general information concerning Mellanox L2 and L3 Virtual Modular Switch (VMS) configuration and design.
MLNX-OS® XML API Reference Guide	This manual provides general information concerning MLNX-OS® XML API.

All of these documents can be found at www.hpe.com/support StoreFabric M-series. They are available either through the product pages or through the support page with a login and password.

Glossary

Table 2 - Glossary

AAA	Authentication, Authorization, and Accounting. Authentication - verifies user credentials (username and password). Authorization - grants or refuses privileges to a user/client for accessing specific services. Accounting - tracks network resources consumption by users.
ARP	Address Resolution Protocol. A protocol that translates IP addresses into MAC addresses for communication over a local area network (LAN).
CLI	Command Line Interface. A user interface in which you type commands at the prompt
DCB	Data Center Bridging

Table 2 - Glossary

DCBX	DCBX protocol is an extension of the Link Layer Discovery Protocol (LLDP). DCBX end points exchange request and acknowledgment messages. For flexibility, parameters are coded in a type-length-value (TLV) format.
DHCP	The Dynamic Host Configuration Protocol (DHCP) is an automatic configuration protocol used on IP networks.
DNS	Domain Name System. A hierarchical naming system for devices in a computer network
ETS	ETS provides a common management framework for assignment of bandwidth to traffic classes.
FTP/TFTP/sFTP	File Transfer Protocol (FTP) is a standard network protocol used to transfer files from one host to another over a TCP-based network, such as the Internet.
Gateway	A network node that interfaces with another network using a different network protocol
HA (High Availability)	A system design protocol that provides redundancy of system components, thus enables overcoming single or multiple failures in minimal downtime
Host	A computer platform executing an Operating System which may control one or more network adapters
LACP	Link Aggregation Control Protocol (LACP) provides a method to control the bundling of several physical ports together to form a single logical channel. LACP allows a network device to negotiate an automatic bundling of links by sending LACP packets to the peer (directly connected device that also implements LACP).
LDAP	The Lightweight Directory Access Protocol is an application protocol for reading and editing directories over an IP network.
LLDP (Link Layer Discovery Protocol)	A vendor neutral link layer protocol used by network devices to advertise their identify, capabilities and for neighbor discovery
MAC	A Media Access Control address (MAC address) is a unique identifier assigned to network interfaces for communications on the physical network segment. MAC addresses are used for numerous network technologies and most IEEE 802 network technologies including Ethernet.
MTU (Maximum Transfer Unit)	The maximum size of a packet payload (not including headers) that can be sent /received from a port
Network Adapter	A hardware device that allows for communication between computers in a network
PFC/FC	Priority Based Flow Control applies pause functionality to traffic classes OR classes of service on the Ethernet link.
RADIUS	Remote Authentication Dial In User Service. A networking protocol that enables AAA centralized management for computers to connect and use a network service.

Table 2 - Glossary

RDMA (Remote Direct Memory Access)	Accessing memory in a remote side without involvement of the remote CPU
RSTP	Rapid Spanning Tree Protocol. A spanning-tree protocol used to prevent loops in bridge configurations. RSTP is not aware of VLANs and blocks ports at the physical level.
SA (Subnet Administrator)	The interface for querying and manipulating subnet management data
SCP	Secure Copy or SCP is a means of securely transferring computer files between a local and a remote host or between two remote hosts. It is based on the Secure Shell (SSH) protocol.
SNMP	Simple Network Management Protocol. A network protocol for the management of a network and the monitoring of network devices and their functions
NTP	Network Time Protocol. A protocol for synchronizing computer clocks in a network
SSH	Secure Shell. A protocol (program) for securely logging in to and running programs on remote machines across a network. The program authenticates access to the remote machine and encrypts the transferred information through the connection.
syslog	A standard for forwarding log messages in an IP network
TACACS+	Terminal Access Controller Access-Control System Plus. A networking protocol that enables access to a network of devices via one or more centralized servers. TACACS+ provides separate AAA services.
XML Gateway	Extensible Markup Language Gateway. Provides an XML request-response protocol for setting and retrieving HW management information.

1 Introduction

MLNX-OS® enables the management and configuration of HPE StoreFabric Switch ManagementSwitchX® Family silicon based switch platforms.

MLNX-OS provides a full suite of management options, including support for SNMPv1, 2, 3, and web user interface (WebUI). In addition, it incorporates a familiar industry-standard CLI, which enables administrators to easily configure and manage the system.

1.1 System Features

Table 3 - General System Features


Feature	Description
Software Management	<ul style="list-style-type: none"> • Dual software image • Software and firmware updates
File management	<ul style="list-style-type: none"> • FTP • TFTP • SCP
Logging	<ul style="list-style-type: none"> • Event history log • SysLog support
Management Interface	<ul style="list-style-type: none"> • DHCP/Zeroconf • IPv6
Chassis Management	<ul style="list-style-type: none"> • Monitoring environmental controls • Power management • Auto-temperature control • High availability
Network Management Interfaces	<ul style="list-style-type: none"> • SNMP v1,v2c,v3 • interfaces (XML Gateway) • Puppet Agent
Security	<ul style="list-style-type: none"> • SSH • Telnet • RADIUS • TACACS+
Date and Time	<ul style="list-style-type: none"> • NTP
Cables & Transceivers	<ul style="list-style-type: none"> • Transceiver info
Unbreakable links	<ul style="list-style-type: none"> • LLR

1.2 Ethernet Features

Table 4 - Ethernet Features

Feature	Description
General	<ul style="list-style-type: none"> • ACL – 6400 rules (permit/deny) • Breakout cables • Jumbo Frames (9K)
Ethernet support	<ul style="list-style-type: none"> • 48K unicast MAC addresses on SwitchX®-2 based systems <ul style="list-style-type: none"> • 2K static multicast MAC addresses • 90100 unicast MAC addresses on Spectrum™ based systems • DCBX • DHCP Relay • ETS (802.1Qaz) • Flow control (802.3x) • IGMP snooping v1,2 • LAG/LACP (802.3ad), 16 links per LAG (64 LAGs) • LLDP • MLAG • MSTP • OpenFlow 1.3 • PFC (802.1Qbb) • Rapid Spanning Tree (802.1w) • sFlow • VLAN (802.1Q) – 4K
IP routing	<ul style="list-style-type: none"> • BGP • DHCP Relay • ECMP • IGMP • IPv4 • IPv6 • OSPF • PIM • VLAN interface • Loopback interface • Router interface • VRRP

Figure 1: Managing an Ethernet Fabric Using MLNX-OS

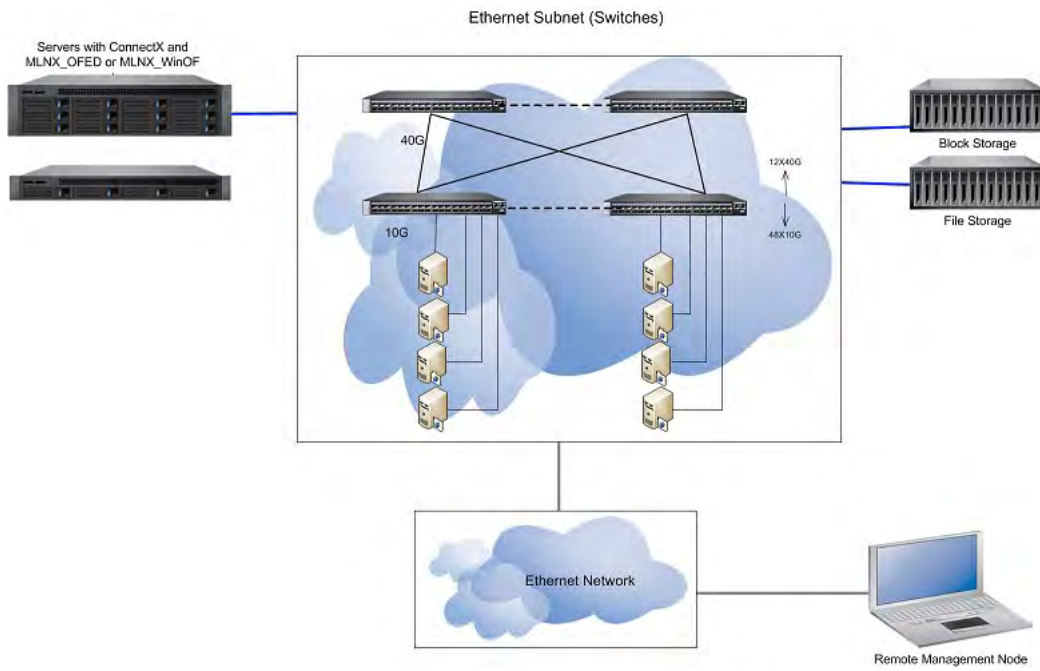

2 Getting Started


The procedures described in this chapter assume that you have already installed and powered on your switch according to the instructions in the *Hardware Installation Guide*, which was shipped with the product.

2.1 Configuring the Switch for the First Time

➤ *To configure the switch:*

Step 1. Connect the host PC to the console (RJ-45) port of the switch system using the supplied cable. The console ports for systems are shown below.

Figure 2: Console Ports SX10xx Systems

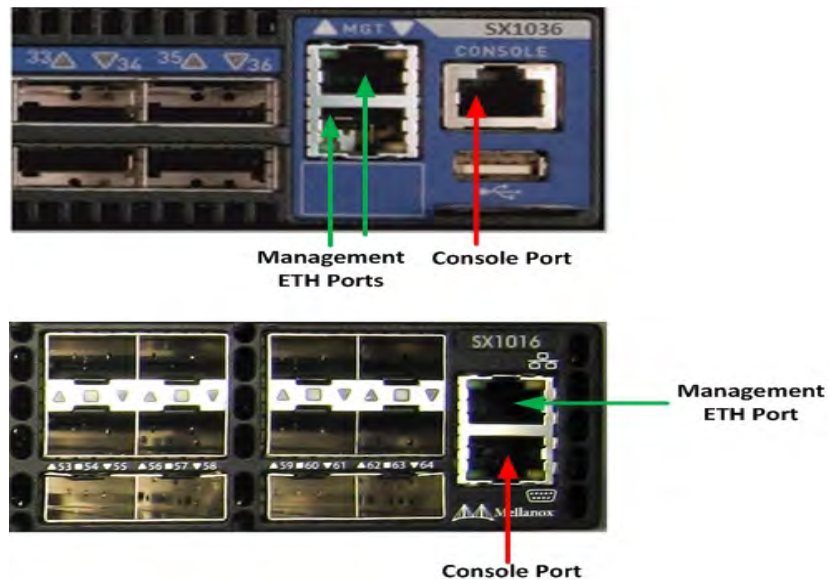

Make sure to connect to the console RJ-45 port of the switch and not to the MGT port.



DHCP is enabled by default over the MGT port. Therefore, if you have configured your DHCP server and connected an RJ-45 cable to the MGT port, simply log in using the designated IP address.

Step 2. Configure a serial terminal with the settings described below.



This step may be skipped if the DHCP option is used and an IP is already configured for the MGT port.

Table 5 - Serial Terminal Program Configuration for x86 Based Systems

Parameter	Setting
Baud Rate	115200
Data bits	8
Stop bits	1
Parity	None
Flow Control	None

Step 3. You are prompted with the boot menu.

```
Mellanox MLNX-OS Boot Menu:
```

```
1: <image #1>
2: <image #2>
u: USB menu (if USB device is connected) (password required)
c: Command prompt (password required)
```

```
Choice:
```



Select “1” to boot with software version installed on partition #1.
 Select “2” to boot with software version installed on partition #2.
 Selecting “u” is not currently supported.

The MLNX-OS Boot Menu features a countdown timer. It is recommended to allow the timer to run out by not selecting any of the options.

Step 4. Login as *admin* and use *admin* as password.

If the machine is still initializing, you might not be able to access the CLI until initialization completes. As an indication that initialization is ongoing, a countdown of the number of remaining modules to be configured is displayed in the following format: “<no. of modules> Modules are being configured”.

Step 5. Go through the HPE StoreFabric Switch Management configuration wizard.

The following table shows an example of a wizard session.

Table 6 - Configuration Wizard Session - IP Configuration by DHCP (Sheet 1 of 3)

Wizard Session Display (Example)	Comments
HPE StoreFabric Switch Management configuration wizard Do you want to use the wizard for initial configuration? yes	You must perform this configuration the first time you operate the switch or after resetting the switch to the factory defaults. Type “y” and then press <Enter>.
Step1: Hostname? [switch-1]	If you wish to accept the default hostname, then press <Enter>. Otherwise, type a different hostname and press <Enter>.

Table 6 - Configuration Wizard Session - IP Configuration by DHCP (Sheet 2 of 3)

Wizard Session Display (Example)	Comments
<p>Step 2: Use DHCP on mgmt0 interface? [yes]</p>	<p>Perform this step to obtain an IP address for the switch. (mgmt0 is the management port of the switch.) If you wish the DHCP server to assign the IP address, type “yes” and press <Enter>.</p> <p>If you type “no” (no DHCP), then you will be asked whether you wish to use the “zeroconf” configuration or not. If you enter “yes” (yes Zeroconf), the session will continue as shown in Table 7.</p> <p>If you enter “no” (no Zeroconf), then you need to enter a <i>static</i> IP, and the session will continue as shown in Table 8.</p>
<p>Step 3: Enable IPv6 [yes]</p>	<p>Perform this step to enable IPv6 on management ports.</p> <p>If you wish to enable IPv6, type “yes” and press <Enter>.</p> <p>If you enter “no” (no IPv6), then you will automatically be referred to Step 5.</p>
<p>Step 4: Enable IPv6 autoconfig (SLAAC) on mgmt0 interface</p>	<p>Perform this step to enable StateLess address autoconfig on external management port.</p> <p>If you wish to enable it, type “yes” and press <Enter>.</p> <p>If you wish to disable it, enter “no”.</p>
<p>Step 5: Use DHCPv6 on mgmt0 interface? [yes]</p>	<p>Perform this step to enable DHCPv6 on the MGMT0 interface.</p>
<p>Step 5: Admin password (Press <Enter> to leave unchanged)? <new_password> Step 4: Confirm admin password? <new_password></p>	<p>To avoid illegal access to the machine, please type a password and then press <Enter>. Then confirm the password by re-entering it.</p> <p>Note that password characters are <i>not</i> printed.</p>

Table 6 - Configuration Wizard Session - IP Configuration by DHCP (Sheet 3 of 3)

Wizard Session Display (Example)	Comments
<p>You have entered the following information:</p> <ol style="list-style-type: none"> 1. Hostname: <switch name> 2. Use DHCP on mgmt0 interface: yes 3. Enable IPv6: yes 4. Enable IPv6 autoconfig (SLAAC) on mgmt0 interface: yes 5. Enable DHCPv6 on mgmt0 interface: no 6. Admin password (Enter to leave unchanged): (CHANGED) <p>To change an answer, enter the step number to return to. Otherwise hit <enter> to save changes and exit.</p> <p>Choice: <Enter></p> <p>Configuration changes saved. To return to the wizard from the CLI, enter the “configuration jump-start” command from configuration mode. Launching CLI...</p> <p><switch name> [standalone: master] ></p>	<p>The wizard displays a summary of your choices and then asks you to confirm the choices or to re-edit them.</p> <p>Either press <Enter> to save changes and exit, or enter the configuration step number that you wish to return to.</p> <p>Note: To run the command “configuration jump-start” you must be in Config mode.</p>

Table 7 - Configuration Wizard Session - IP Zeroconf Configuration

Wizard Session Display - IP Zeroconf Configuration (Example)
HPE StoreFabric Switch Management configuration wizard
Do you want to use the wizard for initial configuration? y
Step 1: Hostname? [switch-112126]
Step 2: Use DHCP on mgmt0 interface? [no]
Step 3: Use zeroconf on mgmt0 interface? [no] yes
Step 4: Default gateway? [192.168.10.1]
Step 5: Primary DNS server?
Step 6: Domain name?
Step 7: Enable IPv6? [yes] yes
Step 8: Enable IPv6 autoconfig (SLAAC) on mgmt0 interface? [no] no
Step 9: Admin password (Enter to leave unchanged)?
You have entered the following information:
1. Hostname: switch-112126
2. Use DHCP on mgmt0 interface: no
3. Use zeroconf on mgmt0 interface: yes
4. Default gateway: 192.168.10.1
5. Primary DNS server:
6. Domain name:
7. Enable IPv6: yes
8. Enable IPv6 autoconfig (SLAAC) on mgmt0 interface: yes
9. Admin password (Enter to leave unchanged): (unchanged)
To change an answer, enter the step number to return to. Otherwise hit <enter> to save changes and exit.
Choice:
Configuration changes saved.
To return to the wizard from the CLI, enter the “configuration jump-start” command from configure mode. Launching CLI...
<switch name> [standalone: master] >

Table 8 - Configuration Wizard Session - Static IP Configuration

Wizard Session Display - Static IP Configuration (Example)
<p>HPE StoreFabric Switch Management configuration wizard</p> <p>Do you want to use the wizard for initial configuration? y</p> <p>Step 1: Hostname? [switch-112126]</p> <p>Step 2: Use DHCP on mgmt0 interface? [yes] n</p> <p>Step 3: Use zeroconf on mgmt0 interface? [no]</p> <p>Step 4: Primary IP address? 192.168.10.4</p> <p>Mask length may not be zero if address is not zero (interface mgmt0)</p> <p>Step 5: Netmask? [0.0.0.0] 255.255.255.0</p> <p>Step 6: Default gateway? 192.168.10.1</p> <p>Step 7: Primary DNS server?</p> <p>Step 8: Domain name?</p> <p>Step 9: Enable IPv6? [yes] yes</p> <p>Step 10: Enable IPv6 autoconfig (SLAAC) on mgmt0 interface? [no] no</p> <p>Step 11: Admin password (Enter to leave unchanged)?</p> <p>You have entered the following information:</p> <ol style="list-style-type: none"> 1. Hostname: switch-112126 2. Use DHCP on mgmt0 interface: no 3. Use zeroconf on mgmt0 interface: no 4. Primary IP address: 192.168.10.4 5. Netmask: 255.255.255.0 6. Default gateway: 192.168.10.1 7. Primary DNS server: 8. Domain name: 9. Enable IPv6: yes 10. Enable IPv6 autoconfig (SLAAC) on mgmt0 interface: no 11. Admin password (Enter to leave unchanged): (unchanged) <p>To change an answer, enter the step number to return to. Otherwise hit <enter> to save changes and exit.</p> <p>Choice:</p> <p>Configuration changes saved.</p> <p>To return to the wizard from the CLI, enter the “configuration jump-start” command from configure mode. Launching CLI...</p> <p><switch name>[standalone: master] ></p>

- Step 6.** Check the mgmt0 interface configuration before attempting a remote (for example, SSH) connection to the switch. Specifically, verify the existence of an IP address.

```
switch # show interfaces mgmt0
Interface mgmt0 state
Admin up:          yes
Link up:           yes
IP address:        169.254.15.134
Netmask:           255.255.0.0
IPv6 enabled:      yes
Autoconf enabled:  yes
Autoconf route:    yes
Autoconf privacy:  no
IPv6 addresses:    1
IPv6 address:      fe80::202:c9ff:fe11:alb2/64
Speed:             1000Mb/s (auto)
Duplex:            full (auto)
Interface type:    ethernet
Interface source:  physical
MTU:               1500
HW address:        00:02:C9:11:A1:B2
Comment:
RX bytes:          11700449          TX bytes:          15139846
RX packets:        55753             TX packets:        28452
RX mcast packets: 0                 TX discards:       0
RX discards:       0                 TX errors:         0
RX errors:         0                 TX overruns:       0
RX overruns:       0                 TX carrier:        0
RX frame:          0                 TX collisions:     0
TX queue len:     1000
```

2.1.1 Re-Running the Wizard

- *To rerun the wizard:*

- Step 1.** Enter the config mode.

```
switch > enable
switch # config terminal
```

- Step 2.** Rerun the wizard.

```
switch (config) # configuration jump-start
```

2.2 Starting the Command Line (CLI)

- Step 1.** Set up an Ethernet connection between the switch and a local network machine using a standard RJ-45 connector.
- Step 2.** Start a remote secured shell (SSH) to the switch using the command “ssh -l <username> <switch ip address>.”

```
rem_mach1 > ssh -l <username> <ip address>
```

- Step 3.** Login to the switch (default username is *admin*, password *admin*)

2.3 Starting the Web User Interface (WebUI)

➤ *To start a WebUI connection to the switch platform:*

Step 1. Set up an Ethernet connection between the switch and a local network machine using a standard RJ-45 connector.


Step 2. Open a web browser – Firefox 12, Chrome 18, IE 8, Safari 5 or higher.

Note: Make sure the screen resolution is set to 1024*768 or higher.

Step 3. Type in the IP address of the switch or its DNS name in the format: `http://<switch_IP_address>`.


Step 4. Login to the switch (default user name is *admin*, password *admin*).

Figure 3: MLNX-OS Login Window

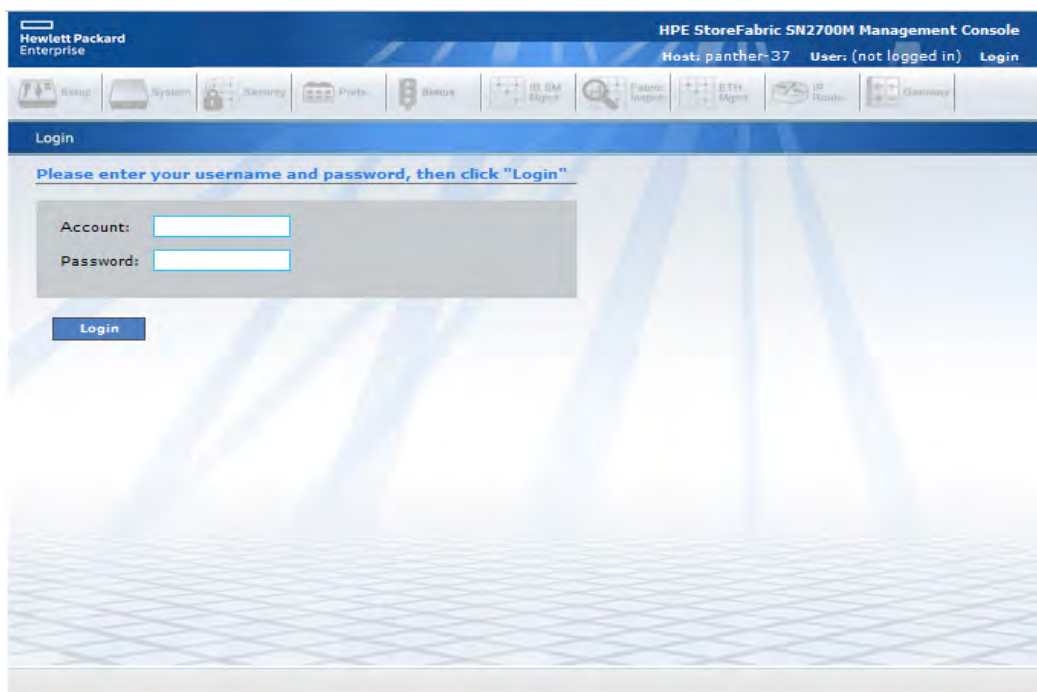

Step 5. A default status summary is displayed as shown in [Figure 4](#).

Figure 4: Display After Login

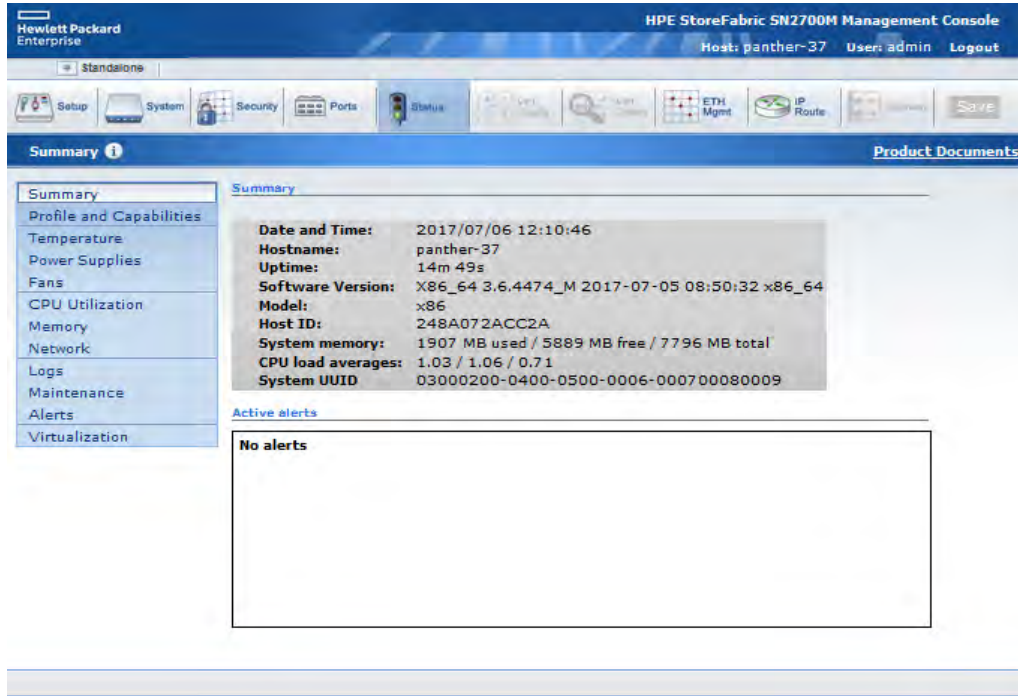

2.4 Licenses

MLNX-OS software package can be extended with premium features. Installing a license allows you to access the specified premium features.



This section is relevant only to switch systems with an internal management capability.

The following licenses are offered with MLNX-OS software:

Table 9 - MLNX-OS Licenses

Upgrade Licenses OPN	Valid on Product	Description
Q6J39-90701	SN2700M	HPE Storefabric SN2700M 100GbE 16-port Upgrade E-LTU
Q6J40-90701	SN2410M	HPE Storefabric SN2410M 25GbE 24-port Upgrade E-LTU
Q6J41-90701	SN2410bM	HPE Storefabric SN2410BM 10GbE 24-port Upgrade E-LTU
Q2M94-90701	SN2100M	HPE Storefabric SN2100M 100GbE 8-port Upgrade E-LTU

2.4.1 Installing MLNX-OS® License (CLI)

➤ *To install an MLNX-OS license via CLI:*

Step 1. Login as *admin* and change to *Config* mode.

```
switch > enable
switch # config terminal
```

Step 2. Install the license using the key. Run:

```
switch (config) # license install <license key>
```

Step 3. Display the installed license(s) using the following command.

```
switch (config) # show licenses
License 1: <license key>
Feature: EFM_SX
Valid: yes
Active: yes
switch (config) #
```

Make sure that the “Valid” and “Active” fields both indicate “yes”.

Step 4. Save the configuration to complete the license installation. Run:

```
switch (config) # configuration write
```



If you do not save the installation session, you will lose the license at the next system start up.


2.4.2 Installing MLNX-OS License (Web)

➤ *To install an MLNX-OS license via WebUI:*

Step 1. Log in as *admin*.

Step 2. Click the **Setup** tab and then **Licensing** on the left side navigation pane.

Figure 5: No Licenses Installed

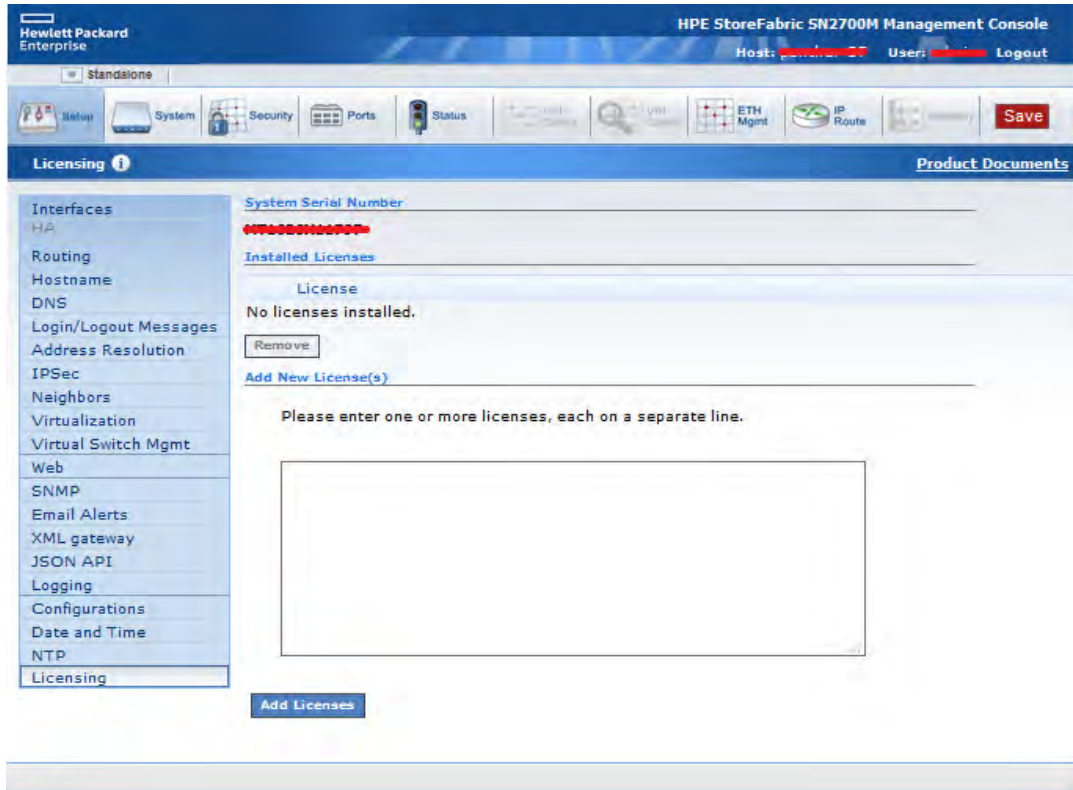


Step 3. Enter your license key(s) in the text box. If you have more than one license, please enter each license in a separate line. Click “Add Licenses” after entering the last license key to install them.




If you wish to add another license key in the future, you can simply enter it in the text box and click “Add Licenses” to install it.

Figure 6: Enter License Key(s) in Text Box

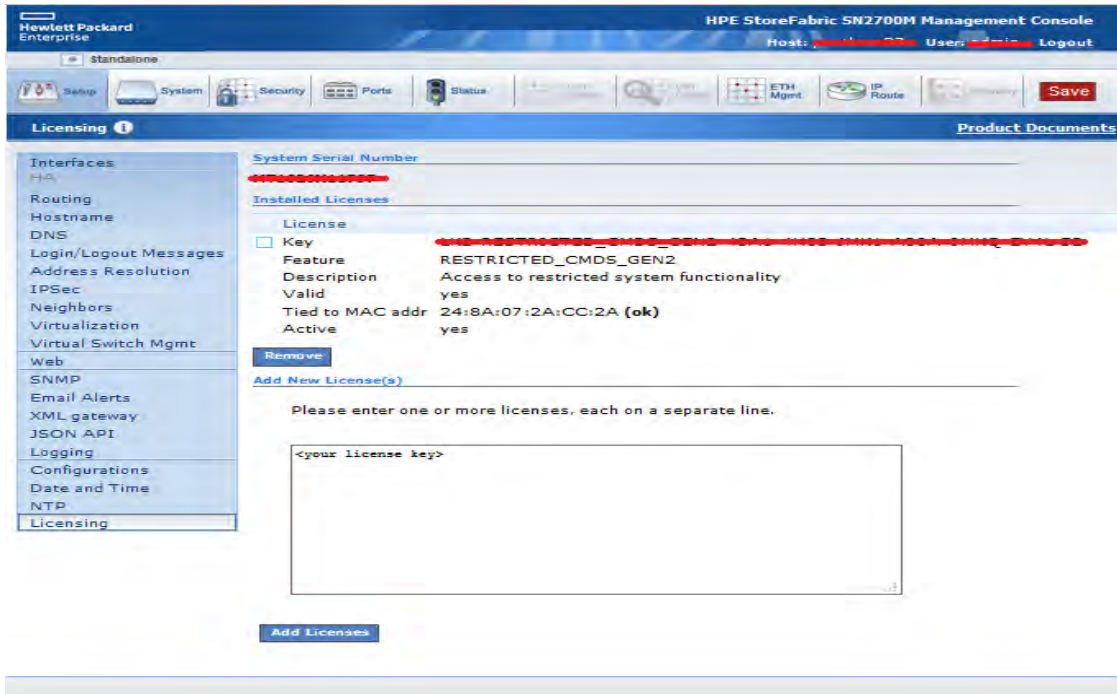

All installed licenses should now be displayed.

Figure 7: Installed License

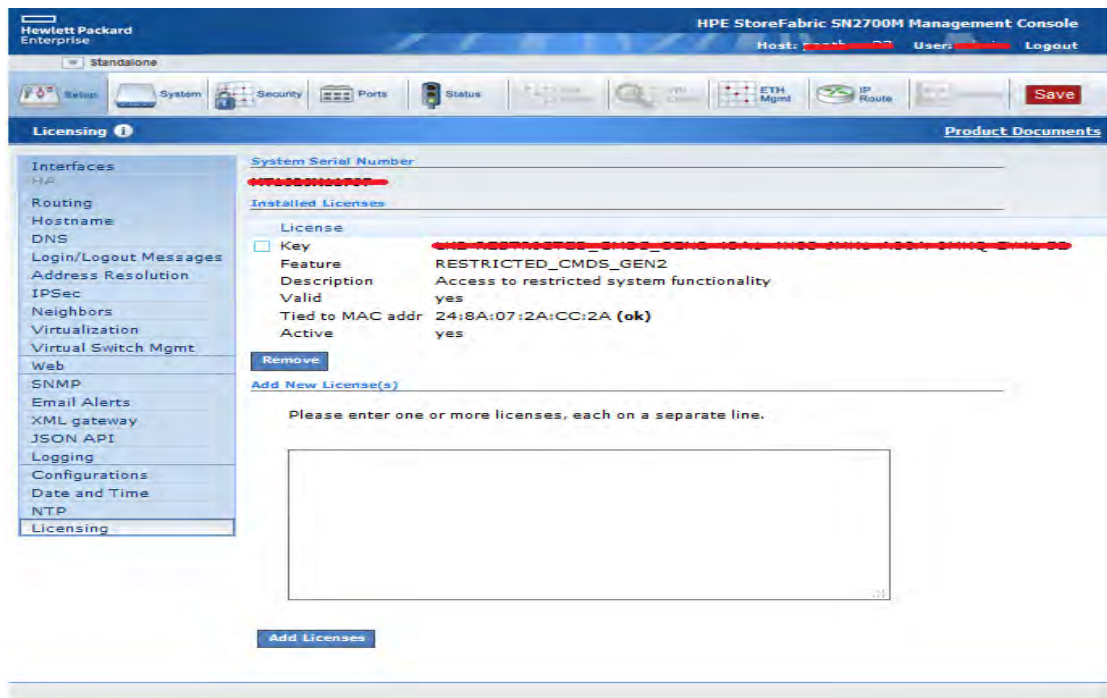

Step 4. Save the configuration to complete the license installation.



If you do not save the installation session, you will lose the installed licenses at the next system boot.

2.4.3 Autopass License Support

MLNX-OS supports installing a license key generated by HPE's Autopass.

This key enables opening ports that are disabled by default.

An HPE license can be installed, displayed or removed using the same UI that supports MLNX-OS licenses, see “license install” on page 28.

HPE licenses include embedded spaces and an optional quoted license description.

Internally, these licenses are converted to a standard format where each embedded space is replaced with a '-' and the description is removed.

2.4.4 Retrieving a Lost License Key

In case of a lost MLNX-OS® license key, contact HPE and provide the switch's *chassis serial number*.

➤ **To obtain the switch's chassis serial number:**

Step 1. Login to the switch.

Step 2. Retrieve the switch's *chassis serial number* using the command “show inventory”

```
spider-144 [standalone: master] (config) # show inventory
-----
Module           Part Number      Serial Number    Asic Rev.    HW Rev.
-----
CHASSIS          MSN2410-CB2F     MT1725X04610    N/A          AC
MGMT             MSN2410-CB2F     MT1725X04610    0            AC
FAN1             MTEF-FANF-A     MT1721X05322    N/A          A3
FAN2             MTEF-FANF-A     MT1721X05327    N/A          A3
FAN3             MTEF-FANF-A     MT1721X05326    N/A          A3
FAN4             MTEF-FANF-A     MT1721X05328    N/A          A3
PS1              MTEF-PSF-AC-A   MT1721X09490    N/A          A4
spider-144 [standalone: master] (config) #
```

Step 3. Send HPE the following information to obtain the license key:

- The chassis serial number
- The type of license you need to retrieve. Refer to “Licenses” on page 20.

Step 4. Once you receive the license key, you can install the license as described in the sections above.

2.4.5 Commands

file eula upload

file eula upload <filename> <URL>

Uploads the Mellanox End User License Agreement to a specified remote location.

Syntax Description	filename	The Mellanox End User License Agreement
	URL	URL or scp://username[:password]@hostname/path/filename
Default	N/A	
Configuration Mode	Config	
History	3.4.1100	
Role	monitor/admin	
Example	<pre>switch (config) # file help-docs upload Mellanox_End_User_ License_Agreement.pdf <scp://username[:password]@hostname/path/ filename> switch (config) #</pre>	
Related Commands	license	
Note		

file help-docs upload

file help-docs upload <filename> <URL or scp://username[:password]@hostname/path/filename>

Uploads the MLNX-OS UM or RN to a specified remote location.

Syntax Description	filename	The file to upload to a remote host
	URL	URL or scp://username[:password]@hostname/path/filename
Default	N/A	
Configuration Mode	Config	
History	3.4.1100	
Role	admin	
Example	<pre>switch (config) # file help-docs upload MLNX-OS_ETH_User_Manual.pdf <scp://username[:password]@hostname/path/filename> switch (config) #</pre>	
Related Commands		
Note		

license delete

license delete <license-number>

Removes license keys by ID.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.4.1100
Role	admin
Example	<pre>switch (config) # license delete <license-key> switch (config) #</pre>
Related Commands	
Note	Before deleting a license from a switch which is configured to a system profile other than its default, the user must first disable all interfaces and then return the switch to its default system profile.

license install

license install <license-key>

Installs a new license key.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.4.1100
Role	admin
Example	<pre>switch (config) # licenses install <license-key> switch (config) #</pre>
Related Commands	
Note	

show licenses

show licenses

Displays a list of all installed licenses. For each license, the following is displayed:

- a unique ID which is a small integer
- the text of the license key as it was added
- whether or not it is valid and active
- which feature(s) it is activating
- a list of all licensable features specifying whether or not it is currently activated by a license

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.4.1100
Role	admin
Example	<pre>switch (config) # show licenses License 1: <license key> Feature: SX_CONFIG Valid: yes Active: yes switch (config) #</pre>
Related Commands	
Note	

3 User Interfaces

3.1 Command Line Interface Overview

MLNX-OS® is equipped with an industry-standard command line interface (CLI). The CLI is accessed through SSH or Telnet sessions, or directly via the console port on the front panel (if it exists).

3.1.1 CLI Modes

The CLI can be in one of following modes, and each mode makes available a certain group (or level) of commands for execution. The different CLI configuration modes are:

Table 10 - CLI Modes and Config Context

Configuration Mode	Description
Standard	When the CLI is launched, it begins in Standard mode. This is the most restrictive mode and only has commands to query a restricted set of state information. Users cannot take any actions that directly affect the system, nor can they change any configuration.
Enable	The <code>enable</code> command moves the user to Enable mode. This mode offers commands to view all state information and take actions like rebooting the system, but it does not allow any configurations to be changed. Its commands are a superset of those in Standard mode.
Config	The <code>configure terminal</code> command moves the user from Enable mode to Config mode. Config mode is allowed only for user accounts in the “admin” role (or capabilities). This mode has a full unrestricted set of commands to view anything, take any action, and change any configuration. Its commands are a superset of those in Enable mode. To return to Enable mode, enter <code>exit</code> or <code>no configure</code> . Note that moving directly from/to Standard mode to/from Config mode is not possible.
Config Interface Management	Configuration mode for management interface <code>mgmt0</code> , <code>mgmt1</code> and <code>loopback</code> .
Config Interface Ethernet	Configuration mode for Ethernet interface.
Config Interface Port Channel	Configuration mode for Port channel (LAG).
Config VLAN	Configuration mode for VLAN.
Any Command Mode	Several commands such as “show” can be applied within any context.

3.1.2 Syntax Conventions

To help you identify the parts of a CLI command, this section explains conventions of presenting the syntax of commands.

Table 11 - Syntax Conventions

Syntax Convention	Description	Example
< > Angled brackets	Indicate a value/variable that must be replaced.	<1...65535> or <switch interface>
[] Square brackets	Enclose optional parameters. However, only one parameter out of the list of parameters listed can be used. The user cannot have a combination of the parameters unless stated otherwise.	[destination-ip destination-port destination-mac]
{ } Braces	Enclose alternatives or variables that are required for the parameter in square brackets.	[mode { active on passive }]
Vertical bars	Identify mutually exclusive choices.	active on passive



Do not type the angled or square brackets, vertical bar, or braces in command lines. This guide uses these symbols only to show the types of entries.



CLI commands and options are in lowercase and are case-sensitive. For example, when you enter the enable command, enter it all in lowercase. It cannot be ENABLE or Enable. Text entries you create are also case-sensitive.

3.1.3 Getting Help

You may request context-sensitive help at any time by pressing “?” on the command line. This will show a list of choices for the word you are on, or a list of top-level commands if you have not typed anything yet.

For example, if you are in Standard mode and you type “?” at the command line, then you will get the following list of available commands.

```
switch > ?
cli          Configure CLI shell options
enable      Enter enable mode
exit        Log out of the CLI
help        View description of the interactive help system
no          Negate or clear certain configuration options
```

```

show          Display system configuration or statistics
slogin        Log into another system securely using ssh
switch        Configure switch on system
telnet        Log into another system using telnet
terminal      Set terminal parameters
traceroute    Trace the route packets take to a destination
switch-11a596 [standalone: master] >

```

If you type a legal string and then press “?” *without* a space character before it, then you will either get a description of the command that you have typed so far or the possible command/parameter completions. If you press “?” *after* a space character and “<cr>” is shown, this means that what you have entered so far is a complete command, and that you may press Enter (carriage return) to execute it.

Try the following to get started:

```

?
show ?
show c?
show clock?
show clock ?
show interfaces ?      (from enable mode)

```

You can also enter “help” to view a description of the interactive help system.

Note also that the CLI supports command and/or parameter tab-completions and their shortened forms. For example, you can enter “en” instead of the “enable” command, or “cli cl” instead of “cli clear-history”. In case of ambiguity (more than one completion option is available, that is), then you can hit double tabs to obtain the disambiguation options. Thus, if you are in Enable mode and wish to learn which commands start with the letter “c”, type “c” and click twice on the tab key to get the following:

```

switch # c<tab>
clear      cli      configure
switch # c

```

(There are three commands that start with the letter “c”: clear, cli and configure.)

3.1.4 Prompt and Response Conventions

The prompt always begins with the hostname of the system. What follows depends on what command mode the user is in. To demonstrate by example, assuming the machine name is “switch”, the prompts for each of the modes are:

```

switch >          (Standard mode)
switch #          (Enable mode)
switch (config) # (Config mode)

```


The following session shows how to move between command modes: \

```
switch > (You start in Standard mode)
switch > enable (Move to Enable mode)
switch # (You are in Enable mode)
switch # configure terminal (Move to Config mode)
switch (config) # (You are in Config mode)
switch (config) # exit (Exit Config mode)
switch # (You are back in Enable mode)
switch # disable (Exit Enable mode)
switch > (You are back in Standard mode)
```

Commands entered do not print any response and simply show the command prompt after you press <Enter>.

If an error is encountered in executing a command, the response will begin with “%”, followed by some text describing the error.

3.1.5 Using the “no” Form

Several Config mode commands offer the negation form using the keyword “no”. This no form can be used to disable a function, to cancel certain command parameters or options, or to reset a parameter value to its default. To re-enable a function or to set cancelled command parameters or options, enter the command without the “no” keyword (with parameter values if necessary).

The following example performs the following:

1. Displays the current CLI session options.
2. Disables auto-logout.
3. Displays the new CLI session options (auto-logout is disabled).
4. Re-enables auto-logout (after 15 minutes).
5. Displays the final CLI session options (auto-logout is enabled)

```
// 1. Display the current CLI session options
switch (config) # show cli
CLI current session settings:
  Maximum line size:      8192
  Terminal width:        157 columns
  Terminal length:       60 rows
  Terminal type:         xterm
  Auto-logout:           15 minutes
  Paging:                enabled
  Progress tracking:     enabled
  Prefix modes:          enabled
  ...
// 2. Disable auto-logout
switch (config) # no cli session auto-logout
// 3. Display the new CLI session options
switch-1 [standalone: master] (config) # show cli
CLI current session settings:
```

```

Maximum line size:      8192
Terminal width:        157 columns
Terminal length:       60 rows
Terminal type:         xterm
Auto-logout:           disabled
Paging:                enabled
Progress tracking:     enabled
Prefix modes:         enabled
...
// 4. Re-enable auto-logout after 15 minutes
switch (config) # cli session auto-logout 15
// 5. Display the final CLI session options
switch (config) # show cli
CLI current session settings:
Maximum line size:      8192
Terminal width:        157 columns
Terminal length:       60 rows
Terminal type:         xterm
Auto-logout:           15 minutes
Paging:                enabled
Progress tracking:     enabled
Prefix modes:         enabled
...

```

3.1.6 Parameter Key

This section provides a key to the meaning and format of all of the angle-bracketed parameters in all the commands that are listed in this document.

Table 12 - Angled Brackets Parameter Description

Parameter	Description
<domain>	A domain name, e.g. “mellanox.com”.
<hostname>	A hostname, e.g. “switch-1”.
<ifname>	An interface name, e.g. “mgmt0”, “mgmt1”, “lo” (loopback), etc.
<index>	A number to be associated with aliased (secondary) IP addresses.
<IP address>	An IPv4 address, e.g. “192.168.0.1”.
<log level>	A syslog logging severity level. Possible values, from least to most severe, are: “debug”, “info”, “notice”, “warning”, “error”, “crit”, “alert”, “emerg”.
<GUID>	Globally Unique Identifier. A number that uniquely identifies a device or component.

Table 12 - Angled Brackets Parameter Description

Parameter	Description
<MAC address>	A MAC address. The segments may be 8 bits or 16 bits at a time, and may be delimited by “:” or “.”. So you could say “11:22:33:44:55:66”, “1122:3344:5566”, “11.22.33.44.55.66”, or “1122.3344.5566”.
<netmask>	A netmask (e.g. “255.255.255.0”) or mask length prefixed with a slash (e.g. “/24”). These two express the same information in different formats.
<network prefix>	An IPv4 network prefix specifying a network. Used in conjunction with a netmask to determine which bits are significant. e.g. “192.168.0.0”.
<regular expression>	An extended regular expression as defined by the “grep” in the man page. (The value you provide here is passed on to “grep -E”.)
<node id>	ID of a node belonging to a cluster. This is a numerical value greater than zero.
<cluster id>	A string specifying the name of a cluster.
<port>	TCP/UDP port number.
<TCP port>	A TCP port number in the full allowable range [0...65535].
<URL>	<p>A normal URL, using any protocol that wget supports, including http, https, ftp, sftp, and tftp; or a pseudo-URL specifying an scp file transfer. The scp pseudo-URL format is scp://username:password@hostname/path/filename.</p> <p>Note that the path is an absolute path. Paths relative to the user's home directory are not currently supported. The implementation of ftp does not support authentication, so use scp or sftp for that.</p> <p>Note also that if you omit the “:password” part, you may be prompted for the password in a follow up prompt, where you can type it securely (without the characters being echoed). This prompt will occur if the “cli default prompt empty-password” setting is true; otherwise, the CLI will assume you do not want any password. If you include the “:” character, this will be taken as an explicit declaration that the password is empty, and you will not be prompted in any case.</p>

3.1.7 CLI Pipeline Operator Commands

3.1.7.1 “include” and “exclude” CLI Filtration Options

The MLNX-OS CLI supports filtering “show” commands to display lines containing or excluding certain phrases or characters. To filter the outputs of the “show” commands use the following format:

```
switch (config) # <show command> | {include | exclude} <extended regular expression>
[<ignore-case>] [next <lines>] [prev <lines>]
```

The filtering parameters are separated from the show command they filter by a pipe character (i.e. “|”). Quotation marks may be used to include or exclude a string including space, and multiple filters can be used simultaneously. For example:

```
switch (config) # <show command> | {include <extended regular expression>} [<ignore-
case>] [next <lines>] [prev <lines>] | exclude <extended regular expression> [<ignore-
case>] [next <lines>] [prev <lines>]]
```

Examples:

```
switch (config) # show asic-version | include SX
MGMT          SX          9.3.3150

arc-switch14 [standalone: master] (config) # show module | exclude PS
=====
Module      Status
=====
MGMT        ready
FAN1        ready
FAN2        ready

switch (config) # show interfaces | include "Eth|discard pac"
Eth1/1
0 discard packets
0 discard packets
Eth1/2
0 discard packets
0 discard packets
Eth1/3
0 discard packets
0 discard packets
Eth1/4
0 discard packets
0 discard packets

switch (config) # show interfaces | include "Tx" next 5 | exclude broad
Tx
0 packets
0 unicast packets
0 multicast packets
0 bytes
--
Tx
0 packets
0 unicast packets
0 multicast packets
0 bytes
```

3.1.7.2 “watch” CLI Monitoring Option

MLNX-OS also allows viewing a live feed of the progress of any “show” command by using the “watch” option as follows:

```
switch (config) # <show command> | watch [diff] [interval <1-100 secs>]
```

Running the command as such displays an output of the show command that gets updated at a time interval which may be specified using the “interval” parameter (2 seconds by default).

The “diff” parameter highlights the differences between each iteration of the command. For example running the command “show power | watch diff interval 1” yields something similar to the following:

```
-----
Module Device          Sensor Power Voltage Current Capacity Feed Status
[Watts] [Volts] [Amp] [Watts]
-----
PS1 power-mon          input 85.00 230.00 0.38 460.00 AC OK
PS2 power-mon          - - - - - - - FAIL

Total power used : 85.00 Watts
Total power capacity : 460.00 Watts
Total power available : 375.00 Watts
Maximum consumed power of all turned on modules: 462.00 Watts
```

With the highlighted black blocks indicating the change that has occurred between one iteration of the command from one second to the next.

To exit “watch” mode, press Ctrl+C.

The “watch” option may also be used in conjunction with the “include” and “exclude” options as follows:

```
switch (config) # <show command> | {include | exclude} <extended regular expression> |
watch [diff] [interval <1-100 secs>]
```

For example:

```
switch (config) # show power | include PS | watch diff interval 1
```

3.1.7.3 “json-print” CLI Option



This feature is available on x86 based systems only.

The MLNX-OS CLI supports printing “show” commands in JSON syntax.

To print the output of the “show” commands as JSON, use the following format:

```
switch (config) # <show command> | json-print
```

Running the command displays an output of the “show” command in JSON syntax structure instead of its regular format. For example:

```
switch (config) # show system profile
Profile: eth-single-switch
Switch (config) # show system profile | json-print
{
  "Profile": "eth-single-switch"
}
```

The “json-print” option cannot be used together with filtering (“include” and “exclude”) and/or monitoring (“watch”).

For more information on JSON usage, please refer to [Section 4.17.2, “JSON API,” on page 499](#).

For a list of commands supporting the JSON API, please refer to [Appendix C, “Show Commands Supported by JSON API,”](#) on page 1360.

3.1.8 CLI Shortcuts

Table 13 presents the available keyboard shortcuts on the MLNX-OS® CLI.

Table 13 - CLI Keyboard Shortcuts

Key Combination	Description
Ctrl-a	Move cursor to beginning of line
Ctrl-b	Move cursor backward one character without deleting
Ctrl-c	Terminate operation
Ctrl-d	If cursor is in the middle of the line, delete one character forward If cursor is at the end of the line, show auto-complete options for current word or word fragment If cursor at an empty line, same as Esc
Ctrl-e	Move cursor to end of line
Ctrl-f	Move cursor forward one character
Ctrl-h	Delete one character backwards from cursor
Ctrl-i	Auto-complete current word (same as TAB)
Ctrl-j	Return carriage (same as ENTER)
Ctrl-k	Delete line after cursor
Ctrl-l	Clear screen and show line at the top of terminal window
Ctrl-m	Return carriage (same as ENTER)
Ctrl-n	Next line (same as DOWN ARROW)
Ctrl-p	Next line (same as UP ARROW)
Ctrl-t	Transpose the two characters on either side of cursor
Ctrl-u	Delete line
Ctrl-y	Retrieve (“yank”) last item deleted
Esc b	Move cursor one word backward
Esc c	Capitalizes first letter in word after cursor
Esc d	Delete one word forward from cursor
Esc f	Move one word forward from cursor
Esc l	Change word after cursor to lowercase letters
Esc Ctrl-h	Delete one word backward from cursor
Esc [A	Next line (same as DOWN ARROW)
Esc [B	Next line (same as UP ARROW)

Table 13 - CLI Keyboard Shortcuts

Key Combination	Description
Esc [C	Move forward one character from cursor
Esc [D	Move backward one character from cursor

3.2 Web Interface Overview

MLNX-OS® package equipped with web interface which is a web GUI that accept input and provide output by generating webpages which can be viewed by the user using a web browser.

The following web browsers are supported:

- Internet Explorer 8.0 or higher
- Chrome 18 or higher
- Mozilla Firefox 12 or higher
- Safari 5 or higher


The web interface makes available the following perspective tabs:

- Setup
- System
- Security
- Ports
- Status
- IB SM Management
- Fabric Inspector
- Ethernet Management
- Setup-Json API
- Port-telemetry
- IP Route
- Gateway



Make sure to save your changes before switching between menus or submenus. Click the “Save” button to the right of “Save Changes?”.

Figure 8: WebUI

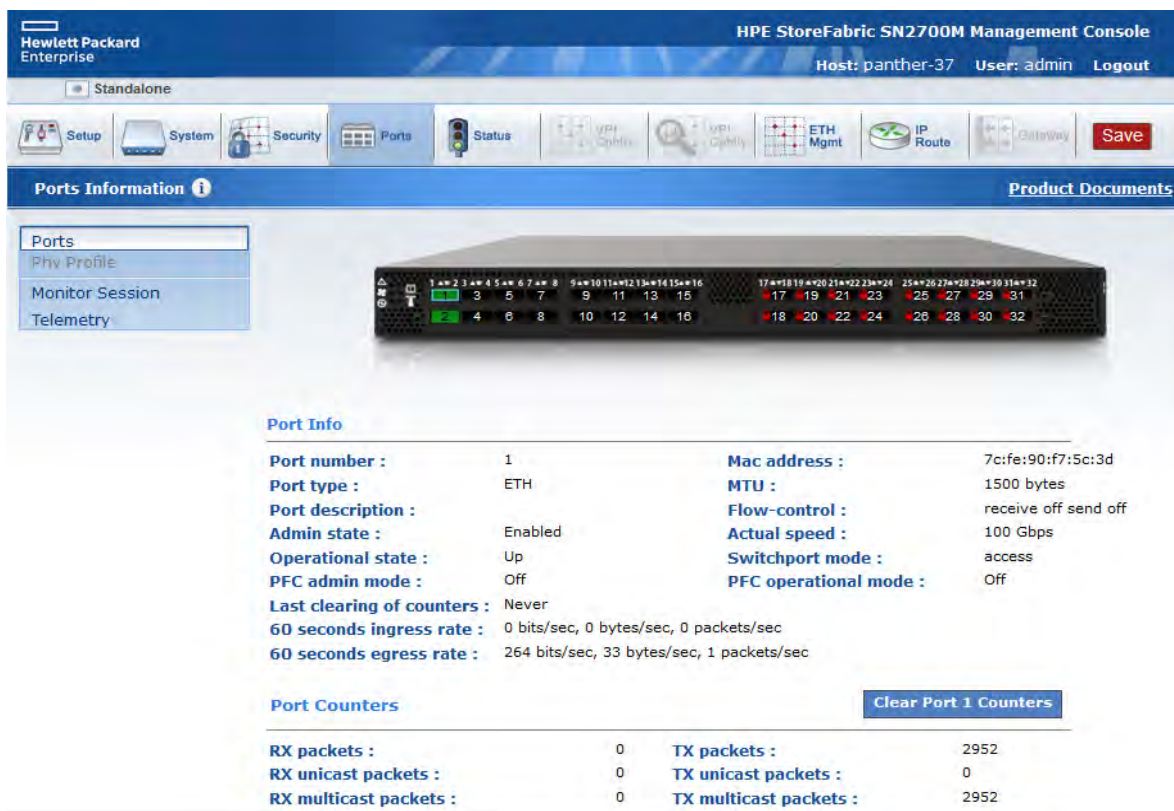

3.2.1 Setup Menu

The **Setup** menu makes available the following submenus (listed in order of appearance from top to bottom):

Table 14 - WebUI Setup Submenus

Submenu Title	Description
Interfaces	Obtains the status of, configures, or disables interfaces to the fabric. Thus, you can: set or clear the IP address and netmask of an interface; enable DHCP to dynamically assign the IP address and netmask; and set interface attributes such as MTU, speed, duplex, etc.
Routing	Configures, removes or displays the default gateway, and the static and dynamic routes.
Hostname	Configures or modifies the hostname. Configures or deletes static hosts.
DNS	Configures, removes, modifies or displays static and dynamic name servers.
Login Messages	Edits the login messages: Message of the Day (MOTD), Remote Login message, and Local Login message.

Table 14 - WebUI Setup Submenus

Submenu Title	Description
Address Resolution	Adds static and dynamic ARP entries, and clears the dynamic ARP cache.
IPSec	Configures IPSec.
Neighbors	Displays IPv6 neighbor discovery protocol.
Virtualization	Manages the virtualization and virtual machines.
Virtual Switch Mgmt	Configures the system profile.
Web	Configures web user interface and proxy settings.
SNMP	Configures SNMP attributes, SNMP admin user, and trap sinks.
Email Alerts	Configures the destination of email alerts and the recipients to be notified.
XML gateway	Provides an XML request-response protocol to get and set hardware management information.
Logging	Sets up system log files, remote log sinks, and log formats.
Configurations	Manages, activates, saves, and imports MLNX-OS SwitchX configuration files, and executes CLI commands.
Date and Time	Configures the date, time, and time zone of the switch system.
NTP	Configures NTP (Network Time Protocol) and NTP servers.
Licensing	Manages MLNX-OS licenses.

3.2.2 System Menu

The **System** menu makes available the following sub-menus (listed in order of appearance from top to bottom):

Table 15 - WebUI System Submenus

Submenu Title	Description
Modules	Displays a graphic illustration of the system modules. By moving the mouse over the ports in the front view, a pop-up caption is displayed to indicate the status of the port. The port state (active/down) is differentiated by a color scheme (green for active, gray/black for down). By moving the mouse over the rear view, a pop-up caption is displayed to indicate the leaf part information.
Inventory	Displays a table with the following information about the system modules: module name, type, serial number, ordering part number and Asic firmware version.

Table 15 - WebUI System Submenus

Submenu Title	Description
Power Management	Displays a table with the following information about the system power supplies: power supply name, power, voltage level, current consumption, and status. A total power summary table is also displayed providing the power used, the power capacity, and the power available.
MLNX-OS Upgrade	Displays the installed MLNX-OS images (and the active partition), uploads a new image, and installs a new image.
Reboot	Reboots the system. Make sure that you save your configuration prior to clicking reboot.

3.2.3 Security Menu

The **Security** menu makes available the following sub-menus (listed in order of appearance from top to bottom):

Table 16 - WebUI Security Submenus

Submenu Title	Description
Users	Manages (setting up, removing, modifying) user accounts.
Admin Password	Modifies the system administrator password.
SSH	Displays and generate host keys.
AAA	Configures AAA (Authentication, Authorization, and Accounting) security services such as authentication methods and authorization.
Login Attempts	Manages login attempts
RADIUS	Manages Radius client.
TACACS+	Manages TACACS+ client.
LDAP	Manages LDAP client.
Certificate	Manages certificates.

3.2.4 Ports Menu

The Ports menu displays the port state and enables some configuration attributes of a selected port. It also enables modification of the port configuration. A graphical display of traffic over time (last hour or last day) through the port is also available.

Table 17 - WebUI Ports Submenus

Submenu Title	Description
Ports	Manages port attributes, counters, transceiver info and displays a graphical counters histogram.
Phy Profile	Provides the ability to manage phy profiles.

Table 17 - WebUI Ports Submenus

Submenu Title	Description
Monitor Session	Displays monitor session summary and enables configuration of a selected session.

3.2.5 Status Menu

The **Status** menu makes available the following sub-menus (listed in order of appearance from top to bottom):

Table 18 - WebUI Status Submenus

Submenu Title	Description
Summary	Displays general information about the switch system and the MLNX-OS image, including current date and time, hostname, uptime of system, system memory, CPU load averages, etc.
Profile and Capabilities	Displays general information about the switch system capabilities such as the enabled profiles (e.g IB/ETH) and their corresponding values.
Temperature	Provides a graphical display of the switch module sensors' temperature levels over time (1 hour). It is possible to display either the temperature level of one module's sensor or the temperature levels of all the module sensors' together.
Power Supplies	Provides a graphical display of one of the switch's power supplies voltage level over time (1 hour).
Fans	Provides a graphical display of fan speeds over time (1 hour). The display is per fan unit within a fan module.
CPU Load	Provides a graphical display of the management CPU load over time (1 hour).
Memory	Provides a graphical display of memory utilization over time (1 day).
Network	Provides a graphical display of network usage (transmitted and received packets) over time (1 day). It also provides per interface statistics.
Logs	Displays the system log messages. It is possible to display either the currently saved system log or a continuous system log.
Maintenance	Performs specific maintenance operations automatically on a predefined schedule.
Alerts	Displays a list of the recent health alerts and enables the user to configure health settings.
Virtualization	Displays the virtual machines, networks and volumes.

3.2.6 ETH Mgmt



The Eth Mgmt menu is not applicable when the switch profile is not Ethernet.

The **ETH Mgmt** menu makes available the following sub-menus (listed in order of appearance from top to bottom):

Table 19 - WebUI ETH Mgmt Submenus

Submenu Title	Description
Spanning Tree	Configures and monitors spanning tree protocol.
MAC Table	Configures static mac addresses in the switch, and displays the MAC address table.
Link Aggregation	Configures and monitors aggregated Ethernet links (LAG) and configures LACP.
VLAN	Manages the switch VLAN table.
IGMP Snooping	Manages IGMP snooping in the switch.
ACL	Manages Access Control in the switch.
Priority Flow Control	Manages priority flow control.

3.2.7 IP Route

The **IP Route** menu makes available the following sub-menus (listed in order of appearance from top to bottom):

Table 20 - WebUI IP Route Submenus

Submenu Title	Description
Router Global	Enables/disables IP Routing protocol on the machine.
IP Route	Not implemented.
IP Interface	Not implemented.
Address Resolution	Not implemented.
IP Diagnostic	Not implemented.

3.3 Secure Shell (SSH)



It is recommended not to use more than 50 concurrent SSH sessions to the switch.

3.3.1 Adding a Host and Providing an SSH Key

➤ *To add entries to the global known-hosts configuration file and its SSH value:*

Step 1. Change to Config mode Run:

```
switch [standalone: master] > enable
switch [standalone: master] # configure terminal
switch [standalone: master] (config) #
```

Step 2. Add an entry to the global known-hosts configuration file and its SSH value. Run:

```
switch [standalone: master] (config) # ssh client global known-host "myserver ssh-rsa
AAAAB3NzaClyc2EAAAABIwAAAIEAsXeklqc8T0EN2mnMcVcfhueaRYzIVqt4rVsreRIjmlJh4mkYYIa8hGGikN
a+t5xw2dRrNxnHYLK51bUsSG1ZNwZT1Dpme3pAZeMY7G4ZMgGIW9xOuaXgAA3eBeoUjFdi6+1BqchWk0nTb+gM
fI/MK/heQNns7AtTrvqg/O5ryIc="
switch [standalone: master] (config) #
```

Step 3. Verify what keys exist in the host. Run:

```
switch [standalone: master] (config) # show ssh client
SSH client Strict Hostkey Checking: ask

SSH Global Known Hosts:
  Entry 1: myserver
    Finger Print: d5:d7:be:d7:6c:b1:e4:16:df:61:25:2f:b1:53:a1:06

No SSH user identities configured.

No SSH authorized keys configured.

switch [standalone: master] (config) #
```

3.3.2 Retrieving Return Codes when Executing Remote Commands

➤ *To stop the CLI and set the system to send return errors if some commands fail:*

Step 1. Connect to the system from the host SSH.

Step 2. Add the `-h` parameter after the `cli` (as shown in the example below) to notify the system to halt on failure and pass through the exit code.

```
ssh <username>@<hostname> cli -h '"enable" "show interfaces brief"'
```


3.4 Management Information Bases (MIBs)

The inventory in the switch system can be accessed through a MIB browser. These devices are indexed (entPhysicalIndex) using three levels:

1. Module layer which includes modules located on system (e.g. cables, fan, power supply, etc.). See table [Table 21](#) for more details.
2. Device layer which includes system devices (e.g. switch devices, sensor aggregators, etc.). See table [Table 22](#) for more details.
3. Sensor layer which includes system sensors (e.g. fan, and temperature sensors) located in the devices. See table [Table 23](#) for more details.

Each layer is assigned a fixed position in the index number to represent it.

Figure 9: Index Scheme

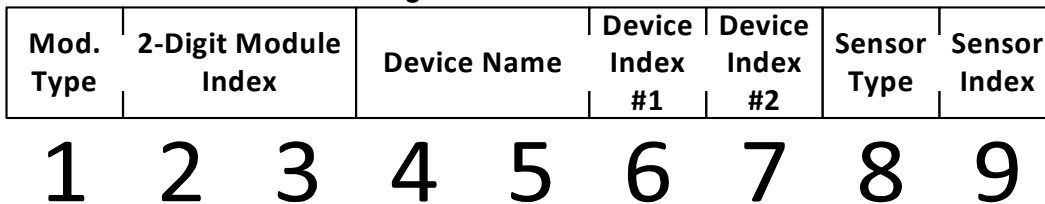

Each position could indicate different types of component according to the following criteria:

Table 21 - Module Type

Number	Description
1	Chassis
2	Management
3	Spine
4	Leaf
5	Fan
6	Power supply
7	BBU
8	x86 CPU
9	Port module

Table 22 - Device Type

Number	Description
01	PS
02	FAN
03	BOARD_MONITOR
04	CPU_BOARD_MONITOR

Table 22 - Device Type

Number	Description
05	SX
06	SIB
07	CPU_MEZZ_TEMP
08	CPU Package Sensor
09	CPU Core Sensor
10	SX_AMBIENT_TEMP
11	SX_MONITOR
12	AUX_IN_TMP_SNSR
13	AUX_OUT_TMP_SNSR
14	MAIN_IN_TMP_SNSR
15	MAIN_OUT_TMP_SNSR
16	CPU_MEZZ_TEMP
17	Controller
18	QSFP_TEMP
19	QSFP-ASIC
20	Board AMB temp
21	Ports AMB temp
22	Power monitor
23	PS_MONITOR
24	SWB AMB temp
25	pcie-switch-temp
26	SPC

Table 23 - Sensor Type

Number	Description
1	t – temperature sensor
2	f – fan sensor

For example:

- 401191311

The first layer is “401” where:

- “4”, according to [Table 21](#), indicates a leaf
- “01” indicates index #1 (Leaf #1)

The second layer is “1913” where:

- “19”, according to [Table 22](#), indicates a QSFP ASIC
- “1” indicates ASIC #1
- “3” indicates sensor #3 (QSFP-ASIC1-3)

The third layer is “11” where:

- “1”, according to [Table 23](#), indicates a temperature sensor
- “1” indicates sensor #1 (T1)

The resulting output in the entPhysicalDescr column of the MIB would be: L01/QSFP-ASIC-1/T1.

- 501020021

The first layer is 501 where

- “5”, according to [Table 21](#), indicates a fan
- “01 indicates index #1 (Fan #1)

The second layer is 0200 where:

- 02, according to [Table 22](#), indicates a fan
- 0 – indicates that there is no first index
- 0 – indicates that there is no second index

The third layer is 21 where:

- “2”, according to [Table 23](#), indicates a fan sensor
- “1” indicates sensor #1 (F1)

The resulting output in the entPhysicalDescr column of the MIB would be: FAN1/FAN/F1.

3.5 Commands

3.5.1 CLI Session

This chapter displays all the relevant commands used to manage CLI session terminal.

cli clear-history

cli clear-history

Clears the command history of the current user.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	switch (config) # cli clear-history switch (config) #
Related Commands	N/A
Note	

cli default

cli default {auto-logout <minutes> | paging enable | prefix-modes {enable | show-config} | progress enable | prompt {confirm-reload | confirm-reset | confirm-unsaved | empty-password}}

no cli default {auto-logout | paging enable | prefix-modes {enable | show-config} | progress enable prompt {confirm-reload | confirm-reset | confirm-unsaved | empty-password}}

Configures default CLI options for all future sessions.

The no form of the command deletes or disables the default CLI options.

Syntax Description	minutes	Configures keyboard inactivity timeout for automatic logout. Range is 0-35791 minutes. Setting the value to 0 or using the no form of the command disables the auto-logout.
	paging enable	Enables text viewing one screen at a time.
	prefix-modes {enable show-config}	Configures the prefix modes feature of CLI. <ul style="list-style-type: none">“prefix-modes enable” enables prefix modes for current and all future sessions“prefix-modes show-config” uses prefix modes in “show configuration” output for current and all future sessions
	progress enable	Enables progress updates.
	prompt confirm-reload	Prompts for confirmation before rebooting.
	prompt confirm-reset	Prompts for confirmation before resetting to factory state.
	prompt confirm-unsaved	Confirms whether or not to save unsaved changes before rebooting.
	prompt empty-password	Prompts for a password if none is specified in a pseudo-URL for SCP.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	

Example

```
switch (config) # cli default prefix-modes enable
switch (config) # show cli
CLI current session settings:
  Maximum line size:      8192
  Terminal width:        171 columns
  Terminal length:       38 rows
  Terminal type:         xterm
  X display setting:     (none)
  Auto-logout:           disabled
  Paging:                enabled
  Progress tracking:     enabled
  Prefix modes:         disabled

CLI defaults for future sessions:
  Auto-logout:           disabled
  Paging:                enabled
  Progress tracking:     enabled
  Prefix modes:         enabled (and use in 'show configuration')

Settings for both this session and future ones:
  Show hidden config:    yes
  Confirm losing changes: yes
  Confirm reboot/shutdown: no
  Confirm factory reset: yes
  Prompt on empty password: yes
switch (config) #
```

Related Commands show cli

Note

cli max-sessions

cli max-sessions <number>
no cli max-sessions

Configures the maximum number of simultaneous CLI sessions allowed.
The no form of the command resets this value to its default.

Syntax Description	number	Range: 3-60
Default	50 sessions	
Configuration Mode	Config	
History	3.5.0200	
Role	admin	
Example	switch (config) # cli max-sessions 40 switch (config) #	
Related Commands	show terminal	
Note		

cli session

```
cli session {auto-logout <minutes> | paging enable | prefix-modes {enable | show-config} | progress enable | terminal {length <size> | resize | type <terminal-type> | width} | x-display full <display>}  
no cli session {auto-logout | paging enable | prefix-modes {enable | show-config} | progress enable | terminal type | x-display}
```

Configures default CLI options for all future sessions.

The no form of the command deletes or disables the CLI sessions.

Syntax Description	minutes	Configures keyboard inactivity timeout for automatic logout. Range is 0-35791 minutes. Setting the value to 0 or using the no form of the command disables the auto logout.
	paging enable	Enables text viewing one screen at a time.
	prefix-modes enable show-config	Configures the prefix modes feature of CLI. <ul style="list-style-type: none"> • “prefix-modes enable” enables prefix modes for current and all future sessions • “prefix-modes show-config” uses prefix modes in “show configuration” output for current and all future sessions
	progress enable	Enables progress updates.
	terminal length	Sets the number of lines for the current terminal. Valid range is 5-999.
	terminal resize	Resizes the CLI terminal settings (to match the actual terminal window).
	terminal-type	Sets the terminal type. Valid options are: <ul style="list-style-type: none"> • ansi • console • dumb • linux • unknown • vt52 • vt100 • vt102 • vt220 • vt320 • xterm
	terminal width	Sets the width of the terminal in characters. Valid range is 34-999.
	x-display full <display>	Specifies the display as a raw string, e.g local-host:0.0.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # cli session auto-logout switch (config) #</pre>	

Related Commands show terminal

Note

terminal

terminal {length <number of lines> | resize | type <terminal type> | width <number of characters>}
no terminal type

Configures default CLI options for all future sessions.
The no form of the command clears the terminal type.

Syntax Description	length	Sets the number of lines for this terminal Range: 5-999
	resize	Resizes the CLI terminal settings (to match with real terminal)
	type	Sets the terminal type. Possible values: ansi, console, dumb, linux, screen, vt52, vt100, vt102, vt220, xterm.
	width	Sets the width of this terminal in characters Range: 34-999
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # terminal length 500 switch (config) #	
Related Commands	show terminal	
Note		

terminal sysrq enable

terminal sysrq enable
no terminal sysrq enable

Enable SysRq over the serial connection (RS232 or Console port).
 The no form of the command disables SysRq over the serial connection (RS232 or Console port).

Syntax Description	N/A
Default	Enabled
Configuration Mode	Config
History	3.4.3000
Role	admin
Example	switch (config) # terminal sysrq enable switch (config) #
Related Commands	show terminal
Note	

show cli

show cli

Displays the CLI configuration and status.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	<pre>switch (config) # show cli CLI current session settings: Maximum line size: 8192 Terminal width: 171 columns Terminal length: 38 rows Terminal type: xterm X display setting: (none) Auto-logout: disabled Paging: enabled Progress tracking: enabled Prefix modes: disabled CLI defaults for future sessions: Auto-logout: disabled Paging: enabled Progress tracking: enabled Prefix modes: enabled (and use in 'show configuration') Settings for both this session and future ones: Show hidden config: yes Confirm losing changes: yes Confirm reboot/shutdown: no Confirm factory reset: yes Prompt on empty password: yes switch (config) #</pre>
Related Commands	cli default
Note	

show cli max-sessions

show cli max-sessions

Displays maximum number of sessions.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.5.0200
Role	admin
Example	<pre>switch (config) # show cli max-sessions Maximum number of CLI sessions: 50 switch (config) #</pre>
Related Commands	
Note	

show cli num-sessions

show cli num-sessions

Displays current number of sessions.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.5.0200
Role	admin
Example	<pre>switch (config) # show cli num-sessions Current number of CLI sessions: 40 switch (config) #</pre>
Related Commands	
Note	

3.5.2 Banner

banner login

banner login <string>

no banner login

Sets the CLI welcome banner message.

The no form of the command resets the system login banner to its default.

Syntax Description	string	Text string.
Default	“HPE StoreFabric Switch Management MLNX-OS Switch Management”	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # banner login Example switch (config) #	
Related Commands	show banner	
Note	If more than one word is used (there is a space) quotation marks should be added (i.e. “xxxx xxxx”).	

banner login-local

banner login-local <string>
no banner login-local

Sets system login local banner.
The no form of the command resets the banner.

Syntax Description	string	Text string.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
	3.5.0200	Added no form of the command
Role	admin	
Example	switch (config) # banner login-local Testing switch (config) #	
Related Commands	show banner	
Note	<ul style="list-style-type: none">• The login-local refers to the serial connection banner• If more than one word is used (there is a space) quotation marks should be added (i.e. "xxxx xxxx").	

banner login-remote

banner login-remote <string>
no banner login-remote

Sets system login remote banner.
 The no form of the command resets the banner.

Syntax Description	string	Text string.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
	3.5.0200	Added no form of the command
Role	admin	
Example	<pre>switch (config) # banner login-remote Testing switch (config) #</pre>	
Related Commands	show banner	
Note	<ul style="list-style-type: none"> • The login-remote refers to the SSH connections banner • If more than one word is used (there is a space) quotation marks should be added (i.e. "xxxx xxxx"). 	

banner logout

banner logout <string>
no banner logout

Set system logout banner (for both local and remote logins).
The no form of the command resets the banner.

Syntax Description	string	Text string.
Default	N/A	
Configuration Mode	Config	
History	3.5.0200	
Role	admin	
Example	switch (config) # banner logout Testing switch (config) #	
Related Commands	show banner	
Note	If more than one word is used (there is a space) quotation marks should be added (i.e. "xxxx xxxx").	

banner logout-local

banner logout-local <string>
no banner logout-local

Sets system logout local banner.
 The no form of the command resets the banner.

Syntax Description	string	Text string.
Default	N/A	
Configuration Mode	Config	
History	3.5.0200	
Role	admin	
Example	<pre>switch (config) # banner logout-local Testing switch (config) #</pre>	
Related Commands	show banner	
Note	<ul style="list-style-type: none"> • The logout-local refers to the serial connection banner • If more than one word is used (there is a space) quotation marks should be added (i.e. "xxxx xxxx"). 	

banner logout-remote

banner logout-remote <string>
no banner logout-remote

Sets system logout remote banner.
The no form of the command resets the banner.

Syntax Description	string	Text string.
Default	N/A	
Configuration Mode	Config	
History	3.5.0200	
Role	admin	
Example	<pre>switch (config) # banner logout-remote Testing switch (config) #</pre>	
Related Commands	show banner	
Note	<ul style="list-style-type: none">• The logout-remote refers to SSH connections banner• If more than one word is used (there is a space) quotation marks should be added (i.e. "xxxx xxxx").	

banner motd

banner motd <string>
no banner motd

Configures the message of the day banner.
 The no form of the command resets the system Message of the Day banner.

Syntax Description	string	Text string
Default	“HPE StoreFabric Switch”	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # banner motd “My Banner”	
Related Commands	show banner	
Note	<ul style="list-style-type: none"> • If more than one word is used (there is a space) quotation marks should be added (i.e. “xxxx xxxx”). • To insert a multi-line MotD, hit Ctrl-V (escape sequence) followed by Ctrl-J (new line sequence). The symbol “^J” should appear. Then, whatever is typed after it becomes the new line of the MotD. Remember to also include the string between quotation marks. 	

show banner

show banner

Displays configured banners.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000 3.5.0200 Updated Example
Role	Any Command Mode
Example	<pre>HPE StoreFabric Switch spider-144 [standalone: master] (config) # show banner Banners: Message of the Day (MOTD): HPE StoreFabric Switch Login: HPE StoreFabric Switch Management Logout: Goodbye</pre>
Related Commands	<pre>banner login banner login-local banner login-remote banner logout banner logout-local banner logout-remote banner motd</pre>
Note	

3.5.3 SSH

ssh server enable

ssh server enable
no ssh server enable

Enables the SSH server.
 The no form of the command disables the SSH server.

Syntax Description	N/A
Default	SSH server is enabled
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # ssh server enable switch (config) # show ssh server SSH server configuration: SSH server enabled: yes Server security strict mode: no Minimum protocol version: 2 TCP forwarding enabled: yes X11 forwarding enabled: no SSH server ports: 22 Interface listen enabled: yes No Listen Interfaces. Host Key Finger Prints: RSA v1 host key: SHA256:ElFoK7Jts7ejIws0Jgs3yt46goOckln0JzNzAGx0ue4 (2048) RSA v2 host key: SHA256:N4n+Un/lErjtzmmDJH+qcdsmHgHc0itLYArFggP+UFI (2048) DSA v2 host key: SHA256:2rIuzmPD90AWooQaEjI1SH5EF0DjQ9DDSTaAMrzDFCY (1024) switch (config) #</pre>
Related Commands	show ssh server
Note	Disabling SSH server does not terminate existing SSH sessions, it only prevents new ones from being established.

ssh server host-key

```
ssh server host-key {<key-type> {private-key <private-key>| public-key <public-key>} | generate}
```

Manipulates host keys for SSH.

Syntax Description	key-type	<ul style="list-style-type: none">• rsa1 - RSAv1• rsa2 - RSAv2• dsa2 - DSAv2
	private-key	Sets new private-key for the host keys of the specified type.
	public-key	Sets new public-key for the host keys of the specified type.
	generate	Generates new RSA and DSA host keys for SSH.
Default	SSH keys are locally generated	
Configuration Mode	Config	
History	3.1.0000	
	3.4.2300	Added notes
Role	admin	

Example

```

switch (config) # ssh server host-key dsa2 private-key
Key: *****
Confirm: *****
switch (config) # show ssh server host-keys
SSH server configuration:
  SSH server enabled:      yes
  Minimum protocol version: 2
  X11 forwarding enabled:  no
  SSH server ports:       22

  Interface listen enabled: yes
  No Listen Interfaces.

Host Key Finger Prints:
  RSA v1 host key: a0:63:db:96:e2:95:5a:5a:fd:a8:d0:f4:ab:e3:5f:f8
  RSA v2 host key: 1e:b7:8b:ec:ab:35:98:be:6b:d6:12:c2:18:72:12:d6
  DSA v2 host key: 7c:4a:f7:72:51:67:b5:0b:cd:a2:d2:b9:f3:be:3e:68

Host Keys:
  RSA v1 host key: "switch-5ea5d8 1024 35
12457497995374010105491416867919987976776882016984375942831915584962796
99375406596085804272219042450456598705866658144854493132172365068789517
13570509420864336951833046700451354269467758379288848962624165330724512
16091899983038691571036219385577978596282214644533444813712105628654158
3022982220576029771297093"
  RSA v2 host key: "switch-5ea5d8 ssh-rsa AAAAB3NzaC1yc2EAAAABIwAAA-
IEArB9i5OnukAHNUOkwpCmEl0m88kJgBzL22+F5tfaSn+S0pVYxrceZeyuzXsoZ1VtFTk2-
Fydwy0YvMS0Kcv2PuCrPZV/
GYd3lQEnn22rEmr1PrKCrMl1XlUy6DFlr3OgwWmlbaobmDlG/gSziWz/gc4Jgqf2CyX-
Fq4pzaRljarlVk="
  DSA v2 host key: "switch-5ea5d8 ssh-dss AAAAB3NzaC1kc3MAAAC-
BAMeJ3S+nyaHhRbwv3tJqlWttDC35RZVC5iG4ZEvmMMHp28VL940cyuuGh39VCdM9pEVaI7h
zZrsgHrNqakb/YLD/7anGH3wpl9Fv8lfe0RH3bloJzG+mJ6R5momdoPCrKwEKiKABKE00-
jLz1VznpP0IHxjwF+Tbr3dK5HwVzQYw/bAAAAFQCBoDPqBZZa+2KylKlzUsbZ2pKhgQAAA-
IAJK+StiQdtORw1B5UCMzTrTef5L07DSfVreMEYtTRnBBtgVSNqQfWpSQIYbVDHQR9T6qCM
4VO39DuHUGQ1TMDIX7t+9mfbB87YyUu5a/ndbf3GhNhxHWwbzlr9hgLL7FSHA7DYH7bVOZ-
RlqxH64eQKGZqy1ps/F4E31lyn7GC4EQAAAIA/2osHipXf+NRjplgfmHROVvf/mGE9Vzc9/
AMUx1Jn5VhvEJ5CZW9cI+LxMOJoJhOj3YW3B1czGxRObDA9vUbKXTNc8bkgoUrxySAHlrH
NOPqJgeT4L009AItSp3mlmxHqds7jixfTvOTEKWXrgpczlmTB8+zjhUah/YuuBl2H
g=="
switch (config) #

```

Related Commands

```

show ssh server
system secure-mode enable

```

Note

When working in secure mode, the commands “ssh server host-key rsa1” and “ssh server host-key generate” do not create RSAv1 key-type.

ssh server listen

ssh server listen {enable | interface <inf>}
no ssh server listen {enable | interface <inf>}

Enables the listen interface restricted list for SSH. If enabled, and at least one non-DHCP interface is specified in the list, the SSH connections are only accepted on those specified interfaces.

The no form of the command disables the listen interface restricted list for SSH. When disabled, SSH connections are not accepted on any interface.

Syntax Description	enable	Enables SSH interface restrictions on access to this system.
	interface <inf>	Adds interface to SSH server access restriction list. Possible interfaces are “lo”, and “mgmt0”.
Default	SSH listen is enabled	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # ssh server listen enable switch (config) # show ssh server SSH server configuration: SSH server enabled: yes Minimum protocol version: 2 X11 forwarding enabled: no SSH server ports: 22 Interface listen enabled: yes No Listen Interfaces. Host Key Finger Prints: RSA v1 host key: a0:63:db:96:e2:95:5a:5a:fd:a8:d0:f4:ab:e3:5f:f8 RSA v2 host key: 1e:b7:8b:ec:ab:35:98:be:6b:d6:12:c2:18:72:12:d6 DSA v2 host key: 7c:4a:f7:72:51:67:b5:0b:cd:a2:d2:b9:f3:be:3e:68 switch (config) #</pre>	
Related Commands	show ssh server	
Note		

ssh server login attempts

ssh server login attempts <number>
no ssh server login attempts

Configures maximum login attempts on SSH server.
 The no form of the command resets the login attempts value to its default.

Syntax Description	number	Range: 3-100 attempts.
Default	6 attempts	
Configuration Mode	Config	
History	3.5.0200	
	3.5.1000	Increased minimum number of attempts allowed
Role	admin	
Example	switch (config) # ssh server login attempts 5	
Related Commands	show ssh server	
Note		

ssh server login timeout

ssh server login timeout <time>
no ssh server login timeout

Configures login timeout on SSH server.
The no form of the command resets the timeout value to its default.

Syntax Description	time	Range: 1-600 seconds
Default	120 seconds	
Configuration Mode	Config	
History	3.5.0200	
Role	admin	
Example	switch (config) # ssh server login timeout 130	
Related Commands	show ssh server	
Note		

ssh server min-version

ssh server min-version <version>
no ssh server min-version

Sets the minimum version of the SSH protocol that the server supports.
 The no form of the command resets the minimum version of SSH protocol supported.

Syntax Description	version	Possible versions are 1 and 2.
Default	2	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # ssh server min-version 2 switch (config) # show ssh server SSH server configuration: SSH server enabled: yes Minimum protocol version: 2 X11 forwarding enabled: no SSH server ports: 22 Interface listen enabled: yes No Listen Interfaces. Host Key Finger Prints: RSA v1 host key: a0:63:db:96:e2:95:5a:5a:fd:a8:d0:f4:ab:e3:5f:f8 RSA v2 host key: 1e:b7:8b:ec:ab:35:98:be:6b:d6:12:c2:18:72:12:d6 DSA v2 host key: 7c:4a:f7:72:51:67:b5:0b:cd:a2:d2:b9:f3:be:3e:68 switch (config) #</pre>	
Related Commands	show ssh server	
Note		

ssh server ports

ssh server ports {<port1> [<port2>...]}

Specifies which ports the SSH server listens on.

Syntax Description	port	Port number in [1...65535].
Default	22	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # ssh server ports 22 switch (config) # show ssh server SSH server configuration: SSH server enabled: yes Minimum protocol version: 2 X11 forwarding enabled: no SSH server ports: 22 Interface listen enabled: yes No Listen Interfaces. Host Key Finger Prints: RSA v1 host key: a0:63:db:96:e2:95:5a:5a:fd:a8:d0:f4:ab:e3:5f:f8 RSA v2 host key: 1e:b7:8b:ec:ab:35:98:be:6b:d6:12:c2:18:72:12:d6 DSA v2 host key: 7c:4a:f7:72:51:67:b5:0b:cd:a2:d2:b9:f3:be:3e:68 switch (config) #</pre>	
Related Commands	show ssh server	
Note	<ul style="list-style-type: none">• Multiple ports can be specified by repeating the <port> parameter• The command will remove any previous ports if not listed in the command	

ssh server security strict

ssh server security strict

Enables strict security settings.
The no form of the command disables strict security settings.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.3.5060 3.6.4000
Role	admin
Example	switch (config) # ssh server security strict switch (config) #
Related Commands	show ssh server
Note	The following ciphers are disabled for SSH when strict security is enabled: <ul style="list-style-type: none"> • aes256-cbc • aes192-cbc • aes128-cbc • arcfour • blowfish-cbc • cast128-cbc • rijndael-cbc@lysator.liu.se • 3des-cbc

ssh server tcp-forwarding enable

ssh server tcp-forwarding enable

Enables TCP port forwarding.
The no form of the command disables TCP port forwarding.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	switch (config) # ssh server tcp-forwarding enable switch (config) #
Related Commands	show ssh server
Note	

ssh server x11-forwarding

ssh server x11-forwarding enable
no ssh server x11-forwarding enable

Enables X11 forwarding on the SSH server.
 The no form of the command disables X11 forwarding.

Syntax Description	N/A
Default	X11-forwarding is disabled.
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # ssh server x11-forwarding enable switch (config) # show ssh server SSH server configuration: SSH server enabled: yes Minimum protocol version: 2 X11 forwarding enabled: yes SSH server ports: 22 Interface listen enabled: yes No Listen Interfaces. Host Key Finger Prints: RSA v1 host key: a0:63:db:96:e2:95:5a:5a:fd:a8:d0:f4:ab:e3:5f:f8 RSA v2 host key: 1e:b7:8b:ec:ab:35:98:be:6b:d6:12:c2:18:72:12:d6 DSA v2 host key: 7c:4a:f7:72:51:67:b5:0b:cd:a2:d2:b9:f3:be:3e:68 switch (config) #</pre>
Related Commands	N/A
Note	

ssh client global

```
ssh client global {host-key-check <policy>} | known-host <known-host-entry>}  
no ssh client global {host-key-check | known-host localhost}
```

Configures global SSH client settings.

The no form of the command negates global SSH client settings.

Syntax Description	host-key-check <policy> known-host known-host-entry	Sets SSH client configuration to control how host key checking is performed. This parameter may be set in 3 ways. <ul style="list-style-type: none">• If set to “no” it always permits connection, and accepts any new or changed host keys without checking• If set to “ask” it prompts user to accept new host keys, but does not permit a connection if there was already a known host entry that does not match the one presented by the host• If set to “yes” it only permits connection if a matching host key is already in the known hosts file Adds an entry to the global known-hosts configuration file. Adds/removes an entry to/from the global known-hosts configuration file. The entry consist of “<IP> <key-type> <key>”.
Default	host-key-check - ask, no keys are configured by default	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	

Example

```
switch (config) # ssh client global host-key-check no
switch (config) # ssh client global known-host "72.30.2.2 ssh-rsa
AAAAB3NzaC1yc2EAAAABIwAAAIEArB9i5OnukAHNUOkwpCmEl0m88kJgB-
zL22+F5tfaSn+S0pVYxrceZeyuzXsoZlVtFTk2Fydwy0YvMS0Kcv2PuCrPZV/
GYd3lQEnn22rEmr1PrKCrMl1XlUy6DFlr3OgwWmlbaobmDlG/gSziWz/gc4Jgqf2CyX-
Fq4pzaRljarlVk="

switch (config) # show ssh client
SSH client Strict Hostkey Checking: ask

SSH Global Known Hosts:
  Entry 1: 72.30.2.2
           Finger Print: 1e:b7:8b:ec:ab:35:98:be:6b:d6:12:c2:18:72:12:d6

No SSH user identities configured.

No SSH authorized keys configured.

switch (config) #
```

Related Commands

```
show ssh client
```

Note

ssh client user

```
ssh client user <username> {authorized-key sshv2 <public key> | identity <key type> {generate | private-key [<private key>] | public-key [<public key>]} | known-host <known host> remove}
no ssh client user admin {authorized-key sshv2 <public key ID> | identity <key type>}
```

Adds an entry to the global known-hosts configuration file, either by generating new key, or by adding manually a public or private key.

The no form of the command removes a public key from the specified user's authorized key list, or changes the key type.

Syntax Description	username	The specified user must be a valid account on the system. Possible values for this parameter are “admin”, “monitor”, “xmladmin”, and “xmluser”.
	authorized-key sshv2 <public key>	Adds the specified key to the list of authorized SSHv2 RSA or DSA public keys for this user account. These keys can be used to log into the user's account.
	identity <key type>	Sets certain SSH client identity settings for a user, dsa2 or rsa2.
	generate	Generates SSH client identity keys for specified user.
	private-key	Sets private key SSH client identity settings for the user.
	public-key	Sets public key SSH client identity settings for the user.
	known-host <known host> remove	Removes host from user's known host file.
Default	No keys are created by default	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # ssh client user admin known-host 172.30.1.116 remove switch (config) #	

Related Commands show ssh client

Note If a key is being pasted from a cut buffer and was displayed with a paging program, it is likely that newline characters have been inserted, even if the output was not long enough to require paging. One can specify “no cli session paging enable” before running the “show” command to prevent the newlines from being inserted.

slogin

slogin [<slogin options>] <hostname>

Invokes the SSH client. The user is returned to the CLI when SSH finishes.

Syntax Description	slogin options	usage: slogin [-1246AaCfGkNnqsTtVvXxY] [-b bind_address] [-c cipher_spec] [-D port] [-e escape_char] [-F configfile] [-i identity_file] [-L port:host:hostport] [-l login_name] [-m mac_spec] [-o option] [-p port] [-R port:host:hostport] [user@]hostname [command]
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	monitor/admin	
Example	<pre>switch (config) # slogin 192.168.10.70 The authenticity of host '192.168.10.70 (192.168.10.70)' can't be established. RSA key fingerprint is 2e:ad:2d:23:45:4e:47:e0:2c:ae:8c:34:f0:1a:88:cb. Are you sure you want to continue connecting (yes/no)? yes Warning: Permanently added '192.168.10.70' (RSA) to the list of known hosts. HPE StoreFabric Switch Management Last login: Sat Feb 28 22:55:17 2009 from 10.208.0.121 HPE StoreFabric Switch switch (config) #</pre>	
Related Commands	N/A	
Note		

show ssh client

show ssh client

Displays the client configuration of the SSH server.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # show ssh client SSH client Strict Hostkey Checking: ask SSH Global Known Hosts: Entry 1: 72.30.2.2 Finger Print: 1e:b7:8b:ec:ab:35:98:be:6b:d6:12:c2:18:72:12:d6 No SSH user identities configured. No SSH authorized keys configured. switch (config) #</pre>
Related Commands	N/A
Note	

show ssh server

show ssh server

Displays SSH server configuration.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Config
---------------------------	--------

History	3.1.0000	
	3.4.0000	Updated Example
	3.5.0200	Added SSH login timeout and max attempts

Role	admin
-------------	-------

Example	<pre>switch (config) # show ssh server SSH server configuration: SSH server enabled: yes Server security strict mode: no Minimum protocol version: 2 TCP forwarding enabled: yes X11 forwarding enabled: no SSH login timeout: 120 SSH login max attempts: 6 SSH server ports: 22 Interface listen enabled: yes No Listen Interfaces. Host Key Finger Prints and Key Lengths: RSA v1 host key: 5f:4e:5f:4a:81:bb:6a:b4:06:52:77:eb:d3:ad:78:92 (2048) RSA v2 host key: 15:e2:a8:45:1c:58:1b:00:cc:29:ec:00:38:83:49:00 (2048) DSA v2 host key: df:c0:ac:a6:3e:a5:52:a5:d1:f6:22:37:ef:f1:08:f9 (1024) switch (config) #</pre>
----------------	--

Related Commands	ssh server
-------------------------	------------

Note	
-------------	--

3.5.4 Remote Login

telnet

telnet

Logs into another system using telnet.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	switch (config) # (config) # telnet telnet>
Related Commands	telnet-server
Note	

telnet-server enable

telnet-server enable
no telnet-server enable

Enables the telnet server.
The no form of the command disables the telnet server.

Syntax Description	N/A
Default	Telnet server is disabled
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # telnet-server enable switch (config) # show telnet-server Telnet server enabled: yes</pre>
Related Commands	show telnet-server
Note	

show telnet-server

show telnet-server

Displays telnet server settings.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # show telnet-server Telnet server enabled: yes switch (config) #</pre>
Related Commands	telnet-server enable
Note	

3.5.5 Web Interface

web auto-logout

web auto-logout <number of minutes>
no web auto-logout <number of minutes>

Configures length of user inactivity before auto-logout of a web session. The no form of the command disables the web auto-logout (web sessions will never logged out due to inactivity).

Syntax Description	number of minutes	The length of user inactivity in minutes. 0 will disable the inactivity timer (same as a “no web auto-logout” command).
Default	60 minutes	
Configuration Mode	Config	
History	3.1.0000 3.4.0000	Updated Example
Role	admin	
Example	<pre>switch (config) # web auto-logout 60 switch (config) # show web Web User Interface: Web interface enabled: yes HTTP enabled: yes HTTP port: 80 HTTP redirect to HTTPS: no HTTPS enabled: yes HTTPS port: 443 HTTPS ssl-ciphers: all HTTPS certificate name: default-cert Listen enabled: yes No Listen Interfaces. Inactivity timeout: 1 hr Session timeout: 2 hr 30 min Session renewal: 30 min Web file transfer proxy: Proxy enabled: no Web file transfer certificate authority: HTTPS server cert verify: yes HTTPS supplemental CA list: default-ca-list switch (config) #</pre>	

Related Commands show web

Note The no form of the command does not automatically log users out due to inactivity.

web cache-enable

web cache-enable
no web cache-enable

Enables web clients to cache webpages.
The no form of the command disables web clients from caching webpages.

Syntax Description	N/A
Default	Enabled
Configuration Mode	Config
History	3.4.1100
Role	admin
Example	switch (config) # no web cache-enable
Related Commands	N/A
Note	

web client cert-verify

web client cert-verify
no web client cert-verify

Enables verification of server certificates during HTTPS file transfers.
 The no form of the command disables verification of server certificates during HTTPS file transfers.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.2.3000
Role	admin
Example	switch (config) # web client cert-verify
Related Commands	N/A

Note

web client ca-list

web client ca-list {<ca-list-name> | **default-ca-list** | **none**}
no web client ca-list

Configures supplemental CA certificates for verification of server certificates during HTTPS file transfers.

The no form of the command uses no supplemental certificates.

Syntax Description	ca-list-name	Specifies CA list to configure.
	default-ca-list	Configures default supplemental CA certificate list.
	none	Uses no supplemental certificates.
Default	default-ca-list	
Configuration Mode	Config	
History	3.2.3000	
Role	admin	
Example	switch (config) # web client ca-list default-ca-list	
Related Commands	N/A	
Note		

web enable

web enable
no web enable

Enables the web-based management console.
 The no form of the command disables the web-based management console.

Syntax Description	N/A
Default	enable
Configuration Mode	Config
History	3.1.0000 3.4.0000 Updated Example
Role	admin
Example	<pre>switch (config) # web enable switch (config) # show web Web User Interface: Web interface enabled: yes HTTP enabled: yes HTTP port: 80 HTTP redirect to HTTPS: no HTTPS enabled: yes HTTPS port: 443 HTTPS ssl-ciphers: all HTTPS certificate name: default-cert Listen enabled: yes No Listen Interfaces. Inactivity timeout: 1 hr Session timeout: 2 hr 30 min Session renewal: 30 min Web file transfer proxy: Proxy enabled: no Web file transfer certificate authority: HTTPS server cert verify: yes HTTPS supplemental CA list: default-ca-list switch (config) #</pre>
Related Commands	show web
Note	

web http

web http {enable | port <port number> | redirect}
no web http {enable | port | redirect}

Configures HTTP access to the web-based management console.
The no form of the command negates HTTP settings for the web-based management console.

Syntax Description	enable	Enables HTTP access to the web-based management console.
	port number	Sets a port for HTTP access.
	redirect	Enables redirection to HTTPS. If HTTP access is enabled, this specifies whether a redirect from the HTTP port to the HTTPS port should be issued to mandate secure HTTPS access.
Default	HTTP is enabled HTTP TCP port is 80 HTTP redirect to HTTPS is disabled	
Configuration Mode	Config	
History	3.1.0000	
	3.4.0000	Updated Example
Role	admin	

Example

```
switch (config) # web http enable
switch (config) # show web

Web User Interface:
  Web interface enabled:  yes
  HTTP enabled:          yes
  HTTP port:             80
  HTTP redirect to HTTPS: no
  HTTPS enabled:         yes
  HTTPS port:            443
  HTTPS ssl-ciphers:     all
  HTTPS certificate name: default-cert
Listen enabled:         yes
No Listen Interfaces.

  Inactivity timeout:    1 hr
  Session timeout:       2 hr 30 min
  Session renewal:       30 min

Web file transfer proxy:
  Proxy enabled: no

Web file transfer certificate authority:
  HTTPS server cert verify: yes
  HTTPS supplemental CA list: default-ca-list
switch (config) #
```

Related Commands

```
show web
web enable
```

Note

Enabling HTTP is meaningful if the WebUI as a whole is enabled.

web httpd

web httpd listen {enable | interface <ifName> }
no web httpd listen {enable | interface <ifName> }

Enables the listen interface restricted list for HTTP and HTTPS.
The no form of the command disables the HTTP server listen ability.

Syntax Description	enable	Enables Web interface restrictions on access to this system.
	interface <ifName>	Adds interface to Web server access restriction list (i.e. mgmt0, mgmt1)
Default	Listening is enabled. all interfaces are permitted.	
Configuration Mode	Config	
History	3.1.0000	
	3.4.0000	Updated Example
Role	admin	
Example	<pre>switch (config) # web httpd listen enable switch (config) # show web Web User Interface: Web interface enabled: yes HTTP enabled: yes HTTP port: 80 HTTP redirect to HTTPS: no HTTPS enabled: yes HTTPS port: 443 HTTPS ssl-ciphers: all HTTPS certificate name: default-cert Listen enabled: yes No Listen Interfaces. Inactivity timeout: 1 hr Session timeout: 2 hr 30 min Session renewal: 30 min Web file transfer proxy: Proxy enabled: no Web file transfer certificate authority: HTTPS server cert verify: yes HTTPS supplemental CA list: default-ca-list switch (config) #</pre>	

Related Commands	N/A
-------------------------	-----

Note	If enabled, and if at least one of the interfaces listed is eligible to be a listen interface, then HTTP/HTTPS requests will only be accepted on those interfaces. Otherwise, HTTP/HTTPS requests are accepted on any interface.
-------------	--

web https

```
web https {certificate {regenerate | name | default-cert} | enable | port <port number> | ssl ciphers {all | TLS | TLS1.2}}
no web https {enable | port <port number>}
```

Configures HTTPS access to the web-based management console.
The no form of the command negates HTTPS settings for the web-based management console.

Syntax Description	certificate regenerate	Re-generates certificate to use for HTTPS connections.
	certificate name	Configure the named certificate to be used for HTTPS connections
	certificate default-cert	Configure HTTPS to use the configured default certificate
	enable	Enables HTTPS access to the web-based management console.
	port	Sets a TCP port for HTTPS access.
	ssl ciphers {all TLS TLS1.2}	Sets ciphers to be used for HTTPS.
Default	HTTPS is enabled Default port is 443	
Configuration Mode	Config	
History	3.1.0000	
	3.4.0000	Added “ssl ciphers” parameter
	3.4.0010	Added TLS parameter to “ssl ciphers”
Role	admin	

Example

```
switch (config) # web https enable
switch (config) # show web

Web User Interface:
  Web interface enabled:  yes
  HTTP enabled:          yes
  HTTP port:             80
  HTTP redirect to HTTPS: no
  HTTPS enabled:         yes
  HTTPS port:            443
  HTTPS ssl-ciphers:     all
  HTTPS certificate name: default-cert
  Listen enabled:        yes
  No Listen Interfaces.

  Inactivity timeout:    1 hr
  Session timeout:       2 hr 30 min
  Session renewal:       30 min

Web file transfer proxy:
  Proxy enabled: no

Web file transfer certificate authority:
  HTTPS server cert verify: yes
  HTTPS supplemental CA list: default-ca-list
switch (config) #
```

Related Commands

```
show web
web enable
```

Note

- Enabling HTTPS is meaningful if the WebUI as a whole is enabled.
 - See the command “crypto certificate default-cert name” for how to change the default certificate if inheriting the configured default certificate is preferred
-
-

web session

web session {renewal <minutes> | timeout <minutes>}
no web session {renewal | timeout}

Configures session settings.
The no form of the command resets session settings to default.

Syntax Description	renewal <minutes>	Configures time before expiration to renew a session.
	timeout <minutes>	Configures time after which a session expires.
Default	timeout - 2.5 hours renewal - 30 min	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # web session renewal 60 switch (config) # show web Web User Interface: Web interface enabled: yes HTTP enabled: yes HTTP port: 80 HTTP redirect to HTTPS: no HTTPS enabled: yes HTTPS port: 443 HTTPS ssl-ciphers: all HTTPS certificate name: default-cert Listen enabled: yes No Listen Interfaces. Inactivity timeout: 1 hr Session timeout: 2 hr 30 min Session renewal: 60 min Web file transfer proxy: Proxy enabled: no Web file transfer certificate authority: HTTPS server cert verify: yes HTTPS supplemental CA list: default-ca-list switch (config) #</pre>	
Related Commands	N/A	
Note		

web proxy auth

web proxy auth {authtype <type>| basic [password <password> | username <username>]}

no web proxy auth {authtype | basic {password | username } }

Configures authentication settings for web proxy authentication.
The no form of the command resets the attributes to their default values.

Syntax Description	type	Configures the type of authentication to use with web proxy. The possible values are: <ul style="list-style-type: none"> • basic - HTTP basic authentication • none - No authentication
	basic	Configures HTTP basic authentication settings for proxy. The password is accepted and stored in plaintext.
	password	A password used for HTTP basic authentication with the web proxy.
	username	A username used for HTTP basic authentication with the web proxy.
Default	Web proxy is disabled.	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	

Example

```
switch (config) # web proxy auth authtype basic
switch (config) # web proxy auth basic username web-user
switch (config) # web proxy auth basic password web-password
switch (config) # show web
```

Web User Interface:

```
Web interface enabled: yes
HTTP enabled:         yes
HTTP port:            80
HTTP redirect to HTTPS: no
HTTPS enabled:        yes
HTTPS port:           443
HTTPS ssl-ciphers:    all
HTTPS certificate name: default-cert
Listen enabled:       yes
No Listen Interfaces.
```

```
Inactivity timeout:   1 hr
Session timeout:      2 hr 30 min
Session renewal:      30 min
```

Web file transfer proxy:

```
Proxy enabled: yes
Proxy address:    10.10.10.11
Proxy port:       40
Authentication type: basic
Basic auth username: web-user
Basic auth password: web-password
```

Web file transfer certificate authority:

```
HTTPS server cert verify: yes
HTTPS supplemental CA list: default-ca-list
switch (config) #
```

Related Commands

```
show web
web proxy host
```

Note

4 System Management

4.1 Management Interface

Management interfaces are used in order to provide access to switch management user interfaces (e.g. CLI, WebUI). HPE StoreFabric Switch Management supports out-of-band (OOB) dedicated interfaces (e.g. mgmt0, mgmt1) and in-band dedicated interfaces. In addition, most HPE StoreFabric Switches feature a serial port that provides access to the CLI only.

On switch systems with two OOB management ports, both of them may be configured on the same VLAN if needed. In this case, ARP replies to the IP of those management interfaces is answered from either of them.

4.1.1 Configuring Management Interfaces with Static IP Addresses

If your switch system was set during initialization to obtain dynamic IP addresses through DHCP and you wish to switch to static assignments, perform the following steps:

Step 1. Enter Config configuration mode. Run:

```
switch >  
switch > enable  
switch # configure terminal  
switch (config) #
```

Step 2. Disable setting IP addresses using the DHCP using the following command:

```
switch (config) # no interface <ifname> dhcp
```

Step 3. Define your interfaces statically using the following command:

```
switch (config) # interface <ifname> ip address <IP address> <netmask>
```

4.1.2 Configuring IPv6 Address on the Management Interface

Step 1. Enable IPv6 on this interface. Run:

```
switch (config) # interface mgmt0 ipv6 enable
```

Step 2. Set the IPv6 address to be configured automatically. Run:

```
switch (config) # interface mgmt0 ipv6 address autoconfig
```

Step 3. Verify the IPv6 address is configured correctly. Run:

```
switch (config) # show interfaces mgmt0 brief
```

4.1.3 Dynamic Host Configuration Protocol (DHCP)

DHCP is used for automatic retrieval of management IP addresses.

For all other systems (and software versions) DHCP is disabled by default.



If a user connects through SSH, runs the wizard and turns off DHCP, the connection is immediately terminated as the management interface loses its IP address.

```
<localhost># ssh admin@<ip-address>
HPE StoreFabric Switch ManagementMLNX-OS Switch Management
Password:

HPE StoreFabric Switch Management configuration wizard
Do you want to use the wizard for initial configuration? yes
Step 1: Hostname? [my-switch]
Step 2: Use DHCP on mgmt0 interface? [yes] no
<localhost>#
```

In such case the serial connection should be used.

4.1.4 Default Gateway

To configure manually the default gateway, use the “ip route” command, with “0.0.0.0” as prefix and mask. The next-hop address must be within the range of one of the IP interfaces on the system.

```
switch (config)# ip route 0.0.0.0 0.0.0.0 10.10.0.2
switch (config)# show ip route
Destination      Mask           Gateway        Interface     Source     Distance/Metric
default          0.0.0.0        10.10.0.2     mgmt0         static     0/0
10.10.0.0        255.255.254.0 0.0.0.0        mgmt0         direct     0/0
switch (config)#
```

4.1.5 In-Band Management

In-band management is a management path passing through the data ports. In-band management can be created over one of the VLANs in the systems.

The in-band management feature does not require any license. However, it works only for the system profile Ethernet. It can be enabled with IP Routing but not with IP Proxy-ARP.

➤ *To set an in-band management channel:*

Step 1. Create a VLAN. Run:

Step 2. Create a VLAN interface. Run:

Step 3. Enter the VLAN interface configuration mode and configure L3 attributes. Run:

Step 4. (Optional) Verify in-band management configuration. Run:

4.1.6 Configuring Hostname via DHCP (DHCP Client Option 12)

This feature, also known as the DHCP Client Option 12, is enabled by default and assigns the switch system a hostname via DHCP as long as network manager configures hostname to the management interfaces' (i.e. mgmt0, mgmt1) MAC address. If a network manager configures the hostname manually through any of the user interfaces, the hostname is not retrieved from the DHCP server.

- **To enable fetching hostname from DHCP server, run:**

```
switch (config interface mgmt0) # dhcp hostname
```

- **To disable fetching hostname from DHCP server, run:**

```
switch (config interface mgmt0) # no dhcp hostname
```



Getting the hostname through DHCP is enable by default and will change the switch hostname if the hostname is not set by the user. Therefore, if a switch is part of an HA cluster (e.g.) the user would need to make sure the HA master has the same HA node names as the DHCP server.

4.1.7 Commands

4.1.7.1 Interface

This chapter describes the commands should be used to configure and monitor the management interface.

interface

interface {mgmt0 | mgmt1 | lo | vlan<id>}

Enters a management interface context.

Syntax Description	mgmt0	Management port 0 (out of band).
	mgmt1	Management port 1 (out of band).
	lo	Loopback interface.
	vlan<id>	In-band management interface (e.g. vlan10).
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # interface mgmt0 switch (config interface mgmt0) #	
Related Commands	show interfaces <ifname>	
Notes		

ip address

ip address <IP address> <netmask>

no ip address

Sets the IP address and netmask of this interface.

The no form of the command clears the IP address and netmask of this interface.

Syntax Description	IP address	IPv4 address
	netmask	Subnet mask of IP address
Default	0.0.0.0/0	
Configuration Mode	Config Interface Management	
History	3.1.0000	
Role	admin	
Example	<pre> switch (config) # interface mgmt0 switch (config interface mgmt0) # ip address 10.10.10.10 255.255.255.0 switch (config interface mgmt0) # show interfaces mgmt0 Interface mgmt0 state Admin up: yes Link up: yes IP address: 10.10.10.10 Netmask: 255.255.255.0 IPv6 enabled: yes Autoconf enabled: no Autoconf route: yes Autoconf privacy: no IPv6 addresses: 1 IPv6 address: fe80:202:c9ff:fe5e:a5d8/64 Speed: 1000Mb/s (auto) Duplex: full (auto) Interface type: ethernet Interface ifindex: 2 Interface source: physical MTU: 1500 HW address: 00:02:C9:5E:A5:D8 Comment: RX bytes: 2946769856 RX packets: 44866091 RX mcast packets: 0 RX discards: 0 RX errors: 0 RX overruns: 0 RX frame: 0 TX bytes: 467577486 TX packets: 1385520 TX discards: 0 TX errors: 0 TX overruns: 0 TX carrier: 0 TX collisions: 0 TX queue len: 1000 switch (config interface mgmt0) # </pre>	

Related Commands show interfaces <ifname>

Notes If DHCP is enabled on the specified interface, then the DHCP IP assignment will hold until DHCP is disabled.

ip default-gateway

ip default-gateway <next hop IP address or interface name>
no ip default-gateway

Configures a default route.
 The no form of the command removes the current default route.

Syntax Description	next hop IP address or interface name IP address, lo, mgmt0, or mgmt1.
Default	N/A
Configuration Mode	Config Interface Management
History	3.1.0000
Role	admin
Example	switch (config) # ip default-gateway mgmt1 switch (config) #
Related Commands	
Notes	

alias

alias <index> **ip address** < IP address> <netmask>
no alias <index>

Adds an additional IP address to the specified interface. The secondary address will appear in the output of “show interface” under the data of the primary interface along with the alias.

The no form of the command removes the secondary address to the specified interface.

Syntax Description	index	A number that is to be aliased to (associated with) the secondary IP.
	IP address	Additional IP address.
	netmask	Subnet mask of the IP address.
Default	N/A	
Configuration Mode	Config Interface Management	
History	3.1.0000	
Role	admin	

Example

```

switch (config interface mgmt0) # alias 2 ip address 9.9.9.9
255.255.255.255
switch (config interface mgmt0) # show interfaces mgmt0
Interface mgmt0 state
  Admin up:          yes
  Link up:           yes
  IP address:        172.30.2.2
  Netmask:           255.255.0.0
  Secondary address: 9.9.9.9/32 (alias: 'mgmt0:2')
  IPv6 enabled:      yes
  Autoconf enabled:  no
  Autoconf route:    yes
  Autoconf privacy: no
  IPv6 addresses:    1
  IPv6 address:      fe80::202:c9ff:fe5e:a5d8/64
  Speed:             1000Mb/s (auto)
  Duplex:            full (auto)
  Interface type:    ethernet
  Interface ifindex: 2
  Interface source:  physical
  MTU:               1500
  HW address:        00:02:C9:5E:A5:D8
  Comment:

RX bytes:           2970074221      TX bytes:           468579522
RX packets:         44983023       TX packets:         1390539
RX mcast packets:  0              TX discards:        0
RX discards:        0              TX errors:           0
RX errors:          0              TX overruns:         0
RX overruns:        0              TX carrier:          0
RX frame:           0              TX collisions:       0
                                           TX queue len:       1000

switch (config interface mgmt0) #

```

Related Commands

```
show interfaces <ifname>
```

Notes

- If DHCP is enabled on the specified interface, then the DHCP IP assignment will hold until DHCP is disabled
- More than one additional IP address can be added to the interface

mtu

mtu <bytes>
no mtu <bytes>

Sets the Maximum Transmission Unit (MTU) of this interface.
The no form of the command resets the MTU to its default.

Syntax Description	bytes	The entry range is 68-1500.
Default	1500	
Configuration Mode	Config Interface Management	
History	3.6.3004	
Role	admin	
Example	<pre>switch (config interface mgmt0) # mtu 1500 switch (config interface mgmt0) # show interfaces mgmt0 Interface mgmt0 state Admin up: yes Link up: yes IP address: 172.30.2.2 Netmask: 255.255.0.0 Secondary address: 9.9.9.9/32 (alias: 'mgmt0:2') IPv6 enabled: yes Autoconf enabled: no Autoconf route: yes Autoconf privacy: no IPv6 addresses: 1 IPv6 address: fe80:202:c9ff:fe5e:a5d8/64 Speed: 1000Mb/s (auto) Duplex: full (auto) Interface type: ethernet Interface ifindex: 2 Interface source: physical MTU: 1500 HW address: 00:02:C9:5E:A5:D8 Comment: RX bytes: 2970074221 TX bytes: 468579522 RX packets: 44983023 TX packets: 1390539 RX mcast packets: 0 TX discards: 0 RX discards: 0 TX errors: 0 RX errors: 0 TX overruns: 0 RX overruns: 0 TX carrier: 0 RX frame: 0 TX collisions: 0 TX queue len: 1000 switch (config interface mgmt0) #</pre>	
Related Commands	show interfaces <ifname>	
Notes		

duplex

duplex <duplex>

no duplex

Sets the interface duplex.

The no form of the command resets the duplex setting for this interface to its default value.

Syntax Description	duplex	Sets the duplex mode of the interface. The following are the possible values: <ul style="list-style-type: none"> • half - half duplex • full - full duplex • auto - auto duplex sensing (half or full)
Default	auto	
Configuration Mode	Config Interface Management	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config interface mgmt0) # duplex auto switch (config interface mgmt0) # show interfaces mgmt0 Interface mgmt0 state Admin up: yes Link up: yes IP address: 172.30.2.2 Netmask: 255.255.0.0 Secondary address: 9.9.9.9/32 (alias: 'mgmt0:2') IPv6 enabled: yes Autoconf enabled: no Autoconf route: yes Autoconf privacy: no IPv6 addresses: 1 IPv6 address: fe80::202:c9ff:fe5e:a5d8/64 Speed: 1000Mb/s (auto) Duplex: full (auto) Interface type: ethernet Interface ifindex: 2 Interface source: physical MTU: 1500 HW address: 00:02:C9:5E:A5:D8 Comment: RX bytes: 2970074221 TX bytes: 468579522 RX packets: 44983023 TX packets: 1390539 RX mcast packets: 0 TX discards: 0 RX discards: 0 TX errors: 0 RX errors: 0 TX overruns: 0 RX overruns: 0 TX carrier: 0 RX frame: 0 TX collisions: 0 TX queue len: 1000 switch (config interface mgmt0) #</pre>	

Related Commands show interfaces <ifname>

Notes

- Setting the duplex to “auto” also sets the speed to “auto”
 - Setting the duplex to one of the settings “half” or “full” also sets the speed to a manual setting which is determined by querying the interface to find out its current auto-detected state
-
-

speed

speed <speed>

no speed

Sets the interface speed.

The no form of the command resets the speed setting for this interface to its default value.

Syntax Description	speed	Sets the speed of the interface. The following are the possible values: <ul style="list-style-type: none"> • 10 - fixed to 10Mbps • 100 - fixed to 1000Mbps • 1000 - fixed to 1000Mbps • auto - auto speed sensing (10/100/1000Mbps)
Default	auto	
Configuration Mode	Config Interface Management	
History	3.1.0000	
Role	admin	
Example	<pre> switch (config interface mgmt0) # speed auto switch (config interface mgmt0) # show interfaces mgmt0 Interface mgmt0 state Admin up: yes Link up: yes IP address: 172.30.2.2 Netmask: 255.255.0.0 Secondary address: 9.9.9.9/32 (alias: 'mgmt0:2') IPv6 enabled: yes Autoconf enabled: no Autoconf route: yes Autoconf privacy: no IPv6 addresses: 1 IPv6 address: fe80::202:c9ff:fe5e:a5d8/64 Speed: 1000Mb/s (auto) Duplex: full (auto) Interface type: ethernet Interface ifindex: 2 Interface source: physical MTU: 1500 HW address: 00:02:C9:5E:A5:D8 Comment: RX bytes: 2970074221 TX bytes: 468579522 RX packets: 44983023 TX packets: 1390539 RX mcast packets: 0 TX discards: 0 RX discards: 0 TX errors: 0 RX errors: 0 TX overruns: 0 RX overruns: 0 TX carrier: 0 RX frame: 0 TX collisions: 0 TX queue len: 1000 switch (config interface mgmt0) # </pre>	

Related Commands show interfaces <ifname>

Notes

- Setting the speed to “auto” also sets the duplex to “auto”
 - Setting the speed to one of the manual settings (generally “10”, “100”, or “1000”) also sets the duplex to a manual setting which is determined by querying the interface to find out its current auto-detected state
-
-

dhcp

dhcp [renew]
no dhcp

Enables DHCP on the specified interface.
 The no form of the command disables DHCP on the specified interface.

Syntax Description	renew	Forces a renewal of the IP address. A restart on the DHCP client for the specified interface will be issued.
Default	Could be enabled or disabled (per part number) manufactured with 3.2.0500	
Configuration Mode	Config Interface Management	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config interface mgmt0) # dhcp switch (config) # show interfaces mgmt0 configured Interface mgmt0 configuration Enabled: yes DHCP: yes Zeroconf: no IP address: Netmask: IPv6 enabled: yes Autoconf enabled: no Autoconf route: yes Autoconf privacy: no IPv6 addresses: 0 Speed: auto Duplex: auto MTU: 1500 Comment:</pre>	
Related Commands	show interfaces <ifname> configured	
Notes	<ul style="list-style-type: none"> • When enabling DHCP, the IP address and netmask are received via DHCP hence, the static IP address configuration is ignored • Enabling DHCP disables zeroconf and vice versa • Setting a static IP address and netmask does not disable DHCP. DHCP is disabled using the “no” form of this command, or by enabling zeroconf. 	

dhcp hostname

dhcp hostname
no dhcp hostname

Enables fetching the hostname from DHCP for this interface.
The no form of the command disables fetching the hostname from DHCP for this interface.

Syntax Description	N/A
Default	Enabled
Configuration Mode	Config Interface Management
History	3.5.1000
Role	admin
Example	<pre>switch (config interface mgmt0) # dhcp hostname switch (config interface mgmt0) #</pre>
Related Commands	<pre>hostname <hostname> show interfaces <ifname> configured</pre>
Notes	<ul style="list-style-type: none">• If a hostname is configured manually by the user, that configuration would override the “dhcp hostname” configuration• After upgrading to version 3.5.1000 when a default hostname is not configured, the DHCP server assigns the new hostname for your machine• These commands do not work on in-band interfaces

shutdown

shutdown
no shutdown

Disables the specified interface.
 The no form of the command enables the specified interface.

Syntax Description	N/A
Default	no shutdown
Configuration Mode	Config Interface Management
History	3.1.0000
Role	admin
Example	<pre>switch (config interface mgmt0) # no shutdown switch (config) # show interfaces mgmt0 configured Interface mgmt0 configuration Enabled: yes DHCP: yes DHCP Hostname: yes Zeroconf: no IP address: Netmask: IPv6 enabled: yes Autoconf enabled: no Autoconf route: yes Autoconf privacy: no IPv6 addresses: 0 Speed: auto Duplex: auto MTU: 1500 Comment: switch (config) #</pre>
Related Commands	show interfaces <ifname> configured
Notes	

zeroconf

zeroconf
no zeroconf

Enables zeroconf on the specified interface. It randomly chooses a unique link-local IPv4 address from the 169.254.0.0/16 block. This command is an alternative to DHCP.

The no form of the command disables the use of zeroconf on the specified interface.

Syntax Description	N/A
Default	no zeroconf
Configuration Mode	Config Interface Management
History	3.1.0000
Role	admin
Example	<pre>switch (config interface mgmt0) # zeroconf switch (config) # show interfaces mgmt0 configured Interface mgmt0 configuration Enabled: yes DHCP: no DHCP Hostname: yes Zeroconf: yes IP address: Netmask: IPv6 enabled: yes Autoconf enabled: no Autoconf route: yes Autoconf privacy: no IPv6 addresses: 0 Speed: auto Duplex: auto MTU: 1500 Comment:</pre>
Related Commands	show interfaces <ifname> configured
Notes	Enabling zeroconf disables DHCP and vice versa.

comment

comment <comment>
no comment

Adds a comment for an interface.

The no form of the command removes a comment for an interface.

Syntax Description	comment	A free-form string that has no semantics other than being displayed when the interface records are listed.
Default	no comment	
Configuration Mode	Config Interface Management	
History	3.1.0000	
Role	admin	
Example	<pre> switch (config interface mgmt0) # comment my-interface switch (config interface mgmt0) # show interfaces mgmt0 Interface mgmt0 state Admin up: yes Link up: yes IP address: 172.30.2.2 Netmask: 255.255.0.0 IPv6 enabled: yes Autoconf enabled: no Autoconf route: yes Autoconf privacy: no IPv6 addresses: 1 IPv6 address: fe80::202:c9ff:fe5e:a5d8/64 Speed: 1000Mb/s (auto) Duplex: full (auto) Interface type: ethernet Interface ifindex: 2 Interface source: physical MTU: 1500 HW address: 00:02:C9:5E:A5:D8 Comment: my-interface RX bytes: 962067812 TX bytes: 40658219 RX packets: 3738865 TX packets: 142345 RX mcast packets: 0 TX discards: 0 RX discards: 0 TX errors: 0 RX errors: 0 TX overruns: 0 RX overruns: 0 TX carrier: 0 RX frame: 0 TX collisions: 0 TX queue len: 1000 switch (config interface mgmt0) # </pre>	

Related Commands N/A

Notes

ipv6 enable

ipv6 enable
no ipv6 enable

Enables all IPv6 addressing for this interface.
 The no form of the command disables all IPv6 addressing for this interface.

Syntax Description	N/A
Default	IPv6 addressing is disabled
Configuration Mode	Config Interface Management
History	3.1.0000
Role	admin
Example	<pre> switch (config interface mgmt0) # ipv6 enable switch (config interface mgmt0) # show interfaces mgmt0 Interface mgmt0 state Admin up: yes Link up: yes IP address: 172.30.2.2 Netmask: 255.255.0.0 IPv6 enabled: yes Autoconf enabled: no Autoconf route: yes Autoconf privacy: no IPv6 addresses: 1 IPv6 address: fe80::202:c9ff:fe5e:a5d8/64 Speed: 1000Mb/s (auto) Duplex: full (auto) Interface type: ethernet Interface ifindex: 2 Interface source: physical MTU: 1500 HW address: 00:02:C9:5E:A5:D8 Comment: my-interface RX bytes: 962067812 TX bytes: 40658219 RX packets: 3738865 TX packets: 142345 RX mcast packets: 0 TX discards: 0 RX discards: 0 TX errors: 0 RX errors: 0 TX overruns: 0 RX overruns: 0 TX carrier: 0 RX frame: 0 TX collisions: 0 TX queue len: 1000 switch (config interface mgmt0) # </pre>

Related Commands

ipv6 address
show interface <ifname>

Notes

- The interface identifier is a 64-bit long modified EUI-64, which is based on the MAC address of the interface
 - If IPv6 is enabled on an interface, the system will automatically add a link-local address to the interface. Link-local addresses can only be used to communicate with other hosts on the same link, and packets with link-local addresses are never forwarded by a router.
 - A link-local address, which may not be removed, is required for proper IPv6 operation. The link-local addresses start with “fe80::”, and are combined with the interface identifier to form the complete address.
-
-

ipv6 address

ipv6 address {<IPv6 address/netmask> | **autoconfig** [**default** | **privacy**]}
no ipv6 {<IPv6 address/netmask> | **autoconfig** [**default** | **privacy**]}

Configures IPv6 address and netmask to this interface, static or autoconfig options are possible.

The no form of the command removes the given IPv6 address and netmask or disables the autoconfig options.

Syntax Description	IPv6 address/netmask	Configures a static IPv6 address and netmask. Format example: 2001:db8:1234::5678/64.
	autoconfig	Enables IPv6 stateless address auto configuration (SLAAC) for this interface. An address will be automatically added to the interface based on an IPv6 prefix learned from router advertisements, combined with an interface identifier.
	autoconfig default	Enables default learning routes. The default route will be discovered automatically, if the autoconfig is enabled.
	autoconfig privacy	Uses privacy extensions for SLAAC to construct the autoconfig address, if the autoconfig is enabled.
Default	No IP address available, auto config is enabled	
Configuration Mode	Config Interface Management	
History	3.1.0000	
Role	admin	

Example

```
switch (config interface mgmt0) # ipv6 fe80::202:c9ff:fe5e:a5d8/64
switch (config interface mgmt0) # show interfaces mgmt0
Interface mgmt0 state
  Admin up:          yes
  Link up:           yes
  IP address:        172.30.2.2
  Netmask:           255.255.0.0
  IPv6 enabled:      yes
  Autoconf enabled:  no
  Autoconf route:    yes
  Autoconf privacy:  no
  IPv6 addresses:    1
  IPv6 address:      fe80::202:c9ff:fe5e:a5d8/64
  Speed:             1000Mb/s (auto)
  Duplex:            full (auto)
  Interface type:    ethernet
  Interface ifindex: 2
  Interface source:  physical
  MTU:               1500
  HW address:        00:02:C9:5E:A5:D8
  Comment:           my-interface

  RX bytes:          962067812      TX bytes:          40658219
  RX packets:        3738865       TX packets:        142345
  RX mcast packets: 0              TX discards:       0
  RX discards:       0              TX errors:          0
  RX errors:         0              TX overruns:        0
  RX overruns:       0              TX carrier:         0
  RX frame:          0              TX collisions:      0
                                          TX queue len:      1000

switch (config interface mgmt0) #
```

Related Commands

```
ipv6 enable
show interface <ifname>
```

Notes

- Unlike IPv4, IPv6 can have multiple IPv6 addresses on a given interface
 - For Ethernet, the default interface identifier is a 64-bit long modified EUI-64, which is based on the MAC address of the interface
-
-

ipv6 dhcp primary-intf

ipv6 dhcp primary-intf <if-name>
no ipv6 dhcp primary-intf

Sets the interface from which non-interface-specific (resolver) configuration is accepted via DHCPv6.

The no form of the command resets non-interface-specific (resolver) configuration.

Syntax Description	if-name	Interface name: <ul style="list-style-type: none"> • lo • mgmt0 • mgmt1
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # ipv6 dhcp primary-intf mgmt0 switch (config) #</pre>	
Related Commands	<pre>ipv6 enable ipv6 address show interface <ifname></pre>	
Notes		

ipv6 dhcp stateless

ipv6 dhcp stateless
no ipv6 dhcp stateless

Enables stateless DHCPv6 requests.
The no form of the command disables stateless DHCPv6 requests.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # ipv6 dhcp stateless switch (config) #</pre>
Related Commands	<pre>ipv6 enable ipv6 address show interface <ifname></pre>
Notes	<ul style="list-style-type: none">• This command only gets DNS configuration, not an IPv6 address• The no form of the command requests all information, including an IPv6 address

show interface brief

show interface <ifname> brief

Displays a brief info on the interface configuration and status.

Syntax Description	ifname	The interface name e.g., “mgmt0”, “mgmt1”, “lo” (loopback), etc.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # show interfaces mgmt0 brief Interface mgmt0 state Admin up: yes Link up: yes IP address: 172.30.2.2 Netmask: 255.255.0.0 IPv6 enabled: yes Autoconf enabled: no Autoconf route: yes Autoconf privacy: no IPv6 addresses: 1 IPv6 address: fe80::202:c9ff:fe5e:a5d8/64 Speed: 1000Mb/s (auto) Duplex: full (auto) Interface type: ethernet Interface ifindex: 2 Interface source: physical MTU: 1500 HW address: 00:02:C9:5E:A5:D8 Comment: my-interface switch (config) #</pre>	
Related Commands	N/A	
Notes		

show interface configured

show interface <ifname> configured

Displays configuration information about the specified interface.

Syntax Description	ifname	The interface name e.g., “mgmt0”, “mgmt1”, “lo” (loopback), etc.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.0000	
	3.5.1000	Updated Example with “DHCP Hostname”
Role	admin	
Example	<pre>switch (config) # show interfaces mgmt0 configured Interface mgmt0 configuration Enabled: yes DHCP: yes DHCP Hostname: yes Zeroconf: no IP address: Netmask: IPv6 enabled: yes Autoconf enabled: no Autoconf route: yes Autoconf privacy: no IPv6 addresses: 0 Speed: auto Duplex: auto MTU: 1500 Comment: my-interface</pre>	
Related Commands	N/A	
Notes		

4.1.7.2 Hostname Resolution

hostname

hostname <hostname>
no hostname

Sets a static system hostname.
 The no form of the command clears the system hostname.

Syntax Description	hostname	A free-form string.
Default	Default hostname	
Configuration Mode	Config	
History	3.1.0000	
	3.6.3004	Added support for the character “.”
Role	admin	
Example	<pre>switch (config) # hostname my-switch-hostname my-switch-hostname (config) #</pre>	
Related Commands	show hosts	
Notes	<ul style="list-style-type: none"> • Hostname may contain letters, numbers, and hyphens ('-'), in any combination • Hostname may not contain other characters, such as “%”, “_” etc. • The character “.” is supported • Hostname may not begin with a hyphen • Hostname may be 1-63 characters long • Changing hostname stamps a new HTTPS certificate 	

ip name-server

ip name-server <IPv4/IPv6 address>
no name-server <IPv4/IPv6 address>

Sets the static name server.
The no form of the command clears the name server.

Syntax Description	IPv4/v6 address	IPv4 or IPv6 address.
Default	No server name	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # ip name-server 9.9.9.9 switch (config) # show hosts Hostname: switch Name server: 9.9.9.9 (configured) Name server: 10.211.0.121 (dynamic) Name server: 172.30.0.126 (dynamic) Name server: 10.4.0.135 (dynamic) Domain name: lab.mtl.com (dynamic) Domain name: vmlab.mtl.com (dynamic) Domain name: yok.mtl.com (dynamic) Domain name: mtl.com (dynamic) IP 127.0.0.1 maps to hostname localhost IPv6 ::1 maps to hostname localhost6 Automatically map hostname to loopback address: yes Automatically map hostname to IPv6 loopback address: no switch (config) #</pre>	
Related Commands	show hosts	
Notes		

ip domain-list

ip domain-list <domain-name>
no ip domain-list <domain-name>

Sets the static domain name.
 The no form of the command clears the domain name.

Syntax Description	domain-name	The domain name in a string form. A domain name is an identification string that defines a realm of administrative autonomy, authority, or control in the Internet. Domain names are formed by the rules and procedures of the Domain Name System (DNS).
Default	No static domain name	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # ip domain-list mydomain.com switch (config) # show hosts Hostname: switch Name server: 10.211.0.121 (dynamic) Name server: 172.30.0.126 (dynamic) Name server: 10.4.0.135 (dynamic) Domain name: mydomain.com (configured) Domain name: lab.mtl.com (dynamic) Domain name: vmlab.mtl.com (dynamic) Domain name: yok.mtl.com (dynamic) Domain name: mtl.com (dynamic) IP 1.1.1.1 maps to hostname p IP 127.0.0.1 maps to hostname localhost IPv6 ::1 maps to hostname localhost6 Automatically map hostname to loopback address: yes Automatically map hostname to IPv6 loopback address: no switch (config) #</pre>	
Related Commands	show hosts	
Notes		

ip/ipv6 host

{ip | ipv6} host <hostname> <IP Address>
no {ip | ipv6} host <hostname> <IP Address>

Configures the static hostname IPv4 or IPv6 address mappings.
The no form of the command clears the static mapping.

Syntax Description	hostname	The hostname in a string form.
	IP Address	The IPv4 or IPv6 address.
Default	No static domain name.	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # ip host my-host 2.2.2.2 switch (config) # ipv6 host my-ipv6-host 2001::8f9 switch (config) # show hosts Hostname: switch Name server: 9.9.9.9 (configured) Name server: 10.211.0.121 (dynamic) Name server: 172.30.0.126 (dynamic) Name server: 10.4.0.135 (dynamic) Domain name: mydomain.com (configured) Domain name: lab.mtl.com (dynamic) Domain name: vmlab.mtl.com (dynamic) Domain name: yok.mtl.com (dynamic) Domain name: mtl.com (dynamic) IP 1.1.1.1 maps to hostname p IP 127.0.0.1 maps to hostname localhost IP 2.2.2.2 maps to hostname my-host IPv6 2001::8f9 maps to hostname my-ipv6-host IPv6 ::1 maps to hostname localhost6 Automatically map hostname to loopback address: yes Automatically map hostname to IPv6 loopback address: yes switch (config) #</pre>	
Related Commands	show hosts	
Notes		

ip/ipv6 map-hostname

```
{ip |ipv6} map-hostname
no {ip | ipv6} map-hostname
```

Maps between the currently-configured hostname and the loopback address 127.0.0.1.

The no form of the command clears the mapping.

Syntax Description	N/A
Default	IPv4 mapping is enabled by default IPv6 mapping is disabled by default
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # ip map-hostname switch (config) # # show hosts Hostname: switch Name server: 9.9.9.9 (configured) Name server: 10.211.0.121 (dynamic) Name server: 172.30.0.126 (dynamic) Name server: 10.4.0.135 (dynamic) Domain name: mydomain.com (configured) Domain name: lab.mtl.com (dynamic) Domain name: vmlab.mtl.com (dynamic) Domain name: yok.mtl.com (dynamic) Domain name: mtl.com (dynamic) IP 1.1.1.1 maps to hostname p IP 127.0.0.1 maps to hostname localhost IP 2.2.2.2 maps to hostname my-host IPv6 2001::8f9 maps to hostname my-ipv6-host IPv6 ::1 maps to hostname localhost6 Automatically map hostname to loopback address: yes Automatically map hostname to IPv6 loopback address: yes switch (config) # switch (config) # ping my-host-name PING localhost (127.0.0.1) 56(84) bytes of data. 64 bytes from localhost (127.0.0.1): icmp_seq=1 ttl=64 time=0.078 ms 64 bytes from localhost (127.0.0.1): icmp_seq=2 ttl=64 time=0.052 ms 64 bytes from localhost (127.0.0.1): icmp_seq=3 ttl=64 time=0.058 ms</pre>

Related Commands show hosts

Notes

- If no mapping is configured, a mapping between the hostname and the IPv4 loopback address 127.0.0.1 will be added
 - The no form of the command maps the hostname to the IPv6 loopback address if there is no statically configured mapping from the hostname to an IPv6 address (disabled by default)
 - Static host mappings are preferred over DNS results. As a result, with this option set, you will not be able to look up your hostname on your configured DNS server; but without it set, some problems may arise if your hostname cannot be looked up in DNS.
-
-

show hosts

show hosts

Displays hostname, DNS configuration, and static host mappings.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	<pre>switch (config) # show hosts Hostname: my-host-name Name server: 9.9.9.9 (configured) Name server: 10.211.0.121 (dynamic) Name server: 172.30.0.126 (dynamic) Name server: 10.4.0.135 (dynamic) Domain name: mydomain.com (configured) Domain name: lab.mtl.com (dynamic) Domain name: vmlab.mtl.com (dynamic) Domain name: yok.mtl.com (dynamic) Domain name: mtl.com (dynamic) IP 1.1.1.1 maps to hostname p IP 127.0.0.1 maps to hostname localhost IP 2.2.2.2 maps to hostname my-host IPv6 ::1 maps to hostname localhost6 Automatically map hostname to loopback address: yes Automatically map hostname to IPv6 loopback address: no switch (config) #</pre>
Related Commands	N/A
Notes	

4.1.7.3 Routing

ip/ipv6 route

{ip | ipv6} route vrf <vrf-name> <network-prefix> <netmask> <next-hop>
no ip route <vrf-name> <network-prefix> <netmask> <next-hop>

Sets a static route for a given IP.

The no form of the command deletes the static route.

Syntax Description	network-prefix	IPv4 or IPv6 network prefix.																																	
	netmask	IPv4 netmask formats are: <ul style="list-style-type: none">• /24• 255.255.255.0 IPv6 netmask format is: <ul style="list-style-type: none">• /48 (as a part of the network prefix)																																	
	nexthop-address	The IPv4 or IPv6 address of the next hop router for this route.																																	
	ifname	The interface name (e.g., mgmt0, mgmt1).																																	
Default	N/A																																		
Configuration Mode	Config																																		
History	3.1.0000																																		
Role	admin																																		
Example	switch (config) # ip route 20.20.20.0 255.255.255.0 mgmt0 switch (config) # show ip route <table border="1"><thead><tr><th>Destination</th><th>Mask</th><th>Gateway</th><th>Interface</th><th>Source</th></tr></thead><tbody><tr><td>default</td><td>0.0.0.0</td><td>172.30.0.1</td><td>mgmt0</td><td>DHCP</td></tr><tr><td>10.10.10.10</td><td>255.255.255.255</td><td>0.0.0.0</td><td>mgmt0</td><td>static</td></tr><tr><td>20.10.10.10</td><td>255.255.255.255</td><td>172.30.0.1</td><td>mgmt0</td><td>static</td></tr><tr><td>20.20.20.0</td><td>255.255.255.0</td><td>0.0.0.0</td><td>mgmt0</td><td>static</td></tr><tr><td>172.30.0.0</td><td>255.255.0.0</td><td>0.0.0.0</td><td>mgmt0</td><td>interface</td></tr></tbody></table>					Destination	Mask	Gateway	Interface	Source	default	0.0.0.0	172.30.0.1	mgmt0	DHCP	10.10.10.10	255.255.255.255	0.0.0.0	mgmt0	static	20.10.10.10	255.255.255.255	172.30.0.1	mgmt0	static	20.20.20.0	255.255.255.0	0.0.0.0	mgmt0	static	172.30.0.0	255.255.0.0	0.0.0.0	mgmt0	interface
Destination	Mask	Gateway	Interface	Source																															
default	0.0.0.0	172.30.0.1	mgmt0	DHCP																															
10.10.10.10	255.255.255.255	0.0.0.0	mgmt0	static																															
20.10.10.10	255.255.255.255	172.30.0.1	mgmt0	static																															
20.20.20.0	255.255.255.0	0.0.0.0	mgmt0	static																															
172.30.0.0	255.255.0.0	0.0.0.0	mgmt0	interface																															
Related Commands	show ip route																																		
Notes																																			

ipv6 default-gateway

ipv6 default-gateway {<ip-address> | <ifname>}
no ipv6 default-gateway

Sets a static default gateway.
 The no form of the command deletes the default gateway.

Syntax Description	ip address	The default gateway IP address (IPv6).
	ifname	The interface name (e.g., mgmt0, mgmt1).
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	First version
	3.2.0500	removed IPv4 configuration option
Role	admin	
Example	<pre>switch (config) # ipv6 default-gateway ::1 switch (config) # show ipv6 default-gateway static Configured default gateways: ::1 switch (config) #</pre>	
Related Commands	show ip route	
Notes	<ul style="list-style-type: none"> • The configured default gateway will not be used if DHCP is enabled. • In order to configure ipv4 default-gateway use 'ip route' command. 	

show ip/ipv6 route

show {ip | ipv6} route [static]

Displays the routing table in the system.

Syntax Description	static	Filters the table with the static route entries.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # show ip route Destination Mask Gateway Interface Source default 0.0.0.0 172.30.0.1 mgmt0 DHCP 10.10.10.10 255.255.255.255 0.0.0.0 mgmt0 static 20.10.10.10 255.255.255.255 172.30.0.1 mgmt0 static 20.20.20.0 255.255.255.0 0.0.0.0 mgmt0 static 172.30.0.0 255.255.0.0 0.0.0.0 mgmt0 interface switch (config) # show ipv6 route Destination prefix Gateway Interface Source ----- ::/0 :: mgmt0 static ::1/128 :: lo local 2222:2222:2222::/64 :: mgmt1 interface switch (config) #</pre>	
Related Commands	show ip default-gateway	
Notes		

show ipv6 default-gateway**show ipv6 default-gateway [static]**

Displays the default gateway.

Syntax Description	static	Displays the static configuration of the default gateway
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # ipv6 default-gateway 10.10.10.10 switch (config) # show ipv6 default-gateway Active default gateways: 172.30.0.1 (interface: mgmt0) switch (config) # show ipv6 default-gateway static Configured default gateway: 10.10.10.10</pre>	
Related Commands	ipv6 default-gateway	
Notes	The configured IPv4 default gateway will not be used if DHCP is enabled.	

4.1.7.4 Network to Media Resolution (ARP & NDP)

IPv4 network use Address Resolution Protocol (ARP) to resolve IP address to MAC address, while IPv6 network uses Network Discovery Protocol (NDP) that performs basically the same as ARP.

ip arp

ip arp <IP address> <MAC address>
no ip arp <IP address> <MAC address>

Sets a static ARP entry.
The no form of the command deletes the static ARP.

Syntax Description	IP address	IPv4 address.
	MAC address	MAC address.
Default	N/A	
Configuration Mode	Config Interface Management	
History	3.2.0500	
Role	admin	
Example	switch (config interface mgmt0) #ip arp 20.20.20.20 aa:aa:aa:aa:aa:aa switch (config interface mgmt0) # show ip arp Total number of entries: 6 Address Type MAC Address Interface 10.209.1.103 Dynamic 00:02:C9:11:A1:78 mgmt0 10.209.1.168 Dynamic 00:02:C9:5E:C3:28 mgmt0 10.209.1.104 Dynamic 00:02:C9:11:A1:E6 mgmt0 10.209.1.153 Dynamic 00:02:C9:11:A1:86 mgmt0 10.209.1.105 Dynamic 00:02:C9:5E:0B:56 mgmt0 10.209.0.1 Dynamic 00:00:5E:00:01:01 mgmt0 20.20.20.20 Static AA:AA:AA:AA:AA:AA mgmt0 switch (config interface mgmt0) #	
Related Commands	show ip arp ip route	
Notes		

ip arp timeout

ip arp [vrf <vrf-name>] timeout <timeout-value>
no ip arp [vrf <vrf-name>] timeout

Sets the dynamic ARP cache timeout.
 The no form of the command sets the timeout to default.

Syntax Description	timeout-value	Time (in seconds) that an entry remains in the ARP cache. Range: 60-28800.
	vrf-name	VRF session name
Default	1500 seconds	
Configuration Mode	Config	
History	3.2.0230	
	3.5.1000	Added VRF parameter and updated Notes
Role	admin	
Example	<pre>switch (config) # ip arp timeout 2000 switch (config) #</pre>	
Related Commands	<pre>ip arp show ip arp</pre>	
Notes	<ul style="list-style-type: none"> • This value is used as the default ARP timeout whenever a new IP interface is created • The time interval after which each ARP entry becomes stale may actually vary from 50-150% of the configured value 	

show ip arp

show ip arp [interface <type>| <ip-address> | count]

Displays ARP table.

Syntax Description	interface type	Filters the table according to a specific interface (i.e. mgmt0)
	ip-address	Filters the table to the specific ip-address
	count	Shows ARP statistics
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.3000	
Role	admin	
Example	<pre>switch-626a54 [standalone: master] (config) # show ip arp Total number of entries: 3 Address Type Hardware Address Interface ----- 10.209.0.1 Dynamic ETH 00:00:5E:00:01:01 mgmt0 10.209.1.120 Dynamic ETH 00:02:C9:62:E8:C2 mgmt0 10.209.1.121 Dynamic ETH 00:02:C9:62:E7:42 mgmt0 switch (config) # show ip arp count ARP Table size: 3 (inband: 0, out of band: 3) switch (config) #</pre>	
Related Commands		
Notes		

ipv6 neighbor

ipv6 neighbor <IPv6 address> <ifname> <MAC address>
no ipv6 neighbor <IPv6 address> <ifname> <MAC address>

Adds a static neighbor entry.
 The no form of the command deletes the static entry.

Syntax Description	IPv6 address	The IPv6 address.
	ifname	The management interface (i.e. mgmt0, mgmt1).
	MAC address	The MAC address.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # ipv6 neighbor 2001:db8:701f::8f9 mgmt0 00:11:22:33:44:55 switch (config) #</pre>	
Related Commands	<pre>show ipv6 neighbor ipv6 route arp clear ipv6 neighbors</pre>	
Notes	<ul style="list-style-type: none"> • ARP is used only with IPv4. In IPv6 networks, Neighbor Discovery Protocol (NDP) is used similarly. • Use The no form of the command to remove static entries. Dynamic entries can be cleared via the “clear ipv6 neighbors” command. 	

clear ipv6 neighbors

```
clear ipv6 neighbors {ethernet <port> | vlan <vlan-id> | port-channel <id> | vrf <vrf-id>} [<ip-addr>]
```

Clears the dynamic neighbors cache.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000 3.6.4110 Updated command.
Role	admin
Example	switch (config) # clear ipv6 neighbors switch (config) #
Related Commands	ipv6 neighbor show ipv6 neighbor arp
Notes	<ul style="list-style-type: none">• Clearing Neighbor Discovery Protocol (NDP) cache removes only the dynamic entries learned and not the static entries configured• Use the no form of the command to remove static entries

show ipv6 neighbors

show ipv6 neighbors [static]

Displays the Neighbor Discovery Protocol (NDP) table.

Syntax Description	static	Filters only the table of the static entries.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # show ipv6 neighbors IPv6 Address Age MAC Address State Interf ----- 2001::2 9428 AA:AA:AA:AA:AA:AA permanent mgmt0 switch (config) #</pre>	
Related Commands	<pre>ipv6 neighbor clear ipv6 neighbor show ipv6</pre>	
Notes		

4.1.7.5 DHCP

ip dhcp

```
ip dhcp {default-gateway yield-to-static| hostname <hostname>| primary-intf  
<ifname> | send-hostname }  
no ip dhcp {default-gateway yield-to-static| hostname || primary-intf | send-host-  
name}
```

Sets global DHCP configuration.

The no form of the command deletes the DHCP configuration.

Syntax Description	yield-to-static	Does not allow you to install a default gateway from DHCP if there is already a statically configured one.
	hostname	Specifies the hostname to be sent during DHCP client negotiation if send-hostname is enabled.
	primary-intf <ifname>	Sets the interface from which a non-interface-specific configuration (resolver and routes) will be accepted via DHCP.
	send-hostname	Enables the DHCP client to send a hostname during negotiation.
Default	no ip dhcp yield-to-static no ip dhcp hostname ip ip dhcp primary-intf mgmt0 no ip dhcp send-hostname	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	

Example

```
switch (config) # ip dhcp default-gateway yield-to-static
switch (config) # show ip dhcp
      DHCP      DHCP      Valid
Interface  Enabled  Running  lease
-----
lo          no       no       no
mgmt0      yes     yes     yes
mgmt1      yes     yes     no

DHCP primary interface:
  Configured: mgmt0
  Active:     mgmt0

DHCP default gateway yields to static configuration: yes

DHCP client options:
  Send Hostname: no
  Client Hostname: switch (using system hostname)
switch (config) #
```

Related Commands

```
show ip dhcp
dhcp [renew]
```

Notes

DHCP is supported for IPv4 networks only.

show ip dhcp

show ip dhcp

Displays the DHCP configuration and status.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	<pre>switch (config) # show ip dhcp DHCP primary interface: Configured: mgmt0 Active: mgmt0 DHCP: yield default gateway to static configuration: yes DHCP Client Options: Send Hostname: no Client Hostname: switch (using system hostname) switch (config) #</pre>
Related Commands	<pre>ip dhcp dhcp [renew]</pre>
Notes	

4.1.7.6 General IPv6 Commands

ipv6 enable

ipv6 enable
no ipv6 enable

Enables IPv6 globally on the management interface.
 The no form of the command disables IPv6 globally on the management interface.

Syntax Description	N/A
Default	IPv6 is disabled
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # ipv6 enable switch (config) # show ipv6 IPv6 summary IPv6 supported: yes IPv6 admin enabled: yes IPv6 interface count: 2 switch (config) #</pre>
Related Commands	<pre>ipv6 default-gateway ipv6 host ipv6 map-hostname ipv6 neighbor ipv6 route show ipv6 show ipv6 default-gateway show ipv6 route</pre>
Notes	

4.1.7.7 IP Diagnostic Tools

ping

ping [-LRUbdnqrVvA] [-c count] [-i interval] [-w deadline] [-p pattern] [-s packetsize] [-t ttl] [-I interface or address] [-M mtu discovery hint] [-S sndbuf] [-T timestamp option] [-Q tos] [hop1 ...] destination

Sends ICMP echo requests to a specified host.

Syntax Description	Linux Ping options	http://linux.about.com/od/commands/l/blcmdl8_ping.htm
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # ping 172.30.2.2 PING 172.30.2.2 (172.30.2.2) 56(84) bytes of data. 64 bytes from 172.30.2.2: icmp_seq=1 ttl=64 time=0.703 ms 64 bytes from 172.30.2.2: icmp_seq=2 ttl=64 time=0.187 ms 64 bytes from 172.30.2.2: icmp_seq=3 ttl=64 time=0.166 ms 64 bytes from 172.30.2.2: icmp_seq=4 ttl=64 time=0.161 ms 64 bytes from 172.30.2.2: icmp_seq=5 ttl=64 time=0.153 ms 64 bytes from 172.30.2.2: icmp_seq=6 ttl=64 time=0.144 ms ^C --- 172.30.2.2 ping statistics --- 6 packets transmitted, 6 received, 0% packet loss, time 5004ms rtt min/avg/max/mdev = 0.144/0.252/0.703/0.202 ms switch (config) #</pre>	
Related Commands	tracert	
Notes		

traceroute

```
traceroute [-46dFITUnrAV] [-f first_ttl] [-g gate,...] [-i device] [-m max_ttl] [-N  
squeries] [-p port] [-t tos] [-l flow_label] [-w waittime] [-q nqueries] [-s src_addr]  
[-z sendwait] host [packetlen]
```

Traces the route packets take to a destination.

Syntax	Description
-4	Uses IPv4.
-6	Uses IPv6.
-d	Enables socket level debugging.
-F	Sets DF (do not fragment bit) on.
-I	Uses ICMP ECHO for tracerouting.
-T	Uses TCP SYN for tracerouting.
-U	Uses UDP datagram (default) for tracerouting.
-n	Does not resolve IP addresses to their domain names.
-r	Bypasses the normal routing and send directly to a host on an attached network.
-A	Performs AS path lookups in routing registries and print results directly after the corresponding addresses.
-V	Prints version info and exit.
-f	Starts from the first_ttl hop (instead from 1).
-g	Routes packets throw the specified gateway (maximum 8 for IPv4 and 127 for IPv6).
-i	Specifies a network interface to operate with.
-m	Sets the max number of hops (max TTL to be reached). Default is 30.
-N	Sets the number of probes to be tried simultaneously (default is 16).
-p	Uses destination port. It is an initial value for the UDP destination port (incremented by each probe, default is 33434), for the ICMP seq number (incremented as well, default from 1), and the constant destination port for TCP tries (default is 80).
-t	Sets the TOS (IPv4 type of service) or TC (IPv6 traffic class) value for outgoing packets.
-l	Uses specified flow_label for IPv6 packets.
-w	Sets the number of seconds to wait for response to a probe (default is 5.0). Non-integer (float point) values allowed too.
-q	Sets the number of probes per each hop. Default is 3.

Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # traceroute 192.168.10.70 traceroute to 192.168.10.70 (192.168.10.70), 30 hops max, 40 byte pack- ets 1 172.30.0.1 (172.30.0.1) 3.632 ms 2.849 ms 3.544 ms 2 10.222.128.46 (10.222.128.46) 3.176 ms 3.289 ms 3.656 ms 3 10.158.128.30 (10.158.128.30) 15.331 ms 15.819 ms 16.388 ms 4 10.158.128.65 (10.158.128.65) 20.468 ms 7.893 ms 12.27 ms 5 10.7.34.115 (10.7.34.115) 16.405 ms 11.985 ms 12.264 ms 6 192.168.10.70 (192.168.10.70) 16.377 ms 16.091 ms 20.475 ms switch (config) #</pre>
Related Commands	
Notes	

tcpdump

```
tcpdump [-aAdDeflLnNOPqRStuUvxX] [-c count] [ -C file_size ]
        [ -E algo:secret ] [ -F file ] [ -i interface ] [ -M secret ]
        [ -r file ] [ -s snaplen ] [ -T type ] [ -w file ]
        [ -W filecount ] [ -y datalinktype ] [ -Z user ]
        [ -D list possible interfaces ] [ expression ]
```

Invokes standard binary, passing command line parameters straight through.
Runs in foreground, printing packets as they arrive, until the user hits Ctrl+C.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # tcpdump 09:37:38.678812 IP 192.168.10.7.ssh > 192.168.10.1.54155: P 1494624:1494800(176) ack 625 win 90 <nop,nop,timestamp 5842763 858672398> 09:37:38.678860 IP 192.168.10.7.ssh > 192.168.10.1.54155: P 1494800:1495104(304) ack 625 win 90 <nop,nop,timestamp 5842763 858672398> ... 9141 packets captured 9142 packets received by filter 0 packets dropped by kernel switch (config) #</pre>
Related Commands	N/A
Notes	

4.2 NTP, Clock & Time Zones

Network Time Protocol (NTP) is a networking protocol for clock synchronization between computer systems over packet-switched, variable-latency data networks. NTP is intended to synchronize all participating computers to within a few milliseconds of Coordinated Universal Time (UTC) and is designed to mitigate the effects of variable network latency. NTP can usually maintain time to within tens of milliseconds over the public Internet, and can achieve better than one millisecond accuracy in local area networks under ideal conditions.

For an example, please refer to “[HowTo enable NTP on Mellanox switches](https://community.mellanox.com)” in the Mellanox Community (<https://community.mellanox.com>).

4.2.1 NTP Authenticate

When authentication of incoming NTP packets is enabled, the switch ensures that they come from an authenticated time source before using them for time synchronization on the switch. Authentication keys are created and added to the trusted list.

➤ *To add a key to be used for authentication*

Step 1. Create the key. Run:

```
switch (config)# ntp authentication-key 1 md5 password
```

Step 2. Add the key to the trusted list. Run:

```
switch (config)# ntp trusted-key 1
```

Step 3. Assign the key to the server/peer. Run:

```
switch (config)# ntp server 10.34.1.1 keyID 1
```

4.2.2 NTP Authentication Key

An authentication key may be created and used to authenticate incoming NTP packets.

For the key to be used:

1. It should be shared with the NTP server/peer sending the NTP packet.
2. It should be added to the trusted list.
3. NTP authenticate should be enabled on the switch.

4.2.3 Commands

clock set

clock set <hh:mm:ss> [<yyyy/mm/dd>]

Sets the time and date.

Syntax Description	hh:mm:ss	Time.
	yyyy/mm/dd	Date.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # clock set 23:23:23 2010/08/19 switch (config) # show clock Time: 23:23:26 Date: 2010/08/19 Time zone: UTC (Etc/UTC) UTC offset: same as UTC switch (config) #</pre>	
Related Commands	show clock	
Notes	If not specified, the date will be left the same.	

clock timezone

clock timezone [<zone word> [<zone word> [<zone word>] [<zone word>]]

Sets the system time zone. The time zone may be specified in one of three ways:

- A nearby city whose time zone rules to follow. The system has a large list of cities which can be displayed by the help and completion system. They are organized hierarchically because there are too many of them to display in a flat list. A given city may be required to be specified in two, three, or four words, depending on the city.
- An offset from UTC. This will be in the form UTC-offset UTC, UTC-offset UTC+<0-14>, UTC-offset UTC-<1-12>.
- UTC (Universal Time, which is almost identical to GMT), and this is the default time zone

The no form of the command resets time zone to its default (GMT).

Syntax Description	zone word	The possible forms this could take include: continent, city, continent, country, city, continent, region, country, city, ocean, and/or island.
Default	GMT	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # clock timezone America North United_States Other New_York switch (config) # show clock Time: 10:08:53 Date: 2015/10/29 Time zone: America North United_States Other New_York (America/New_York) UTC offset: -0400 (UTC minus 4 hours) switch (config) #</pre>	
Related Commands	show clock	
Notes		

ntp

ntp {disable | enable | {peer | server} <IP address> [version <number> | disable]}
no ntp {disable | enable | {peer | server} <IP address> [version <number> | disable]}

Configures NTP.

The no form of the command negates NTP options.

Syntax Description	disable	Disables NTP
	enable	Enables NTP
	peer or server	Configures an NTP peer or server node
	IP address	IPv4 or IPv6 address
	version <number>	Specifies the NTP version number of this peer Possible values: 3 or 4
Default	NTP is enabled NTP version number is 4	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # no ntp peer 192.168.10.24 disable switch (config) #	
Related Commands	N/A	
Notes		

ntpdate

ntpdate <IP address>

Sets the system clock using the specified SNTP server.

Syntax Description	IP address	IP.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # ntpdate 192.168.10.10 26 Feb 17:25:40 ntpdate[15206]: adjust time server 192.168.10.10 offset -0.000092 sec switch (config) #</pre>	
Related Commands	N/A	
Notes	This is a one-time operation and does not cause the clock to be kept in sync on an ongoing basis. It will generate an error if SNTP is enabled since the socket it requires will already be in use.	

ntp authenticate

ntp authenticate
no ntp authenticate

Enables NTP authentication.
The no form of the command disables NTP authentication.

Syntax Description	N/A	N/A
Default	Disabled	
Configuration Mode	Config	
History	3.5.0200	
Role	admin	
Example	switch (config) # ntp authenticate	
Related Commands	N/A	
Notes		

ntp authentication-key

```
ntp authentication-key <key_id> <encrypt_type> [<password>]
no ntp authentication-key <key_id>
```

Adds a new authentication key and stores it.
The no form of the command removes key ID configuration if it exists.

Syntax Description	key_id	Specifies a key ID, whether existing or a new one to be added. Range: 1-65534.
	encrypt_type	Specifies encryption type to use (md5, or sha1)
	password	Password string
Default	Disabled	
Configuration Mode	Config	
History	3.5.0200	
Role	admin	
Example	<pre>switch (config) # ntp authentication-key 123 md5 examplepass switch (config) # ntp authentication-key 1234 sha1 Password: ** Confirm: ** switch (config) #</pre>	
Related Commands	N/A	
Notes	If a password is not entered, a prompt appears requiring that a password is introduced.	

ntp peer disable

ntp peer <ip_address> disable
no ntp peer <ip_address> disable

Temporarily disables this NTP peer.
The no form of the command enables this NTP peer.

Syntax Description	ip_address	IP address of the peer. IPv4, IPv6 and hostname (FQDN) are acceptable.
Default	Disabled	
Configuration Mode	Config	
History	3.5.0200	
	3.6.4000	Added hostname as option for ip_address, and added Notes.
Role	admin	
Example	<pre>switch (config) # ntp peer 10.10.10.10 disable switch (config) #</pre>	
Related Commands	N/A	
Notes	<ul style="list-style-type: none">• IP addresses must be in IPv4 format (e.g., '192.168.0.1') or IPv6 format with scope zone id for IPv6 link-local addresses (e.g., '2001:db8:701f::8f9' or 'fe80::21c:23f:ec1:4fb%7'.)• The length of a hostname is limited to 255 characters. Each label (node delimited by a dot in the hostname) is limited to 63 characters and may contain letters, numbers and hyphens ('-'), but may not begin with a hyphen.	

ntp peer keyID

ntp peer <ip_address> keyID <key_id>
no ntp peer <ip_address> keyID <key_id>

Specifies the KeyID of the NTP peer.
 The no form of the command removes key ID configuration from the NTP peer.

Syntax Description	ip_address	IP address of the peer. IPv4, IPv6 and hostname (FQDN) are acceptable.
	key_id	Range: 1-65534
Default	Disabled	
Configuration Mode	Config	
History	3.5.0200	
	3.6.4000	Added hostname as ip_address option and added Notes.
Role	admin	
Example	switch (config) # ntp peer 10.10.10.10 keyID 120	
Related Commands	N/A	
Notes	<ul style="list-style-type: none"> • IP addresses must be in IPv4 format (e.g., '192.168.0.1') or IPv6 format with scope zone id for IPv6 link-local addresses (e.g., '2001:db8:701f::8f9' or 'fe80::21c:23f:ec1:4fb%7'.) • The length of a hostname is limited to 255 characters. Each label (node delimited by a dot in the hostname) is limited to 63 characters and may contain letters, numbers and hyphens ('-'), but may not begin with a hyphen. 	

ntp peer version

ntp peer <ip_address> version <ver_num>
no ntp peer <ip_address> version <ver_num>

Specifies the NTP version number of this peer.
The no form of the command defaults NTP to version 4.

Syntax Description	ip_address	IP address of the peer. IPv4, IPv6 and hostname (FQDN) are acceptable.
	ver_num	NTP version (3 or 4)
Default	4	
Configuration Mode	Config	
History	3.5.0200	
	3.6.4000	Added hostname as ip_address option and added Notes.
Role	admin	
Example	switch (config) # ntp peer 10.10.10.10 version 4	
Related Commands	N/A	
Notes	<ul style="list-style-type: none">• IP addresses must be in IPv4 format (e.g., '192.168.0.1') or IPv6 format with scope zone id for IPv6 link-local addresses (e.g., '2001:db8:701f::8f9' or 'fe80::21c:23f:ec1:4fb%7'.)• The length of a hostname is limited to 255 characters. Each label (node delimited by a dot in the hostname) is limited to 63 characters and may contain letters, numbers and hyphens ('-'), but may not begin with a hyphen.	

ntp server disable

ntp server <ip_address> disable
no ntp server <ip_address> disable

Temporarily disables this NTP server.
 The no form of the command enables this NTP server.

Syntax Description	ip_address	IP address of the peer. IPv4, IPv6 and hostname (FQDN) are acceptable.
Default	Disabled	
Configuration Mode	Config	
History	3.5.0000	
	3.6.4000	Added hostname as ip_address option and added Notes.
Role	admin	
Example	<pre>switch (config) # ntp server 10.10.10.10 disable switch (config) #</pre>	
Related Commands	N/A	
Notes	<ul style="list-style-type: none"> • IP addresses must be in IPv4 format (e.g., '192.168.0.1') or IPv6 format with scope zone id for IPv6 link-local addresses (e.g., '2001:db8:701f::8f9' or 'fe80::21c:23f:ec1:4fb%7'.) • The length of a hostname is limited to 255 characters. Each label (node delimited by a dot in the hostname) is limited to 63 characters and may contain letters, numbers and hyphens ('-'), but may not begin with a hyphen. 	

ntp server keyID

ntp server <ip_address> keyID <key_id>
no ntp server <ip_address> keyID <key_id>

Specifies the KeyID of the NTP server.
The no form of the command removes key ID configuration from the NTP server.

Syntax Description	ip_address	IP address of the peer. IPv4, IPv6 and hostname (FQDN) are acceptable.
	key_id	Range: 1-65534
Default	Disabled	
Configuration Mode	Config	
History	3.5.0200	
	3.6.4000	Added hostname as ip_address option and added Notes.
Role	admin	
Example	switch (config) # ntp server 10.10.10.10 keyID 120	
Related Commands	N/A	
Notes	<ul style="list-style-type: none">• IP addresses must be in IPv4 format (e.g., '192.168.0.1') or IPv6 format with scope zone id for IPv6 link-local addresses (e.g., '2001:db8:701f::8f9' or 'fe80::21c:23f:ec1:4fb%7'.)• The length of a hostname is limited to 255 characters. Each label (node delimited by a dot in the hostname) is limited to 63 characters and may contain letters, numbers and hyphens ('-'), but may not begin with a hyphen.	

ntp server trusted-enable

ntp server <ip_address> trusted-enable
no ntp server <ip_address> trusted-enable

Trusts this NTP server; if authentication is configured this will additionally force all time updates to only use trusted servers.

The no form of the command removes trust from this NTP server

Syntax Description	ip_address	IP address of the peer. IPv4, IPv6 and hostname (FQDN) are acceptable.
Default	N/A	
Configuration Mode	Config	
History	3.6.2002	
	3.6.4000	Added hostname as ip_address option and added Notes.
Role	admin	
Example	switch (config) # ntp server 10.10.10.10 trusted-enable	
Related Commands	N/A	
Notes	<ul style="list-style-type: none"> • IP addresses must be in IPv4 format (e.g., '192.168.0.1') or IPv6 format with scope zone id for IPv6 link-local addresses (e.g., '2001:db8:701f::8f9' or 'fe80::21c:23f:ec1:4fb%7'.) • The length of a hostname is limited to 255 characters. Each label (node delimited by a dot in the hostname) is limited to 63 characters and may contain letters, numbers and hyphens ('-'), but may not begin with a hyphen. • NTP trusted servers can be used as a mitigation for Sybil attacks which is a vulnerability caused by NTP peers sharing the same NTP key base. This mitigation adds the concept of trusted servers which if enabled in conjunction with NTP authentication ensures that time information will only be obtained from trusted servers. 	

ntp server version

ntp server <ip_address> version <ver_num>
no ntp server <ip_address> version <ver_num>

Specifies the NTP version number of this server.
The no form of the command defaults NTP to version 4.

Syntax Description	ip_address	IP address of the peer. IPv4, IPv6 and hostname (FQDN) are acceptable.
	ver_num	NTP version (3 or 4)
Default	4	
Configuration Mode	Config	
History	3.5.0200	
	3.6.4000	Added hostname as ip_address option and added Notes.
Role	admin	
Example	switch (config) # ntp server 10.10.10.10 version 4	
Related Commands	N/A	
Notes	<ul style="list-style-type: none">• IP addresses must be in IPv4 format (e.g., '192.168.0.1') or IPv6 format with scope zone id for IPv6 link-local addresses (e.g., '2001:db8:701f::8f9' or 'fe80::21c:23f:ec1:4fb%7'.)• The length of a hostname is limited to 255 characters. Each label (node delimited by a dot in the hostname) is limited to 63 characters and may contain letters, numbers and hyphens ('-'), but may not begin with a hyphen.	

ntp trusted-key

ntp trusted-key <key(s)>
no ntp trusted-key <key(s)>

Adds one or more keys to the trusted key list.
 The no form of the command removes keys from the trusted key list.

Syntax Description	key(s)	Range: 1-65534.
Default	Disabled	
Configuration Mode	Config	
History	3.5.0200	
Role	admin	
Example	switch (config) # ntp trusted-key 1,3,5 switch (config) # ntp trusted-key 1-5	
Related Commands	ntp authentication-key	
Notes	Keys may be separated with commas without any space, or they may be set as a range using a hyphen.	

show clock

show clock

Displays the current system time, date and time zone.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	<pre>switch (config) # show clock Time: 04:21:44' Date: 2012/02/26 Time zone: America North United_States Other New_York switch (config) #</pre>
Related Commands	N/A
Notes	

show ntp**show ntp**

Displays the current NTP settings.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000 3.5.0200 Updated Example
Role	admin
Example	<pre>switch (config) # show ntp NTP is administratively enabled. NTP Authentication is administratively disabled. Clock is synchronized. Reference: 10.134.46.4. Offset: -9.605 ms. Active servers and peers: 10.1.1.1 Conf Type : dual Status : pending Stratum : 16 Offset(msec) : 0.000 Ref clock : .INIT. Poll Interval (sec): 64 Last Response (sec): N/A Auth state : none 10.134.46.4 Conf Type : serv Status : sys.peer(*) Stratum : 4 Offset(msec) : -9.605 Ref clock : 10.7.77.134 Poll Interval (sec): 64 Last Response (sec): 55 Auth state : none switch (config) #</pre>
Related Commands	N/A
Notes	

show ntp configured

show ntp configured

Displays NTP configuration.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.5.0200
Role	admin
Example	<pre>switch (config) # show ntp configured NTP enabled: yes NTP Authentication enabled: no No NTP peers configured. NTP server 10.10.10.10 Enabled: yes NTP version: 4 Key ID: none switch (config) #</pre>
Related Commands	N/A
Notes	

show ntp keys**show ntp configured**

Displays NTP keys.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.5.0200
Role	admin
Example	<pre>switch (config) # show ntp keys NTP Key 1 Trusted: yes Encryption Type: MD5 NTP Key 2 Trusted: yes Encryption Type: MD5 NTP Key 3 Trusted: yes Encryption Type: MD5 NTP Key 4 Trusted: yes Encryption Type: md5 switch (config) #</pre>
Related Commands	N/A
Notes	

4.3 PTP

Synchronizing some network applications require their wall clock time to be aligned precisely with the global world time (to the order of micro seconds) synchronization with . To achieve such accuracy, the application needs the support of networking HW (switch or a NIC), to provide means to stamp time sensitive packets. It also requires a time synchronization protocol to make use of the HW time stamping to adjust its wall clock time to an accurate clock in the network.

IEEE Standard for a Precision Clock Synchronization Protocol for Networked Measurement and Control Systems (standard number 1588) defines the means to achieve time synchronization in the orders of sub microseconds.

4.3.1 Precision Time Protocol principles

The basic principal of PTP is:

Slave time = master time + propagation delay + offset

The purpose of the protocol is to align the slave and the master time so the gap between them is the propagation delay of the packet or in other words, use the offset to correct the slave time so the offset between the master sending the packet and the slave receiving the packet is the propagation delay.

Master time is sent periodically by a reliable clock source named Master Clock or Grand Master Clock. Propagation delay is calculated between each node and the MC by one of the two methods provided by the standard and further explained below.

To reach sub micro second resolutions, all the time stamps which record when a packet was sent and when was it received should be done in HW. This may impose interaction between SW and HW to query the HW time and send follow-up messages. This issue is further explained below in 2 step section.

Going back to the equation provided above, the following figure shows the 4 attributes that are needed to address the equation, T1,T2,T3 and T4

Assuming that the propagation delay in the network is symmetric, the propagation time is the average time that took the sync and delay req messages to be switched

Propagation delay = $(T4-T1-(T3-T2))/2=(T4-T1+T2-T3)/2$

T1 represents the time that the packet left the master which is actually the master time.

The following figure provides an example of the stages required by a slave clock to align its time to the master clock:

Figure 10: PTP clock synchronization example

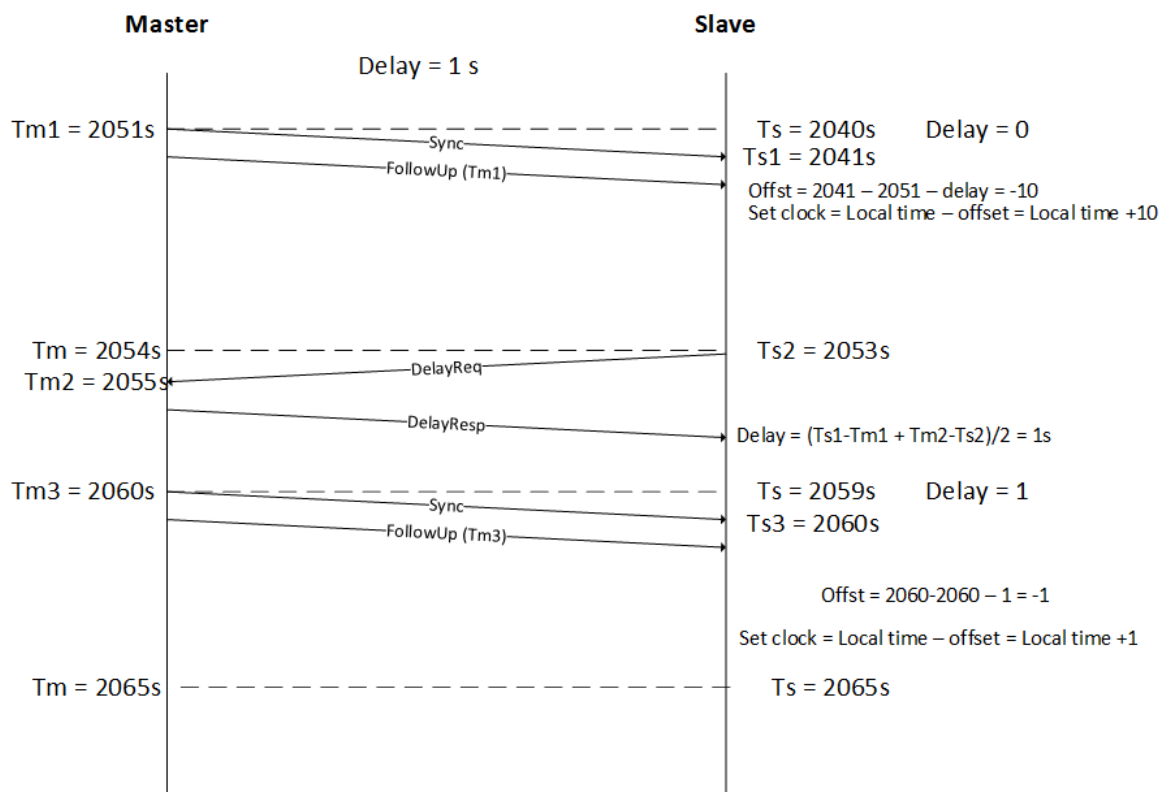


Table 24 - PTP message formats

Submenu Title				Description
Sync	0	Required both native L2 and over IP	Required over IP, OC and BC	Event
Followup	8	Required both native L2 and over IP	Required over IP, OC and BC	General
Delay_Req	1	Required both native L2 and over IP	Required over IP, BC	Event
Delay_Resp	9	Required both native L2 and over IP	Required over IP, OC and BC	General
Pdelay_Req	2	Required both native L2 and over IP	Required over native L2, BC only	Event

Table 24 - PTP message formats

Submenu Title				Description
Pdelay_Resp	3	Required both native L2 and over IP	Required over native L2, BC only	Event
Pdelay_Resp followup	A	Required both native L2 and over IP	Required over native L2, BC only	General
Announce	B	Required both native L2 and over IP	Required over IP, OC and BC	General
Management	C	Required both native L2 and over IP	Required over IP, OC and BC	General

4.3.2 Clock types and operation modes

The spec defines few types of clocks:

- Master Clock (MC) - The source of an accurate clock such as a GNSS driven clock (ie: GPS, GLONASS, GALILEO)
- Boundary Clock (BC) - A network device that acts as slave to its master and as master to its slaves. (Mellanox implements only this)
- Ordinary Clock (OC) - A clock slave. The end point which its clock is been synched (normally a host/server)
- Transparent Clock (TC) - A PTP aware switch that is capable of measuring the PTP packet switching delay (transient time) and update the data in the packet. In Peer to Peer (P2P) delay calculation mechanism, a TC device is also required to calculate its delay from the next hop toward the MC and add the value to the switching delay

The spec defines two modes of delay calculations:

- End to End (E2E) - Each OC calculates its delay from the MC by running Delay request/delay response sequence (Mellanox implements only this)
- Peer to Peer - Propagation delay (Pdelay) is calculated periodically on each link between the OC and the MC independently. The time synchronization packet sent from the MC to all the OCs in the network is updated by each of the downstream nodes with both switching delay (the time that the packet traversed the switch) and upstream's hop Pdelay

4.3.3 PTP domains


A domain consists of one or more PTP devices communicating with each other. PTP domain defines the scope of PTP message communication, state, operations, data sets, and timescale.

4.3.3.1 Boundary Clock

In a full E2E PTP deployments, the GMC needs to respond to each OC's Delay request message. A normal profile of PTP may require few delay calculations per second. An average GMC is capable of addressing few Ks of messages/second. This imposes that direct OC/GMC communication limits the number of overall OCs to ~8K. To scale beyond that, there is a need for a hierarchy between the GMC and the OCs. This is achieved by implementing BC, either in the TOR switches or on all the switches in the DC.

The next figure shows the master/slave role that a boundary clock implements between the MC and the Slave (OC)

Figure 11: Boundary Clock Master/Slave functionality

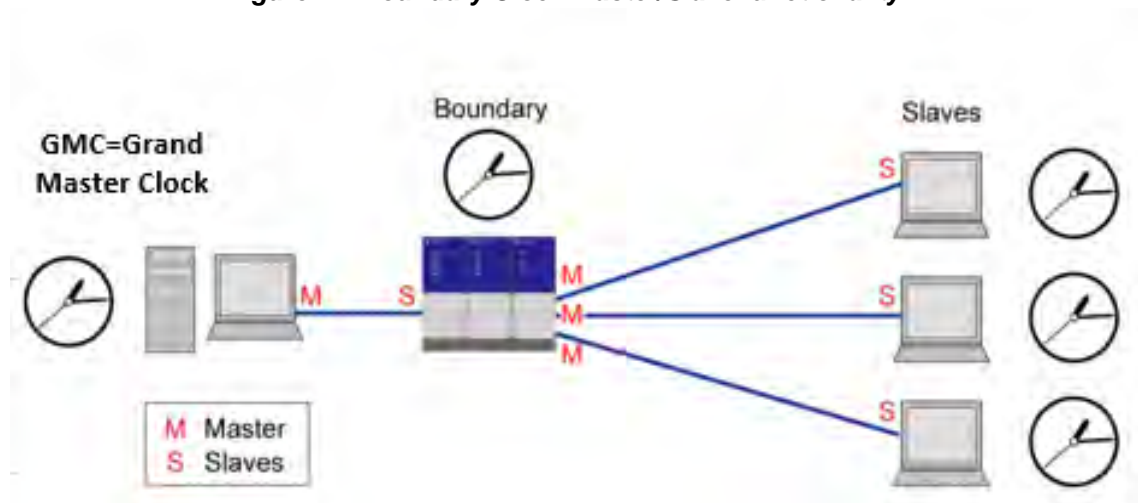

Each BC acts as OC towards the MC and as MC to its local OCs. Although adding a BC device introduces accuracy degradation as explained above, it becomes mandatory when the number of OC on a single MC exceeds few thousand devices.

Another use of BC is to bridge between networks. When running PTP over native Ethernet packets, to create larger PTP domains, there is a need to bridge between the broadcast domains. This is done by BC switches.

Table 25 - default ptp profile attributes

Name	Range	Default
Announce interval	-3 (0.125s), 1 (2s)	-2 (0.25s)
Announce timeout interval	2, 10	3
Sync interval (logSyncInt)	-7, -1	-3
Delay request interval	logSyncInt, logSyncInt +5	logSyncInt
PTP domain	0, 127	127
Priority 1	0, 255	128

Table 25 - default ptp profile attributes

Name	Range	Default
Priority 2	0, 255	128

4.3.4 PTP Commands

protocol ptp

protocol ptp

Enables ptp on the switch.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.6.4110
Role	admin
Example	<pre>switch (config) # protocol ptp ... switch (config) #</pre>
Related Commands	N/A
Notes	

ptp domain

ptp domain <domain number>

Inserts the number of ptp domain.

Syntax Description	domain number	Range: 0 - 127
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.4110	
Role	admin	
Example	switch (config) # ptp domain ... switch (config) #	
Related Commands	N/A	
Notes		

ptp priority**ptp priority**{ 1 | 2 } <priority{ 1 | 2 }>

Sets PTP primary priority.

Syntax Description	priority1 / priority2	Range: 0 - 255
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.4110	
Role	admin	
Example	<pre>switch (config) # ptp priority1 ... switch (config) #</pre>	
Related Commands	N/A	
Notes		

interface ethernet ptp enable

interface ethernet <interface number> ptp enable

Enables PTP on interface.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.6.4110
Role	admin
Example	switch (config) # interface ethernet 1/1 ptp enable ... switch (config) #
Related Commands	N/A
Notes	

interface ethernet ptp announce interval

interface ethernet <interface number> ptp announce interval <interval>

Sets PTP announce interval.

Syntax Description	interval	Range: 3 - 1
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.4110	
Role	admin	
Example	<pre>switch (config) # interface ethernet 1/1 ptp announce interval 2 ... switch (config) #</pre>	
Related Commands	N/A	
Notes		

interface ethernet ptp announce timeout

```
interface ethernet <interface number> ptp announce timeout <timeout>
```

Sets PTP announce timeout.

Syntax Description	timeout	Range: 0 - 10
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.4110	
Role	admin	
Example	switch (config) # interface ethernet 1/1 ptp announce timeout 2 ... switch (config) #	
Related Commands	N/A	
Notes		

interface ethernet ptp delay-mechanism

```
interface ethernet <interface number> ptp delay-mechanism <delay-mechanism>
```

Sets PTP delay-mechanism.

Syntax Description	delay-mechanism	e2e, p2p
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.4110	
Role	admin	
Example	<pre>switch (config) # interface ethernet 1/1 ptp delay-mechanism 2 ... switch (config) #</pre>	
Related Commands	N/A	
Notes		

interface ethernet ptp delay-req interval

interface ethernet <interface number> ptp delay-req interval <interval>

Sets PTP delay-req interval.

Syntax Description	interval	Range: 7 - 3
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.4110	
Role	admin	
Example	switch (config) # interface ethernet 1/1 ptp delay-req interval 5 ... switch (config) #	
Related Commands	N/A	
Notes		

interface ethernet ptp sync interval

interface ethernet <interface number> ptp sync interval <interval>

Sets PTP sync interval.

Syntax Description	interval	Range: 7 - 1
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.4110	
Role	admin	
Example	<pre>switch (config) # interface ethernet 1/1 ptp sync interval 5 ... switch (config) #</pre>	
Related Commands	N/A	
Notes		

4.3.5 PTP Show Commands

show ptp

show ptp

Displays PTP configuration and operation data.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Config
---------------------------	--------

History	3.6.4110
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config) # show ptp PTP mode: Boundary Clock Domain: 127 Clock identity: e41d2d.ffffe.46f801 GMC identity: 000102.ffffe.030405 Number of master ports: 0 Slave port interface: Eth1/1 PTP enabled interfaces: Name Role ---- --- Eth1/1 SLAVE ... switch (config) #</pre>
----------------	---

Related Commands	N/A
-------------------------	-----

Notes	
--------------	--

show ptp clock

show ptp clock

Displays configuration and operation data of PTP clock.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.6.4110
Role	admin
Example	<pre> switch (config) # show ptp clock Domain: 127 Number of PTP ports: 1 Priority1: 128 Priority2: 128 Clock identity: e41d2d.ffffe.46f801 Offset From Master (ns): 65535 Mean path delay (ns): 13303808 Clock Quality Class: 248 Accuracy: 254 Offset (log variance): 65535 Steps Removed from GMC: 1 Local clock time: 13:59:27 Etc/UTC 2017/05/23 ... switch (config) # </pre>
Related Commands	N/A
Notes	

show ptp clock parent

show ptp clock parent

Displays configuration and operation data of parent PTP clock.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Config
---------------------------	--------

History	3.6.4110
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config) # show ptp clock parent Parent Clock Parent Clock identity: 7cfe90.ffffe.fa2141 Parent Port number: 2 GMC GMC Identity: 7cfe90.ffffe.fa2141 GMC Clock Quality Priority1: 128 Priority2: 128 Class: 248 Accuracy: 254 Offset (log variance): 65535 ... switch (config) #</pre>
----------------	---

Related Commands	N/A
-------------------------	-----

Notes	
--------------	--

show ptp interface ethernet

show ptp interface ethernet <number>

Displays PTP configuration and operation data, per interface.

Syntax Description	number	Port ID
Default	N/A	
Configuration Mode	Config	
History	3.6.4110	
Role	admin	
Example	<pre>switch (config) # show ptp interface ethernet 1/1 Interface name: Eth1/1 Port Clock identity: 7cfe90.ffffe.fa21c1 PTP Port number: 1 PTP interface state: SLAVE Delay request interval(log mean): -3 Announce receipt time out: 3 Announce interval(log mean): -2 Sync interval(log mean): -3 Delay Mechanism: End to End Transport protocol: UDP IPv4 ... switch (config) #</pre>	
Related Commands	N/A	
Notes		

show ptp interface ethernet counters

show ptp interface ethernet <number> counters

Displays PTP counters, per interface.

Syntax Description	number	Port ID
Default	N/A	
Configuration Mode	Config	
History	3.6.4110	
Role	admin	
Example	<pre>switch (config) # show ptp interface ethernet 1/5 counters Eth1/5 RX 108 Sync message count 0 Delay request message count 0 PDelay request message count 0 PDelay response message count 108 Follow Up message count 17 Delay response message count 0 PDelay response follow Up message count 54 Announce message count 0 Signalling message count 0 Management message count TX 74188 Sync message count 17 Delay request message count 0 PDelay request message count 0 PDelay response message count 74188 Follow Up message count 0 Delay response message count 0 PDelay response follow Up message count 37117 Announce message count 0 Signalling message count 57 Management message count ... switch (config) #</pre>	
Related Commands	N/A	
Notes		

4.4 Software Management

4.4.1 Upgrading MLNX-OS Software



When upgrading from a software version older than 3.2.0100 to software version 3.3.0000 or higher, the upgrade procedure must be done in two steps. First update the software to 3.2.0506, then update to the desired software version.



The system being upgraded becomes indisposed throughout the upgrade procedure.



The upgrade procedure burns the software image as well as the firmware should there be a need.



To upgrade the MLNX-OS version on a gateway, SM, or MLAG cluster, please refer to Section 4.4.2, “Upgrading MLNX-OS HA Groups,” on page 201.



You have to read and accept the End-User License Agreement (EULA) after image upgrade in case the EULA is modified. The EULA link is only available upon first login to CLI.

To upgrade MLNX-OS software on your system, perform the following steps:

Step 1. Change to Config mode.

```
switch > enable
switch # configure terminal
switch (config) #
```

Step 2. Obtain the previously available image (.img file). You *must* delete this image in the next step to make room for fetching the new image.

```
Partition 1:
X86_64 3.6.4110-12 2017-07-26 06:54:12 x86_64

Partition 2:
X86_64 3.6.4006 2017-07-03 16:17:39 x86_64

Last boot partition: 1
Next boot partition: 1

Images available to be installed:
webimage.tbz
X86_64 3.6.4110-12 2017-07-26 06:54:12 x86_64

Serve image files via HTTP/HTTPS: no

No image install currently in progress.

Boot manager password is set.

Image signing: trusted signature always required
Admin require signed images: yes

Settings for next boot only:
  Fallback reboot on configuration failure: yes (default)
M2100-106 [standalone: master] (config) #
```

Step 3. Delete the old image (if one exists) that is listed under Images available to be installed prior to fetching the new image. Use the command `image delete` for this purpose.

```
switch (config) # image delete image-X86_64-3.6.4006-12.img
switch (config) #
```



When deleting an image, you delete the file but not the partition. This is recommended so as to not overload system resources.

Step 4. Fetch the new software image.

```
switch (config) # image fetch scp://username:password@192.168.10.125/var/www/html/
<image_name>
Password (if required): *****
100.0%[#####]
switch (config) #
```

Step 5. Display the available images.

To recover from image corruption (e.g., due to power interruption), there are two installed images on the system. See the commands:

```
image boot next
image boot location.
```

```
switch (config) # show images
Installed images:
  Partition 1:
  SX <old ver> 2013-04-28 16:02:50

  Partition 2:
  SX <new ver> 2013-04-28 16:52:50

Images available to be installed:
  new_image.img
  SX <new ver> 2013-04-28 16:52:50

Serve image files via HTTP/HTTPS: no

No image install currently in progress.

Boot manager password is set.

No image install currently in progress.

Require trusted signature in image being installed: yes (default)
switch (config) #
```

Step 6. Install the new image.

```
switch (config) # image install <image_name>
Step 1 of 4: Verify Image
  100.0% [#####]
Step 2 of 4: Uncompress Image
  100.0% [#####]
Step 3 of 4: Create Filesystems
  100.0% [#####]
Step 4 of 4: Extract Image
  100.0% [#####]
switch (config) #
```



CPU utilization may go up to 100% during image upgrade.

Step 7. Have the new image activate during the next boot. Run:

```
switch (config) # image boot next
```

Step 8. Run `show images` to review your images. Run:

```
switch (config) # show images
Images available to be installed:
  new_image.img
  SX <new ver> 2011-04-28 16:52:50

Installed images:
  Partition 1:
  SX <old ver> 2011-04-28 16:02:50

  Partition 2:
  SX <new ver> 2011-04-28 16:52:50

Last boot partition: 1
Next boot partition: 2

No boot manager password is set.
switch (config) #
```

Step 9. Save current configuration. Run:

```
switch (config) # configuration write
switch (config)#
```

Step 10. Reboot the switch to run the new image. Run:

```
switch (config) # reload
Configuration has been modified; save first? [yes] yes
Configuration changes saved.
Rebooting...
switch (config)#
```



After software reboot, the software upgrade will also automatically upgrade the firm-ware version.



In order to upgrade the system on dual management system refer to Section 4.4.1, “Upgrading MLNX-OS Software,” on page 197.



When performing upgrade from the WebUI, make sure that the image you are trying to upgrade to is not located already in the system (i.e. fetched from the CLI).

4.4.2 Upgrading MLNX-OS HA Groups

In case fallback is ever necessary in an HA group, all cluster nodes must have the same MLNX-OS version installed and they must be immediately reloaded.

➤ *To upgrade MLNX-OS version without affecting an HA group:*

Step 1. Identify the HA group master.

for MLAG. Run:

```
switch (config)# show mlag-vip
MLAG VIP
=====
MLAG group name: my-mlag-group
MLAG VIP address: 1.1.1.1/30
Active nodes: 2

-----
Hostname          VIP-State          IP Address
-----
SwitchA           master             10.10.10.1
SwitchB           standby            10.10.10.2
```

Step 2. Upgrade standby nodes in the HA group according to steps 1-10 in section [Section 4.4.1, on page 197](#).

Step 3. Wait until all standby nodes have rejoined the group.

Step 4. Upgrade the master node in the HA group according to steps 1-10 in section [Section 4.4.1, on page 197](#).

4.4.3 Deleting Unused Images

➤ *To delete unused images:*

Step 1. Enter Config mode. Run:

```
switch >
switch > enable
switch # configure terminal
```

Step 2. Get a list of the unused images. Run

```
M2100-106 [standalone: master] (config) # show images
Installed images:

Partition 1:
X86_64 3.6.4110-12 2017-07-26 06:54:12 x86_64

Partition 2:
X86_64 3.6.4006 2017-07-03 16:17:39 x86_64

Last boot partition: 1
Next boot partition: 1

Images available to be installed:

webimage.tbz
X86_64 3.6.4110-12 2017-07-26 06:54:12 x86_64

Serve image files via HTTP/HTTPS: no

No image install currently in progress.

Boot manager password is set.

Image signing: trusted signature always required
Admin require signed images: yes

Settings for next boot only:
  Fallback reboot on configuration failure: yes (default)
M2100-106 [standalone: master] (config) #
```

Step 3. Delete the unused images. Run:

```
switch config) # image delete image-X86_64-3.6.4071-12.img
switch (config) #
```



When deleting an image, you delete the file but not the partition. This is recommended so as to not overload system resources.

4.4.4 Downgrading MLNX-OS Software

IMPORTANT NOTE

If in possession of an MSX1xxx or MSX6xxx switch system housing a SwitchX®-2 IC, then the oldest MLNX-OS version to which you may downgrade is 3.3.5006; otherwise, the switch system will malfunction.

To find out whether your system is based on SwitchX®-2, please run the command “show inventory” and make sure that the “Asic Rev” column of the MGMT indicates “2”.

Prior to downgrading software, please make sure the following prerequisites are met:

- Step 1.** Log into your switch via the CLI using the console port.
Step 2. Backup your configuration according to the following steps:

1. Change to Config mode. Run:

```
switch-112094 [standalone: master] > enable
switch-112094 [standalone: master] # configure terminal
switch-112094 [standalone: master] (config) #
```

2. Disable paging of CLI output. Run:

```
switch-112094 [standalone: master] (config) # no cli default paging enable
```

3. Display commands to recreate current running configuration. Run:

```
switch-112094 [standalone: master] (config) # show running-config
```

4. Copy the output to a text file.

4.4.4.1 Downloading Image

- Step 1.** Log into your system to obtain its product number. Run:

```
switch-112094 [standalone: master] (config) # show inventory
```

- Step 2.** Log into HPE support: www.hpe.com/support/downloads and download the relevant MLNX-OS version to your system type.

- Step 3.** Log into the switch via the CLI using the console port.

- Step 4.** Change to Config mode. Run:

```
switch > enable
switch # configure terminal
switch (config) #
```

- Step 5.** Delete all previous images from the Images available to be installed prior to fetching the new image. Run:

```
switch (config) # image-X86_64-3.6.4006-12.img
```

- Step 6.** Fetch the requested software image. Run:

```
switch (config) # image fetch scp://username:password@192.168.10.125/var/www/html/
<image_name>
100.0%[#####]
```

4.4.4.2 Downgrading Image



The procedure below assumes that booting and running is done from Partition 1 and the downgrade procedure is performed on Partition 2.

- Step 1.** Log in as admin.

- Step 2.** Enter config mode. Run:

```
switch > enable
```

```
switch # configure terminal
```

Step 3. Show all image files on the system. Run:

```
switch (config) # show images
Images available to be installed:
new_image.img
<downgrade version> 2010-09-19 16:52:50
Installed images:
Partition 1:
<current version> 2010-09-19 03:46:25
Partition 2:
<current version> 2010-09-19 03:46:25
Last boot partition: 1
Next boot partition: 1
No boot manager password is set.
switch (config) #
```

Step 4. Install the MLNX-OS image. Run:

```
switch (config) # image install <image_name>
Step 1 of 4: Verify Image
100.0% [#####]
Step 2 of 4: Uncompress Image
100.0% [#####]
Step 3 of 4: Create Filesystems
100.0% [#####]
Step 4 of 4: Extract Image
100.0% [#####]
switch (config) #
```

Step 5. Show all image files on the system. Run:

```
switch (config) # show images
Images available to be installed:
new_image.img
  <downgrade version> 2010-09-19 16:52:50
Installed images:
Partition 1:
  <current version> 2010-09-19 03:46:25
Partition 2:
  <downgrade version> 2010-09-19 16:52:50
Last boot partition: 1
Next boot partition: 2
No boot manager password is set.
switch (config) #
```

Step 6. Set the boot location to be the other (next) partition. Run:

```
switch (config) # image boot next
```



There are two installed images on the system. Therefore, if one of the images gets corrupted (due to power interruption, for example), in the next reboot the image will go up from the second partition.



In case you are downloading to an older software version which has never been run yet on the switch, use the following command sequence as well:

```
switch (config) # no boot next fallback-reboot enable
switch (config) # configuration write
```

Step 7. Reload the switch. Run:

```
switch (config) # reload
```

4.4.4.3 Switching to Partition with Older Software Version

The system saves a backup configuration file when upgrading from an older software version to a newer one. If the system returns to the older software partition, it uses this backup configuration file.



IMPORTANT NOTE

All configuration changes done with the new software are lost when returning to the older software version.

There are 2 instances where the backup configuration file does not exist:

- The user has run “reset factory” command, which clears all configuration files in the system
- The user has run “configuration switch-to” to a configuration file with different name than the backup file

Note that the configuration file becomes empty if the switch is downgraded to a software version which has never been installed yet.

To allow switching partition to the older software version for the 2 aforementioned cases only, follow the steps below:

Step 1. Run the command:

```
switch (config)# no boot next fallback-reboot enable
```

Step 2. Set the boot partition. Run:

```
switch (config)# image boot next
```

Step 3. Save the configuration. Run:

```
switch (config)# configuration write
```

Step 4. Reload the system. Run:

```
switch (config)# reload
```

4.4.5 Upgrading System Firmware

Each MLNX-OS software package version has a default switch firmware version. When you update the MLNX-OS software to a new version, an automatic firmware update process will be attempted by MLNX-OS. This process is described below.

4.4.5.1 After Updating MLNX-OS Software

Upon rebooting your switch system after updating the MLNX-OS software, MLNX-OS compares its default firmware version with the currently programmed firmware versions on all the switch modules (leaves and spines on director-class switches, or simply the switch card on edge switch systems).

If one or more of the switch modules is programmed with a firmware version other than the default version, then MLNX-OS automatically attempts to burn the default firmware version instead.



If a firmware update takes place, then the login process is delayed a few minutes.

To verify that the firmware update was successful, log into MLNX-OS and run the command “show asic-version” (can be run in any mode). This command lists all of the switch modules along with their firmware versions. Make sure that all the firmware versions are the same and match the default firmware version. If the firmware update failed for one or more modules, then the following warning is displayed.

Some subsystems are not updated with a default firmware.



If you detect a mismatch in firmware version for one or more modules of the switch system, please contact your assigned HPE field application engineer.

4.4.5.2 Importing Firmware and Changing the Default Firmware

To perform an automatic firmware update by MLNX-OS for a different switch firmware version without changing the MLNX-OS version, import the firmware package as described below. MLNX-OS sets it as the new default firmware and performs the firmware update automatically as described in the previous subsections.

4.4.5.2.1 Default Firmware Change on Standalone Systems

Step 1. Import the firmware image (.mfa file). Run:

```
switch (config) # image fetch scp://root@1.1.1.1:/tmp/fw-SX-rel-9_2_6440-FIT.mfa
Password (if required): *****
100.0%
[#####]
switch (config) # image default-chip-fw fw-SX-rel-9_2_6440-FIT.mfa
Installing default firmware image. Please wait...
Default Firmware 9.2.6440 updated. Please save configuration and reboot for new FW to
take effect.
switch (config) #
```

Step 2. Save the configuration. Run:

```
switch (config) # configuration write
switch (config) #
```

Step 3. Reboot the system to enable auto update.

4.4.6 Commands

This chapter displays all the relevant commands used to manage the system software image.

image boot

image boot {location <location ID> | next}

Specifies the default location where the system should be booted from.

Syntax Description	location ID	Specifies the default destination location. There can be up to 2 images on the system. The possible values are 1 or 2.
	next	Sets the boot location to be the next once after the one currently booted from, thus avoiding a cycle through all the available locations.
Default	N/A	
Configuration Mode	enable/config	
History	3.1.0000	
Role	admin	
Example	switch (config) # image boot location 2 switch (config) #	
Related Commands	show images	
Notes		

boot next

boot next fallback-reboot enable
no boot next fallback-reboot enable

Sets the default setting for next boot. Normally, if the system fails to apply the configuration on startup (after attempting upgrades or downgrades, as appropriate), it will reboot to the other partition as a fallback.

The no form of the command tells the system not to do that, only for the next boot.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.2.0506
Role	admin
Example	<pre>switch (config) # boot next fallback-reboot enable switch (config) #</pre>
Related Commands	show images
Notes	<ul style="list-style-type: none"> • Normally, if the system fails to apply the configuration on startup (after attempting upgrades or downgrades, as appropriate) it reboots to the other partition as a fallback. • The no form of this command tells the system not to do that only for the next boot. In other words, this setting is not persistent, and goes back to enabled automatically after each boot. • When downgrading to an older software version which has never been run yet on a system, the “fallback reboot” always happens, unless the command “no boot next fallback-reboot enable” is used. However, this also happens when the older software version <i>has</i> been run before, but the configuration file has been switched since upgrading. In general, a downgrade only works (without having the fallback reboot forcibly disabled) if the process can find a snapshot of the configuration file (by the same name as the currently active one) which was taken before upgrading from the older software version. If that is not found, a fallback reboot is performed in preference to falling back to the initial database because the latter generally involves a loss of network connectivity, and avoiding that is of paramount importance.

boot system

boot system {location | next}
no boot system next

Configures which system image to boot by default.
The no form of the command resets the next boot location to the current active one.

Syntax Description	location	Specifies location from which to boot system <ul style="list-style-type: none">• 1 – installs to location 1• 2 – installs to location 2
	next	Boots system from next location after one currently booted
Default	N/A	
Configuration Mode	Config	
History	3.2.0506	
Role	admin	
Example	switch (config) # boot system location 2 switch (config) #	
Related Commands	show images	
Notes		

image default-chip-fw

image default-chip-fw <file name>

Sets the default firmware package to be installed.

Syntax Description	filename	Specifies the firmware filename.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # image default-chip-fw fw-SX-rel-9_2_6440-FIT.mfa	
Related Commands	show asic-version show images	
Notes		

image delete

image delete <image name>

Deletes the specified image file.

Syntax Description	image name	Specifies the image name.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # image delete image-MLXNX-OS-201140526-010145.img switch (config) #	
Related Commands	show images	
Notes		

image fetch

image fetch <URL> [<filename>]

Downloads an image from the specified URL or via SCP.

Syntax Description	URL	HTTP, HTTPS, FTP, TFTP, SCP and SFTP are supported. Example: scp://username[:password]@hostname/path/filename.
	filename	Specifies a filename for this image to be stored as locally.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # image fetch scp://<username>@192.168.10.125/var/www/html/<image_name> Password ***** 100.0%[#####] switch (config) # Other options: switch (config) # image fetch http://10.1.0.40/path/filename switch (config) # image fetch http://[fd4f:13:cc00:1::40]/path/filename switch (config) # image fetch ftp://user:mypassword@10.1.0.40/foo/bar.img switch (config) # image fetch ftp://user:mypassword@[fd4f:13:cc00:1::40]/foo/bar.img switch (config) # image fetch tftp://hostname/dir/filename switch (config) # image fetch tftp://[fd4f:13:cc00:1::40]/dir/filename switch (config) # image fetch scp://user@myhost/dir/filename switch (config) # image fetch scp://user@myhost:1022/dir/filename switch (config) # image fetch scp://user:pass@[fd4f:13:cc00:1::40]/dir/filename switch (config) # image fetch sftp://user@myhost/dir/filename switch (config) # image fetch sftp://user@[fd4f:13:cc00:1::40]:1022/dir/filename switch (config) # image fetch sftp://user:pass@[fd4f:13:cc00:1::40]/dir/filename</pre>	

Related Commands show images

Notes

- Please delete the previously available image, prior to fetching the new image
 - The path to the file in the case of TFTP depends on the server configuration. Therefore, it may not be an absolute path but a relative one.
 - See section “Upgrading MLNX-OS SX Software,” in the *Mellanox SwitchX® User Manual* for a full upgrade example
-

image install

image install <image filename> [location <location ID>] | [progress <prog-options>] [verify <ver-options>]

Installs the specified image file.

Syntax Description	image filename	Specifies the image name.
	location ID	Specifies the image destination location.
	prog-options	<ul style="list-style-type: none"> “no-track” overrides CLI default and does not track the installation progress “track” overrides CLI default and tracks the installation progress
	ver-options	<ul style="list-style-type: none"> “check-sig” requires an image to have either a valid signature or no signature “ignore-sig” allows unsigned or invalidly signed images to be installed “require-sig” requires from the installed image to have a valid signature. If a valid signature is not found on the image, the image cannot be installed.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # image install X86_64 3.6.4071-12 2017-07-26 06:54:12 x86_64 Step 1 of 4: Verify Image 100.0% [#####] Step 2 of 4: Uncompress Image 100.0% [#####] Step 3 of 4: Create Filesystems 100.0% [#####] Step 4 of 4: Extract Image 100.0% [#####] switch (config) #</pre>	

Related Commands show images

- Notes**
- The image cannot be installed on the “active” location (the one which is currently being booted)
 - On a two-location system, the location is chosen automatically if no location is specified
-
-

image move

image move <src image name> <dest image name>

Renames the specified image file.

Syntax Description	src image name	Specifies the old image name.
	dest image name	Specifies the new image name.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # image move image1.img image2.img switch (config) #</pre>	
Related Commands	show images	
Notes		

image options

image options {require-sig | serve all}
no image options {require-sig | serve all}

Configures options and defaults for image usage.
The no form of the command disables options and defaults for image usage.

Syntax Description	require-sig	Requires images to be signed by a trusted signature
	serve all	Specifies that the image files present on this appliance should be made available for HTTP and/or HTTPS download
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # image options require-sig	
Related Commands	show images	
Notes	<p>The parameter “serve all” affects not only the files currently present, but also any files that are later downloaded. It only applies to image files, not the installed images, which are not themselves in a downloadable format. After running “serve all” the URLs where the images will be available are:</p> <ul style="list-style-type: none">• <a href="http://<HOSTNAME>/system_images/<FILENAME>">http://<HOSTNAME>/system_images/<FILENAME>• <a href="https://<HOSTNAME>/system_images/<FILENAME>">https://<HOSTNAME>/system_images/<FILENAME>	

show bootvar

show bootvar

Displays the installed system images and the boot parameters.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre> M2100-106 [standalone: master] (config) # show bootvar Installed images: Partition 1: X86_64 3.6.4110-12 2017-07-26 06:54:12 x86_64 Partition 2: X86_64 3.6.4006 2017-07-03 16:17:39 x86_64 Last boot partition: 1 Next boot partition: 1 Serve image files via HTTP/HTTPS: no Boot manager password is set. Image signing: trusted signature always required Admin require signed images: yes Settings for next boot only: Fallback reboot on configuration failure: yes (default) M2100-106 [standalone: master] (config) # </pre>
Related Commands	N/A
Notes	

show images

show image

Displays information about the system images and boot parameters.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	<pre>M2100-106 [standalone: master] (config) # show images Installed images: Partition 1: X86_64 3.6.4110-12 2017-07-26 06:54:12 x86_64 Partition 2: X86_64 3.6.4006 2017-07-03 16:17:39 x86_64 Last boot partition: 1 Next boot partition: 1 Images available to be installed: webimage.tbz X86_64 3.6.4071-12 2017-07-26 06:54:12 x86_64 Serve image files via HTTP/HTTPS: no No image install currently in progress. Boot manager password is set. Image signing: trusted signature always required Admin require signed images: yes Settings for next boot only: Fallback reboot on configuration failure: yes (default) M2100-106 [standalone: master] (config) #</pre>
Related Commands	N/A
Notes	

4.5 Configuration Management

4.5.1 Saving a Configuration File

To save the current configuration to the active configuration file, you can either use the `configuration write` command (requires running in Config mode) or the `write memory` command (requires running in Enable mode).

- To save the configuration to the active configuration file, run:

```
switch (config) # configuration write
```

- To save the configuration to a user-specified file without making the new file the active configuration file, run:

```
switch (config) # configuration write to myconf no-switch
```

- To save the configuration to a user-specified file and make the new file the active configuration file, run:

```
switch (config) # configuration write to myconf
```

- To display the available configuration files and the active file, run:

```
switch (config) # show configuration files
initial
myconf (active)
switch (config) #
```

4.5.2 Loading a Configuration File

By default, or after a system reset, the system loads the default “initial” configuration file.

- ***To load a different configuration file and make it the active configuration:***

```
switch [standalone: master] >
switch [standalone: master] > enable
switch [standalone: master] # configure terminal
switch [standalone: master] (config) # configuration switch-to myconfig
switch [standalone: master] (config) #
```

4.5.3 Restoring Factory Default Configuration

In cases where the system configuration becomes corrupted it is suggested to restore the factory default configuration.

- ***To restore factory default configuration on a single management module system:***

Step 1. Run the command `reset factory [reboot] [keep-basic] [keep-all-config]`:

```
switch (config) # reset factory keep-basic
```

4.5.4 Managing Configuration Files

There are two types of configuration files that can be applied on the switch, BIN files (binary) and text-based configuration files.

4.5.4.1 BIN Configuration Files

BIN configuration files are not human readable. Additionally, these files are encrypted and contain integrity verification preventing them from being edited and used on the switch.

- **To create a new BIN configuration file:**

```
switch (config) # configuration new my-filename
```



A newly created BIN configuration file is always empty and is not created from the running-config.

- **To upload a BIN configuration file from a switch to an external file server:**

```
switch (config) # configuration upload my-filename scp://myusername@my-server/path/to/my/<file>
```

- **To fetch a BIN configuration file:**

```
switch (config) # configuration fetch scp://myusername@my-server/path/to/my/<file>
```

- **To see the available configuration files:**

```
switch (config) # show configuration files
initial (active)
my-filename

Active configuration: initial
Unsaved changes:      no
switch (config) #
```

- **To load a BIN configuration file:**

```
switch (config) # configuration switch-to my-filename
This requires a reboot.
Type 'yes' to confirm: yes
```



Applying a new BIN configuration file changes the whole switch's configuration and requires system reboot which can be preformed using the command `reload`.



A binary configuration file uploaded from the switch is encrypted and has integrity verification. If the file is modified in any manner, the fetch to the switch fails.

4.5.4.2 Text Configuration Files

Text configuration files are text based and editable. It is similar in form to the output of the command “show running-config expanded”.

➤ **To create a new text-based configuration file:**

```
switch (config) # configuration text generate active running save my-filename
```



A newly created text configuration file is always created from the running-config.

➤ **To apply a text-based configuration file:**

```
switch (config) # configuration text file my-filename apply
```



Applying a text-based configuration file to an existing/running data port configuration may result in unpredictable behavior. It is therefore suggested to first clear the switch’s configuration by applying a specific configuration file (following the procedure in [Section 4.5.4.1](#)) or by resetting the switch back to factory default.

➤ **To upload a text-based configuration file from a switch to an external file server**

```
switch (config) # configuration text file my-filename upload scp://root@my-server/root/
tmp/my-filename
```

➤ **To fetch a text-based configuration file from an external file server to a switch**

```
switch (config) # configuration text fetch scp://root@my-server/root/tmp/my-filename
```

➤ **To apply a text-based configuration file:**

```
switch (config) # configuration text file my-filename apply
```



When applying a text-based configuration file, the configuration is appended to the switch’s existing configuration. Only new or changed configuration is added. Reboot is not required.

4.5.5 Commands

4.5.5.1 File System

debug generate dump

debug generate dump

Generates a debug dump.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # debug generate dump Generated dump sysdump-switch-112104-201140526-091707.tgz switch (config) #</pre>
Related Commands	file debug-dump
Notes	The dump can then be manipulated using the “file debug-dump...” commands.

file debug-dump

file debug-dump {delete {<filename> | latest} | email {<filename> | latest} | upload {{<filename> | latest} <URL>}}

Manipulates debug dump files.

Syntax Description	delete {<filename> latest}	Deletes a debug dump file.
	email {<filename> latest}	Emails a debug dump file to pre-configured recipients for “informational events”, regardless of whether they have requested to receive “detailed” notifications or not.
	upload {{<filename> latest} <URL>}}	Uploads a debug dump file to a remote host. The URL to the remote host: HTTP, HTTPS, FTP, TFTP, SCP and SFTP are supported. Example: scp://username[:password]@hostname/path/filename.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	Initial release
	3.3.4000	Added “latest” parameter
Role	admin	
Example	switch (config) # file debug-dump email sysdump-switch-112104-20114052-091707.tgz switch (config) #	
Related Commands	show files debug-dump	
Notes		

file stats

file stats {**delete** <filename> | **move** {<source filename> | <destination filename>} | **upload** <filename> <URL>}

Manipulates statistics report files.

Syntax Description	delete <filename>	Deletes a stats report file.
	move <source filename> <destination filename>	Renames a stats report file.
	upload <filename> <URL>	Uploads a stats report file. URL - HTTP, HTTPS, FTP, TFTP, SCP and SFTP are supported. Example: scp://username[:password]@hostname/path/filename.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # file stats move memory-1.csv memory-2.csv switch (config) #	
Related Commands	show files stats show files stats <filename>	
Notes		

file tcpdump

file tcpdump {delete <filename> | upload <filename> <URL>}

Manipulates tcpdump output files.

Syntax Description	delete <filename>	Deletes the specified tcpdump output file.
	upload <filename> <URL>	Uploads the specified tcpdump output file to the specified URL.
		URL - HTTP, HTTPS, FTP, TFTP, SCP and SFTP are supported. Example: scp://username[:password]@hostname/path/filename.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # file tcpdump delete my-tcpdump-file.txt switch (config) #</pre>	
Related Commands	<pre>show files stats tcpdump</pre>	
Notes		

reload

reload [force immediate | halt [noconfirm] | noconfirm]

Reboots or shuts down the system.

Syntax Description	force immediate	Forces an immediate reboot of the system even if the system is busy.
	halt	Shuts down the system.
	noconfirm	Reboots the system without asking about unsaved changes.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # reload Configuration has been modified; save first? [yes] yes Configuration changes saved. ... switch (config) #</pre>	
Related Commands	reset factory	
Notes		

reset factory

reset factory [**keep-all-config** | **keep-basic** | **keep-virt-vols** | **only-config**] [**halt**]

Clears the system and resets it entirely to its factory state.

Syntax Description	keep-all-cofig	Preserves all configuration files including licenses. Removes the logs, stats, images, snapshots, history, known hosts.
		The user is prompted for confirmation before honoring this command, unless confirmation is disabled with the command: “no cli default prompt confirm-reset”.
	keep-basic	Preserves licenses in the running configuration file
	keep-virt-vols	Preserve all virtual disk volumes
	only-config	Removes configuration files only. The logs, stats, images, snapshots, history, and known hosts are preserved.
	halt	The system is halted after this process completes
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
	3.4.0000	Added notes and “keep-virt-vols” parameter
	3.6.2002	Updated Example and Notes
Role	admin	
Example	<pre>switch (config) # reset factory Warning - confirming will cause system reboot. Type 'YES' to confirm reset: YES Resetting and rebooting the system -- please wait... ...</pre>	

Related Commands	reload
Notes	<ul style="list-style-type: none">• Effects of parameter “keep-all-cofig”: Licenses – not deleted; profile – no change; configuration – unchanged; management IP – unchanged• Effects of parameter “keep-basic”: Licenses – not deleted; profile – reset; configuration – reset; management IP – reset• Effects of parameter “keep-virt-vols”: Licenses – deleted; profile – reset; configuration – reset; management IP – unchanged• Confirming the command causes system reboot

show files debug-dump

show files debug-dump [<filename>]

Displays a list of debug dump files.

Syntax Description	filename	Displays a summary of the contents of a particular debug dump file.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>M2100-aj [standalone: master] (config) # show files debug-dump sysdump-M2100-aj-20170731-161038.tgz M2100-aj [standalone: master] (config) # show files debug-dump sysdump- M2100-aj-20170731-161038.tgz ===== System information: Hostname: M2100-aj Version: X86_64 3.6.4006 2017-07-03 16:17:39 x86_64 Current time: 2017-07-31 16:10:38 System uptime: 19d 18h 20m 12s ===== Output of 'uname -a': Linux M2100-aj 3.10.0-327.36.3.el7MELLANOXsmp-x86_64 x86_64 jenkins #1 2017-06-27 12:34:55 SMP x86_64 x86_64 x86_64 GNU/Linux =====</pre>	
Related Commands	file debug-dump	
Notes		

show files stats

show files stats <filename>

Displays a list of statistics report files.

Syntax Description	filename	Display the contents of a particular statistics report file.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # show files stats memory-201140524-111745.csv switch (config) #	
Related Commands	file stats	
Notes		

show files system

show files system [detail]

Displays usage information of the file systems on the system.

Syntax Description	detail	Displays more detailed information on file-system.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # show files system Statistics for /config filesystem: Bytes Total 100 MB Bytes Used 3 MB Bytes Free 97 MB Bytes Percent Free 97% Bytes Available 97 MB Inodes Total 0 Inodes Used 0 Inodes Free 0 Inodes Percent Free 0% Statistics for /var filesystem: Bytes Total 860 MB Bytes Used 209 MB Bytes Free 651 MB Bytes Percent Free 75% Bytes Available 651 MB Inodes Total 0 Inodes Used 0 Inodes Free 0 Inodes Percent Free 0% switch (config) #</pre>	
Related Commands	N/A	
Notes		

show files tcpdump

show files tcpdump

Displays a list of statistics report files.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # show files stats test dump3 switch (config) #</pre>
Related Commands	<pre>file tcpdump tcpdump</pre>
Notes	

4.5.5.2 Configuration Files

configuration audit

configuration audit max-changes <number>

Chooses settings related to configuration change auditing.

Syntax Description	max-changes	Set maximum number of audit messages to log per change.
Default	1000	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # configuration audit max-changes 100 switch (config) # show configuration audit Maximum number of changes to log: 100 switch (config) #</pre>	

Related Commands	show configuration
-------------------------	--------------------

Notes	N/A
--------------	-----

configuration copy

configuration copy <source name> <dest name>

Copies a configuration file.

Syntax Description	source name	Name of source file.
	dest name	Name of destination file. If the file of specified filename does not exist a new file will be created with said filename.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # configuration copy initial.bak example switch (config) #</pre>	
Related Commands		
Notes	<ul style="list-style-type: none">• This command does not affect the current running configuration• The active configuration file may not be the target of a copy. However, it may be the source of a copy in which case the original remains active.	

configuration delete

configuration delete <filename>

Deletes a configuration file.

Syntax Description	filename	Name of file to delete.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # show configuration files example initial initial.bak initial.prev switch (config) # configuration delete example switch (config) # show configuration files initial initial.bak initial.prev switch (config) #</pre>	
Related Commands	show configuration	
Notes	<ul style="list-style-type: none"> • This command does not affect the current running configuration • The active configuration file may not be deleted 	

configuration fetch

configuration fetch <URL> [<name>]

Downloads a configuration file from a remote host.

Syntax Description	URL	HTTP, HTTPS, FTP, TFTP, SCP and SFTP are supported. Example: scp://username[:password]@hostname/path/filename.
	name	The configuration file name.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # configuration fetch scp://root:password@ 192.168.10.125/tmp/conf1 switch (config) #</pre>	
Related Commands	configuration switch-to	
Notes	<ul style="list-style-type: none">• The downloaded file should not override the active configuration file, using the <name> parameter• If no name is specified for a configuration fetch, it is given the same name as it had on the server• No configuration file may have the name “active”	

configuration jump-start

configuration jump-start

Runs the initial-configuration wizard.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # configuration jump-start Mellanox configuration wizard Step 1: Hostname? [switch-3cc29c] Step 2: Use DHCP on mgmt0 interface? y Step 3: Admin password (Enter to leave unchanged)? You have entered the following information: 1. Hostname: switch-3cc29c 2. Use DHCP on mgmt0 interface: yes 3. Enable IPv6: yes 4. Enable IPv6 autoconfig (SLAAC) on mgmt0 interface: yes 53. Admin password (Enter to leave unchanged): (unchanged) To change an answer, enter the step number to return to. Otherwise hit <enter> to save changes and exit. Choice: Configuration changes saved. switch (config) #</pre>
Related Commands	N/A
Notes	<ul style="list-style-type: none"> • The wizard is automatically invoked whenever the CLI is launched when the active configuration file is fresh (i.e. not modified from its initial contents) • This command invokes the wizard on demand – see chapter “Initializing the Switch for the First Time” in the <i>MLNX-OS SwitchX User Manual</i>

configuration merge

configuration merge <filename>

Merges the “shared configuration” from one configuration file into the running configuration.

Syntax Description	filename	Name of file from which to merge settings.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # configuration merge new-config-file switch (config) #	
Related Commands		
Notes	<ul style="list-style-type: none">• No configuration files are modified during this process• The configuration name must be a non-active configuration file	

configuration move

configuration move <source name> <dest name>

Moves a configuration file.

Syntax Description	source name	Old name of file to move.
	dest name	New name for moved file.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # show configuration files example1 initial initial.bak initial.prev switch (config) # configuration move example1 example2 switch (config) # show configuration files example2 initial initial.bak initial.prev switch (config) #</pre>	
Related Commands	show configuration	
Notes	<ul style="list-style-type: none"> • This command does not affect the current running configuration • The active configuration file may not be the target of a move 	

configuration new

configuration new <filename> [factory [keep-basic] [keep-connect]]

Creates a new configuration file under the specified name. The parameters specify what configuration, if any, to carry forward from the current running configuration.

Syntax Description	filename	Names for new configuration file.
	factory	Creates new file with only factory defaults.
	keep-basic	Keeps licenses and host keys.
	keep-connect	Keeps configuration necessary for connectivity (interfaces, routes, and ARP).
Default	Keeps licenses and host keys	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # show configuration files initial initial.bak initial.prev switch (config) # configuration new example2 switch (config) # show configuration files example2 initial initial.bak initial.prev switch (config) #</pre>	
Related Commands	show configuration	
Notes		

configuration switch-to

configuration switch-to <filename> [no-reboot]

Loads the configuration from the specified file and makes it the active configuration file.

Syntax Description	no-reboot	Forces configuration change without rebooting the switch
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
	3.6.1002	Added “no-reboot” option
Role	admin	
Example	<pre>switch (config) # show configuration files initial (active) newcon initial.prev initial.bak switch (config) # configuration switch-to newcon no-reboot switch (config) # show configuration files initial newcon (active) initial.prev initial.bak switch (config) #</pre>	
Related Commands	show configuration files	
Notes	<ul style="list-style-type: none"> • The current running configuration is lost and not automatically saved to the previous active configuration file. • When running the command without the “no-reboot” parameter, the user is prompted to OK a reboot. If the answer is “yes”, the configuration is replaced and the switch is rebooted immediately. 	

configuration text fetch

configuration text fetch <URL> [**apply** [**discard** | **fail-continue** | **filename** | **overwrite** | **verbose**] | **filename** <filename> | **overwrite** [**apply** | **filename** <filename>]]

Fetches a text configuration file (list of CLI commands) from a specified URL.

Syntax Description	apply	Applies the file to the running configuration (i.e. executes the commands in it). This option has the following parameters: <ul style="list-style-type: none">• discard: Does not keep downloaded configuration text file after applying it to the system• fail-continue: If applying commands, continues execution even if one of them fails• overwrite: If saving the file and the filename already exists, replaces the old file• verbose: Displays all commands being executed and their output instead of just those that get errors
	filename	Specifies filename for saving downloaded text file.
	overwrite	Downloads the file and saves it using the same name it had on the server. This option has the following parameters: <ul style="list-style-type: none">• apply: Applies the downloaded configuration to the running system• filename: Specifies filename for saving downloaded text file
Default	N/A	
Configuration Mode	Config	
History	3.2.1000	First version
	3.2.3000	Updated command
Role	admin	
Example	switch (config) # configuration fetch text scp://username[:password]@hostname/path/filename	
Related Commands	N/A	
Notes		

configuration text file

configuration text file <filename> {**apply** [**fail-continue**] [**verbose**] | **delete** | **rename** <filename> | **upload** <URL>}

Performs operations on text-based configuration files.

Syntax Description	filename <file>	Specifies the filename.
	apply	Applies the configuration on the system.
	fail-continue	Continues execution of the commands even if some commands fail.
	verbose	Displays all commands being executed and their output, instead of just those that get errors.
	delete	Deletes the file.
	rename <filename>	Renames the file.
	upload <URL>	Supported types are HTTP, HTTPS, FTP, TFTP, SCP and SFTP. For example: scp://username[:password]@hostname/path/filename.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # configuration text file my-config-file delete switch (config) #</pre>	
Related Commands	show configuration files	
Notes		

configuration text generate

configuration text generate {active {running | saved} | file <filename> } {save <filename> | upload <URL>}

Generates a new text-based configuration file from this system's configuration.

Syntax Description	active	Generates from currently active configuration.
	running	Uses running configuration.
	saved	Uses saved configuration.
	file <filename>	Generates from inactive saved configuration.
	save	Saves new file to local persistent storage.
	upload <URL>	Supported types are HTTP, HTTPS, FTP, TFTP, SCP and SFTP. For example: scp://username[:password]@hostname/path/filename.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # configuration text generate file initial.prev save example switch (config) # show configuration files initial (active) initial.prev initial.bak Active configuration: initial Unsaved changes: yes switch (config) #</pre>	
Related Commands	show configuration files	
Notes		

configuration upload

configuration upload {active | <name>} <URL or scp or sftp://username:password@hostname[:port]/path/filename>

Uploads a configuration file to a remote host.

Syntax Description	active	Upload the active configuration file.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # configuration upload active scp://root:password@ 192.168.10.125/tmp/conf1 switch (config) #</pre>	
Related Commands	N/A	
Notes	No configuration file may have the name “active”.	

configuration write

configuration write [local | to <filename> [no-switch]]

Saves the running configuration to the active configuration file.

Syntax Description	local	Saves the running configuration locally (same as “write memory local”)
	to <filename>	Saves the running configuration to a new file under a different name and makes it the active file
	no-switch	Saves the running configuration to this file but keep the current one active
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # configuration write switch (config) #	
Related Commands	write	
Notes		

write

write {memory [local] | terminal}

Saves or displays the running configuration.

Syntax Description	memory	Saves running configuration to the active configuration file. It is the same as “configuration write”.
	local	Saves the running configuration only on the local node. It is the same as “configuration write local”.
	terminal	Displays commands to recreate current running configuration. It is the same as “show running-config”.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	

Example

```

switch (config) # write terminal
##
## Running database "initial"
## Generated at 20114/05/27 10:05:16 +0000
## Hostname: switch
##
##
## Network interface configuration
##
interface mgmt0 comment ""
interface mgmt0 create
interface mgmt0 dhcp
interface mgmt0 display
interface mgmt0 duplex auto
interface mgmt0 mtu 1500
no interface mgmt0 shutdown
interface mgmt0 speed auto
no interface mgmt0 zeroconf
##
## Local user account configuration
##
username a** capability admin
no username a** disable
username a** disable password
.....
switch (config) #

```

Related Commands show running-config
configuration write

Notes

show configuration

show configuration [audit | files [<filename>] | running | text files]

Displays a list of CLI commands that will bring the state of a fresh system up to match the current persistent state of this system.

Syntax Description	audit	Displays settings for configuration change auditing.
	files [<filename>]	Displays a list of configuration files in persistent storage if no filename is specified. If a filename is specified, it displays the commands to recreate the configuration in that file. In the latter case, only non-default commands are shown, as for the normal “show configuration” command.
	running	Displays commands to recreate current running configuration. Same as “show configuration” except that it applies to the currently running configuration, rather than the current persisted configuration.
	text files	Displays names of available text-based configuration files.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
	3.3.5006	Removed “running full” and “full” parameters
Role	monitor/admin	

Example

```
switch (config) # show configuration
##
## Active saved database "newcon"
## Generated at 20114/05/25 10:18:52 +0000
## Hostname: switch-3cc29c
##
##
## Network interface configuration
##
interface mgmt0 comment " "
interface mgmt0 create
interface mgmt0 dhcp
interface mgmt0 display
interface mgmt0 duplex auto
interface mgmt0 mtu 1500
no interface mgmt0 shutdown
interface mgmt0 speed auto
no interface mgmt0 zeroconf
switch (config) #
```

Related Commands

Notes

show running-config

show running-config [expanded | protocol <protocol>]

Displays commands to recreate current running configuration.

Syntax Description	expanded	Displays commands in expanded format without compressing ranges
	protocol	Only displays commands relating to the specified protocol
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
	3.3.4402	Removed “full” parameter
	3.6.2002	Updated Example and added parameters
	3.6.3640	Added support for forwarding mode configuration
Role	monitor/admin	

Example

```
switch (config) # show running-config
##
## Running database "initial"
## Generated at 2016/08/03 17:28:18 +0000
## Hostname: tarantula-9
##
##
## Running-config temporary prefix mode setting
##
no cli default prefix-modes enable

##
## MLAG protocol
##
    protocol mlag

##
## Interface Ethernet configuration
##
    interface mlag-port-channel 1-49
    interface mlag-port-channel 53-56
    interface port-channel 1
    interface ethernet 1/1-1/43 mtu 9216 force
    interface ethernet 1/49-1/56 mtu 9216 force
    interface mlag-port-channel 1-42 mtu 9216 force
    interface mlag-port-channel 49 mtu 9216 force
    interface mlag-port-channel 53 mtu 9216 force
##
## Port forwarding mode configuration
##
    interface ethernet 1/1 switchmode store-and-forward
    interface ethernet 1/2 disable switchmode store-and-forward
    interface port-channel 1 switchmode store-and-forward
    interface port-channel 2 disable switchmode store-and-forward
    fae switchmode verify
...
switch (config) #
```

Related Commands

Notes

4.6 Logging

4.6.1 Monitor

➤ *To print logging events to the terminal:*

Set the modules or events you wish to print to the terminal. For example, run:

```
switch (config) # logging monitor events notice
switch (config) # logging monitor sx-sdk warning
```

These commands print system events in severity “notice” and sx-sdk module notifications in severity “warning” to the screen. For example, in case of interface-down event, the following gets printed to the screen.

```
switch (config) #
Wed Jul 10 11:30:42 2013: Interface IB1/17 changed state to DOWN
Wed Jul 10 11:30:43 2013: Interface IB1/18 changed state to DOWN
switch (config) #
```

To see a list of the events, refer to [Table 26, “Supported Event Notifications and MIB Mapping,”](#) on page 301.

4.6.2 Remote Logging

➤ *To configure remote syslog to send syslog messages to a remote syslog server:*

Step 1. Enter Config mode. Run:

```
switch >
switch > enable
switch # configure terminal
```

Step 2. Set remote syslog server. Run

```
switch (config) # logging <IP address/hostname>
```

Step 3. (Optional) Set the destination port of the remote host. Run:

```
switch (config) # logging <IP address/hostname> port <port>
```

Step 4. Set the minimum severity of the log level to info. Run:

```
switch (config) # logging <IP address/hostname> trap info
```

Step 5. Override the log levels on a per-class basis. Run:

```
switch (config) # logging <IP address/hostname> trap override class <class name> priority <level>
```

4.6.3 Commands

logging port

logging <syslog IPv4 address/hostname> **port** <destination-port>
no logging <syslog IPv4 address/hostname> **port**

Configures remote server destination port for log messages.
The no form of the command resets the remote log port to its default value.

Syntax Description	destination-port	Range: 1-65535
	Hostname	Max 64 characters
Default	514 (UDP)	
Configuration Mode	Config	
History	3.6.2002	
Role	admin	
Example	switch (config) # logging 10.0.0.1 port 105	
Related Commands	logging <syslog IPv4 address/hostname> trap	
Notes		

logging trap

```
logging <syslog IPv4 address/hostname> [trap {<log-level> | override class  
<class> priority <log-level>}]  
no logging <syslog IPv4 address/hostname> [trap {<log-level> | override class  
<class> priority <log-level>}]
```

Enables (by setting the IPv4 address/hostname) sending logging messages, with ability to filter the logging messages according to their classes. The no form of the command stops sending messages to the remote syslog server.

Syntax Description	syslog IPv4 address/ hostname	IPv4 address/hostname of the remote syslog server. Hostname is limited to 64 characters
	log-level	<ul style="list-style-type: none"> • alert - alert notification, action must be taken immediately • crit - critical condition • debug - debug level messages • emerg - system is unusable (emergency) • err - error condition • info - informational condition • none - disables the logging locally and remotely • notice - normal, but significant condition • warning - warning condition
	class	<p>Sets or removes a per-class override on the logging level. All classes which do not have an override set will use the global logging level set with “logging local <log level>”. Classes that do have an override will do as the override specifies. If “none” is specified for the log level, MLNX-OS will not log anything from this class.</p> <p>Classes available:</p> <ul style="list-style-type: none"> • iss-modules - protocol stack • mgmt-back - system management back-end • mgmt-core - system management core • mgmt-front - system management front-end • mlx-daemons - management daemons • sx-sdk - switch SDK
	log-level	<ul style="list-style-type: none"> • alert - alert notification, action must be taken immediately • crit - critical condition • debug - debug level messages • emerg - system is unusable (emergency) • err - error condition • info - informational condition • none - disables the logging locally and remotely • notice - normal, but significant condition • warning - warning condition
Default	Remote logging is disabled	
Configuration Mode	Config	
History	3.1.0000	

Role	admin
Example	<pre>switch (config) # logging local info switch (config) # show logging Local logging level: info Default remote logging level: notice No remote syslog servers configured. Allow receiving of messages from remote hosts: no Number of archived log files to keep: 10 Log rotation size threshold: 5.000% of partition (43 megabytes) Log format: standard Subsecond timestamp field: disabled Levels at which messages are logged: CLI commands: notice Audit messages: notice switch (config) #</pre>
Related Commands	<pre>show logging logging local override logging <syslog IPv4 address/hostname> port</pre>
Notes	

logging debug-files

logging debug-files {delete {current | oldest} | rotation {criteria | force | max-num} | update {<number> | current} | upload <log-file> <upload URL>}

Configures settings for debug log files.

Syntax Description	delete {current oldest}	Deletes certain debug-log files. <ul style="list-style-type: none">• current: Deletes the current active debug-log file• oldest: Deletes some of the oldest debug-log files
	rotation {criteria {frequency {daily weekly monthly} size <size> size-pct <percentage>} force max-num}	Configures automatic rotation of debug-logging files. <ul style="list-style-type: none">• criteria: Sets how the system decides when to rotate debug files.<ul style="list-style-type: none">• frequency: Rotate log files on a fixed time-based schedule• size: Rotate log files when they pass a size threshold in megabytes• size-pct: Rotate logs when they surpass a specified percentage of disk• forces: Forces an immediate rotation of the log files• max-num: Specifies the maximum number of old log files to keep
	update {<number> current}	Uploads a local debug-log file to a remote host. <ul style="list-style-type: none">• current: Uploads log file “messages” to a remote host• number: Uploads compressed log file “debug.<number>.gz” to a remote host. Range is 1-10
	upload	Uploads debug log file to a remote host
	log-file	Possible values: 1-7, or current
	upload URL	HTTP, HTTPS, FTP, TFTP, SCP and SFTP are supported (e.g.: scp://username[:password]@host-name/path/filename)
Default	N/A	
Configuration Mode	Config	
History	3.3.4150	
Role	admin	

Example switch (config) # logging debug-files delete current
 switch (config) #

Related Commands

Notes

logging local override

logging local override [class <class> priority <log-level>]

no logging local override [class <class> priority <log-level>]

Enables class-specific overrides to the local log level.

The no form of the command disables all class-specific overrides to the local log level without deleting them from the configuration, but disables them so that the logging level for all classes is determined solely by the global setting.

Syntax	Description
override	Enables class-specific overrides to the local log level.
class	Sets or removes a per-class override on the logging level. All classes which do not have an override set will use the global logging level set with “logging local <log level>”. Classes that do have an override will do as the override specifies. If “none” is specified for the log level, MLNX-OS will not log anything from this class. Classes available: <ul style="list-style-type: none">• debug-module - debug module functionality• protocol-stack - protocol stack modules functionality• mgmt-back - system management back-end components• mgmt-core - system management core• mgmt-front - system management front-end components• mlx-daemons - management daemons• sx-sdk - switch SDK
log-level	<ul style="list-style-type: none">• alert - alert notification, action must be taken immediately• crit - critical condition• debug - debug level messages• emerg - system is unusable (emergency)• err - error condition• info - informational condition• none - disables the logging locally and remotely• notice - normal, but significant condition• warning - warning condition
Default	Override is disabled.
Configuration Mode	Config

History	3.1.0000	
	3.3.4150	Added debug-module class Changed iss-modules with protocol-stack
Role	admin	
Example	<pre> switch (config) # logging local override class mgmt-front priority warning switch (config) # show logging Local logging level: info Override for class mgmt-front: warning Default remote logging level: notice No remote syslog servers configured. Allow receiving of messages from remote hosts: no Number of archived log files to keep: 10 Log rotation size threshold: 5.000% of partition (43 megabytes) Log format: standard Subsecond timestamp field: disabled Levels at which messages are logged: CLI commands: notice Audit messages: notice switch (config) # </pre>	
Related Commands	show logging logging local	
Notes		

logging fields

logging fields seconds {enable | fractional-digits <f-digit> | whole-digits <w-digit>}

no logging fields seconds {enable | fractional-digits <f-digit> | whole-digits <w-digit>}

Specifies whether to include an additional field in each log message that shows the number of seconds since the Epoch or not.

The no form of the command disallows including an additional field in each log message that shows the number of seconds since the Epoch.

Syntax Description	enable	Specifies whether to include an additional field in each log message that shows the number of seconds since the Epoch or not.
	f-digit	The fractional-digits parameter controls the number of digits to the right of the decimal point. Truncation is done from the right. Possible values are: 1, 2, 3, or 6.
	w-digit	The whole-digits parameter controls the number of digits to the left of the decimal point. Truncation is done from the left. Except for the year, all of these digits are redundant with syslog's own date and time. Possible values: 1, 6, or all.
Default	disabled	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # logging fields seconds enable switch (config) # logging fields seconds whole-digits 1 switch (config) # show logging Local logging level: info Override for class mgmt-front: warning Default remote logging level: notice No remote syslog servers configured. Allow receiving of messages from remote hosts: no Number of archived log files to keep: 10 Log rotation size threshold: 5.000% of partition (43 megabytes) Log format: standard Subsecond timestamp field: enabled Subsecond timestamp precision: 1 whole digit; 3 fractional digits Levels at which messages are logged: CLI commands: notice Audit messages: notice switch (config) #</pre>	

Related Commands show logging

Notes This is independent of the standard syslog date and time at the beginning of each message in the format of “July 15 18:00:00”. Aside from indicating the year at full precision, its main purpose is to provide subsecond precision.

logging files delete

logging files delete {current | oldest [<number of files>]}

Deletes the current or oldest log files.

Syntax Description	current	Deletes current log file.
	oldest	Deletes oldest log file.
	number of files	Sets the number of files to be deleted.
Default	CLI commands and audit message are set to notice logging level	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # logging files delete current switch (config) #	
Related Commands	show logging show log files	
Notes		

logging files rotation

logging files rotation {criteria { frequency <freq> | size <size-mb>| size-pct <size-percentage>} | force | max-number <number-of-files>}

Sets the rotation criteria of the logging files.

Syntax Description	freq	Sets rotation criteria according to time. Possible options are: <ul style="list-style-type: none"> • Daily • Weekly • Monthly
	size-mb	Sets rotation criteria according to size in mega bytes. The range is 1-9999.
	size-percentage	Sets rotation criteria according to size in percentage of the partition where the logging files are kept in. The percentage given is truncated to three decimal points (thousandths of a percent).
	force	Forces an immediate rotation of the log files. This does not affect the schedule of auto-rotation if it was done based on time: the next automatic rotation will still occur at the same time for which it was previously scheduled. Naturally, if the auto-rotation was based on size, this will delay it somewhat as it reduces the size of the active log file to zero.
	number-of-files	The number of log files will be kept. If the number of log files ever exceeds this number (either at rotation time, or when this setting is lowered), the system will delete as many files as necessary to bring it down to this number, starting with the oldest.
Default	10 files are kept by default with rotation criteria of 5% of the log partition size	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	

Example

```
switch (config) # logging files rotation criteria size-pct 6
switch (config) # show logging
Local logging level: info
  Override for class mgmt-front: warning
Default remote logging level: notice
No remote syslog servers configured.
Allow receiving of messages from remote hosts: no
Number of archived log files to keep: 10
Log rotation size threshold: 6.000% of partition (51.60 megabytes)
Log format: standard
Subsecond timestamp field: enabled
Subsecond timestamp precision: 1 whole digit; 3 fractional digits
Levels at which messages are logged:
  CLI commands: info
  Audit messages: notice
switch (config)
```

Related Commands

```
show logging
show log files
```

Notes

logging files upload

logging files upload {current | <file-number>} <url>

Uploads a log file to a remote host.

Syntax Description	current	The current log file. The current log file will have the name “messages” if you do not specify a new name for it in the upload URL.
	file-number	An archived log file. The archived log file will have the name “messages<n>.gz” (while “n” is the file number) if you do not specify a new name for it in the upload URL. The file will be compressed with gzip.
	url	Uploads URL path. FTP, TFTP, SCP, and SFTP are supported. For example: scp://username[:password]@hostname/path/filename.
Default	10 files are kept by default with rotation criteria of 5% of the log partition size	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # logging files upload 1 scp://admin@scpserver	
Related Commands	show logging show log files	
Notes		

logging format

logging format {standard | welf [fw-name <hostname>]}
no logging format {standard | welf [fw-name <hostname>]}

Sets the format of the logging messages.
The no form of the command resets the format to its default.

Syntax Description	standard	Standard format.
	welf	WebTrends Enhanced Log file (WELF) format.
	hostname	Specifies the firewall hostname that should be associated with each message logged in WELF format. If no firewall name is set, the hostname is used by default. hostname is limited to 64 characters.
Default	standard	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # logging format standard switch (config) # show logging Local logging level: info Default remote logging level: notice No remote syslog servers configured. Allow receiving of messages from remote hosts: yes Number of archived log files to keep: 10 Log rotation size threshold: 5.000% of partition (43 megabytes) Log format: standard Subsecond timestamp field: disabled Levels at which messages are logged: CLI commands: notice Audit messages: notice switch (config) #</pre>	
Related Commands	show logging	
Notes		

logging level

logging level {cli commands <log-level> | audit mgmt <log-level>}

Sets the severity level at which CLI commands or the management audit message that the user executes are logged. This includes auditing of both configuration changes and actions.

Syntax Description	cli commands	Sets the severity level at which CLI commands which the user executes are logged.
	audit mgmt	Sets the severity level at which all network management audit messages are logged.
	log-level	<ul style="list-style-type: none"> • alert - alert notification, action must be taken immediately • crit - critical condition • debug - debug level messages • emerg - system is unusable (emergency) • err - error condition • info - informational condition • none - disables the logging locally and remotely • notice - normal, but significant condition • warning - warning condition
Default	CLI commands and audit message are set to notice logging level	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # logging level cli commands info switch (config) # show logging Local logging level: info Override for class mgmt-front: warning Default remote logging level: notice No remote syslog servers configured. Allow receiving of messages from remote hosts: no Number of archived log files to keep: 10 Log rotation size threshold: 5.000% of partition (43 megabytes) Log format: standard Subsecond timestamp field: enabled Subsecond timestamp precision: 1 whole digit; 3 fractional digits Levels at which messages are logged: CLI commands: info Audit messages: notice switch (config) #</pre>	

Related Commands show logging

Notes

logging monitor

logging monitor <facility> <priority-level>
no logging monitor <facility> <priority-level>

Sets monitor log facility and level to print to the terminal.
 The no form of the command disables printing logs of facilities to the terminal.

Syntax Description	facility <ul style="list-style-type: none"> • mgmt-front • mgmt-back • mgmt-core • events • sx-sdk • mlnx-daemons • iss-modules
	priority-level <ul style="list-style-type: none"> • none • emerg • alert • crit • err • warning • notice • info • debug
Default	no logging monitor
Configuration Mode	Config
History	3.3.4000
Role	admin
Example	<pre>switch (config) # logging monitor events notice switch (config) #</pre>
Related Commands	
Notes	

logging receive

logging receive
no logging receive

Enables receiving logging messages from a remote host.
The no form of the command disables the option of receiving logging messages from a remote host.

Syntax Description	N/A
Default	Receiving logging is disabled
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # logging receive switch (config) # show logging Local logging level: info Default remote logging level: notice No remote syslog servers configured. Allow receiving of messages from remote hosts: yes Number of archived log files to keep: 10 Log rotation size threshold: 5.000% of partition (43 megabytes) Log format: standard Subsecond timestamp field: disabled Levels at which messages are logged: CLI commands: notice Audit messages: notice switch (config) #</pre>
Related Commands	<pre>show logging logging local logging local override</pre>
Notes	<ul style="list-style-type: none">• This does not log to the console TTY port• In-band management should be enabled in order to open a channel from the host to the CPU• If enabled, only log messages matching or exceeding the minimum severity specified with the “logging local” command will be logged, regardless of what is sent from the remote host

logging trap

logging trap <log-level>
no logging trap

Configures the minimum severity of log messages sent to syslog servers. The no form of the command disables sending event log messages to syslog servers.

Syntax Description	log-level	The minimum severity level for all configured syslog servers: <ul style="list-style-type: none"> • none – disable logging • emerg – emergency: system is unusable • alert – action must be taken immediately • crit – critical conditions • err – error conditions • warning – warning conditions • notice – normal but significant condition • info – informational messages • debug – debug-level messages
Default	Receiving logging is disabled	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # logging trap info switch (config) #</pre>	
Related Commands		
Notes		

show logging

show logging

Displays the logging configurations.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	<pre>switch (config) # show logging Local logging level: info Override for class mgmt-front: warning Default remote logging level: notice No remote syslog servers configured. Allow receiving of messages from remote hosts: no Number of archived log files to keep: 10 Log rotation size threshold: 5.000% of partition (43 megabytes) Log format: standard Subsecond timestamp field: enabled Subsecond timestamp precision: 1 whole digit; 3 fractional digits Levels at which messages are logged: CLI commands: info Audit messages: notice switch (config) #</pre>
Related Commands	<pre>logging fields logging files rotation logging level logging local logging receive logging <syslog IPv4 address/hostname></pre>
Notes	

show log

show log [**continues** | **files** [**<file-number>**]] [[**not**] **matching** **<reg-exp>**]

Displays the log file with optional filter criteria.

Syntax Description	continues	Displays the last few lines of the current log file and then continues to display new lines as they come in until the user hits Ctrl+C, similar to LINUX “tail” utility.
	files	Displays the list of log files.
	<file-number>	Displays an archived log file, where the number may range from 1 up to the number of archived log files available.
	[not] matching <reg-exp>	The file is piped through a LINUX “grep” utility to only include lines either matching, or not matching, the provided regular expression.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.0000	
	3.3.4402	Updated example and added note
Role	admin	

Example

```
M2100-aj [standalone: master] (config) # show log matching "Executing|Action"
Jul 31 16:11:21 M2100-aj cli[26497]: [cli.NOTICE]: user : Executing command: show inter-
faces ib
Jul 31 16:11:23 M2100-aj cli[26502]: [cli.NOTICE]: user : Executing command: enable
Jul 31 16:11:24 M2100-aj cli[26507]: [cli.NOTICE]: user : Executing command: enable
Jul 31 16:11:24 M2100-aj cli[26507]: [cli.NOTICE]: user : Executing command: show inter-
faces ethernet
Jul 31 16:11:27 M2100-aj cli[26507]: [cli.NOTICE]: user : Executing command: show inter-
faces ethernet transceiver
Jul 31 16:11:29 M2100-aj cli[26514]: [cli.NOTICE]: user : Executing command: enable
Jul 31 16:11:29 M2100-aj cli[26514]: [cli.NOTICE]: user : Executing command: show license
Jul 31 16:11:41 M2100-aj cli[26548]: [cli.NOTICE]: user : Executing command: enable
Jul 31 16:11:41 M2100-aj cli[26548]: [cli.NOTICE]: user : Executing command matching: *
show interrupt
Jul 31 16:11:42 M2100-aj cli[26553]: [cli.NOTICE]: user : Executing command: enable
Jul 31 16:11:42 M2100-aj cli[26553]: [cli.NOTICE]: user : Executing command: conf termi-
nal
Jul 31 16:11:42 M2100-aj cli[26553]: [cli.NOTICE]: user : Executing command: show ntp
Jul 31 16:11:43 M2100-aj cli[26560]: [cli.NOTICE]: user : Executing command: enable
Jul 31 16:11:43 M2100-aj cli[26560]: [cli.NOTICE]: user : Executing command: conf termi-
nal
Jul 31 16:11:43 M2100-aj cli[26560]: [cli.NOTICE]: user : Executing command: show ntp
configured
Jul 31 16:11:45 M2100-aj cli[26566]: [cli.NOTICE]: user : Executing command: enable
Jul 31 16:11:45 M2100-aj cli[26566]: [cli.NOTICE]: user : Executing command: conf termi-
nal
Jul 31 16:11:45 M2100-aj cli[26566]: [cli.NOTICE]: user : Executing command: show ntp
keys
Jul 31 16:11:46 M2100-aj cli[26571]: [cli.NOTICE]: user : Executing command: enable
Jul 31 16:11:46 M2100-aj cli[26571]: [cli.NOTICE]: user : Executing command: conf termi-
nal
Jul 31 16:11:46 M2100-aj cli[26571]: [cli.NOTICE]: user : Executing command: show system
secure-mode
Jul 31 16:11:47 M2100-aj cli[26580]: [cli.NOTICE]: user : Executing command: enable
Jul 31 16:11:47 M2100-aj cli[26580]: [cli.NOTICE]: user : Executing command: show ssh
server
Jul 31 16:11:49 M2100-aj cli[26592]: [cli.NOTICE]: user : Executing command: enable
Jul 31 16:11:49 M2100-aj cli[26592]: [cli.NOTICE]: user : Executing command: conf termi-
nal
Jul 31 16:11:49 M2100-aj cli[26592]: [cli.NOTICE]: user : Executing command: show crypto
encrypt-data
Jul 31 16:11:51 M2100-aj cli[26601]: [cli.NOTICE]: user : Executing command: enable
Jul 31 16:11:51 M2100-aj cli[26601]: [cli.NOTICE]: user : Executing command: show mac-
address-table unicast
Jul 31 16:11:52 M2100-aj cli[26606]: [cli.NOTICE]: user : Executing command: enable
```

Related Commands	logging fields logging files rotation logging level logging local logging receive logging <syslog IPv4 address/hostname> show logging
-------------------------	---

Notes	When using a regular expression containing (OR), the expression should be surrounded by quotes (“<expression>”), otherwise it is parsed as filter (PIPE) command.
--------------	---

4.7 Debugging

➤ *To use the debugging logs feature:*

Step 1. Enable debugging. Run:

```
switch (config) # debug ethernet all
```

Step 2. Display the debug level set. Run:

```
switch (config) # show debug ethernet
```

Step 3. Display the logs. Run:

```
switch (config) # show log debug {match|continue}
```


4.7.1 Commands

debug ethernet all

debug ethernet all
no debug ethernet all

Enables debug traces for Ethernet modules.
 The no form of the command disables the debug traces for all Ethernet modules.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.3.4150
Role	admin
Example	switch (config) # debug ethernet all switch (config) #
Related Commands	
Notes	

debug ethernet dcbx

debug ethernet dcbx {all | management | fail-all | control-panel | tlv}

Configures the trace level for DCBX.

The no form of the command disables the configured DCBX debug traces.

Syntax Description	all	Enables all traces.
	management	Management messages.
	fail-all	All failure traces.
	control-panel	Control plane traces.
	tlv	TLV related trace configuration.
Default	N/A	
Configuration Mode	Config	
History	3.3.4150	
Role	admin	
Example	switch (config) # debug ethernet dcbx all switch (config) #	
Related Commands		
Notes		

debug ethernet ip igmp-snooping

debug ethernet ip igmp-snooping {all | forward-db-messages | group-info | init-shut | packet-dump | query | source-info | system-resources-management | timer | vlan-info}

no debug ethernet ip igmp-snooping {all | forward-db-messages | group-info | init-shut | packet-dump | query | source-info | system-resources-management | timer | vlan-info}

Configures the trace level for IGMP snooping.

The no form of the command disables tracking a specified level.

Syntax Description	all	Enable track traces
	forward-db-messages	Forwarding database messages
	group-info	Group information messages
	init-shut	Init and shutdown messages
	packet-dump	Packet dump messages
	query	Query related messages
	source-info	Source information messages
	system-resources-management	System resources management messages
	timer	Timer messages
	vlan-info	VLAN information messages
Default	N/A	
Configuration Mode	Config	
History	3.3.4150	
Role	admin	
Example	<pre>switch (config) # debug ethernet ip igmp-snooping all switch (config) #</pre>	
Related Commands		
Notes		

debug ethernet ip interface

```
debug ethernet ip interface {all | arp-packet-dump | buffer | enet-packet-dump |  
error | fail-all | filter | trace-error | trace-event}  
no debug ethernet ip interface {all | arp-packet-dump | buffer | enet-packet-  
dump | error | fail-all | filter | trace-error | trace-event}
```

Configures the trace level for interface.

The no form of the command disables tracking a specified level.

Syntax Description	all	Enable track traces
	arp-packet-dump	ARP packet dump trace
	buffer	Buffer trace
	enet-packet-dump	ENET packet dump trace
	error	Trace error messages
	fail-all	All failures including Packet Validation Trace
	filter	Lower layer traces
	trace-error	Trace error messages
	trace-event	Trace event messages
Default	N/A	
Configuration Mode	Config	
History	3.3.4150	
Role	admin	
Example	switch (config) # debug ethernet ip interface all switch (config) #	
Related Commands		
Notes		

debug ethernet lacp

debug ethernet lacp {all | all-resource | data-path | fail-all | init-shut | management | memory | packet}
no debug ethernet lacp {all | all-resources | data-path | fail-all | init-shut | management | memory | packet}

Configures the trace level for LACP.
 The no form of the command disables the configured LACP debug traces.

Syntax Description	all	Enables all traces.
	all-resource	BPDU related messages.
	data-path	Init and shutdown traces.
	fail-all	Management messages.
	init-shut	Memory related messages.
	management memory	IP packet dump trace.
	memory	All failure traces.
	packet	OS resource trace.
Default	N/A	
Configuration Mode	Config	
History	3.3.4150	
Role	admin	
Example	<pre>switch (config) # debug ethernet lacp all switch (config) #</pre>	
Related Commands		
Notes		

debug ethernet lldp

debug ethernet lldp {all | control-panel | critical-event | data-path | fail-all | init-shut | management | memory | neigh-add | neigh-age-out | neigh-del | neigh-drop | neigh-updt | tlv}

no debug ethernet lldp {all | control-panel | critical-event | data-path | fail-all | init-shut | management | memory | neigh-add | neigh-age-out | neigh-del | neigh-drop | neigh-updt | tlv}

Configures the trace level for LLDP.

The no form of the command disables the configured LLDP debug traces.

Syntax Description	all	Enables all traces.
	control-panel	Control plane traces.
	critical-event	Critical traces.
	data-path	IP packet dump trace.
	fail-all	All failure traces.
	init-shut	Init and shutdown traces.
	management	Management messages.
	memory	Memory related messages.
	neigh-add	Neighbor add traces.
	neigh-age-out	Neighbor ageout traces.
	neigh-del	Neighbor delete traces.
	neigh-drop	Neighbor drop traces.
	neigh-updt	Neighbor update traces.
	tlv	TLV related trace configuration
Default	N/A	
Configuration Mode	Config	
History	3.3.4150	
Role	admin	
Example	<pre>switch (config) # debug ethernet lldp all switch (config) #</pre>	

Related Commands

Notes

debug ethernet port

debug ethernet port all

Configures the trace level for port.
The no form of the command disables the configured port debug traces.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.3.4150
Role	admin
Example	switch (config) # debug ethernet port all switch (config) #
Related Commands	
Notes	

debug ethernet qos

debug ethernet qos {all | all-resource | control-panel | fail-all | filters | init-shut | management | memory | packet}

no debug ethernet qos {all | all-resource | control-panel | fail-all | filters | init-shut | management | memory | packet}

Configures the trace level for QoS.

The no form of the command disables the configured QoS debug traces.

Syntax Description	all	Enables all traces.
	all-resource	OS resource traces.
	control-panel	Control plane traces.
	fail-all	All failure traces.
	filters	Lower layer traces.
	init-shut	Init and shutdown traces.
	management	Management messages.
	memory	Memory related messages.
	packet	BPDU related messages.
Default	N/A	
Configuration Mode	Config	
History	3.3.4150	
Role	admin	
Example	<pre>switch (config) # debug ethernet port all switch (config) #</pre>	
Related Commands		
Notes		

debug ethernet spanning-tree

debug ethernet spanning-tree {all | error | event | filters | init-shut | management | memory | packet | port-info-state-machine | port-receive-state-machine | port-role-selection-state-machine | port-transit-state-machine | port-transmit-state-machine | protocol-migration-state-machine | timers}

no debug ethernet spanning-tree {all | error | event | filters | init-shut | management | memory | packet | port-info-state-machine | port-receive-state-machine | port-role-selection-state-machine | port-transit-state-machine | port-transmit-state-machine | protocol-migration-state-machine | timers}

Configures the trace level for spanning-tree.

The no form of the command disables the configured spanning-tree debug traces.

Syntax Description	all	Enables all traces.
	error	Error messages trace.
	event	Events related messages.
	filters	Lower later traces.
	init-shut	Init and shutdown traces.
	management	Management messages.
	memory	Memory related messages.
	packet	BPDU related messages.
	port-info-state-machine	Port information messages.
	port-receive-state-machine	Port received messages.
	port-role-selection-state-machine	Port role selection messages.
	port-transit-state-machine	Port transition messages.
	port-transmit-state-machine	Port transmission messages.
protocol-migration-state-machine	Protocol migration messages.	
timers	Timer modules message.	
Default	N/A	
Configuration Mode	Config	

History	3.3.4150
Role	admin
Example	switch (config) # debug ethernet spanning-tree all switch (config) #
Related Commands	
Notes	

debug ethernet vlan

debug ethernet vlan {all | fwd | priority | filters}
no debug ethernet vlan {all | fwd | priority | filters}

Configures the trace level for VLAN.
The no form of the command disables the configured VLAN debug traces.

Syntax Description	all	Enables all traces
	fwd	Forward.
	priority	Priority.
	filters	Lower layer traces.
Default	N/A	
Configuration Mode	Config	
History	3.3.4150	
Role	admin	
Example	switch (config) # debug ethernet vlan all switch (config) #	
Related Commands		
Notes		

show debug ethernet

show debug ethernet {dcbx | ip {arp | dhcp-relay | igmp-snooping | interface | ospf} | lacp | lldp | port | qos | spanning-tree | vlan}

Displays debug level configuration on a specific switch.

Syntax Description	dcbx	Displays the trace level for spanning tree.
	ip	Displays debug trace level for ethernet routing module. <ul style="list-style-type: none"> • arp • dhcp-relay • igmp-snooping • interface • ospf
	lacp	Displays the trace level for LACP.
	lldp	Displays the trace level for LLDP.
	port	Displays the trace level for port.
	qos	Displays the trace level for QoS.
	spanning-tree	Displays the trace level for spanning tree.
	vlan	Displays the trace level for VLAN.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.4150	
Role	admin	
Example	<pre>switch (config) # show debug ethernet dcbx dcbx protocol : management is ON fail-all is ON control-panel is ON tlv is ON switch (config) #</pre>	
Related Commands		
Notes		

show log debug

show log debug [continuous | files | matching | not]

Displays current event debug-log file in a scrollable pager.

Syntax Description	continuous	Displays new event log messages as they arrive.
	files	Displays archived debug log files.
	matching	Displays event debug logs that match a given regular expression.
	not	Displays event debug logs that do not meet certain criteria.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.4150	
Role	admin	
Example	<pre>switch (config) # show log debug Jun 15 16:20:47 switch-627e4c last message repeated 7 times Jun 15 16:20:47 switch-627e4c issd[6509]: TID 1274844336: [issd.DEBUG]: NPAPI: >>QoSHwQueueDelete i4IfIndex[137] Jun 15 16:20:47 switch-627e4c last message repeated 7 times Jun 15 16:20:47 switch-627e4c issd[6509]: TID 1274844336: [issd.DEBUG]: NPAPI: >>QoSHwQueueDelete i4IfIndex[141] Jun 15 16:20:47 switch-627e4c last message repeated 7 times Jun 15 16:20:48 switch-627e4c issd[6509]: TID 1274844336: [issd.DEBUG]: NPAPI: ==FshwSetSpeed sx_api_port_speed_admin_set = 0 Jun 15 16:20:48 switch-627e4c issd[6509]: TID 1274844336: [issd.DEBUG]: NPAPI: ==FshwGetSpeed sx_api_port_speed_oper_get = 0 Jun 15 16:20:49 switch-627e4c issd[6509]: TID 1274844336: [issd.DEBUG]: NPAPI: >>CfaGddConfigPort NS u4IfIndex[89], ulConfigOption[6] Jun 15 16:20:49 switch-627e4c issd[6509]: TID 1274844336: [issd.DEBUG]: NPAPI: >>CfaGddConfigPort NS u4IfIndex[33], ulConfigOption[6] Jun 15 16:20:49 switch-627e4c issd[6509]: TID 1274844336: [issd.DEBUG]: NPAPI: >>CfaGddConfigPort NS u4IfIndex[73], ulConfigOption[6] Jun 15 16:20:49 switch-627e4c issd[6509]: TID 1274844336: [issd.DEBUG]: NPAPI: >>CfaGddConfigPort NS u4IfIndex[121], ulConfigOption[6] Jun 15 16:20:49 switch-627e4c issd[6509]: TID 1274844336: [issd.DEBUG]: NPAPI: >>CfaGddConfigPort NS u4IfIndex[133], ulConfigOption[6] Jun 15 16:20:49 switch-627e4c issd[6509]: TID 1274844336: [issd.DEBUG]: NPAPI: >>CfaGddConfigPort NS u4IfIndex[13], ulConfigOption[6] Jun 15 16:20:49 switch-627e4c issd[6509]: TID 1274844336: [issd.DEBUG]: NPAPI: >>CfaGddConfigPort NS u4IfIndex[81], ulConfigOption[6] Jun 15 16:20:49 switch-627e4c issd[6509]: TID 1274844336: [issd.DEBUG]: NPAPI: >>CfaGddConfigPort NS u4IfIndex[117], ulConfigOption[6] Jun 15 16:20:49 switch-627e4c issd[6509]: TID 1274844336: [issd.DEBUG]: NPAPI: >>CfaGddConfigPort NS u4IfIndex[65], ulConfigOption[6] . . . switch (config) #</pre>	
Related Commands		
Notes		

4.8 Link Diagnostic Per Port

4.8.1 General

When debugging a system, it is important to be able to quickly identify the root of a problem. The Diagnostic commands enables an insight into the physical layer components where the user is able to see information such as a cable status (plugged/unplugged) or if Auto-Negotiation has failed.

4.8.2 List of Possible Output Messages

```
No issue was observed
Closed by command
Negotiation failure
Link training failure
Speed logical mismatch
Remote faults detected
Cable speed not enabled
Bad signal integrity
Other issues
Speed degradation
Information unavailable
Cable is unplugged
Unsupported cable
I2C bus is stuck
Module memory invalid
Module overheated
Module short circuit
Power budget exceeded
Management forced down
```

4.8.3 Commands

show interfaces ethernet link-diagnostics

show interfaces ethernet [<interface>] link-diagnostics

Displays a specific ethernet module/port or all ethernet ports.

Syntax Description	N/A	
Default	N/A	
Configuration Mode	Config	
History	3.6.4006	
History	3.6.4110	Updated command input.
Role	admin	
Example	switch (config) #show interfaces ethernet link-diagnostics	

	Interface	Code Status

	Eth1/1	1024 Cable is unplugged
	Eth1/2	1024 Cable is unplugged
	Eth1/3	1024 Cable is unplugged
	Eth1/4	1024 Cable is unplugged
	Eth1/5	1024 Cable is unplugged
	Eth1/6	1024 Cable is unplugged
	Eth1/7	1024 Cable is unplugged
	Eth1/8	1024 Cable is unplugged
	Eth1/9	1024 Cable is unplugged
	Eth1/10	1024 Cable is unplugged
	Eth1/11	1024 Cable is unplugged
	Eth1/12	1024 Cable is unplugged
	Eth1/13	1024 Cable is unplugged
	Eth1/14	1024 Cable is unplugged
	Eth1/15	1024 Cable is unplugged
	Eth1/16	1024 Cable is unplugged
	Eth1/17	1024 Cable is unplugged
	Eth1/18	1024 Cable is unplugged
	Eth1/19	1024 Cable is unplugged
	Eth1/20	1024 Cable is unplugged
	Eth1/21	1024 Cable is unplugged
	Eth1/22	1024 Cable is unplugged
	Eth1/23	1024 Cable is unplugged
	Eth1/24	1024 Cable is unplugged
	Eth1/25	1024 Cable is unplugged
	Eth1/26	1024 Cable is unplugged
	Eth1/27	1024 Cable is unplugged
	Eth1/28	1024 Cable is unplugged
	Eth1/29	1024 Cable is unplugged
	Eth1/30	1024 Cable is unplugged
	Eth1/31	0 No issue was observed
	Eth1/32	0 No issue was observed

Related Commands

Notes

4.9 Signal Degradation Monitoring

4.9.1 General

A system can monitor the Bit Error Rate (BER) in order to ensure a quality of the link. As long as BER observed by the MAC layer is low enough, the rate of packet loss is low enough to allow successful operation of the applications running on top of the network.

The system continuously monitors the link BER and compares it to BER limits, when limits are crossed the system can generate an event indicating that link quality is degraded to the network operator that can take preemptive actions or even disable the low quality link.

When Forward Error Correction (FEC) is enabled a network operator can choose to monitor an amount of corrected errors by using the pre-FEC mode, or the amount of errors which the FEC failed to correct (uncorrectable errors) by using the post-FEC mode, when FEC is used then every error detected by the PHY will be monitored.

4.9.2 Effective-BER Monitoring

Effective-BER is the BER that the MAC/Application layer observe. Errors monitored by the Effective-BER may directly result in a packet drop. For links with no error correction, the Effective BER is the BER received by port, and it is monitored based on the received Phy symbols. For links with FEC, the Effective BER represents the rate of errors that the FEC decoder did not manage to correct and were passed to the MAC layer. The Effective BER for FEC links is monitored using the FEC decoder uncorrectable codewords data.

When link is disabled the system will keep it in shutdown state until either the port is explicitly enabled or the port's module is reinserted.

Commands

interface ethernet signal-degrade

[no] interface ethernet <slot | port> signal-degrade

The command enables signal degradation operation per interface.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config
History	3.6.4110
Role	admin
Example	switch (config) #interface ethernet 1 signal-degrade
Related Commands	
Notes	

show interfaces ethernet signal-degrade

show interfaces ethernet <slot | port> signal-degrade

Displays signal degradation information per port.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Config
---------------------------	--------

History	3.6.4110
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config) #show interfaces ethernet 1/3 signal-degrade ----- Interface Admin state Monitoring Action ----- Eth1/3 Enabled Disabled Shutdown</pre>
----------------	---

Related Commands	
-------------------------	--

Notes	
--------------	--

4.10 Event Notifications

MLNX-OS features a variety of supported events. Events are printed in the system log file, and, optionally, can be sent to the system administrator via email, SNMP trap or directly prompted to the terminal.

4.10.1 Supported Events

Table 26 presents the supported events and maps them to their relevant MIB OID.

Table 26 - Supported Event Notifications and MIB Mapping

Event Name	Event Description	MIB OID	Comments
asic-chip-down	ASIC (chip) down	Mellanox-EFM-MIB: asicChipDown	Not supported
cpu-util-high	CPU utilization has risen too high	Mellanox-EFM-MIB: cpuUtilHigh	N/A
disk-space-low	File system free space has fallen too low	Mellanox-EFM-MIB: diskSpaceLow	N/A
health-module-status	Health module status changed	Mellanox-EFM-MIB: systemHealthStatus	N/A
insufficient-fans	Insufficient amount of fans in system	Mellanox-EFM-MIB: insufficientFans	N/A
insufficient-fans-recover	Insufficient amount of fans in system recovered	Mellanox-EFM-MIB: insufficientFansRecover	N/A
insufficient-power	Insufficient power supply	Mellanox-EFM-MIB: insufficientPower	N/A
interface-down	An interface's link state has changed to DOWN	RFC1213: linkdown (SNMPv1)	Supported for Ethernet, and management interfaces for 1U and blade systems
interface-up	An interface's link state has changed to UP	RFC1213: linkup (SNMPv1)	Supported for Ethernet, and management interfaces for 1U and blade systems
internal-bus-error	Internal bus (I ² C) error	Mellanox-EFM-MIB: internalBusError	N/A
liveness-failure	A process in the system is detected as hung	Not implemented	N/A
low-power	Low power supply	Mellanox-EFM-MIB: lowPower	N/A

Table 26 - Supported Event Notifications and MIB Mapping

Event Name	Event Description	MIB OID	Comments
low-power-recover	Low power supply recover	Mellanox-EFM-MIB: lowPowerRecover	N/A
new_root	Local bridge became a root bridge	Bridge-MIB: newRoot	Supported for Ethernet
paging-high	Paging activity has risen too high	N/A	Not supported
power-redundancy-mismatch	Power redundancy mismatch	Mellanox-EFM-MIB: powerRedundancyMismatch	Supported only for director switch systems
process-crash	A process in the system has crashed	Mellanox-EFM-MIB: procCrash	N/A
process-exit	A process in the system unexpectedly exited	Mellanox-EFM-MIB: procUnexpectedExit	N/A
snmp-authtrap	An SNMPv3 request has failed authentication	Not implemented	N/A
topology_change	Topology change triggered by a local bridge	Bridge-MIB: topologyChange	Supported for Ethernet
unexpected-shutdown	Unexpected system shutdown	Mellanox-EFM-MIB: unexpectedShutdown	N/A
To send, use the CLI command <code>snmp-server notify send-test</code>	Send a testing event	testTrap	N/A
N/A	Reset occurred due to over-heating of ASIC	Mellanox-EFM-MIB: asicOverTempReset	Not supported
temperature-too-high	Temperature is too high	Mellanox-EFM-MIB: asicOverTemp	N/A

4.10.2 Terminal Notifications

➤ **To print events to the terminal:**

Set the events you wish to print to the terminal. Run:

```
switch (config) # logging monitor events notice
```

This command prints system events in the severity “notice” to the screen. For example, in case of interface-down event, the following gets printed to the screen.

```
switch (config) #
Wed Jul 10 11:30:42 2013: Interface IB1/17 changed state to DOWN
Wed Jul 10 11:30:43 2013: Interface IB1/18 changed state to DOWN
switch (config) #
```

4.10.3 Email Notifications

➤ *To configure MLNX-OS to send you emails for all configured events and failures:*

Step 1. Enter to Config mode. Run:

```
switch >
switch > enable
switch # configure terminal
```

Step 2. Set your mailhub to the IP address to be your mail client's server – for example, Microsoft Outlook exchange server.

```
switch (config) # email mailhub <IP address>
```

Step 3. Add your email address for notifications. Run:

```
switch (config) # email notify recipient <email address>
```

Step 4. Configure the system to send notifications for a specific event. Run:

```
switch (config) # email notify event <event name>
```

Step 5. Show the list of events for which an email is sent. Run:

```
switch (config) # show email events
Failure events for which emails will be sent:
  process-crash: A process in the system has crashed
  unexpected-shutdown: Unexpected system shutdown

Informational events for which emails will be sent:
  asic-chip-down: ASIC (Chip) Down
  cpu-util-high: CPU utilization has risen too high
  cpu-util-ok: CPU utilization has fallen back to normal levels
  disk-io-high: Disk I/O per second has risen too high
  disk-io-ok: Disk I/O per second has fallen back to acceptable levels
  disk-space-low: Filesystem free space has fallen too low
.
.
.
switch (config) #
```

Step 6. Have the system send you a test email. Run:

```
switch # email send-test

The last command should generate the following email:
-----Original Message-----
From: Admin User [mailto:do-not-reply@switch.]
Sent: Sunday, May 01, 2011 11:17 AM
To: <name>
Subject: System event on switch: Test email for event notification

==== System information:
Hostname: switch
Version: <version> 2011-05-01 14:56:31
```

```
...  
Date: 2011/05/01 08:17:29  
Uptime: 17h 8m 28.060s
```

```
This is a test email.  
==== Done.
```


4.10.4 Commands

4.10.4.1 Email Notification

email autosupport enable

email autosupport enable
no email autosupport enable

Sends automatic support notifications via email.
 The no form of the command stops sending automatic support notifications via email.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.2.3000
Role	admin
Example	switch (config) # email autosupport enable
Related Commands	N/A
Notes	

email autosupport event

email autosupport event <event>
no email autosupport event

Specifies for which events to send auto-support notification emails.
The no form of the command resets auto-support email security mode to its default.

Syntax	Description
event	<ul style="list-style-type: none">• process-crash – a process has crashed• process-exit – a process unexpectedly exited• liveness-failure – a process is detected as hung• cpu-util-high – CPU utilization has risen too high• cpu-util-ok – CPU utilization has fallen back to normal levels• paging-high – paging activity has risen too high• paging-ok – paging activity has fallen back to normal levels• disk-space-low – filesystem free space has fallen too low• disk-space-ok – filesystem free space is back in the normal range• memusage-high – memory usage has risen too high• memusage-ok – memory usage has fallen back to acceptable levels• netusage-high – network utilization has risen too high• netusage-ok – network utilization has fallen back to acceptable levels• disk-io-high – disk I/O per second has risen too high• disk-io-ok – disk I/O per second has fallen back to acceptable levels• unexpected-cluster-join – node has unexpectedly joined the cluster• unexpected-cluster-leave – node has unexpectedly left the cluster• unexpected-cluster-size – the number of nodes in the cluster is unexpected• unexpected-shutdown – unexpected system shutdown• interface-up – an interface's link state has changed to up• interface-down – an interface's link state has changed to down• user-login – a user has logged into the system• user-logout – a user has logged out of the system• health-module-status – health module status• temperature-too-high – temperature has risen too high• low-power – low power supply• low-power-recover – low power supply recover• insufficient-power – insufficient power supply• power-redundancy-mismatch – power redundancy mismatch• insufficient-fans – insufficient amount of fans in system• insufficient-fans-recover – insufficient amount of fans in system recovered

	<ul style="list-style-type: none">• asic-chip-down – ASIC (chip) down• internal-bus-error – internal bus (I²C) error• internal-link-speed-mismatch – internal links speed mismatch
Default	N/A
Configuration Mode	Config
History	3.2.3000
Role	admin
Example	switch (config) # email autosupport event process-crash
Related Commands	N/A
Notes	

email autosupport ssl mode

email autosupport ssl mode {none | tls | tls-none}
no email autosupport ssl mode

Configures type of security to use for auto-support email.
The no form of the command resets auto-support email security mode to its default.

Syntax Description	none	Does not use TLS to secure auto-support email.
	tls	Uses TLS over the default server port to secure auto-support email and does not send an email if TLS fails.
	tls-none	Attempts TLS over the default server port to secure auto-support email, and falls back on plain-text if this fails.
Default	tls-none	
Configuration Mode	Config	
History	3.2.3000	
Role	admin	
Example	switch (config) # email autosupport ssl mode tls	
Related Commands	N/A	
Notes		

email autosupport ssl cert-verify

email autosupport ssl cert-verify
no email autosupport ssl cert-verify

Verifies server certificates.
The no form of the command does not verify server certificates.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.2.3000
Role	admin
Example	switch (config) # email autosupport ssl cert-verify
Related Commands	N/A
Notes	

email autosupport ssl ca-list

email autosupport ssl ca-list {<ca-list-name> | **default_ca_list** | **none**}
no email autosupport ssl ca-list

Configures supplemental CA certificates for verification of server certificates.

The no form of the command removes supplemental CA certificate list.

Syntax Description	default_ca_list	Default supplemental CA certificate list.
	none	No supplemental list; uses built-in list only.
Default	default_ca_list	
Configuration Mode	Config	
History	3.2.3000	
Role	admin	
Example	switch (config) # email autosupport ssl ca-list default_ca_list	
Related Commands	N/A	
Notes		

email dead-letter

email dead-letter {cleanup max-age <duration> | enable}
no email dead-letter

Configures settings for saving undeliverable emails.
 The no form of the command disables sending of emails to vendor auto-support upon certain failures.

Syntax Description	duration	Example: “5d4h3m2s” for 5 days, 4 hours, 3 minutes, 2 seconds.
	enable	Saves dead-letter files for undeliverable emails.
Default	Save dead letter is enabled The default duration is 14 days	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # email dead-letter enable switch (config) #	
Related Commands	show email	
Notes		

email domain

email domain <hostname or IP address>
no email domain

Sets the domain name from which the emails will appear to come from (provided that the return address is not already fully-qualified). This is used in conjunction with the system hostname to form the full name of the host from which the email appears to come.

The no form of the command clears email domain override.

Syntax Description	hostname or IP address IP address.
Default	No email domain
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # email domain mellanox switch (config) # show email Mail hub: 10.0.8.11 Mail hub port: 125 Domain: mellanox Return address: do-not-reply Include hostname in return address: yes ... switch (config) #</pre>
Related Commands	show emails
Notes	

email mailhub

email mailhub <hostname or IP address>

no email mailhub

Sets the mail relay to be used to send notification emails.

The no form of the command clears the mail relay to be used to send notification emails.

Syntax Description	hostname or IP address Hostname or IP address.
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # email mailhub 10.0.8.11 switch (config) # show email Mail hub: 10.0.8.11 Mail hub port: 25 Domain: (not specified) Return address: do-not-reply Include hostname in return address: yes ... switch (config) #</pre>
Related Commands	show email [events]
Notes	

email mailhub-port

email mailhub-port <hostname or IP address>
no email mailhub-port

Sets the mail relay port to be used to send notification emails.
The no form of the command resets the port to its default.

Syntax Description	hostname or IP address hostname or IP address.
Default	25
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # email mailhub-port 125 switch (config) # show email Mail hub: 10.0.8.11 Mail hub port: 125 Domain: (system domain name) Return address: do-not-reply Include hostname in return address: yes ... switch (config) #</pre>
Related Commands	show email
Notes	

email notify event

email notify event <event name>
no email notify event <event name>

Enables sending email notifications for the specified event type.
 The no form of the command disables sending email notifications for the specified event type.

Syntax Description	event name	Example event names would include “process-crash” and “cpu-util-high”.
Default	No events are enabled	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # email notify event process-crash switch (config) # show email events Failure events for which emails will be sent: process-crash: A process in the system has crashed unexpected-shutdown: Unexpected system shutdown Informational events for which emails will be sent: liveness-failure: A process in the system was detected as hung process-exit: A process in the system unexpectedly exited cpu-util-ok: CPU utilization has fallen back to normal levels cpu-util-high: CPU utilization has risen too high disk-io-ok: Disk I/O per second has fallen back to acceptable levels ... temperature-too-high: Temperature has risen too high All events for which autosupport emails will be sent: process-crash: A process in the system has crashed liveness-failure: A process in the system was detected as hung switch (config) # switch (config) #</pre>	
Related Commands	show email	
Notes	This does not affect auto-support emails. Auto-support can be disabled overall, but if it is enabled, all auto-support events are sent as emails.	

email notify recipient

email notify recipient <email addr> [class {info | failure} | detail]

no email notify recipient <email addr> [class {info | failure} | detail]

Adds an email address from the list of addresses to which to send email notifications of events.

The no form of the command removes an email address from the list of addresses to which to send email notifications of events.

Syntax Description	email addr	Email address of intended recipient.
	class	Specifies which types of events are sent to this recipient.
	info	Sends informational events to this recipient.
	failure	Sends failure events to this recipient.
	detail	Sends detailed event emails to this recipient.
Default	No recipients are added	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # email notify recipient user2@autosupport.mellanox.com switch (config) # show email Mail hub: Mail hub port: 25 Domain: (not specified) Return address: user1 Include hostname in return address: no Dead letter settings: Save dead.letter files: yes Dead letter max age: (none) Email notification recipients: user2@autosupport.mellanox.com (all events, in detail) Autosupport emails Enabled: no Recipient: autosupport@autosupport.mellanox.com Mail hub: autosupport.mellanox.com switch (config) #</pre>	
Related Commands	show email	
Notes		

email return-addr

email return-addr <username>
no email domain

Sets the username or fully-qualified return address from which email notifications are sent.

- If the string provided contains an “@” character, it is considered to be fully-qualified and used as-is.
- Otherwise, it is considered to be just the username, and we append “@<hostname>.<domain>”. The default is “do-not-reply”, but this can be changed to “admin” or whatnot in case something along the line does not like fictitious addresses.

The no form of the command resets this attribute to its default.

Syntax Description	username	Username.
Default	do-not-reply	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # email return-addr user1 switch (config) # show email Mail hub: Mail hub port: 25 Domain: (not specified) Return address: user1 Include hostname in return address: yes ... switch (config) #</pre>	
Related Commands	show email	
Notes		

email return-host

email return-host
no email return-host

Includes the hostname in the return address for emails.
The no form of the command does not include the hostname in the return address for emails.

Syntax Description	N/A
Default	No return host
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # no email return-host switch (config) # show email Mail hub: Mail hub port: 25 Domain: (system domain name) Return address: my-address Include hostname in return address: no Current reply address: host@localdomain Dead letter settings: Save dead.letter files: yes Dead letter max age: 5 days No recipients configured. Autosupport emails Enabled: no Recipient: autosupport@autosupport.mellanox.com Mail hub: autosupport.mellanox.com switch (config) #</pre>
Related Commands	show email
Notes	This only takes effect if the return address does not contain an “@” character.

email send-test

email send-test

Sends test-email to all configured event and failure recipients.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	switch (config) # email send-test
Related Commands	show email [events]
Notes	

email ssl mode

email ssl mode {none | tls | tls-none}
no email ssl mode

Sets the security mode(s) to try for sending email.
The no form of the command resets the email SSL mode to its default.

Syntax Description	none	No security mode, operates in plaintext.
	tls	Attempts to use TLS on the regular mailhub port, with STARTTLS. If this fails, it gives up.
	tls-none	Attempts to use TLS on the regular mailhub port, with STARTTLS. If this fails, it falls back on plaintext.
Default	default-cert	
Configuration Mode	Config	
History	3.2.3000	
Role	admin	
Example	switch (config) # email ssl mode tls-none	
Related Commands	N/A	
Notes		

email ssl cert-verify

email ssl cert-verify
no email ssl cert-verify

Enables verification of SSL/TLS server certificates for email.
 The no form of the command disables verification of SSL/TLS server certificates for email.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.2.3000
Role	admin
Example	switch (config) # email ssl cert-verify
Related Commands	N/A
Notes	This command has no impact unless TLS is used.

email ssl ca-list

email ssl ca-list {<ca-list-name> | default-ca-list | none}
no email ssl ca-list

Specifies the list of supplemental certificates of authority (CA) from the certificate configuration database that is to be used for verification of server certificates when sending email using TLS, if any.

The no form of the command uses no list of supplemental certificates.

Syntax Description	ca-list-name	Specifies CA list name.
	default-ca-list	Uses default supplemental CA certificate list.
	none	Uses no list of supplemental certificates.
Default	default-ca-list	
Configuration Mode	Config	
History	3.2.3000	
Role	admin	
Example	switch (config) # email ssl ca-list none	
Related Commands	N/A	
Notes	This command has no impact unless TLS is used, and certificate verification is enabled.	

show email

show email [events]

Shows email configuration or events for which email should be sent upon.

Syntax Description	events	show event list
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # show email Mail hub: Mail hub port: 25 Domain: (system domain name) Return address: my-address Include hostname in return address: no Current reply address: host@localdomain Dead letter settings: Save dead.letter files: yes Dead letter max age: 5 days No recipients configured. Autosupport emails Enabled: no Recipient: autosupport@autosupport.mellanox.com Mail hub: autosupport.mellanox.com switch (config) #</pre>	
Related Commands	show email	
Notes		

4.11 Telemetry

As it is becoming increasingly complex to manage networks, and network administrators need more tools to understand network behavior, it is necessary to provide basic information about network performance, identify network bottlenecks, and provide information for the purposes of network optimization and future planning.

Therefore, network administrators are required to constantly review network port behavior, record port buffer consumption, and identify shortage in buffer resources and record flows which lead to the excessive buffer consumption.

MLNX-OS provides following mechanisms to perform those tasks:

- Sampling (histograms) – a network administrator can enable a sampling of the port buffer occupancy, record occupancy changes over time, and provide information for different levels of buffer occupancy, and amount of time the buffer has been occupied during the observation period.
- Thresholds – thresholds may be enabled per port to record the network time when port buffer occupancy crosses the defined threshold and when buffer occupancy drops below it.
- Flow recording is a record of the most active flows which cause an excessive usage of the port buffers. Once enabled, the system may identify flow patterns and present a user with a list of flows, based on which a network administrator can rearrange distribution of the data flows in the network and minimize data loss.

4.11.1 Commands

protocol telemetry

protocol telemetry
no protocol telemetry

Unhides telemetry config CLIs.
 The no form of the command hides telemetry config CLIs.

Syntax Description	N/A
Default	Disabled.
Configuration Mode	Config
History	3.6.3004
Role	admin
Example	switch (config) # protocol telemetry switch (config) # no protocol telemetry
Related Commands	
Notes	

telemetry shutdown

telemetry shutdown
no telemetry shutdown

Disables the telemetry protocol, and histogram fetching for all sampling enabled interfaces without changing any internal configuration.
The no form of the command enables telemetry protocol.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config
History	3.6.3004
Role	admin
Example	switch (config) # telemetry shutdown switch (config) # no telemetry shutdown
Related Commands	
Notes	

telemetry sampling log

telemetry sampling log <time>
no telemetry sampling log <time>

Enables the log interval value (histogram fetching) from device.
 The no form of the command disables the log interval value.

Syntax Description	time	Input Range: 100 msec - 1 min
Default	1000 msec.	
Configuration Mode	Config	
History	3.6.3004	
Role	admin	
Example	<pre>switch (config) # telemetry sampling log 1000 switch (config) # no telemetry sampling log</pre>	
Related Commands		
Notes		

interface ethernet telemetry sampling tc mcast

```
interface ethernet <slot>/<port>[/<subport>] telemetry sampling tc <tc_id>
mcast
no interface ethernet <slot>/<port>[/<subport>] telemetry sampling tc <tc_id>
mcast
```

Enables multicast sampling (histogram fetching) on a tc for a specific Ethernet interface.

The no form of the command disables multicast sampling on a tc for a specific Ethernet interface.

Syntax Description	slot/port	Ethernet port number
	subport	Ethernet subport number to be used in case of split port
	tc_id	Input range: 0-7
Default	N/A	
Configuration Mode	Config-Instance-ID	
History	3.6.3004 1/2/4	
Role	admin	
Example	switch (config) # interface ethernet 1/2 telemetry sampling tc 3 mcast switch (config) # no interface ethernet 1/2 telemetry sampling tc 3 mcast	
Related Commands		
Notes		

interface ethernet telemetry sampling tc ucast

```
interface ethernet <slot>/<port>[/<subport>] telemetry sampling tc <tc_id>
ucast
```

```
no interface ethernet <slot>/<port>[/<subport>] telemetry sampling tc <tc_id>
ucast
```

Enables unicast sampling (histogram fetching) on a tc for a specific Ethernet interface.

The no form of the command disables unicast sampling on a tc for a specific Ethernet interface.

Syntax Description	slot/port	Ethernet port number
	subport	Ethernet subport number to be used in case of split port
	tc_id	Input range: 0-7
Default	N/A	
Configuration Mode	Config	
History	3.6.3004	
Role	admin	
Example	<pre>switch (config) # interface ethernet 1/2 telemetry sampling tc 3 ucast switch (config) # no interface ethernet 1/2 telemetry sampling tc 3 ucast</pre>	
Related Commands		
Notes		

interface ib telemetry sampling

interface ib <slot>/<port> telemetry sampling
no interface ib <slot>/<port> telemetry sampling

Enables sampling (histogram fetching) for a specific InfiniBand interface.
The no form of the command disables sampling (histogram fetching).

Syntax Description	slot/port	Infiniband port number
Default	N/A	
Configuration Mode	Config-Instance	
History	3.6.3004	
Role	admin	
Example	switch (config) # interface ib 1/1 telemetry sampling switch (config) # no interface ib 1/1 telemetry sampling	
Related Commands		
Notes		

show telemetry sampling interface ethernet tc ucast

show telemetry sampling interface ethernet <slot>/<port>[/<subport>] tc <tc_id> ucast

Displays fetched unicast histogram details for a given tc_id of the Ethernet interface.

Syntax Description	slot/port	Ethernet port number
	subport	Ethernet subport number to be used in case of split port
	tc_id	Input range: 0-7
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.3004	
Role	admin	
Example	<pre>switch (config) # show telemetry sampling interface ethernet 1/2 tc 6 ucast ----- Telemetry histogram: Eth1/2 traffic-class 6 - ucast Time Bin sizes (nsec buffer was occupied in bytes range) ----- 01/13/17 2976< 27552 52128 76704 101280 125856 150432 175008 199584 199584> 08:18:09.67745 1000000000 0 0 0 0 0 0 0 0 0 08:18:10.67850 1000000000 0 0 0 0 0 0 0 0 0 08:18:11.67953 1000000000 0 0 0 0 0 0 0 0 0</pre>	
Related Commands		
Notes		

show telemetry sampling interface ethernet tc mcast

```
show telemetry sampling interface ethernet <slot>/<port>[/<subport>] tc
<tc_id> mcast
```

Displays fetched multicast histogram details for a given tc_id of the Ethernet interface.

Syntax Description	slot/port	Ethernet port number
	subport	Ethernet subport number to be used in case of split port
	tc_id	Input range: 0-7
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.3004	
Role	admin	
Example	<pre>switch (config) # show telemetry sampling interface ethernet 1/2 tc 3 mcast ----- Telemetry histogram: Eth1/2 traffic-class 3 - mcast Time Bin sizes (nsec buffer was occupied in bytes range) ----- 01/16/17 2976< 27552 52128 76704 101280 125856 150432 175008 199584 199584> 04:09:07.79936 1000000000 0 0 0 0 0 0 0 0 0 04:09:08.80096 1000000000 0 0 0 0 0 0 0 0 0 04:09:09.80355 1000000000 0 0 0 0 0 0 0 0 0 04:09:10.80518 1000000000 0 0 0 0 0 0 0 0 0 04:09:11.80682 1000000000 0 0 0 0 0 0 0 0 0</pre>	
Related Commands		
Notes		

show telemetry sampling interface ethernet tc ucast last

show telemetry sampling interface ethernet <slot>/<port>[/<subport>] tc <tc_id> ucast last <num_of_entries>

Displays last num of fetched unicast histogram details for the given tc_id of the ethernet interface.

Syntax Description	slot/port	Ethernet port number
	subport	Ethernet subport number to be used in case of split port
	tc_id	Input range: 0-7
	num_of_entries	Input range: 0-1000
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.3004	
Role	admin	
Example	<pre>switch (config) # show telemetry sampling interface ethernet 1/2 tc 3 ucast last 3 ----- Telemetry histogram: Eth1/2 traffic-class 3 - ucast Time Bin sizes (nsec buffer was occupied in bytes range) ----- 01/16/17 2976< 27552 52128 76704 101280 125856 150432 175008 199584 199584> 04:28:39.81351 1000000000 0 0 0 0 0 0 0 0 0 04:28:40.81512 1000000000 0 0 0 0 0 0 0 0 0 04:28:41.81708 1000000000 0 0 0 0 0 0 0 0 0</pre>	
Related Commands		
Notes	In case requested entries are more than what the DB contains it will print the amount in the table.	

show telemetry sampling interface ethernet tc mcast last

```
show telemetry sampling interface ethernet <slot>/<port>[/<subport>] tc
<tc_id> mcast last <num_of_entries>
```

Displays last num of fetched multicast histogram details for the given tc_id of the ethernet interface.

Syntax Description	slot/port	Ethernet port number
	subport	Ethernet subport number to be used in case of split port
	tc_id	Input range: 0-7
	num_of_entries	Input range: 0-1000
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.3004	
Role	admin	
Example	<pre>switch (config) # show telemetry sampling interface ethernet 1/2 tc 3 mcast last 4 ----- Telemetry histogram: Eth1/2 traffic-class 3 - mcast Time Bin sizes (nsec buffer was occupied in bytes range) ----- 01/16/17 2976< 27552 52128 76704 101280 125856 150432 175008 199584 199584> 04:23:38.28864 1000000000 0 0 0 0 0 0 0 0 0 04:23:39.28977 1000000000 0 0 0 0 0 0 0 0 0 04:23:40.29111 1000000000 0 0 0 0 0 0 0 0 0 04:23:41.29259 1000000000 0 0 0 0 0 0 0 0 0</pre>	
Related Commands		
Notes	In case requested entries are more than what the DB contains it will print the amount in the table.	

show telemetry sampling interface ib

show telemetry sampling interface ib <slot>/<port>

Displays telemetry histogram samples for a specific ib interface.

Syntax Description	slot/port	Infiniband port number																																																																																																																																															
Default	N/A																																																																																																																																																
Configuration Mode	Any Command Mode																																																																																																																																																
History	3.6.3004																																																																																																																																																
Role	admin																																																																																																																																																
Example	<pre>switch (config) # show telemetry sampling interface ib 1/32 last 20 ----- Telemetry histogram: IB1/32 System-time</pre> <table border="1"> <thead> <tr> <th></th> <th colspan="10">Bin sizes (128 nsec tx buffer was occupied in bytes range)</th> </tr> <tr> <th></th> <th><2976</th> <th>35744</th> <th>68512</th> <th>101280</th> <th>134048</th> <th>166816</th> <th>199584</th> <th>232352</th> <th>265120</th> <th>265120<</th> </tr> </thead> <tbody> <tr> <td>02/09/17</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>12:19:03.41948</td> <td>1883</td> <td>8538</td> <td>7802080</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>12:19:04.42107</td> <td>830</td> <td>9001</td> <td>7802670</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>12:19:05.42249</td> <td>96</td> <td>9705</td> <td>7802700</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>12:19:06.42388</td> <td>32</td> <td>9035</td> <td>7803434</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>12:19:07.42573</td> <td>80</td> <td>9461</td> <td>7802960</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>12:19:08.42761</td> <td>160</td> <td>9302</td> <td>7803040</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>12:19:09.42915</td> <td>304</td> <td>9369</td> <td>7802829</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>12:19:10.43071</td> <td>96</td> <td>8906</td> <td>7803500</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>12:19:11.43215</td> <td>463</td> <td>8907</td> <td>7803132</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>12:19:12.43369</td> <td>256</td> <td>8571</td> <td>7803675</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> </tbody> </table>			Bin sizes (128 nsec tx buffer was occupied in bytes range)											<2976	35744	68512	101280	134048	166816	199584	232352	265120	265120<	02/09/17											12:19:03.41948	1883	8538	7802080	0	0	0	0	0	0	0	12:19:04.42107	830	9001	7802670	0	0	0	0	0	0	0	12:19:05.42249	96	9705	7802700	0	0	0	0	0	0	0	12:19:06.42388	32	9035	7803434	0	0	0	0	0	0	0	12:19:07.42573	80	9461	7802960	0	0	0	0	0	0	0	12:19:08.42761	160	9302	7803040	0	0	0	0	0	0	0	12:19:09.42915	304	9369	7802829	0	0	0	0	0	0	0	12:19:10.43071	96	8906	7803500	0	0	0	0	0	0	0	12:19:11.43215	463	8907	7803132	0	0	0	0	0	0	0	12:19:12.43369	256	8571	7803675	0	0	0	0	0	0	0
	Bin sizes (128 nsec tx buffer was occupied in bytes range)																																																																																																																																																
	<2976	35744	68512	101280	134048	166816	199584	232352	265120	265120<																																																																																																																																							
02/09/17																																																																																																																																																	
12:19:03.41948	1883	8538	7802080	0	0	0	0	0	0	0																																																																																																																																							
12:19:04.42107	830	9001	7802670	0	0	0	0	0	0	0																																																																																																																																							
12:19:05.42249	96	9705	7802700	0	0	0	0	0	0	0																																																																																																																																							
12:19:06.42388	32	9035	7803434	0	0	0	0	0	0	0																																																																																																																																							
12:19:07.42573	80	9461	7802960	0	0	0	0	0	0	0																																																																																																																																							
12:19:08.42761	160	9302	7803040	0	0	0	0	0	0	0																																																																																																																																							
12:19:09.42915	304	9369	7802829	0	0	0	0	0	0	0																																																																																																																																							
12:19:10.43071	96	8906	7803500	0	0	0	0	0	0	0																																																																																																																																							
12:19:11.43215	463	8907	7803132	0	0	0	0	0	0	0																																																																																																																																							
12:19:12.43369	256	8571	7803675	0	0	0	0	0	0	0																																																																																																																																							
Related Commands																																																																																																																																																	
Notes	In case requested entries are more than what the DB contains it will print the amount in the table.																																																																																																																																																

show telemetry sampling interface ib last

show telemetry sampling interface ib <slot>/<port> last <num_of_entries>

Displays fetched unicast histogram details for tc_id of an Ethernet interface.

Syntax Description	slot/port	Infiniband port number
	num_of_entries	
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.3004	
Role	admin	
Example	<pre>switch (config) # show telemetry sampling interface ethernet 1/2 tc 6 ucast ----- Telemetry histogram: Eth1/2 traffic-class 6 - ucast Time Bin sizes (nsec buffer was occupied in bytes range) ----- 01/13/17 2976< 27552 52128 76704 101280 125856 150432 175008 199584 199584> 08:18:09.67745 976563 0 0 0 0 0 0 0 0 0 08:18:10.67850 976563 0 0 0 0 0 0 0 0 0 08:18:11.67953 976563 0 0 0 0 0 0 0 0 0</pre>	
Related Commands		
Notes	In case requested entries are more than what the DB contains it will print the amount in the table.	

stats export csv telemetry

```
stats export csv telemetry <slot>/<port>[/<subport>] [filename *] [after * *]
[before * *]
```

Exports histograms collected by stats to a csv file.

Syntax Description	slot/port	Ethernet Infiniband port number
	subport	Ethernet Infiniband subport number to be used in case of split port
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.3004	
Role	admin	
Example	<pre>switch (config) # stats export csv telemetry 1/1 Generated report file: telemetry-20170119-102715.csv</pre>	
Related Commands		
Notes		

file stats telemetry upload

file stats telemetry upload <filename> <upload URL>

Uploads file created by stats export command to user directory.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.6.3004
Role	admin
Example	<pre>switch (config) # file stats telemetry upload telemetry-20170119-102715.csv scp://username:password@server//directory</pre>
Related Commands	
Notes	

show files stats telemetry

show files stats telemetry [filename]

Displays all files created by command stats export csv telemetry unless a filename is given.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.6.3004
Role	admin
Example	<pre>switch (config) # show files stats telemetry telemetry-20170119-102715.csv</pre>
Related Commands	
Notes	

telemetry threshold log

telemetry threshold log
no telemetry threshold log

Enables logging of threshold events in syslog.
The no form of the command disable logging.

Syntax Description	N/A
Default	false
Configuration Mode	Config
History	3.6.4006
Role	admin
Example	switch (config) # telemetry threshold log switch (config) # no telemetry threshold log
Related Commands	
Notes	

telemetry threshold syslog

telemetry threshold syslog <time>
no telemetry threshold syslog <time>

The command sets threshold events logging rate on per hour basis.
 The no form of the command disable logging.

Syntax Description	<time>	Input range: 1-3600
Default	100	
Configuration Mode	Config	
History	3.6.4006	
Role	admin	
Example	switch (config) # telemetry threshold syslog 400	
Related Commands		
Notes		

telemetry threshold

[interface-id] telemetry threshold
no [interface-id] telemetry threshold

The command enables threshold on hardware.
The no form of the command disables threshold.

Syntax Description	[interface-id]	Input range: 1-3600
Default	false	
Configuration Mode	Config Interface IB	
History	3.6.4006	
Role	admin	
Example	switch (config) # interface ib 1/1 switch (config interface ib 1/1) # telemetry threshold	
Related Commands		
Notes		

telemetry threshold level

[interface-id] telemetry threshold level
no [interface-id] telemetry threshold level

The command configures threshold level in hardware per port.
 The no form of the command resets threshold to default value.

Syntax Description	Level	Input range: 96-1000000 (in bytes and in increments of 96)
Default	69984	
Configuration Mode	Config Interface IB	
History	3.6.4006	
Role	admin	
Example	<pre>switch (config) # interface ib 1/1 switch (config interface ib 1/1) # telemetry threshold level 288</pre>	
Related Commands		
Notes		

clear telemetry

clear telemetry [threshold | sampling] [Ethernet | lag | ib]

The command clears the telemetry data for the selected interface or all interfaces.

Syntax Description	N/A
---------------------------	-----

Default	
----------------	--

Configuration Mode	Config
---------------------------	--------

History	3.6.4006
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config) # clear telemetry threshold switch (config) # clear telemetry sampling interface ib 1/1 1/12 1/15 1/18 1/20 1/23 1/26 1/29 1/31 1/34 1/4 1/7 1/10 1/13 1/16 1/19 1/21 1/24 1/27 1/3 1/32 1/35 1/5 1/8 1/11 1/14 1/17 1/2 1/22 1/25 1/28 1/30 1/33 1/36 1/6 1/9 switch (config) # clear telemetry sampling interface ib 1/1</pre>
----------------	---

Related Commands	
-------------------------	--

Notes	
--------------	--

show telemetry threshold

show telemetry threshold [interface ib]

The command displays threshold data for the selected interface or all interfaces.

Syntax Description	N/A																																			
Default																																				
Configuration Mode	Config																																			
History	3.6.4006																																			
Role	admin																																			
Example	<pre>switch (config) # show telemetry threshold interface ib 1/14</pre> <table border="1"> <thead> <tr> <th>Time</th> <th>Port</th> <th>Level</th> <th>Duration(100 usec)</th> <th>Repeated</th> </tr> </thead> <tbody> <tr> <td>07:34:17</td> <td>IB 1/14</td> <td>288</td> <td>99.97</td> <td>1</td> </tr> <tr> <td>07:34:17</td> <td>IB 1/14</td> <td>288</td> <td>99.97</td> <td>1</td> </tr> <tr> <td>07:34:17</td> <td>IB 1/14</td> <td>288</td> <td>99.97</td> <td>1</td> </tr> <tr> <td>07:34:17</td> <td>IB 1/14</td> <td>288</td> <td>100.13</td> <td>1</td> </tr> <tr> <td>07:34:18</td> <td>IB 1/14</td> <td>288</td> <td>199.30</td> <td>1</td> </tr> <tr> <td>07:34:18</td> <td>IB 1/14</td> <td>288</td> <td>100.00</td> <td>1</td> </tr> </tbody> </table>	Time	Port	Level	Duration(100 usec)	Repeated	07:34:17	IB 1/14	288	99.97	1	07:34:17	IB 1/14	288	99.97	1	07:34:17	IB 1/14	288	99.97	1	07:34:17	IB 1/14	288	100.13	1	07:34:18	IB 1/14	288	199.30	1	07:34:18	IB 1/14	288	100.00	1
Time	Port	Level	Duration(100 usec)	Repeated																																
07:34:17	IB 1/14	288	99.97	1																																
07:34:17	IB 1/14	288	99.97	1																																
07:34:17	IB 1/14	288	99.97	1																																
07:34:17	IB 1/14	288	100.13	1																																
07:34:18	IB 1/14	288	199.30	1																																
07:34:18	IB 1/14	288	100.00	1																																
Related Commands																																				
Notes																																				

show telemetry

show telemetry

The command displays the global configuration of telemetry properties.

Syntax Description	N/A
---------------------------	-----

Default	
----------------	--

Configuration Mode	Config
---------------------------	--------

History	3.6.4000
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config) # show telemetry Telemetry Status : Enabled H/W Sampling Interval(nsec) : 256 S/W Sampling Interval(ms) : 1000 Threshold Logging : Disabled Threshold Logging(rate per hour) : 100</pre>
----------------	---

Related Commands	
-------------------------	--

Notes	
--------------	--

4.12 User Management and Security

4.12.1 User Accounts

There are two general user account types: *admin* and *monitor*. As *admin*, the user is privileged to execute all the available operations. As *monitor*, the user can execute operations that display system configuration and status, or set terminal settings.

Table 27 - User Roles (Accounts) and Default Passwords

User Role	Default Password
admin	admin
monitor	monitor
xmladmin	xmladmin
xmluser	xmluser

To remove passwords from the XML users, run the command `username <username> nopassword`.

4.12.2 Authentication, Authorization and Accounting (AAA)

AAA is a term describing a framework for intelligently controlling access to computer resources, enforcing policies, auditing usage, and providing the information necessary to bill for services. These combined processes are considered important for effective network management and security. The AAA feature allows you to verify the identity of, grant access to, and track the actions of users managing the MLNX-OS switch. The MLNX-OS switch supports Remote Access Dial-In User Service (RADIUS) or Terminal Access Controller Access Control device Plus (TACACS+) protocols.

- **Authentication** - authentication provides the initial method of identifying each individual user, typically by entering a valid username and password before access is granted. The AAA server compares a user's authentication credentials with the user credentials stored in a database. If the credentials match, the user is granted access to the network or devices. If the credentials do not match, authentication fails and network access is denied.
- **Authorization** - following the authentication, a user must gain authorization for performing certain tasks. After logging into a system, for instance, the user may try to issue commands. The authorization process determines whether the user has the authority to issue such commands. Simply put, authorization is the process of enforcing policies: determining what types or qualities of activities, resources, or services a user is permitted. Usually, authorization occurs within the context of authentication. Once you have authenticated a user, they may be authorized for different types of access or activity.
- **Accounting** - the last level is accounting, which measures the resources a user consumes during access. This includes the amount of system time or the amount of data a user has sent and/or received during a session. Accounting is carried out by logging of session

statistics and usage information, and is used for authorization control, billing, trend analysis, resource utilization, and capacity planning activities.

Authentication, authorization, and accounting services are often provided by a dedicated AAA server, a program that performs these functions. Network access servers interface with AAA servers using the Remote Authentication Dial-In User Service (RADIUS) protocol.

4.12.2.1 User Re-authentication

Re-authentication prevents users from accessing resources or perform tasks for which they do not have authorization. If credential information (e.g. AAA server information like IP address, key, port number etc.) that has been previously used to authenticate a user is modified, that user gets immediately logged out of the switch and asked to re-authenticate.

4.12.2.2 RADIUS

RADIUS (Remote Authentication Dial-In User Service), widely used in network environments, is a client/server protocol and software that enables remote access servers to communicate with a central server to authenticate dial-in users and authorize their access to the requested system or service. It is commonly used for embedded network devices such as routers, modem servers, switches and so on. RADIUS is currently the de-facto standard for remote authentication. It is prevalent in both new and legacy systems.

It is used for several reasons:

- RADIUS facilitates centralized user administration
- RADIUS consistently provides some level of protection against an active attacker

4.12.2.3 TACACS+

TACACS (Terminal Access Controller Access Control System), widely used in network environments, is a client/server protocol that enables remote access servers to communicate with a central server to authenticate dial-in users and authorize their access to the requested system or service. It is commonly used for providing NAS (Network Access Security). NAS ensures secure access from remotely connected users. TACACS implements the TACACS Client and provides the AAA (Authentication, Authorization and Accounting) functionalities.

TACACS is used for several reasons:

- Facilitates centralized user administration
- Uses TCP for transport to ensure reliable delivery
- Supports inbound authentication, outbound authentication and change password request for the authentication service
- Provides some level of protection against an active attacker

4.12.2.4 LDAP

LDAP (Lightweight Directory Access Protocol) is an authentication protocol that allows a remote access server to forward a user's log-on password to an authentication server to determine

whether access can be allowed to a given system. LDAP is based on a client/server model. The switch acts as a client to the LDAP server. A remote user (the remote administrator) interacts only with the switch, not the back-end server and database.

LDAP authentication consists of the following components:

- A protocol with a frame format that utilizes TCP over IP
- A centralized server that stores all the user authorization information
- A client: in this case, the switch

Each entry in the LDAP server is referenced by its Distinguished Name (DN). The DN consists of the user-account name concatenated with the LDAP domain name. If the user-account name is John, the following is an example DN:

```
uid=John,ou=people,dc=domain,dc=com
```

4.12.3 System Secure Mode

System secure mode is a state that configures the switch system to run secure algorithms in compliance with FIPS 140-2 requirements. In this mode, unsecure algorithms are disabled and unsecure feature configurations are disallowed.

In this mode the system supports Federal Information Processing Standards (FIPS) 140-2, Security Requirements for Cryptographic Modules, which is a NIST (National Institute of Standards and Technology) publication that specifies the requirement for system cypher functionality.

When this mode is activated, all the modules which are used by the system are verified to work in compliance with the secure mode.

Note that if system fails to load in secure mode it is loaded in non-secure mode.

Prerequisites:

Step 1. Disable SNMPv1 and v2. Run:

```
switch (config) # no snmp-server enable communities
```

Step 2. Only allow SNMPv3 users with sha and aes-128. Run:

```
switch (config) # snmp-server user <username> v3 auth sha <password1> priv aes-128  
<password2>
```

Step 3. Only allow SNMPv3 traps with sha and aes-128. Run:

```
switch (config) # snmp-server host <ip-address> informs version 3 user <username> auth  
sha <password1> priv aes-128 <password2>
```

Step 4. Only allow SSHv2. Run:

```
switch (config) # ssh server min-version 2
```

Step 5. Enable SSH server strict security mode. Run:

```
switch (config) # ssh server security strict
```

Step 6. Disable HTTP access. Run:

```
switch (config) # no web http enable
```

Step 7. Enable HTTPS strict cyphers. Run:

```
switch (config) # web https ssl ciphers TLS1.2
```

Step 8. Disable router BGP neighbor password configuration. Run:

```
switch (config) # no router bgp <as-number> neighbor <ip-address> password
```

Step 9. Disable router BGP peer group password configuration. Run:

```
switch (config) # no router bgp <as-number> peer-group <peer-group-name> password
```

Step 10. Disable BGP password configuration. Run:

```
switch (config) # no neighbor <ip-address> password
```

Step 11. Disable MD5 password hashing on for users. Run:

```
switch (config) # username <username> password <password>
```



If a necessary prerequisite is not fulfilled the system does not activate secure mode and issues an advisory message accordingly.



Secure mode is not supported on director switch systems.

➤ **To activate secure mode:**

```
switch (config) # system secure-mode enable
```

```
Warning! Configuration is about to be saved and the system will be reloaded.  
Type 'YES' to confirm the change in secure mode: YES
```

➤ **To deactivate secure mode:**

```
switch (config) # no system secure-mode enable
```

```
Warning! Configuration is about to be saved and the system will be reloaded.  
Type 'YES' to confirm the change in secure mode: YES
```

➤ **To verify secure mode configuration and state:**

```
switch (config)# show system secure-mode
```

```
Secure mode configured: yes  
Secure mode enabled: yes  
switch (config) #
```

4.12.4 Commands

4.12.4.1 User Accounts

username

username <username> [**capability** <cap> | **disable** [**login** | **password**] | **disconnect** | **full-name** <name> | **nopassword** | **password** [0 | 7] <password>]
no username <username> [**capability** | **disable** [**login** | **password**] | **full-name**]

Creates a user and sets its capabilities, password and name.
 The no form of the command deletes the user configuration.

Syntax	Description
username	Specifies a username and creates a user account. New users are created initially with admin privileges but is disabled.
capability <cap>	Defines user capabilities. <ul style="list-style-type: none"> • admin - full administrative capabilities • monitor - read only capabilities, can not change the running configuration • unpriv – can only query the most basic information, and cannot take any actions or change any configuration • v_admin – basic administrator capabilities
disable [login password]	<ul style="list-style-type: none"> • Disable - disable this account • Disable login - disable all logins to this account • Disable password - disable login to this account using a local password
disconnect	Logs out the specified user from the system
name	Full name of the user
nopassword	The next login of the user will not require password.
0 7	<ul style="list-style-type: none"> • 0: specifies a login password in cleartext • 7: specifies a login password in encrypted text
password	Specifies a password for the user in string form. If [0 7] was not specified then the password is in cleartext.
Default	The following usernames are available by default: <ul style="list-style-type: none"> • admin • monitor • xmladmin • xmluser

Configuration Mode	Config	
History	3.1.0000	
	3.4.0000	Updated Example
	3.4.1100	Updated Example
	3.6.2002	Added “disconnect” parameter
Role	admin	
Example	<pre> switch (config) # username monitor full-name smith switch (config) # show usernames USERNAME FULL NAME CAPABILITY ACCOUNT STATUS USERID System Administrator admin Password set admin System Administrator admin Password set monitor smith monitor Password set (SHA512) xmladmin XML Admin User admin Password set (SHA512) xmluser XML Monitor User monitor Password set (SHA512) switch (config) # </pre>	
Related Commands	show usernames show users	
Notes	<ul style="list-style-type: none"> • To enable a user account, just set a password on it (or use the command <code>username <user> nopassword</code> to enable it with no password required for login) • Removing a user account does not terminate any current sessions that user has open; it just prevents new sessions from being established • Encrypted password is useful for the command <code>show configuration</code>, since the cleartext password cannot be recovered after it is set 	

show usernames

show usernames

Displays list of users and their capabilities.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	<pre>switch (config) # show usernames USERNAME FULL NAME CAPABILITY ACCOUNT STATUS USERID admin System Administrator admin Password set monitor smith monitor Password set (SHA512) xmladmin XML Admin User admin No password required xmluser XML Monitor User monitor No password required switch (config) #</pre>
Related Commands	username show users
Notes	

show users

show users [history]

Displays logged in users and related information such as idle time and what host they have connected from.

Syntax Description	history	Displays current and historical sessions.
---------------------------	---------	---

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.1.0000
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config) # show users USERNAME FULL NAME LINE HOST IDLE admin System Administrator pts/0 172.22.237.174 0d0h34m4s admin System Administrator pts/1 172.30.0.127 1d3h30m49s admin System Administrator pts/3 172.22.237.34 0d0h0m0s switch (config) #show users history admin pts/3 172.22.237.34 Wed Feb 1 11:56 still logged in admin pts/3 172.22.237.34 Wed Feb 1 11:42 - 11:46 (00:04) wtmp begins Wed Feb 1 11:38:10 2012 switch (config) #</pre>
----------------	---

Related Commands	username show usernames
-------------------------	----------------------------

Notes	
--------------	--

show whoami

show whoami

Displays username and capabilities of user currently logged in.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	switch (config) # show whoami Current user: admin Capabilities: admin switch (config) #
Related Commands	username show usernames show users
Notes	

4.12.4.2 AAA Methods

aaa accounting

aaa accounting changes default stop-only tacacs+
no aaa accounting changes default stop-only tacacs+

Enables logging of system changes to an AAA accounting server.
The no form of the command disables the accounting.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000 First version 3.2.3000 Removed 'time' parameter from the command.
Role	admin
Example	<pre>switch (config) # aaa accounting changes default stop-only tacacs+ switch (config) # show aaa AAA authorization: Default User: admin Map Order: local-only Authentication method(s): local radius tacacs+ ldap Accounting method(s): tacacs+ switch (config) #</pre>
Related Commands	show aaa
Notes	<ul style="list-style-type: none">• TACACS+ is presently the only accounting service method supported• Change accounting covers both configuration changes and system actions that are visible under audit logging, however this feature operates independently of audit logging, so it is unaffected by the “logging level audit mgmt” or “configuration audit” commands• Configured TACACS+ servers are contacted in the order in which they appear in the configuration until one accepts the accounting data, or the server list is exhausted• Despite the name of the “stop-only” keyword, which indicates that this feature logs a TACACS+ accounting “stop” message, and in contrast to configuration change accounting, which happens after configuration data-base changes, system actions are logged when the action is started, not when the action has completed

aaa authentication login

aaa authentication login default <auth method> [<auth method> [<auth method> [<auth method> [<auth method>]]]]
no aaa authentication login

Sets a sequence of authentication methods. Up to four methods can be configured.

The no form of the command resets the configuration to its default.

Syntax Description	auth-method <ul style="list-style-type: none"> • local • radius • tacacs+ • ldap
Default	local
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	<pre>switch (config) # aaa authentication login default local radius tacacs+ ldap switch (config) # show aaa AAA authorization: Default User: admin Map Order: local-only Authentication method(s): local radius tacacs+ ldap Accounting method(s): tacacs+ switch (config) #</pre>
Related Commands	show aaa
Notes	The order in which the methods are specified is the order in which the authentication is attempted. It is required that “local” is one of the methods selected. It is recommended that “local” be listed first to avoid potential problems logging in to local accounts in the face of network or remote server issues.

aaa authentication attempts fail-delay

aaa authentication attempts fail-delay <time>
no aaa authentication attempts fail-delay

Configures delay for a specific period of time after every authentication failure.

The no form of the command resets the fail-delay to its default value.

Syntax Description	time	Range: 0-60 seconds
Default	0	
Configuration Mode	Config	
History	3.5.0200	
Role	admin	
Example	switch (config) # aaa authentication attempts fail-delay 1	
Related Commands	N/A	
Notes		

aaa authentication attempts track

aaa authentication attempts track {downcase | enable}
no aaa authentication attempts track {downcase | enable}

Configure tracking for failed authentication attempts.
 The no form of the command clears configuration for tracking authentication failures.

Syntax Description	downcase	Does not convert all usernames to lowercase (for authentication failure tracking purposes only).
	enable	Disables tracking of failed authentication attempts
Default	N/A	
Configuration Mode	Config	
History	3.2.3000	
Role	admin	
Example	switch (config) # aaa authentication attempts track enable	
Related Commands	N/A	
Notes	<ul style="list-style-type: none"> • This is required for the lockout functionality described below, but can also be used on its own for informational purposes. • Disabling tracking does not clear any records of past authentication failures, or the locks in the database. However, it does prevent any updates to this database from being made: no new failures are recorded. It also disables lockout, preventing new lockouts from being recorded and existing lockouts from being enforced. 	

aaa authentication attempts logout

```
aaa authentication attempts logout {enable | lock-time | max-fail | unlock-time}  
no aaa authentication attempts logout {enable | lock-time | max-fail | unlock-time}
```

Configures logout of accounts based on failed authentication attempts.
The no form of the command clears configuration for logout of accounts based on failed authentication attempts.

Syntax Description	enable	<p>Enables locking out of user accounts based on authentication failures.</p> <p>This both suspends enforcement of any existing lockouts, and prevents any new lockouts from being recorded. If lockouts are later re-enabled, any lockouts that had been recorded previously resume being enforced; but accounts which have passed the max-fail limit in the meantime are NOT automatically locked at this time. They would be permitted one more attempt, and then locked, because of how the locking is done: lockouts are applied after an authentication failure, if the user has surpassed the threshold at that time. Lockouts only work if tracking is enabled. Enabling lockouts automatically enables tracking. Disabling tracking automatically disables lockouts.</p>
	lock-time	<p>Sets maximum permitted consecutive authentication failures before locking out users.</p> <p>Unlike the “max-fail” setting, this does take effect immediately for all accounts</p> <p>If both unlock-time and lock-time are set, the unlock-time must be greater than the lock-time</p> <p>This is not based on the number of consecutive failures, and is therefore divorced from most of the rest of the tally feature, except for the tracking of the last login failure</p>
	max-fail	<p>Sets maximum permitted consecutive authentication failures before locking out users.</p> <p>This setting only impacts what lockouts are imposed while the setting is active; it is not retro-active to previous logins. So if max-fail is disabled or changed, this does not immediately cause any users to be changed from locked to unlocked or vice-versa.</p>
	unlock-time	<p>Enables the auto-unlock of an account after a specified number of seconds if a user account is locked due to authentication failures, counting from the last valid login attempt.</p> <p>Unlike the “max-fail” setting, this does take effect immediately for all accounts.</p> <p>If both unlock-time and lock-time are set, the unlock-time must be greater than the lock-time. Careful with disabling the unlock-time, particularly if you have max-fail set to something, and have not overridden the behavior for the admin (i.e. they are subject to lockouts also). If the admin account gets locked out, and there are no other administrators who can aid, the user may be forced to boot single-user and use the pam_tally-byname command-line utility to unlock your</p>

Default	N/A
Configuration Mode	Config
History	3.2.3000
Role	admin
Example	switch (config) # aaa authentication attempts lockout enable
Related Commands	N/A
Notes	

aaa authentication attempts class-override

```
aaa authentication attempts class-override {admin [no-lockout] | unknown {no-track | hash-username}}
```

```
no aaa authentication attempts class-override {admin | unknown {no-track | hash-username}}
```

Overrides the global settings for tracking and lockouts for a type of account. The no form of the command removes this override and lets the admin be handled according to the global settings.

Syntax Description	admin	Overrides the global settings for tracking and lockouts for the admin account. This applies only to the single account with the username “admin”. It does not apply to any other users with administrative privileges.
	no-lockout	Prevents the admin user from being locked out, though the authentication failure history is still tracked (if tracking is enabled overall).
	unknown	Overrides the global settings for tracking and lockouts for unknown accounts. The “unknown” class here contains the following categories: <ul style="list-style-type: none"> • Real remote usernames which simply failed authentication • Mis-typed remote usernames • Passwords accidentally entered as usernames • Bogus usernames made up as part of an attack on the system
	hash-username	Applies a hash function to the username, and stores the hashed result in lieu of the original.
	no-track	Does not track authentication for such users (which of course also implies no-lockout).
	Default	N/A
Configuration Mode	Config	
History	3.2.3000	
Role	admin	
Example	<pre>switch (config) # aaa authentication attempts class-override admin no-lockout</pre>	

Related Commands N/A

Notes

aaa authentication attempts reset

aaa authentication attempts reset {all | user <username>} [{no-clear-history | no-unlock}]

Clears the authentication history for and/or unlocks specified users.

Syntax Description	all	Applies function to all users.
	user	Applies function to specified user.
	no-clear-history	Leaves the history of login failures but unlocks the account.
	no-unlock	Leaves the account locked but clears the history of login failures.
Default	N/A	
Configuration Mode	Config	
History	3.2.3000	
Role	admin	
Example	switch (config) # aaa authentication attempts reset user admin all	
Related Commands	N/A	
Notes		

clear aaa authentication attempts

clear aaa authentication attempts {all | user <username>} [no-clear-history | no-unlock]

Clears the authentication history for and/or unlocks specified users

Syntax Description	all	Applies function to all users.
	user	Applies function to specified user.
	no-clear-history	Clears the history of login failures.
	no-unlock	Unlocks the account.
Default	N/A	
Configuration Mode	Config	
History	3.2.3000	
Role	admin	
Example	switch (config) # aaa authentication attempts reset user admin no-clear-history	
Related Commands	N/A	
Notes		

aaa authorization

aaa authorization map [default-user <username> | order <policy>]

no aaa authorization map [default-user | order]

Sets the mapping permissions of a user in case a remote authentication is done.

The no form of the command resets the attributes to default.

Syntax Description	username	Specifies what local account the authenticated user will be logged on as when a user is authenticated (via RADIUS or TACACS+) and does not have a local account. If the username is local, this mapping is ignored.
	order <policy>	<p>Sets the user mapping behavior when authenticating users via RADIUS or TACACS+ to one of three choices. The order determines how the remote user mapping behaves. If the authenticated username is valid locally, no mapping is performed. The setting has the following three possible behaviors:</p> <ul style="list-style-type: none"> • remote-first – if a local-user mapping attribute is returned and it is a valid local username, it maps the authenticated user to the local user specified in the attribute. Otherwise, it uses the user specified by the default-user command. • remote-only – maps a remote authenticated user if the authentication server sends a local-user mapping attribute. If the attribute does not specify a valid local user, no further mapping is tried. • local-only – maps all remote users to the user specified by the “aaa authorization map default-user <user name>” command. Any vendor attributes received by an authentication server are ignored.
Default	Default user - admin Map order - remote-first	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	

Example

```
switch (config) # aaa authorization map default-user admin
switch (config) # show aaa
AAA authorization:
  Default User: admin
  Map Order: remote-first
Authentication method(s):
  local
Accounting method(s):
  tacacs+
switch (config) #
```

Related Commands

```
show aaa
username
```

Notes

- If, for example, the user is locally defined to have admin permission, but in a remote server such as RADIUS the user is authenticated as monitor and the order is remote-first, then the user is given monitor permissions.
 - If AAA authorization order policy is configured to remote-only, then when upgrading to 3.4.3000 or later from an older MLNX-OS version, this policy is changed to remote-first.
 - The user must be careful when setting AAA authorization to “remote-only” because if the remote server happens to be configured incorrectly, then the user may lock themselves out.
-
-

show aaa**show aaa**

Displays the AAA configuration.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	<pre>switch (config) # show aaa AAA authorization: Default User: admin Map Order: remote-first Authentication method(s): local Accounting method(s): tacacs+ switch (config) #</pre>
Related Commands	<pre>aaa accounting aaa authentication aaa authorization show aaa show usernames username</pre>
Notes	

show aaa authentication attempts

show aaa authentication attempts [configured | status user <username>]]

Shows the current authentication, authorization and accounting settings.

Syntax Description	authentication attempts	Displays configuration and history of authentication failures.
	configured	Displays configuration of authentication failure tracking.
	status user	Displays status of authentication failure tracking and lockouts for specific user.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.2.1000	
	3.5.0200	Updated Example
Role	admin	
Example	<pre>switch (config) # show aaa authentication attempts Configuration for authentication failure tracking and locking: Track authentication failures: yes Lock accounts based on authentication failures: yes Override treatment of 'admin' user: (none) Override treatment of unknown usernames: hash-usernames Convert usernames to lowercase for tracking: no Delay after each auth failure (fail delay): none Configuration for lockouts based on authentication failures: Lock account after consecutive auth failures: 5 Allow retry on locked accounts (unlock time): after 15 second(s) Temp lock after each auth failure (lock time): none Username Known Locked Failures Last fail time Last fail from ----- - 0Q72B43EHBKT8CB5AF5PGRX3U3B3TUL4CYJP93N(*) no no 1 2012/08/20 14:29:19 ttyS0 (*) Hashed for security reasons switch-627d3c [standalone: master] (config) # switch (config) #</pre>	
Related Commands	N/A	
Notes		

4.12.4.3 RADIUS

radius-server

**radius-server {key <secret>| retransmit <retries> | timeout <seconds>}
no radius-server {key | retransmit | timeout}**

Sets global RADIUS server attributes.

The no form of the command resets the attributes to their default values.

Syntax Description	secret	Sets a secret key (shared hidden text string), known to the system and to the RADIUS server.
	retries	Number of retries (0-5) before exhausting from the authentication.
	seconds	Timeout in seconds between each retry (1-60).
Default	3 seconds, 1 retry	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) #radius-server retransmit 3 switch (config) # show radius RADIUS defaults: Key: 3333 Timeout: 3 Retransmit: 1 No RADIUS servers configured. switch (config) #</pre>	
Related Commands	<pre>aaa authorization radius-server host show radius</pre>	
Notes	Each RADIUS server can override those global parameters using the command “radius-server host”.	

radius-server host

```
radius-server host <IP address> [enable | auth-port <port> | key <secret> |  
prompt-key | retransmit <retries> | timeout <seconds>]  
no radius-server host <IP address> [auth-port | enable]
```

Configures RADIUS server attributes.

The no form of the command resets the attributes to their default values and deletes the RADIUS server.

Syntax Description	IP address	RADIUS server IP address
	enable	Administrative enable of the RADIUS server
	auth-port	Configures authentication port to use with this RADIUS server
	port	RADIUS server UDP port number
	key	Configures shared secret to use with this RADIUS server
	prompt-key	Prompt for key, rather than entering on command line
	retransmit	Configures retransmit count to use with this RADIUS server
	retries	Number of retries (0-5) before exhausting from the authentication
	timeout	Configures timeout between each try
	seconds	Timeout in seconds between each retry (1-60)
Default	3 seconds, 1 retry Default UDP port is 1812	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	

Example

```
switch (config) # radius-server host 40.40.40.40
switch (config) # show radius
RADIUS defaults:
  Key:                3333
  Timeout:            3
  Retransmit:         1
RADIUS servers:
  40.40.40.40:1812
  Enabled:            yes
  Key:                3333 (default)
  Timeout:            3 (default)
  Retransmit:         1 (default)
switch (config) #
```

Related Commands

```
aaa authorization
radius-server
show radius
```

Notes

- RADIUS servers are tried in the order they are configured
 - If you do not specify a parameter for this configured RADIUS server, the configuration will be taken from the global RADIUS server configuration. Refer to “radius-server” command.
-
-

show radius

show radius

Displays RADIUS configurations.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	<pre>switch (config) # show radius RADIUS defaults: Key: 3333 Timeout: 3 Retransmit: 1 RADIUS servers: 40.40.40.40:1812 Enabled: yes Key: 3333 (default) Timeout: 3 (default) Retransmit: 1 (default) switch (config) #</pre>
Related Commands	<pre>aaa authorization radius-server radius-server host</pre>
Notes	

4.12.4.4 TACACS+

tacacs-server

tacacs-server {key <secret>| retransmit <retries> | timeout <seconds>}
no tacacs-server {key | retransmit | timeout}

Sets global TACACS+ server attributes.

The no form of the command resets the attributes to default values.

Syntax Description	secret	Set a secret key (shared hidden text string), known to the system and to the TACACS+ server.
	retries	Number of retries (0-5) before exhausting from the authentication.
	seconds	Timeout in seconds between each retry (1-60).
Default	3 seconds, 1 retry	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) #tacacs-server retransmit 3 switch (config) # show tacacs TACACS+ defaults: Key: 3333 Timeout: 3 Retransmit: 1 No TACACS+ servers configured. switch (config) #</pre>	
Related Commands	<pre>aaa authorization show radius show tacacs tacacs-server host</pre>	
Notes	Each TACACS+ server can override those global parameters using the command “tacacs-server host”.	

tacacs-server host

```
tacacs-server host <IP address> {enable | auth-port <port> | auth-type <type> |  
key <secret> | prompt-key | retransmit <retries> | timeout <seconds>}  
no tacacs-server host <IP address> {enable | auth-port}
```

Configures TACACS+ server attributes.

The no form of the command resets the attributes to their default values and deletes the TACACS+ server.

Syntax	Description
IP address	TACACS+ server IP address
enable	Administrative enable for the TACACS+ server
auth-port	Configures authentication port to use with this TACACS+ server
port	TACACS+ server UDP port number
auth-type	Configures authentication type to use with this TACACS+ server
type	Authentication type. Possible values are: <ul style="list-style-type: none">• ASCII• PAP (Password Authentication Protocol)
key	Configures shared secret to use with this TACACS+ server
secret	Sets a secret key (shared hidden text string), known to the system and to the TACACS+ server
prompt-key	Prompts for key, rather than entering key on command line
retransmit	Configures retransmit count to use with this TACACS+ server
retries	Number of retries (0-5) before exhausting from the authentication
timeout	Configures timeout to use with this TACACS+ server
seconds	Timeout in seconds between each retry (1-60)
Default	3 seconds, 1 retry Default TCP port is 49 Default auth-type is PAP
Configuration Mode	Config

History	3.1.0000
Role	admin
Example	<pre>switch (config) # tacacs-server host 40.40.40.40 switch (config) # show tacacs TACACS+ defaults: Key: 3333 Timeout: 3 Retransmit: 1 TACACS+ servers: 40.40.40.40:49 Enabled: yes Auth-type PAP Key: 3333 (default) Timeout: 3 (default) Retransmit: 1 (default) switch (config) #</pre>
Related Commands	<pre>aaa authorization show tacacs tacacs-server</pre>
Notes	<ul style="list-style-type: none">• TACACS+ servers are tried in the order they are configured• A PAP auth-type similar to an ASCII login, except that the username and password arrive at the network access server in a PAP protocol packet instead of being typed in by the user, so the user is not prompted• If the user does not specify a parameter for this configured TACACS+ server, the configuration will be taken from the global TACACS+ server configuration. Refer to “tacacs-server” command.

show tacacs

show tacacs

Displays TACACS+ configurations.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.1.0000
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config) # show tacacs TACACS+ defaults: Key: 3333 Timeout: 3 Retransmit: 1 TACACS+ servers: 40.40.40.40:49 Enabled: yes Auth-type PAP Key: 3333 (default) Timeout: 3 (default) Retransmit: 1 (default) switch (config) #</pre>
----------------	--

Related Commands	aaa authorization tacacs-server tacacs-server host
-------------------------	--

Notes	
--------------	--

4.12.4.5 LDAP

ldap base-dn

ldap base-dn <string>
no ldap base-dn

Sets the base distinguished name (location) of the user information in the schema of the LDAP server.

The no form of the command resets the attribute to its default values.

Syntax Description	string	A case-sensitive string that specifies the location in the LDAP hierarchy where the server should begin searching when it receives an authorization request. For example: “ou=users,dc=example,dc=com”, with no spaces. when: ou - Organizational unit dc - Domain component cn - Common name sn - Surname
Default	ou=users,dc=example,dc=com	
Configuration Mode	Config	
History	3.1.0000	
	3.4.0000	Updated Example
Role	admin	

Example

```
switch (config) # ldap base-dn ou=department,dc=example,dc=com
switch (config) # show ldap
User base DN      : ou=department,dc=example,dc=com
User search scope : subtree
Login attribute   : sAMAccountName
Bind DN           :
Bind password     :
Group base DN     :
Group attribute   : member
LDAP version      : 3
Referrals         : yes
Server port       : 389
Search Timeout    : 5
Bind Timeout      : 5
SSL mode          : none
Server SSL port   : 636 (not active)
SSL ciphers       : TLS1.2 (not active)
SSL cert verify   : yes
SSL ca-list       : default-ca-list

LDAP servers:
 1: 10.10.10.10
 2: 10.10.10.12
switch (config) #
```

Related Commands show ldap

Notes

ldap bind-dn/bind-password

ldap {bind-dn | bind-password} <string>
no ldap {bind-dn | bind-password}

Gives the distinguished name or password to bind to on the LDAP server. This can be left empty for anonymous login (the default). The no form of the command resets the attribute to its default values.

Syntax Description	string	A case-sensitive string that specifies distinguished name or password to bind to on the LDAP server.
Default	""	
Configuration Mode	Config	
History	3.1.0000 3.4.0000	Updated Example
Role	admin	
Example	<pre> switch (config) # ldap bind-dn my-dn switch (config) # ldap bind-password my-password switch (config) # show ldap User base DN : ou=department,dc=example,dc=com User search scope : subtree Login attribute : sAMAccountName Bind DN : my-dn Bind password : my-password Group base DN : Group attribute : member LDAP version : 3 Referrals : yes Server port : 389 Search Timeout : 5 Bind Timeout : 5 SSL mode : none Server SSL port : 636 (not active) SSL ciphers : TLS1.2 (not active) SSL cert verify : yes SSL ca-list : default-ca-list LDAP servers: 1: 10.10.10.10 2: 10.10.10.12 switch (config) # </pre>	
Related Commands	show ldap	
Notes	For anonymous login, bind-dn and bind-password should be empty strings "".	

ldap group-attribute/group-dn

```
ldap {group-attribute {<group-att> |member | uniqueMember} | group-dn
<group-dn>}
no ldap {group-attribute | group-dn}
```

Sets the distinguished name or attribute name of a group on the LDAP server. The no form of the command resets the attribute to its default values.

Syntax Description	group-att	Specifies a custom attribute name.
	member	groupOfNames or group membership attribute.
	uniqueMember	groupOfUniqueNames membership attribute.
	group-dn	DN of group required for authorization.
Default	group-att: member group-dn: ""	
Configuration Mode	Config	
History	3.1.0000 3.4.0000	Updated Example
Role	admin	
Example	<pre>switch (config) # ldap group-attribute member switch (config) # ldap group-dn my-group-dn switch (config) # show ldap User base DN : ou=department,dc=example,dc=com User search scope : subtree Login attribute : sAMAccountName Bind DN : my-dn Bind password : my-password Group base DN : my-group-dn Group attribute : member LDAP version : 3 Referrals : yes Server port : 389 Search Timeout : 5 Bind Timeout : 5 SSL mode : none Server SSL port : 636 (not active) SSL ciphers : TLS1.2 (not active) SSL cert verify : yes SSL ca-list : default-ca-list LDAP servers: 1: 10.10.10.10 2: 10.10.10.12 switch (config) #</pre>	

Related Commands show ldap

Notes

- The user's distinguished name must be listed as one of the values of this attribute, or the user will not be authorized to log in
 - After login authentication, if the group-dn is set, a user must be a member of this group or the user will not be authorized to log in. If the group is not set ("" - the default) no authorization checks are done.
-
-

ldap host

ldap host <IP Address> [order <number> last]
no ldap host <IP Address>

Adds an LDAP server to the set of servers used for authentication.
The no form of the command deletes the LDAP host.

Syntax Description	IP Address	IPv4 or IPv6 address.
	number	The order of the LDAP server.
	last	The LDAP server will be added in the last location.
Default	No hosts configured	
Configuration Mode	Config	
History	3.1.0000	
	3.4.0000	Updated Example
Role	admin	
Example	<pre>switch (config) # ldap host 10.10.10.10 switch (config) # show ldap User base DN : ou=department,dc=example,dc=com User search scope : subtree Login attribute : sAMAccountName Bind DN : my-dn Bind password : my-password Group base DN : my-group-dn Group attribute : member LDAP version : 3 Referrals : yes Server port : 389 Search Timeout : 5 Bind Timeout : 5 SSL mode : none Server SSL port : 636 (not active) SSL ciphers : TLS1.2 (not active) SSL cert verify : yes SSL ca-list : default-ca-list LDAP servers: 1: 10.10.10.10 2: 10.10.10.12 switch (config) #</pre>	

Related Commands show aaa
show ldap

- Notes**
- The system will select the LDAP host to try according to its order
 - New servers are by default added at the end of the list of servers
-
-

Ldap login-attribute

ldap login-attribute {<string> | uid | sAMAccountName}
no ldap login-attribute

Sets the attribute name which contains the login name of the user.
The no form of the command resets this attribute to its default.

Syntax Description	string	Custom attribute name.
	uid	LDAP login name is taken from the user login username.
	sAMAccountName	SAM Account name, active directory login name.
Default	sAMAccountName	
Configuration Mode	Config	
History	3.1.0000	
	3.4.0000	Updated Example
Role	admin	
Example	<pre>switch (config) # ldap login-attribute uid switch (config) # show ldap User base DN : ou=department,dc=example,dc=com User search scope : subtree Login attribute : uid Bind DN : my-dn Bind password : my-password Group base DN : my-group-dn Group attribute : member LDAP version : 3 Referrals : yes Server port : 389 Search Timeout : 5 Bind Timeout : 5 SSL mode : none Server SSL port : 636 (not active) SSL ciphers : TLS1.2 (not active) SSL cert verify : yes SSL ca-list : default-ca-list LDAP servers: 1: 10.10.10.10 2: 10.10.10.12 switch (config) #</pre>	
Related Commands	show aaa show ldap	
Notes		

ldap port

ldap port <port>

no ldap port

Sets the TCP port on the LDAP server to connect to for authentication.
The no form of the command resets this attribute to its default value.

Syntax Description	port	TCP port number.
Default	389	
Configuration Mode	Config	
History	3.1.0000	
	3.4.0000	Updated Example
Role	admin	
Example	<pre>switch (config) # ldap port 1111 switch (config) # show ldap User base DN : ou=department,dc=example,dc=com User search scope : subtree Login attribute : uid Bind DN : my-dn Bind password : my-password Group base DN : my-group-dn Group attribute : member LDAP version : 3 Referrals : yes Server port : 1111 Search Timeout : 5 Bind Timeout : 5 SSL mode : none Server SSL port : 636 (not active) SSL ciphers : TLS1.2 (not active) SSL cert verify : yes SSL ca-list : default-ca-list LDAP servers: 1: 10.10.10.10 2: 10.10.10.12 switch (config) #</pre>	
Related Commands	<pre>show aaa show ldap</pre>	
Notes		

ldap referrals

ldap referrals
no ldap referrals

Enables LDAP referrals.
The no form of the command disables LDAP referrals.

Syntax Description	N/A
Default	LDAP referrals are enabled
Configuration Mode	Config
History	3.1.0000 3.4.0000 Updated Example
Role	admin
Example	<pre>switch (config) # no ldap referrals switch (config) # show ldap User base DN : ou=department,dc=example,dc=com User search scope : subtree Login attribute : uid Bind DN : my-dn Bind password : my-password Group base DN : my-group-dn Group attribute : member LDAP version : 3 Referrals : no Server port : 1111 Search Timeout : 5 Bind Timeout : 5 SSL mode : none Server SSL port : 636 (not active) SSL ciphers : TLS1.2 (not active) SSL cert verify : yes SSL ca-list : default-ca-list LDAP servers: 1: 10.10.10.10 2: 10.10.10.12 switch (config) #</pre>
Related Commands	show aaa show ldap
Notes	Referral is the process by which an LDAP server, instead of returning a result, will return a referral (a reference) to another LDAP server which may contain further information.

Ldap scope

ldap scope <scope>
no ldap scope

Specifies the extent of the search in the LDAP hierarchy that the server should make when it receives an authorization request.
 The no form of the command resets the attribute to its default value.

Syntax Description	scope	<ul style="list-style-type: none"> • one-level - searches the immediate children of the base dn • subtree - searches at the base DN and all its children
Default	subtree	
Configuration Mode	Config	
History	3.1.0000 3.4.0000	Updated Example
Role	admin	
Example	<pre>switch (config) # ldap scope subtree switch (config) # show ldap User base DN : ou=department,dc=example,dc=com User search scope : subtree Login attribute : uid Bind DN : my-dn Bind password : my-password Group base DN : my-group-dn Group attribute : member LDAP version : 3 Referrals : no Server port : 1111 Search Timeout : 5 Bind Timeout : 5 SSL mode : none Server SSL port : 636 (not active) SSL ciphers : TLS1.2 (not active) SSL cert verify : yes SSL ca-list : default-ca-list LDAP servers: 1: 10.10.10.10 2: 10.10.10.12 switch (config) #</pre>	
Related Commands	show aaa show ldap	
Notes		

ldap ssl

```
ldap ssl {ca-list <options> | cert-verify | ciphers {all | TLS1.2} | mode <mode> |  
port <port-number>}  
no ldap ssl {cert-verify | ciphers | mode | port}
```

Sets SSL parameter for LDAP.

The no form of the command resets the attribute to its default value.

Syntax Description	options	<p>This command specifies the list of supplemental certificates of authority (CAs) from the certificate configuration database that is to be used by LDAP for authentication of servers when in TLS or SSL mode.</p> <p>The options are:</p> <ul style="list-style-type: none"> • default-ca-list - uses default supplemental CA certificate list • none - no supplemental list, uses the built-in one only <p>CA certificates are ignored if “ldap ssl mode” is not configured as either “tls” or “ssl”, or if “no ldap ssl cert-verify” is configured.</p> <p>The default-ca-list is empty in the factory default configuration. Use the command: “crypto certificate ca-list default-ca-list name” to add trusted certificates to that list.</p> <p>The “default-ca-list” option requires LDAP to consult the system’s configured global default CA-list for supplemental certificates.</p>
	cert-verify	<p>Enables verification of SSL/TLS server certificates. This may be required if the server's certificate is self-signed, or does not match the name of the server.</p>
	ciphers {all TLS1.2}	<p>Sets SSL mode to be used.</p>
	mode	<p>Sets the security mode for connections to the LDAP server.</p> <ul style="list-style-type: none"> • none – requests no encryption for the LDAP connection • ssl – the SSL-port configuration is used, an SSL connection is made before LDAP requests are sent (LDAP over SSL) • start-tls – the normal LDAP port is used, an LDAP connection is initiated, and then TLS is started on this existing connection
	port-number	<p>Sets the port on the LDAP server to connect to for authentication when the SSL security mode is enabled (LDAP over SSL).</p>
Default	<p>cert-verify: enabled mode: none (LDAP SSL is not activated) port-number: 636 ciphers: all</p>	
Configuration Mode	Config	

History	3.1.0000 3.2.3000 3.4.0000	First version Added ca-list argument. Added “ssl ciphers” parameter Updated Example
Role	admin	
Example	<pre> switch (config) # ldap ssl mode ssl switch (config) # show ldap User base DN : ou=department,dc=example,dc=com User search scope : subtree Login attribute : uid Bind DN : my-dn Bind password : my-password Group base DN : my-group-dn Group attribute : member LDAP version : 3 Referrals : no Server port : 1111 Search Timeout : 5 Bind Timeout : 5 SSL mode : ssl Server SSL port : 636 (not active) SSL ciphers : TLS1.2 (not active) SSL cert verify : yes SSL ca-list : default-ca-list LDAP servers: 1: 10.10.10.10 2: 10.10.10.12 switch (config) # </pre>	
Related Commands	<pre> show aaa show ldap </pre>	
Notes	<ul style="list-style-type: none"> • If available, the TLS mode is recommended, as it is standardized, and may also be of higher security • The port number is used only for SSL mode. In case the mode is TLS, the LDAP port number will be used. 	

Ldap timeout

ldap {timeout-bind | timeout-search} <seconds>
no ldap {timeout-bind | timeout-search}

Sets a global communication timeout in seconds for all LDAP servers to specify the extent of the search in the LDAP hierarchy that the server should make when it receives an authorization request.

The no form of the command resets the attribute to its default value.

Syntax Description	timeout-bind	Sets the global LDAP bind timeout for all LDAP servers.
	timeout-search	Sets the global LDAP search timeout for all LDAP servers.
	seconds	Range: 1-60 seconds.
Default	5 seconds	
Configuration Mode	Config	
History	3.1.0000	
	3.4.0000	Updated Example
Role	admin	
Example	<pre>switch (config) # ldap timeout-bind 10 switch (config) # show ldap User base DN : ou=department,dc=example,dc=com User search scope : subtree Login attribute : uid Bind DN : my-dn Bind password : my-password Group base DN : my-group-dn Group attribute : member LDAP version : 3 Referrals : no Server port : 1111 Search Timeout : 5 Bind Timeout : 10 SSL mode : none Server SSL port : 636 (not active) SSL ciphers : TLS1.2 (not active) SSL cert verify : yes SSL ca-list : default-ca-list LDAP servers: 1: 10.10.10.10 2: 10.10.10.12 switch (config) #</pre>	

Related Commands show aaa
show ldap

Notes

ldap version

ldap version <version>

no ldap version

Sets the LDAP version.

The no form of the command resets the attribute to its default value.

Syntax Description	version	Sets the LDAP version. Values: 2 and 3.
Default	3	
Configuration Mode	Config	
History	3.1.0000 3.4.0000	Updated Example
Role	admin	
Example	<pre> switch (config) # ldap version 3 switch (config) # show ldap User base DN : ou=department,dc=example,dc=com User search scope : subtree Login attribute : uid Bind DN : my-dn Bind password : my-password Group base DN : my-group-dn Group attribute : member LDAP version : 3 Referrals : no Server port : 1111 Search Timeout : 5 Bind Timeout : 10 SSL mode : none Server SSL port : 636 (not active) SSL ciphers : TLS1.2 (not active) SSL cert verify : yes SSL ca-list : default-ca-list LDAP servers: 1: 10.10.10.10 2: 10.10.10.12 switch (config) # </pre>	
Related Commands	show aaa show ldap	
Notes		

show ldap

show ldap

Displays LDAP configurations.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.1.0000
	3.4.0000 Updated Example

Role	admin
-------------	-------

Example	<pre>switch (config) # show ldap User base DN : ou=department,dc=example,dc=com User search scope : subtree Login attribute : uid Bind DN : my-dn Bind password : my-password Group base DN : my-group-dn Group attribute : member LDAP version : 3 Referrals : no Server port : 1111 Search Timeout : 5 Bind Timeout : 10 SSL mode : none Server SSL port : 636 (not active) SSL ciphers : TLS1.2 (not active) SSL cert verify : yes SSL ca-list : default-ca-list LDAP servers: 1: 10.10.10.10 2: 10.10.10.12 switch (config) #</pre>
----------------	---

Related Commands	show aaa show ldap
-------------------------	-----------------------

Notes	
--------------	--

4.12.4.6 System Secure Mode

system secure-mode enable

system secure-mode enable
no system secure-mode enable

Enables secure mode on the switch.
 The no form of the command disables secure mode.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config
History	3.5.0200
Role	admin
Example	<pre>switch (config) # system secure-mode enable</pre> <p>Warning! Configuration is about to be saved and the system will be reloaded. Type 'YES' to confirm the change in secure mode: YES</p>
Related Commands	<pre>user <username> password <password> ssh server min-version ssh server security strict snmp-server user no neighbor <ip-address> password ntp server disable ntp server keyID router bgp neighbor password router bgp peer-group password</pre>
Notes	<p>Before enabling secure mode, the command performs the following configuration checks:</p> <ul style="list-style-type: none"> • NTP Key ID cannot be MD5 when secure mode is enabled • SSH min-version cannot be 1 when enabling secure mode • SSH security must be set to strict security • SNMPv3 user auth cannot be md5 when enabling secure mode • SNMPv3 user priv cannot be des when enabling secure mode • SNMPv3 trap auth cannot be md5 when enabling secure mode • SNMPv3 trap priv cannot be des when enabling secure mode • Router BGP neighbor password cannot be set when enabling secure mode • Router BGP peer-group password cannot be set when enabling with secure mode • User password hash cannot be MD5 when secure mode is enabled <p>Only if the check passes, secure mode is enabled on the switch system.</p>

show system secure-mode

show system secure-mode

Displays the security mode of the switch system.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.4.2300
Role	admin
Example	<pre>switch (config) # show system secure-mode Secure mode configured: yes Secure mode enabled : yes switch (config) #</pre>
Related Commands	system secure-mode enable
Notes	“Secure mode configuration” describes the user configuration “Secure mode enabled” describes the system state

4.13 Cryptographic (X.509, IPSec) and Encryption

This chapter contains commands for configuring, generating and modifying x.509 certificates used in the system. Certificates are used for creating a trusted SSL connection to the system.

Crypto commands also cover IPSec configuration commands used for establishing a secure connection between hosts over IP layer which is useful for transferring sensitive information.

4.13.1 System File Encryption

This feature encrypts all sensitive data on HPE systems including logs certificates, keys, etc.

➤ *To activate encryption on the switch:*

Step 1. Enable encryption and configure key location as USB (if you are using a USB device). Run:

```
switch (config)# crypto encrypt-data key-location usb key mypassword

Warning! All sensitive files are about to be encrypted
- System will perform reset factory, configuration files will be preserved
- System will be rebooted
- Do not power-off, wait for the system to boot

Type 'YES' to confirm this action: YES
```



*****IMPORTANT NOTE*****

Encryption and decryption perform “reset factory keep-config” on the switch system once configured. This means that sysdumps, logs, and images are deleted.



The key may be saved locally as well by using the parameter “local” instead of “usb” but that configuration is less secure.

Step 2. After the system reboots, verify configuration. Run:

```
switch (config)# show crypto encrypt-data
Sensitive files encryption:
  Status:          enabled
  Key location:    usb
  Cipher:          aes256
```



Once encryption is enabled, reverting back to an older version while encrypted is not possible. The command “no crypto encrypt-data” must be run before attempting to downgrade to an older MLNX-OS version.



If encryption is enabled, upgrading to a new MLNX-OS® version maintains the encryption configuration.

4.13.1.1 Commands

crypto encrypt-data

crypto encrypt-data key-location <local | usb> key <password>
no crypto encrypt-data

Enables and configures system file encryption.
The no form of the command decrypts sensitive information on the system.

Syntax Description	key-location	Configures where to store the encryption key: <ul style="list-style-type: none">• local – Stores the key locally• usb – Stores the key on a USB device
	key	Configures a key
Default	N/A	
Configuration Mode	Config	
History	3.6.1002	
Role	admin	
Example	<pre>switch (config)# crypto encrypt-data key-location usb key mypassword</pre> <p>Warning! All sensitive files are about to be encrypted</p> <ul style="list-style-type: none">- System will perform reset factory, configuration files will be preserved- System will be rebooted- Do not power-off, wait for the system to boot <p>Type 'YES' to confirm this action: YES</p>	
Related Commands		
Notes	<ul style="list-style-type: none">• It is recommended to store the encryption password on a USB device rather than locally• Enabling encryption may slightly slow system performance• If the key is stored on the USB, it must be plugged into the switch in order for the switch to boot. After the switch has booted, the USB key is no longer required and, for security purposes, it is recommended to remove it after running “usb eject”. The USB key may be needed again if the switch is rebooted or if the switch needs to be decrypted.	

crypto ipsec ike

crypto ipsec ike {clear sa [peer {any | <IPv4 or IPv6 address>} local <IPv4 or IPv6 address>] | restart}

Manage the IKE (ISAKMP) process or database state

Syntax Description	clear	Clears IKE (ISAKMP) peering state
	sa	Clears IKE generated ISAKMP and IPsec security associations (remote peers are affected)
	peer	Clears security associations for the specified IKE peer (remote peers are affected) all – clears security associations for all IKE peerings with a specific local address (remote peers are affected) IPv4 or IPv6 address – clears security associations for specific IKE peering with a specific local address (remote peers are affected)
	IPv4 or IPv6 address	Clears security associations for the specified IKE peering (remote peer is affected)
	local	Clear security associations for the specified/all IKE peering (remote peer is affected)
	restart	Restarts the IKE (ISAKMP) daemon (clears all IKE state, peers may be affected)
Default	N/A	
Configuration Mode	Config	
History	3.2.3000	
Role	admin	
Example	<pre>switch (config)# crypto ipsec ike restart switch (config)#</pre>	
Related Commands	N/A	
Notes		

crypto ipsec peer local

```
crypto ipsec peer <IPv4 or IPv6 address> local <IPv4 or IPv6 address> {enable |  
keying {ike [auth {hmac-md5 | hmac-sha1 | hmac-sha256 | null} | dh-group | dis-  
able | encrypt | exchange-mode | lifetime | local | mode | peer-identity | pfs-group |  
preshared-key | prompt-preshared-key | transform-set] | manual [auth | disable |  
encrypt | local-spi | mode | remote-spi]}}
```

Configures ipsec in the system.

Syntax Description	enable	Enables IPsec peering.
	ike	<p>Configures IPsec peering using IKE ISAKMP to manage SA keys. It has the following optional parameters:</p> <ul style="list-style-type: none"> • auth: Configures the authentication algorithm for IPsec peering • dh-group: Configures the phase1 Diffie-Hellman group proposed for secure IKE key exchange • disable: Configures this IPsec peering administratively disabled • encrypt: Configures the encryption algorithm for IPsec peering • exchange-mode: Configures the IKE key exchange mode to propose for peering • lifetime: Configures the SA lifetime to propose for this IPsec peering • local-identity: Configures the ISAKMP payload identification value to send as local endpoint's identity • mode: Configures the peering mode for this IPsec peering • peer-identity: Configures the identification value to match against the peer's ISAKMP payload identification • pfs-group: Configures the phase2 PFS (Perfect Forwarding Secrecy) group to propose for Diffie-Hellman exchange for this IPsec peering • preshared-key: Configures the IKE pre-shared key for the IPsec peering • prompt-preshared-key: Prompts for the pre-shared key, rather than entering it on the command line • transform-set: Configures transform proposal parameters
	keying	<p>Configures key management for this IPsec peering:</p> <ul style="list-style-type: none"> • auth: Configures the authentication algorithm for this IPsec peering • disable: Configures this IPsec peering administratively disabled • encrypt: Configures the encryption algorithm for this IPsec peering • local-spi: Configures the local SPI for this manual IPsec peering • mode: Configures the peering mode for this IPsec peering • remote-spi: Configures the remote SPI for this manual IPsec peering

Default	N/A
Configuration Mode	Config
History	3.2.3000
Role	admin
Example	switch (config)# crypto ipsec peer 10.10.10.10 local 10.7.34.139 enable switch (config)#
Related Commands	N/A
Notes	

crypto certificate ca-list

crypto certificate ca-list [default-ca-list name {<cert-name> | system-self-signed}]

no crypto certificate ca-list [default-ca-list name {<cert-name> | system-self-signed}]

Adds the specified CA certificate to the default CA certificate list.
The no form of the command removes the certificate from the default CA certificate list.

Syntax Description	cert-name	The name of the certificate.
Default	N/A	
Configuration Mode	Config	
History	3.2.3000	
Role	admin	
Example	switch (config) # crypto certificate default-cert name test	
Related Commands	N/A	
Notes	<ul style="list-style-type: none"> • Two certificates with the same subject and issuer fields cannot both be placed onto the CA list • The no form of the command does not delete the certificate from the certificate database • Unless specified otherwise, applications that use CA certificates will still consult the well-known certificate bundle before looking at the default-ca-list 	

crypto certificate default-cert

crypto certificate default-cert name {<cert-name> | system-self-signed}
no crypto certificate default-cert name {<cert-name> | system-self-signed}

Designates the named certificate as the global default certificate role for authentication of this system to clients.

The no form of the command reverts the default-cert name to “system-self-signed” (the “cert-name” value is optional and ignored).

Syntax Description	cert-name	The name of the certificate.
Default	N/A	
Configuration Mode	Config	
History	3.2.3000	
Role	admin	
Example	switch (config) # crypto certificate default-cert name test	
Related Commands	N/A	
Notes	<ul style="list-style-type: none">• A certificate must already be defined before it can be configured in the default-cert role• If the named default-cert is deleted from the database, the default-cert automatically becomes reconfigured to the factory default, the “system-self-signed” certificate	

crypto certificate generation

crypto certificate generation default {country-code | days-valid | email-addr | hash-algorithm {sha1 | sha256} | key-size-bits | locality | org-unit | organization | state-or-prov}

Configures default values for certificate generation.

Syntax Description	country-code	Configures the default certificate value for country code with a two-alphanumeric-character code or -- for none.
	days-valid	Configures the default certificate valid days. Default value: 365 days.
	email-addr	Configures the default certificate value for email address.
	hash-algorithm {sha1 sha256}	Configures the default certificate hashing algorithm.
	key-size-bits	Configures the default certificate value for private key size. (Private key length in bits – at least 1024, but 2048 is strongly recommended.)
	locality	Configures the default certificate value for locality.
	org-unit	Configures the default certificate value for organizational unit.
	organization	Configures the default certificate value for the organization name.
	state-or-prov	Configures the default certificate value for state or province.
Default	N/A	
Configuration Mode	Config	
History	3.2.1000	First version
	3.3.4350	Added “hash-algorithm” parameter
	3.6.4000	Added “days-valid” parameter
Role	admin	
Example	<pre>switch (config) # crypto certificate generation default hash-algorithm sha256</pre>	

Related Commands	N/A
Notes	The default hashing algorithm used is sha1.

crypto certificate name

```

crypto certificate name {<cert-name> | system-self-signed} {comment <new
comment> | generate self-signed [comment <cert-comment> | common-name
<domain> | country-code <code> | days-valid <days> | email-addr <address> |
hash-algorithm {sha1 | sha256} | key-size-bits <bits> | locality <name> | org-unit
<name> | organization <name> | serial-num <number> | state-or-prov <name>]}
| private-key pem <PEM string> | prompt-private-key | public-cert [comment
<comment string> | pem <PEM string>] | regenerate days-valid <days> | rename
<new name>}
no crypto certificate name <cert-name>

```

Configures default values for certificate generation.

The no form of the command clears/deletes certain certificate settings.

Syntax Description	cert-name	Unique name by which the certificate is identified.
	comment	Specifies a certificate comment.
	generate self-signed	<p>Generates certificates. This option has the following parameters which may be entered sequentially in any order:</p> <ul style="list-style-type: none"> comment: Specifies a certificate comment (free string) common-name: Specifies the common name of the issuer and subject (e.g. a domain name) country-code: Specifies the country codwo-alphanumeric-character country code, or "--" for none) days-valid: Specifies the number of days the certificate is valid email-addr: Specifies the email address hash-algorithm: Specifies the hashing function used for signature algorithm. Default value is SHA256. key-size-bits: Specifies the size of the private key in bits (private key length in bits - at least 1024 but 2048 is strongly recommended) locality: Specifies the locality name org-unit: Specifies the organizational unit name organization: Specifies the organization name serial-num: Specifies the serial number for the certificate (a lower-case hexadecimal serial number prefixed with "0x") state-or-prov: Specifies the state or province name
	private-key pem	Specifies certificate contents in PEM format.
	prompt-private-key	Prompts for certificate private key with secure echo.
	public-cert	Installs a certificate.
	regenerate	Regenerates the named certificate using configured certificate generation default values for the specified validity period
	rename	Renames the certificate.
	Default	N/A
	Configuration Mode	Config

History	3.2.3000	First version
	3.3.4402	Added “hash-algorithm” parameter
	3.6.4000	Added “hash-algorithm” parameter
Role	admin	
Example	<pre>switch (config) # crypto certificate name system-self-signed generate self-signed hash-algorithm sha256</pre>	
Related Commands	N/A	
Notes		

crypto certificate system-self-signed

crypto certificate system-self-signed regenerate [days-valid <days>]

Configures default values for certificate generation.

Syntax Description	days-valid	Specifies the number of days the certificate is valid
Default	N/A	
Configuration Mode	Config	
History	3.2.1000	
Role	admin	
Example	switch (config) # crypto certificate system-self-signed regenerate days-valid 3	
Related Commands	N/A	
Notes		

show crypto certificate

```
show crypto certificate [detail | public-pem | default-cert [detail | public-pem] |
[name <cert-name> [detail | public-pem] | ca-list [default-ca-list]]
```

Displays information about all certificates in the certificate database.

Syntax Description	ca-list	Displays the list of supplemental certificates configured for the global default system CA certificate role.
	default-ca-list	Displays information about the currently configured default certificates of the CA list.
	default-cert	Displays information about the currently configured default certificate.
	detail	Displays all attributes related to the certificate.
	name	Displays information about the certificate specified.
	public-pem	Displays the uninterpreted public certificate as a PEM formatted data string
Default	N/A	
Configuration Mode	Config	
History	3.2.1000	
Role	admin	

Example

```
switch (config)# show crypto certificate
Certificate with name 'system-self-signed' (default-cert)
  Comment:                               system-generated self-signed certifi-
icate
  Private Key:                            present
  Serial Number:                          0x546c935511bcafc21ac0e8249fbe0844
  SHA-1 Fingerprint:                      fe6df38dd26801971cb2d44f62d-
be492b6063c5f

  Validity:
    Starts:                                2012/12/02 13:45:05
    Expires:                               2013/12/02 13:45:05

  Subject:
    Common Name:                           IBM-DEV-Bay4
    Country:                                IS
    State or Province:
    Locality:
    Organization:
    Organizational Unit:
    E-mail Address:

  Issuer:
    Common Name:                           IBM-DEV-Bay4
    Country:                                IS
    State or Province:
    Locality:
    Organization:
    Organizational Unit:
    E-mail Address:
switch (config)#
```

Related Commands N/A

Notes

show crypto encrypt-data**show encrypt-data**

Displays sensitive data encryption information.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.6.1002
Role	admin
Example	<pre>switch (config)# show crypto encrypt-data Sensitive files encryption: Status: enabled Key location: usb Cipher: aes256 switch (config)#</pre>
Related Commands	N/A
Notes	

show crypto ipsec

show crypto ipsec [brief | configured | ike | policy | sa]

Displays information ipsec configuration.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.2.1000
Role	admin
Example	<pre>switch (config)# show crypto ipsec IPSec Summary ----- Crypto IKE is using pluto (Openswan) daemon. Daemon process state is stopped. No IPSec peers configured. IPSec IKE Peering State ----- Crypto IKE is using pluto (Openswan) daemon. Daemon process state is stopped. No active IPSec IKE peers. IPSec Policy State ----- No active IPSec policies. IPSec Security Association State ----- No active IPSec security associations. switch (config)#</pre>
Related Commands	N/A
Notes	

4.14 Scheduled Jobs

Use the commands in this section to manage and schedule the execution of jobs

4.14.1 Commands

job

job <job ID>
no job <job ID>

Creates a job.
 The no form of the command deletes the job.

Syntax Description	job ID	An integer.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # job 100 switch (config job 100) #	
Related Commands	show jobs	
Notes	Job state is lost on reboot.	

command

command <sequence #> | <command>
no command <sequence #>

Adds a CLI command to the job.
The no form of the command deletes the command from the job.

Syntax Description	sequence #	An integer that controls the order the command is executed relative to other commands in this job. The commands are executed in an ascending order.
	command	A CLI command.
Default	N/A	
Configuration Mode	Config job	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config)# job 100 switch (config job 100) # command 10 "show power" switch (config job 100) #</pre>	
Related Commands	show jobs	
Notes	<ul style="list-style-type: none">• The command must be defined with inverted commas (“”)• The command must be added as it was executed from the “config” mode. For example, in order to change the interface description you need to add the command: “interface <type> <number> description my-description”.	

comment

comment <comment>
no comment

Adds a comment to the job.
 The no form of the command deletes the comment.

Syntax Description	comment	The comment to be added (string).
Default	""	
Configuration Mode	Config job	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config)# job 100 switch (config job 100) # comment Job_for_example switch (config job 100) #</pre>	
Related Commands	show jobs	
Notes		

enable

enable
no enable

Enables the specified job.
The no form of the command disables the specified job.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config job
History	3.1.0000
Role	admin
Example	<pre>switch (config)# job 100 switch (config job 100) # enable switch (config job 100) #</pre>
Related Commands	show jobs
Notes	If a job is disabled, it will not be executed automatically according to its schedule; nor can it be executed manually.

execute**execute**

Forces an immediate execution of the job.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config job
History	3.1.0000
Role	admin
Example	<pre>switch (config)# job 100 switch (config job 100) # execute switch (config job 100) #</pre>
Related Commands	show jobs
Notes	<ul style="list-style-type: none"> • The job timer (if set) is not canceled and the job state is not changed: i.e. the time of the next automatic execution is not affected • The job will not be run if not currently enabled

fail-continue

fail-continue
no fail-continue

Continues the job execution regardless of any job failures.
The no form of the command returns fail-continue to its default.

Syntax Description	N/A
Default	A job will halt execution as soon as any of its commands fails
Configuration Mode	Config job
History	3.1.0000
Role	admin
Example	<pre>switch (config)# job 100 switch (config job 100) # fail-continue switch (config job 100) #</pre>
Related Commands	show jobs
Notes	

name**name <job name>****no name**

Configures a name for this job.

The no form of the command resets the name to its default.

Syntax Description	name	Specifies a name for the job (string).
Default	"".	
Configuration Mode	Config job	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config)# job 100 switch (config job 100) # name my-job switch (config job 100) #</pre>	
Related Commands	show jobs	
Notes		

schedule type

schedule type <recurrence type>
no schedule type

Sets the type of schedule the job will automatically execute on.
The no form of the command resets the schedule type to its default.

Syntax Description	recurrence type	The available schedule types are: <ul style="list-style-type: none">• daily - the job is executed every day at a specified time• weekly - the job is executed on a weekly basis• monthly - the job is executed every month on a specified day of the month• once - the job is executed once at a single specified date and time• periodic - the job is executed on a specified fixed time interval, starting from a fixed point in time.
Default	once	
Configuration Mode	Config job	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config)# job 100 switch (config job 100) # schedule type once switch (config job 100) #</pre>	
Related Commands	show jobs	
Notes	A schedule type is essentially a structure for specifying one or more future dates and times for a job to execute.	

schedule <recurrence type>

schedule <recurrence type> <interval and date>
no schedule

Sets the type of schedule the job will automatically execute on.
 The no form of the command resets the schedule type to its default.

Syntax Description	recurrence type	The available schedule types are: <ul style="list-style-type: none"> • daily - the job is executed every day at a specified time • weekly - the job is executed on a weekly basis • monthly - the job is executed every month on a specified day of the month • once - the job is executed once at a single specified date and time • periodic - the job is executed on a specified fixed time interval, starting from a fixed point in time.
	interval and date	Interval and date, per recurrence type.
Default	once	
Configuration Mode	Config job	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config)# job 100 switch (config job 100) # schedule monthly interval 10 switch (config job 100) #</pre>	
Related Commands	show jobs	
Notes	A schedule type is essentially a structure for specifying one or more future dates and times for a job to execute.	

show jobs

show jobs [<job-id>]

Displays configuration and state (including results of last execution, if any exist) of all jobs, or of one job if a job ID is specified.

Syntax Description	job-id	Job ID.
---------------------------	--------	---------

Default	N/A	
----------------	-----	--

Configuration Mode	Config	
---------------------------	--------	--

History	3.1.0000	
----------------	----------	--

Role	admin	
-------------	-------	--

Example	<pre>switch (config) # show jobs 10 Job 10: Status: inactive Enabled: yes Continue on failure: no Schedule Type: once Time and date: 1970/01/01 00:00:00 +0000 Last Exec Time: Thu 2012/04/05 13:11:42 +0000 Next Exec Time: N/A Commands: Command 10: show power Last Output: ===== Module Status ===== PS1 OK PS2 NOT PRESENT switch (config) #</pre>	
----------------	--	--

Related Commands	show jobs	
-------------------------	-----------	--

Notes		
--------------	--	--

4.15 Statistics and Alarms

4.15.1 Commands

stats alarm <alarm-id> clear

stats alarm <alarm ID> clear

Clears alarm state.

Syntax Description	alarm ID	Alarms supported by the system, for example: <ul style="list-style-type: none"> • cpu_util_indiv - Average CPU utilization too high: percent utilization • disk_io - Operating System Disk I/O per second too high: kilobytes per second • fs_mnt - Free filesystem space too low: percent of disk space free • intf_util - Network utilization too high: bytes per second • memory_pct_used - Too much memory in use: percent of physical memory used • paging - Paging activity too high: page faults • temperature - Temperature is too high: degrees
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # stats alarm cpu_util_indiv clear switch (config) #</pre>	
Related Commands	show stats alarm	
Notes		

stats alarm <alarm-id> enable

stats alarm <alarm-id> enable
no stats alarm <alarm-id> enable

Enables the alarm.

The no form of the command disables the alarm, notifications will not be received.

Syntax Description	alarm ID	Alarms supported by the system, for example: <ul style="list-style-type: none">• cpu_util_indiv - Average CPU utilization too high: percent utilization• disk_io - Operating System Disk I/O per second too high: kilobytes per second• fs_mnt - Free filesystem space too low: percent of disk space free• intf_util - Network utilization too high: bytes per second• memory_pct_used - Too much memory in use: percent of physical memory used• paging - Paging activity too high: page faults• temperature - Temperature is too high: degrees
Default	The default is different per alarm-id	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # stats alarm cpu_util_indiv enable switch (config) #</pre>	
Related Commands	show stats alarm	
Notes		

stats alarm <alarm-id> event-repeat

stats alarm <alarm ID> event-repeat {single | while-not-cleared}
no stats alarm <alarm ID> event-repeat

Configures repetition of events from this alarm.

Syntax Description	alarm ID	Alarms supported by the system, for example: <ul style="list-style-type: none"> • cpu_util_indiv - Average CPU utilization too high: percent utilization • disk_io - Operating System Disk I/O per second too high: kilobytes per second • fs_mnt - Free filesystem space too low: percent of disk space free • intf_util - Network utilization too high: bytes per second • memory_pct_used - Too much memory in use: percent of physical memory used • paging - Paging activity too high: page faults • temperature - Temperature is too high: degrees
	single	Does not repeat events: only sends one event whenever the alarm changes state.
	while-not-cleared	Repeats error events until the alarm clears.
Default	single	
Configuration Mode	Config	
History	3.1.0000	
Role	monitor/admin	
Example	switch (config) # stats alarm cpu_util_indiv event-repeat single switch (config) #	
Related Commands	show stats alarm	
Notes		

stats alarm <alarm-id> {rising | falling}

stats alarm <alarm ID> {rising | falling} {clear-threshold | error-threshold} <threshold-value>

Configure alarms thresholds.

Syntax Description	alarm ID	Alarms supported by the system, for example: <ul style="list-style-type: none">• cpu_util_indiv - Average CPU utilization too high: percent utilization• disk_io - Operating System Disk I/O per second too high: kilobytes per second• fs_mnt - Free filesystem space too low: percent of disk space free• intf_util - Network utilization too high: bytes per second• memory_pct_used - Too much memory in use: percent of physical memory used• paging - Paging activity too high: page faults• temperature - Temperature is too high: degrees
	falling	Configures alarm for when the statistic falls too low.
	rising	Configures alarm for when the statistic rises too high.
	error-threshold	Sets threshold to trigger falling or rising alarm.
	clear-threshold	Sets threshold to clear falling or rising alarm.
	threshold-value	The desired threshold value, different per alarm.
Default	Default is different per alarm-id	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # stats alarm cpu_util_indiv falling clear-threshold 10 switch (config) #</pre>	
Related Commands	show stats alarm	
Notes	Not all alarms support all four thresholds.	

stats alarm <alarm-id> rate-limit

```
stats alarm <alarm ID> rate-limit {count <count-type> <count> | reset | window
<window-type> <duration>}
```

Configures alarms rate limit.

Syntax Description	alarm ID	Alarms supported by the system, for example: <ul style="list-style-type: none"> • cpu_util_indiv - Average CPU utilization too high: percent utilization • disk_io - Operating System Disk I/O per second too high: kilobytes per second • fs_mnt - Free filesystem space too low: percent of disk space free • intf_util - Network utilization too high: bytes per second • memory_pct_used - Too much memory in use: percent of physical memory used • paging - Paging activity too high: page faults • temperature - Temperature is too high: degrees
	count-type	Long medium, or short count (number of alarms).
	reset	Set the count and window durations to default values for this alarm.
	window-type	Long medium, or short count, in seconds.
Default	Short window: 5 alarms in 1 hour Medium window: 20 alarms in 1 day Long window: 50 alarms in 7 days	
Configuration Mode	Config	
History	3.1.0000	
Role	monitor/admin	
Example	<pre>switch (config) # stats alarm paging rate-limit window long 2000 switch (config) #</pre>	
Related Commands	show stats alarm	
Notes		

stats chd <chd-id> clear

stats chd <CHD ID> clear

Clears CHD counters.

Syntax Description	CHD ID	CHD supported by the system, for example: <ul style="list-style-type: none">• cpu_util - CPU utilization: percentage of time spent• cpu_util_ave - CPU utilization average: percentage of time spent• cpu_util_day - CPU utilization average: percentage of time spent• disk_device_io_hour - Storage device I/O read/write statistics for the last hour: bytes• disk_io - Operating system aggregate disk I/O average (KB/sec)• eth_day• eth_hour• eth_ip_day• eth_ip_hour• fs_mnt_day - Filesystem system usage average: bytes• fs_mnt_month - Filesystem system usage average: bytes• fs_mnt_week - Filesystem system usage average: bytes• ib_day• ib_hour• intf_day - Network interface statistics aggregation: bytes• intf_hour - Network interface statistics (same as “interface” sample)• intf_util - Aggregate network utilization across all interfaces• memory_day - Average physical memory usage: bytes• memory_pct - Average physical memory usage• paging - Paging activity: page faults• paging_day - Paging activity: page faults
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	

Example switch (config) # stats chd memory_day clear
 switch (config) #

Related Commands show stats chd

Notes

stats chd <chd-id> enable

stats chd <chd-id> enable
no stats chd <chd-id> enable

Enables the CHD.
The no form of the command disables the CHD.

Syntax Description	chd-id	CHD supported by the system, for example: <ul style="list-style-type: none">• cpu_util - CPU utilization: percentage of time spent• cpu_util_ave - CPU utilization average: percentage of time spent• cpu_util_day - CPU utilization average: percentage of time spent• disk_device_io_hour - Storage device I/O read/write statistics for the last hour: bytes• disk_io - Operating system aggregate disk I/O average: KB/sec• eth_day• eth_hour• fs_mnt_day - Filesystem system usage average: bytes• fs_mnt_month - Filesystem system usage average: bytes• fs_mnt_week - Filesystem system usage average: bytes• ib_day• ib_hour• intf_day - Network interface statistics aggregation: bytes• intf_hour - Network interface statistics (same as “interface” sample)• intf_util - Aggregate network utilization across all interfaces• memory_day - Average physical memory usage: bytes• memory_pct - Average physical memory usage• paging - Paging activity: page faults• paging_day - Paging activity: page faults
Default	Enabled	
Configuration Mode	Config	
History	3.1.0000	
Role	monitor/admin	

Example switch (config) # stats chd memory_day enable
 switch (config) #

Related Commands show stats chd

Notes

stats chd <chd-id> compute time

stats chd <CHD ID> compute time {interval | range} <number of seconds>

Sets parameters for when this CHD is computed.

Syntax Description	CHD ID	Possible IDs:
		<ul style="list-style-type: none"> • cpu_util - CPU utilization: percentage of time spent • cpu_util_ave - CPU utilization average: percentage of time spent • cpu_util_day - CPU utilization average: percentage of time spent • disk_device_io_hour - Storage device I/O read/write statistics for the last hour: bytes • disk_io - Operating system aggregate disk I/O average: KB/sec • eth_day • eth_hour • fs_mnt_day - Filesystem system usage average: bytes • fs_mnt_month - Filesystem system usage average: bytes • fs_mnt_week - Filesystem system usage average: bytes • ib_day • ib_hour • intf_day - Network interface statistics aggregation: bytes • intf_hour - Network interface statistics (same as “interface” sample) • intf_util - Aggregate network utilization across all interfaces • memory_day - Average physical memory usage: bytes • memory_pct - Average physical memory usage • paging - Paging activity: page faults • paging_day - Paging activity: page faults
	interval	Specifies calculation interval (how often to do a new calculation) in number of seconds.
	range	Specifies calculation range, in number of seconds.
	number of seconds	Number of seconds.
Default	Different per CHD	

Configuration Mode	Config
History	3.1.0000
Role	monitor/admin
Example	<pre>switch (config) # stats chd memory_day compute time interval 120 switch (config) # show stats chd memory_day CHD "memory_day" (Average physical memory usage: bytes): Source dataset: sample "memory" Computation basis: time Interval: 120 second(s) Range: 1800 second(s) switch (config) #</pre>
Related Commands	show stats chd
Notes	

stats sample <sample-id> clear

stats sample <sample ID> clear

Clears sample history.

Syntax Description	sample ID	Possible sample IDs are: <ul style="list-style-type: none">• congested• cpu_util - CPU utilization: milliseconds of time spent• disk_device_io - Storage device I/O statistics• disk_io - Operating system aggregate disk I/O: KB/sec• eth• eth-abs• eth_ip• fan - Fan speed• fs_mnt_bytes - Filesystem usage: bytes• fs_mnt_inodes - Filesystem usage: inodes• ib• interface - Network interface statistics• intf_util - Network interface utilization: bytes• memory - System memory utilization: bytes• paging - Paging activity: page faults• power - Power supply usage• power-consumption• temperature - Modules temperature
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # stats sample temperature clear switch (config) #	
Related Commands	show stats sample	
Notes		

stats sample <sample-id> enable

stats sample <sample-id> enable
no stats sample <sample-id> enable

Enables the sample.

The no form of the command disables the sample.

Syntax Description	sample-id	Possible sample IDs are: <ul style="list-style-type: none"> • congested • cpu_util - CPU utilization: milliseconds of time spent • disk_device_io - Storage device I/O statistics • disk_io - Operating system aggregate disk I/O: KB/sec • eth • fan - Fan speed • fs_mnt_bytes - Filesystem usage: bytes • fs_mnt_inodes - Filesystem usage: inodes • ib • interface - Network interface statistics • intf_util - Network interface utilization: bytes • memory - System memory utilization: bytes • paging - Paging activity: page faults • power - Power supply usage • power-consumption • temperature - Modules temperature
Default	Enabled	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # stats sample temperature enable switch (config) #</pre>	
Related Commands	show stats sample	
Notes		

stats sample <sample-id> interval

stats sample <sample ID> interval <number of seconds>

Sets the amount of time between samples for the specified group of sample data.

Syntax Description	sample ID	Possible sample IDs are: <ul style="list-style-type: none">• congested• cpu_util - CPU utilization: milliseconds of time spent• disk_device_io - Storage device I/O statistics• disk_io - Operating system aggregate disk I/O: KB/sec• eth• fan - Fan speed• fs_mnt_bytes - Filesystem usage: bytes• fs_mnt_inodes - Filesystem usage: inodes• ib• interface - Network interface statistics• intf_util - Network interface utilization: bytes• memory - System memory utilization: bytes• paging - Paging activity: page faults• power - Power supply usage• power-consumption• temperature - Modules temperature
	number of seconds	Interval in seconds.
Default	Different per sample	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # stats sample temperature interval 1 switch (config) # show stats sample temperature Sample "temperature" (Modules temperature): Enabled: yes Sampling interval: 1 second switch (config) #</pre>	
Related Commands	show stats sample	
Notes		

stats clear-all

stats clear all

Clears data for all samples, CHDs, and status for all alarms.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	switch (config) # stats clear-all switch (config) #
Related Commands	N/A
Notes	

stats export

```
stats export <format> <report name> [{after | before} <yyyy/mm/dd>
<hh:mm:ss>] [filename <filename>]
```

Exports statistics to a file.

Syntax Description	format	Currently the only supported value for <format> is “csv” (comma-separated value).
	report name	Determines dataset to be exported. Possible report names are: <ul style="list-style-type: none">• memory - Memory utilization• paging - Paging I/O• cpu_util - CPU utilization
	after before	Only includes stats collected after or before a specific time.
	yyyy/mm/dd	Date: It must be between 1970/01/01 and 2038/01/19.
	hh:mm:ss	Time: It must be between 00:00:00 and 03:14:07 UTC and is treated as local time.
	filename	Specifies filename to give new report. If a filename is specified, the stats will be exported to a file of that name; otherwise a name will be chosen automatically and will contain the name of the report and the time and date of the export. Any automatically-chosen name will be given a .csv extension.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # stats export csv memory filename mellanoxexample before 2000/08/14 15:59:50 after 2000/08/14 15:01:50 Generated report file: mellanoxexample.csv switch (config) # show files stats mellanoxexample.csv switch (config) #</pre>	

Related Commands show files stats

Notes

show stats alarm

show stats alarm [<Alarm ID> [rate-limit]]

Displays status of all alarms or the specified alarm.

Syntax Description	Alarm ID	May be: <ul style="list-style-type: none">• cpu_util_indiv - Average CPU utilization too high: percent utilization• disk_io - Operating System Disk I/O per second too high: kilobytes per second• fs_mnt - Free filesystem space too low: percent of disk space free• intf_util - Network utilization too high: bytes per second• memory_pct_used - Too much memory in use: percent of physical memory used• paging - Paging activity too high: page faults• temperature - Temperature is too high: degrees
	rate-limit	Displays rate limit parameters.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # show stats alarm Alarm cpu_util_indiv (Average CPU utilization too high): ok Alarm disk_io (Operating System Disk I/O per second too high): (dis- abled) Alarm fs_mnt (Free filesystem space too low): ok Alarm intf_util (Network utilization too high): (disabled) Alarm memory_pct_used (Too much memory in use): (disabled) Alarm paging (Paging activity too high): ok Alarm temperature (Temperature is too high): ok switch (config) #</pre>	
Related Commands	stats alarm	
Notes		

show stats chd

show stats chd [<CHD ID>]

Displays configuration of all statistics CHDs.

Syntax Description	CHD ID	May be: <ul style="list-style-type: none"> • cpu_util_indiv - Average CPU utilization too high: percent utilization • disk_io - Operating System Disk I/O per second too high: kilobytes per second • fs_mnt - Free filesystem space too low: percent of disk space free • intf_util - Network utilization too high: bytes per second • memory_pct_used - Too much memory in use: percent of physical memory used • paging - Paging activity too high: page faults • temperature - Temperature is too high: degrees
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # show stats chd disk_device_io_hour CHD "disk_device_io_hour" (Storage device I/O read/write statistics for the last hour: bytes): Enabled: yes Source dataset: sample "disk_device_io" Computation basis: data points Interval: 1 data point(s) Range: 1 data point(s) switch (config) #</pre>	
Related Commands	stats chd	
Notes		

show stats cpu

show stats cpu

Displays some basic stats about CPU utilization:

- the current level
- the peak over the past hour
- the average over the past hour

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # show stats cpu CPU 0 Utilization: 6% Peak Utilization Last Hour: 16% at 2012/02/28 08:47:32 Avg. Utilization Last Hour: 8% switch (config) #</pre>
Related Commands	N/A
Notes	

show stats sample

show stats sample [<sample ID>]

Displays sampling interval for all samples, or the specified one.

Syntax Description	sample ID	Possible sample IDs are: <ul style="list-style-type: none"> • congested • cpu_util - CPU utilization: milliseconds of time spent • disk_device_io - Storage device I/O statistics • disk_io - Operating system aggregate disk I/O: KB/sec • eth • fan - Fan speed • fs_mnt_bytes - Filesystem usage: bytes • fs_mnt_inodes - Filesystem usage: inodes • ib • interface - Network interface statistics • intf_util - Network interface utilization: bytes • memory - System memory utilization: bytes • paging - Paging activity: page faults • power - Power supply usage • power-consumption • temperature - Modules temperature
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # show stats sample fan Sample "fan" (Fan speed): Enabled: yes Sampling interval: 1 minute 11 seconds switch (config) #</pre>	
Related Commands	N/A	
Notes		

4.16 Chassis Management

The chassis manager provides the user access to the following information:

Table 28 - Chassis Manager Information

Accessible Parameters	Description
switch temperatures	Displays system's temperature
power supply voltages	Displays power supplies' voltage levels
fan unit	Displays system fans' status
power unit	Displays system power consumers
Flash memory	Displays information about system memory utilization.

Additionally, it monitors:

- AC power to the PSUs
- DC power out from the PSUs
- Chassis failures

4.16.1 System Health Monitor

The system health monitor scans the system to decide whether or not the system is healthy. When the monitor discovers that one of the system's modules (leaf, spine, fan, or power supply) is in an unhealthy state or returned from an unhealthy state, it notifies the users through the following methods:

- System logs – accessible to the user at any time as they are saved permanently on the system
- Status LEDs – changed by the system health monitor when an error is found in the system and is resolved
- email/SNMP traps – notification on any error found in the system and resolved

4.16.1.1 Re-Notification on Errors

When the system is in an unhealthy state, the system health monitor notifies the user about the current unresolved issue every X seconds. The user can configure the re-notification gap by running the “health notif-cntr <counter>” command.

4.16.1.2 System Health Monitor Alerts Scenarios

- System Health Monitor sends notification alerts in the following cases:

Table 29 - System Health Monitor Alerts Scenarios (Sheet 1 of 7)

Alert Message	Scenario	Notification Indicator	Recovery Action	Recovery Message
<fan_name> speed is below minimal range	A chassis fan speed is below minimal threshold: 15% of maximum speed	Email, fan LED and system status LED set red, log alert, SNMP.	Check the fan and replace it if required	“<fan_name> has been restored to its normal state”
Fan <fan_number> speed in spine number <spine_number> is below minimal range	A spine fan speed is below minimal threshold: 30% of maximum speed	Email, fan LED and system status LED set red, log alert, SNMP	Check the fan and replace it if required	“Fan speed <fan_number> in spine number <spine_number> has been restored to its normal state”
<fan_name> is unresponsive	A chassis fan is not responsive on MLNX-OS systems	Email, fan LED and system status LED set red, log alert, SNMP	Check fan connectivity and replace it if required	“<fan_name> has been restored to its normal state”
Fan <fan_number> in spine number <spine_number> is unresponsive	A spine fan is not responsive on MLNX-OS systems	Email, fan LED and system status LED set red, log alert, SNMP	Check fan connectivity and replace it if required	“Fan <fan_number> in spine number <spine_number> has been restored to its normal state”
<fan_name> is not present	A chassis fan is missing	Email, fan LED and system status LED set red, log alert, SNMP	Insert a fan unit	“<fan_name> has been restored to its normal state”
Fan <fan_number> in spine number <spine_number> is not present.	A spine fan is missing	Email, fan LED and system status LED set red, log alert, SNMP	Insert a fan unit	“Fan <fan_number> in spine number <spine_number> has been restored to its normal state”
Insufficient number of working fans in the system	Insufficient number of working fans in the system	Email, fan LED and system status LED set red, log alert, SNMP	Plug in additional fans or change faulty fans	“The system currently has sufficient number of working fans”

Table 29 - System Health Monitor Alerts Scenarios (Sheet 2 of 7)

Alert Message	Scenario	Notification Indicator	Recovery Action	Recovery Message
Power Supply <ps_number> voltage is out of range	The power supply voltage is out of range.	Email, power supply LED and system status LED set red, log alert, SNMP	Check the power connection of the PS	“Power Supply <ps_number> voltage is in range”
Power supply <ps_number> temperature is too hot	A power supply unit temperature is higher than the maximum threshold of 70 Celsius on MLNX-OS systems	Email, power supply LED and system status LED set red, log alert, SNMP	Check chassis fans connections. On MLNX-OS systems, check system fan connections.	“Power supply <ps_number> temperature is back to normal”
Power Supply <number> is unresponsive	A power supply is malfunctioning or disconnected	Email, system status LED set red, log alert, SNMP	Connect power cable or replace malfunctioning PS	“Power supply has been removed” or “PS has been restored to its normal state”
Unit/leaf/spine <leaf/spine number> is unresponsive	A leaf/spine is not responsive	Email, system status LED set red, log alert, SNMP	Check leaf/spine connectivity and replace it if required	“Leaf/spine number <leaf/spine number> has been restored to its normal state”
Unit/leaf/spine voltage is out of range	One of the voltages in a MLNX-OS unit is below minimal threshold or higher than the maximum threshold - both thresholds are 15% of the expected voltage	Email, system status LED set red, log alert, SNMP	Check leaf connectivity	“Unit voltage is in range”
ASIC temperature is too hot	A SwitchX unit temperature is higher than the maximum threshold of 105 Celsius on MLNX-OS systems	Email, system status LED set red, log alert, SNMP	Check the fans system	“SwitchX temperature is back to normal”

Table 29 - System Health Monitor Alerts Scenarios (Sheet 3 of 7)

Alert Message	Scenario	Notification Indicator	Recovery Action	Recovery Message
BBU Health Monitoring				
“BBU<num> active alarms: Under-temperature during discharge (UTD)”	Under-temperature during discharge	Email, system status LED set red, log alert, SNMP	Check ambient temperature. Replace BBU if the problem persists.	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Under-temperature during charge (UTC)”	Under-temperature during charge	Email, system status LED set red, log alert, SNMP	Check ambient temperature. Replace BBU if the problem persists.	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Over pre-charge current (PCHGC)”	Over pre-charge current	Email, system status LED set red, log alert, SNMP	Replace BBU if the problem persists.	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Overcharging voltage (CHGV)”	Overcharging voltage	Email, system status LED set red, log alert, SNMP	Replace BBU if the problem persists.	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Overcharging current (CHGC)”	Overcharging current	Email, system status LED set red, log alert, SNMP	Replace BBU if the problem persists.	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Overcharge (OC)”	Overcharged BBU	Email, system status LED set red, log alert, SNMP	Replace BBU if the problem persists.	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Charge timeout suspend (CTOS)”	Charge timeout suspend	Email, system status LED set red, log alert, SNMP	N/A	“Module BBU<num> has been restored to its normal state”

Table 29 - System Health Monitor Alerts Scenarios (Sheet 4 of 7)

Alert Message	Scenario	Notification Indicator	Recovery Action	Recovery Message
“BBU<num> active alarms: Charge timeout (CTO)”	Charge timeout	Email, system status LED set red, log alert, SNMP	N/A	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Pre-charge timeout suspend (PTOS)”	Pre-charge timeout suspend	Email, system status LED set red, log alert, SNMP	N/A	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Pre-charge timeout (PTO)”	Pre-charge timeout	Email, system status LED set red, log alert, SNMP	N/A	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Over-temperature FET (OTF)”	Over-temperature FET	Email, system status LED set red, log alert, SNMP	N/A	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Cell under-voltage compensated (CUVC)”	Cell under-voltage compensated	Email, system status LED set red, log alert, SNMP	Replace BBU if the problem persists.	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Over-temperature during discharge (OTD)”	Over-temperature during discharge	Email, system status LED set red, log alert, SNMP	Replace BBU if the problem persists.	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Over-temperature during charge (OTC)”	Over-temperature during charge	Email, system status LED set red, log alert, SNMP	Check ambient temperature. Replace BBU if the problem persists.	“Module BBU<num> has been restored to its normal state”

Table 29 - System Health Monitor Alerts Scenarios (Sheet 5 of 7)

Alert Message	Scenario	Notification Indicator	Recovery Action	Recovery Message
“BBU<num> active alarms: Short-circuit during discharge latch (ASCDL)”	Short-circuit during discharge latch	Email, system status LED set red, log alert, SNMP	Replace BBU	N/A
“BBU<num> active alarms: Short-circuit during discharge (ASCL)”	Short-circuit during discharge	Email, system status LED set red, log alert, SNMP	Replace BBU if the problem persists.	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Short-circuit during charge latch (ASCCL)”	Short-circuit during charge latch	Email, system status LED set red, log alert, SNMP	Replace BBU	N/A
“BBU<num> active alarms: Short-circuit during charge (ASCC)”	Short-circuit during charge	Email, system status LED set red, log alert, SNMP	Replace BBU if the problem persists.	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Overload during discharge latch (AOLDL)”	Overload during discharge latch	Email, system status LED set red, log alert, SNMP	Replace BBU	N/A
“BBU<num> active alarms: Overload during discharge (AOLD)”	Overload during discharge	Email, system status LED set red, log alert, SNMP	Replace BBU if the problem persists.	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Over-current during discharge 1 (OCD1)”	Over-current during discharge	Email, system status LED set red, log alert, SNMP	Replace BBU if the problem persists.	“Module BBU<num> has been restored to its normal state”

Table 29 - System Health Monitor Alerts Scenarios (Sheet 6 of 7)

Alert Message	Scenario	Notification Indicator	Recovery Action	Recovery Message
“BBU<num> active alarms: Over-current during discharge 2 (OCD2)”	Over-current during discharge	Email, system status LED set red, log alert, SNMP	Replace BBU if the problem persists.	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Over-current during charge 1 (OCC1)”	Over-current during charge	Email, system status LED set red, log alert, SNMP	Replace BBU if the problem persists.	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Over-current during charge 2 (OCC2)”	Over-current during charge	Email, system status LED set red, log alert, SNMP	Replace BBU if the problem persists.	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Cell over-voltage (COV)”	Cell over-voltage	Email, system status LED set red, log alert, SNMP	Replace BBU if the problem persists (may take up to 48 hours if BBU was in storage).	“Module BBU<num> has been restored to its normal state”
“BBU<num> active alarms: Cell under-voltage (CUV)”	Cell under-voltage	Email, system status LED set red, log alert, SNMP	Replace BBU if the problem persists.	“Module BBU<num> has been restored to its normal state”
“Module BBU<num> voltage is out of range”	Cell over-voltage	Email, system status LED set red, log alert, SNMP	Replace BBU if the problem persists (may take up to 48 hours if BBU was in storage).	“Module BBU<num> voltage is back in range”
“Module BBU<num> current is too high”	Over-current during charge	Email, system status LED set red, log alert, SNMP	Replace BBU if the problem persists.	“BBU<num> has been restored to its normal state”

Table 29 - System Health Monitor Alerts Scenarios (Sheet 7 of 7)

Alert Message	Scenario	Notification Indicator	Recovery Action	Recovery Message
“Module BBU<num> current is too high”	Over-current during discharge	Email, system status LED set red, log alert, SNMP	Replace BBU if the problem persists.	“BBU<num> has been restored to its normal state”
“Module BBU<num> temperature is too hot”	Over-temperature during charge	Email, system status LED set red, log alert, SNMP	Check ambient temperature. Replace BBU if the problem persists.	“Module BBU<num> temperature is back to normal”
“Module BBU<num> temperature is too hot”	Over-temperature during discharge	Email, system status LED set red, log alert, SNMP	Check ambient temperature. Replace BBU if the problem persists.	“Module BBU<num> temperature is back to normal”

4.16.2 Power Management

4.16.2.1 Width Reduction Power Saving

Link width reduction (LWR) is a Mellanox proprietary power saving feature to be utilized to economize the power usage of the fabric. LWR may be used to manually or automatically configure a certain connection between HPE M-series Switch systems to lower the width of a link from 4X operation to 1X based on the traffic flow.

LWR is relevant only for 40GbE speeds in which the links are operational at a 4X width.



When “show interfaces” is used, a port’s speed appears unchanged even when only one lane is active.

LWR has three operating modes per interface:

- Disabled – LWR does not operate and the link remains in 4X under all circumstances.
- Automatic – the link automatically alternates between 4X and 1X based on traffic flow.
- Force – a port is forced to operate in 1X mode lowering the throughput capability of the port. This mode should be chosen in cases where constant low throughput is expected on

the port for a certain time period – after which the port should be configured to one of the other two modes, to allow higher throughput to pass through the port.



See command “power-management width” on page 464.

Table 30 - LWR Configuration Behavior

Switch-A Configuration	Switch-B Configuration	Behavior
Disable	Disable	LWR is disabled.
Disable	Force	Transmission from Switch-B to Switch-A operates at 1X. On the opposite direction, LWR is disabled.
Disable	Auto	Depending on traffic flow, transmission from Switch-B to Switch-A may operate at 1X. On the opposite direction, LWR is disabled.
Auto	Force	Transmission from Switch-B to Switch-A operates at 1 lane. Transmission from Switch-A to Switch-B may operate at 1X depending on the traffic.
Auto	Auto	Width of the connection depends on the traffic flow
Force	Force	Connection between the switches operates at 1x

4.16.3 Monitoring Environmental Conditions

Step 1. Display module's temperature. Run:

```
switch (config) # show temperature
=====
Module  Sensor                CurTemp  Status
              (Celsius)
=====
MGMT    CPU_BOARD_MONITOR    40.00   OK
L01     BOARD_MONITOR        27.00   OK
L01     QSFP_TEMP1           24.00   OK
L01     QSFP_TEMP2           22.00   OK
L01     QSFP_TEMP3           21.00   OK
L01     SX                   38.00   OK
L02     BOARD_MONITOR        27.00   OK
L02     QSFP_TEMP1           24.50   OK
L02     QSFP_TEMP2           22.50   OK
L02     QSFP_TEMP3           21.50   OK
L02     SX                   32.00   OK
PS2     PS_MONITOR           24.66   OK
PS3     PS_MONITOR           31.04   OK
PS4     PS_MONITOR           28.06   OK
S01     BOARD_MONITOR        23.00   OK
S01     SX                   34.00   OK
S01     SX_AMBIENT_TEMP      22.50   OK
S02     BOARD_MONITOR        24.00   OK
S02     SX                   49.00   OK
S02     SX_AMBIENT_TEMP      24.00   OK
switch (config) #
```

Step 2. Display measured voltage levels of power supplies. Run:

```
switch (config) # show voltage
=====
Module  Power Meter      Reg  Expected  Actual  Status
      Voltage      Voltage
=====
PS2     PS_MONITOR       V1   48.00     46.88   OK
PS3     PS_MONITOR       V1   48.00     48.29   OK
PS4     PS_MONITOR       V1   48.00     48.29   OK
MGMT    CPU_BOARD_MONITOR V1   12.00     11.92   OK
MGMT    CPU_BOARD_MONITOR V2   2.50      2.48    OK
MGMT    CPU_BOARD_MONITOR V3   3.30      3.31    OK
MGMT    CPU_BOARD_MONITOR V4   3.30      3.30    OK
MGMT    CPU_BOARD_MONITOR V5   1.80      1.81    OK
MGMT    CPU_BOARD_MONITOR V6   1.20      1.26    OK
S01     BOARD_MONITOR    V1   3.30      3.33    OK
S01     BOARD_MONITOR    V2   2.27      2.15    OK
S01     BOARD_MONITOR    V3   1.80      1.76    OK
S01     BOARD_MONITOR    V4   3.30      3.30    OK
S01     BOARD_MONITOR    V5   0.90      0.93    OK
S01     BOARD_MONITOR    V6   1.20      1.19    OK
S02     BOARD_MONITOR    V1   3.30      3.26    OK
S02     BOARD_MONITOR    V2   2.27      2.16    OK
S02     BOARD_MONITOR    V3   1.80      1.79    OK
S02     BOARD_MONITOR    V4   3.30      3.31    OK
S02     BOARD_MONITOR    V5   0.90      0.95    OK
S02     BOARD_MONITOR    V6   1.20      1.20    OK
L01     BOARD_MONITOR    V1   3.30      3.33    OK
L01     BOARD_MONITOR    V2   2.27      2.16    OK
L01     BOARD_MONITOR    V3   1.80      1.76    OK
L01     BOARD_MONITOR    V4   3.30      3.30    OK
L01     BOARD_MONITOR    V5   0.90      0.93    OK
L01     BOARD_MONITOR    V6   1.20      1.19    OK
L02     BOARD_MONITOR    V1   3.30      3.26    OK
L02     BOARD_MONITOR    V2   2.27      2.17    OK
L02     BOARD_MONITOR    V3   1.80      1.79    OK
L02     BOARD_MONITOR    V4   3.30      3.30    OK
L02     BOARD_MONITOR    V5   0.90      0.89    OK
L02     BOARD_MONITOR    V6   1.20      1.19    OK
switch (config) #
```

Step 3. Display the fan speed and status. Run:

```
switch (config) # show fan
=====
Module           Device           Fan  Speed      Status
                (RPM)
=====
FAN1             FAN              F1  6994.00    OK
FAN2             FAN              F1  6792.00    OK
FAN3             FAN              F1  6870.00    OK
FAN4             FAN              F1  6818.00    OK
S01              FAN              F1  7800.00    OK
S01              FAN              F2  8130.00    OK
S02              FAN              F1  8130.00    OK
S02              FAN              F2  8490.00    OK
S03              FAN              -   -          NOT PRESENT
S04              FAN              -   -          NOT PRESENT
S05              FAN              -   -          NOT PRESENT
S06              FAN              -   -          NOT PRESENT
switch (config) #
```

Step 4. Display the voltage current and status of each module in the system. Run:

```
switch (config) # show power consumers
=====
Module           Power    Voltage  Current  Status
                (Watts)  (V)      (Amp)
=====
FAN1             15.55    48.00    0.32    OK
FAN2             16.26    48.00    0.34    OK
FAN3             15.30    48.00    0.32    OK
FAN4             14.98    48.00    0.31    OK
L01              32.45    48.00    0.68    OK
L02              28.75    48.00    0.60    OK
MGMT             16.08    48.00    0.34    OK
S01              37.34    48.00    0.78    OK
S02              35.09    48.00    0.73    OK

Total power used : 211.79 W
Max power : 686.00 W
switch (config) #
```

4.16.4 USB Access

MLNX-OS can access USB devices attached to switch systems. USB devices are automatically recognized and mounted upon insertion. To access a USB device for reading or writing a file, you need to provide the path to the file on the mounted USB device in the following format:

```
scp://username:password@hostname/var/mnt/usb1/<file name>
```

While username and password are the admin username and password and hostname is the IP of the switch.

Examples:

- **To fetch an image from a USB device, run the command:**

```
switch (config) # "image fetch scp://admin:admin@127.0.0.1/var/mnt/usb1/image.img
```

- **To save log file 'my-logfile' to a USB device under the name test_logfile using the logging files command, run (in Enable or Config mode):**

```
switch (config) # logging files upload my-logfile scp://username:password@hostname/var/mnt/usb1/test_logfile
```

- **To safely remove the USB and to flush the cache, after writing (log files, for example) to a USB, use the usb eject command (in Enable or Config mode).**

```
switch (config) # usb eject
```

4.16.5 Unit Identification LED

The unit identification (UID) LED is a hardware feature used as a means of locating a specific switch system in a server room.

- **To activate the UID LED on a switch system, run:**

```
switch (config) # led MGMT uid on
```

- **To verify the LED status, run:**

```
switch (config) # show leds
Module  LED           Status
-----
MGMT    UID               Blue
```

- **To deactivate the UID LED on a switch system, run:**

```
switch (config) # led MGMT uid off
```

4.16.6 System Reboot

4.16.6.1 Rebooting 1U Switches

- **To reboot a 1U switch system:**

Step 1. Enter Enable or Config mode. Run:

```
switch >
switch > enable
switch # configure terminal
```

Step 2. Reboot the system. Run:

```
switch (config) # reload
```

4.16.7 Commands

4.16.7.1 Chassis Management

clear counters

clear counters [**all** | **interface** <type> <number>] [**ethernet**|**port-channel**]

Clears switch counters.

Syntax Description	all	Clears all switch counters.
	type	A specific interface type
	number	The interface number.
Default	N/A	
Configuration Mode	Config Interface Port Channel	
History	3.2.3000	
	3.6.4000	Added note
Role	admin	
Example	switch (config) # clear counters	
Related Commands		
Notes	The command also clears storm-control counters.	

health

health {**max-report-len** <length> | **re-notif-cntr** <counter> | **report-clear**}

Configures health daemon settings.

Syntax Description	max-report-len <length>	Sets the length of the health report - number of line entries. Range: 10-2048.
	re-notif-cntr <counter>	Health control changes notification counter, in seconds. Range: 120-7200 seconds.
	report-clear	Clears the health report.
Default	max-report-len: 50 re-notif-cntr:	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # health re-notif-cntr 125 switch (config) #	
Related Commands	show health-report	
Notes		

led uid**led <module> uid <on | off>**

Configures the UID LED.

Syntax Description	module	Specifies the module whose UID LED to configure
	on	Turns on UID LED
	off	Turns off UID LED
Default	N/A	
Configuration Mode	Config	
History	3.6.1002	
Role	admin	
Example	<pre>switch (config) # led MGMT uid on switch (config) #</pre>	
Related Commands	N/A	
Notes	•	

power-management width

power-management width {auto | force}
no power-management width

Sets the width of the interface to be automatically adjusted.
The no form of the command disables power-saving.

Syntax Description	auto	Allows the system to automatically decide whether to work in power-saving mode or not.
	force	Forces power-saving mode on the port.
Default	Disabled	
Configuration Mode	Config Interface Ethernet	
History	3.3.4000	
Role	admin	
Example	switch (config interface ib 1/1) # power-management width auto switch (config) #	
Related Commands	show interface	
Notes		

usb eject

usb eject

Gracefully turns off the USB interface.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # usb eject switch (config) #</pre>
Related Commands	N/A
Notes	Applicable only for systems with USB interface.

show asic-version

show asic-version

Displays firmware ASIC version.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.1.0000	
	3.4.2008	Updated Example

Role	admin
-------------	-------

Example	<pre>switch (config) # show asic-version ===== Module Device Version ===== MGMT SX 9.2.9160</pre>
----------------	---

Related Commands	N/A
-------------------------	-----

Notes	
--------------	--

show bios

show bios

Displays the bios version information.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.3.4150
Role	admin
Example	<pre>switch (config) # show bios BIOS version : 4.6.5 BIOS subversion : Official AMI Release BIOS release date : 07/02/2013 switch (config) #</pre>
Related Commands	
Notes	The command is available only on x86 systems

show cpld

show cpld

Displays status of all CPLDs in the system.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000 3.3.4302 Updated example
Role	admin
Example	<pre>switch (config) # show cpld ===== Name Type Version ===== Cpld1 CPLD_TOR 4 Cpld2 CPLD_PORT1 2 Cpld3 CPLD_PORT2 2 Cpld4 CPLD_MEZZ 3 switch (config) #</pre>
Related Commands	N/A
Notes	

show fan

show fan

Displays fans status.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	<pre> switch (config) # show fan switch (config) # show fan ===== Module Device Fan Speed Status (RPM) ===== FAN FAN F1 5340.00 OK FAN FAN F2 5340.00 OK FAN FAN F3 5640.00 OK FAN FAN F4 5640.00 OK PS1 FAN F1 5730.00 OK PS2 FAN - - NOT PRESENT switch (config) # </pre>
Related Commands	N/A
Notes	

show health-report

show health-report

Displays health report.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000 First version 3.3.0000 Output update
Role	admin
Example	<pre>switch (config) # show health-report ===== ALERTS CONFIGURATION ===== Re-notification counter (sec):[3600] Report max counter: [50] ===== HEALTH REPORT ===== No Health issues file switch (config) #</pre>
Related Commands	N/A
Notes	Problems with the power supply cannot be monitored on SX1016 switch systems.

show inventory

show inventory

Displays system inventory.

Syntax Description	N/A				
Default	N/A				
Configuration Mode	Any Command Mode				
History	3.1.0000				
	3.4.1604	Removed CPU module output from Example			
	3.5.1000	Removed Type column from Example			
	3.6.1002	Updated output			
Role	admin				
Example	switch (config) # show inventory				

	Module	Part number	Serial Number	Asic Rev.	HW Rev.

	CHASSIS	MSX1036B-1SFR	MT1205X01549	N/A	A1
	MGMT	MSX1036B-1SFR	MT1205X01549	0	A1
	FAN	MSX60-FF	MT1206X07209	N/A	A3
	PS1	MSX60-PF	MT1206X06697	N/A	A2
	switch (config) #				
Related Commands	N/A				
Notes					

show leds

show leds [<module>]

Displays the LED status of the switch system.

Syntax Description	module	Specifies the module whose LED status to display
Default	N/A	
Configuration Mode	Config	
History	3.6.1002 3.6.2002	Updated output
Role	admin	
Example	<pre>switch (config) # show leds Module LED Status ----- MGMT STATUS Green MGMT FAN1 Green MGMT FAN2 Green MGMT FAN3 Green MGMT FAN4 Green MGMT PS_STATUS Green MGMT PS1 Green MGMT PS2 Green MGMT UID Blue</pre>	
Related Commands	N/A	
Notes		

show memory

show memory

Displays memory status.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	<pre>switch (config) # show memory Total Used Free Used+B/C Free-B/C Physical 2027 MB 761 MB 1266 MB 1214 MB 813 MB Swap 0 MB 0 MB 0 MB Physical Memory Borrowed for System Buffers and Cache: Buffers: 0 MB Cache: 452 MB Total Buffers/Cache: 452 MB switch (config) #</pre>
Related Commands	N/A
Notes	

show module

show module

Displays modules status.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.1.0000	First version
	3.3.0000	Added “Is Fatal” column
	3.4.2008	Updated command output
	3.4.3000	Updated command output and added note

Role	admin
-------------	-------

Example	<pre>switch (config) # show module ===== Module Status ===== MGMT ready FAN1 ready FAN2 ready PS1 ready PS2 not-present switch (config) #</pre>
----------------	--

Related Commands	N/A
-------------------------	-----

Notes	The Status column may have one of the following values: error, fatal, not-present, powered-off, powered-on, ready.
--------------	--

show power

show power

Displays power supplies and power usage.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000 3.5.1000 Updated Example
Role	admin
Example	<pre>switch (config) # show power ----- Module Device Sensor Power Voltage Current Capacity Feed Status [Watts] [Volts] [Amp] [Watts] ----- PS1 power-mon input 32.25 12.11 1.26 800.00 DC OK PS2 power-mon input 46.56 12.13 2.33 800.00 DC OK switch (config) #</pre>
Related Commands	N/A
Notes	

show power consumers

show power consumers

Displays power consumption information.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000 3.5.1000 Updated Example
Role	admin
Example	<pre>switch (config) # show power consumers ----- Module Device Sensor Power Voltage Current Status [Watts] [Volts] [Amp] ----- MGMT CURR_MONITOR 12V 52.96 11.71 4.52 OK Total power used : 52.96 Watts switch (config) #</pre>
Related Commands	N/A
Notes	

show protocols

show protocols

Displays all protocols enabled in the system.

Syntax Description	N/A	
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.2.3000	
	3.3.4550	Updated Example
	3.6.1002	Updated Example
Role	admin	
Example	<pre>switch (config) # show protocols Ethernet enabled spanning-tree rst lacp disabled lldp disabled igmp-snooping disabled ets enabled priority-flow-control disabled sflow disabled openflow disabled mlag disabled dot1x disabled isolation-group disabled IP routing disabled bgp disabled pim disabled vrrp disabled ospf disabled magp disabled dhcp-relay disabled</pre>	
Related Commands	N/A	
Notes		

show resources

show resources

Displays system resources.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	<pre>switch (config) # show resources Total Used Free Physical 2027 MB 761 MB 1266 MB Swap 0 MB 0 MB 0 MB Number of CPUs: 1 CPU load averages: 0.11 / 0.23 / 0.23 CPU 1 Utilization: 5% Peak Utilization Last Hour: 19% at 2012/02/15 13:26:19 Avg. Utilization Last Hour: 7% switch (config) #</pre>
Related Commands	N/A
Notes	

show system capabilities

show system capabilities

Displays system capabilities.

Syntax Description	N/A	
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.0000	First version
	3.3.0000	Added gateway support
	3.6.1002	Updated output
Role	admin	
Example	<pre>switch (config) # show system capabilities Ethernet: Supported, L2, L3 Ethernet Max licensed speed: 56Gb</pre>	
Related Commands	show system profile	
Notes		

show system mac

show system mac

Displays system MAC address.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	<pre>switch (config) # show system mac 00:02:C9:5E:AF:18 switch (config) #</pre>
Related Commands	N/A
Notes	

show system profile

show system profile

Displays system profile.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.2.0000
Role	admin
Example	<pre>switch (config) # show system profile eth-single-switch switch (config) #</pre>
Related Commands	system profile
Notes	

show system type

show system type

Displays system type.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.5.1000
Role	admin
Example	<pre>switch (config) # show system type SX1036 switch (config) #</pre>
Related Commands	
Notes	

show temperature

show temperature

Displays system temperature sensors status.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	<pre> switch (config) # show temperature ===== Module Component Reg CurTemp Status (Celsius) ===== MGMT BOARD_MONITOR T1 25.00 OK MGMT CPU_BOARD_MONITOR T1 26.00 OK MGMT CPU_BOARD_MONITOR T2 41.00 OK MGMT QSFP_TEMP1 T1 23.00 OK MGMT QSFP_TEMP2 T1 22.50 OK MGMT QSFP_TEMP3 T1 23.00 OK MGMT SX T1 37.00 OK switch (config) # </pre>
Related Commands	N/A
Notes	

show version

show version

Displays version information for the currently running system image.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	<pre>M2100-aj [standalone: master] (config) # show version Product name: MLNX-OS Product release: 3.6.4006 Build ID: #1-dev Build date: 2017-07-03 16:17:39 Target arch: x86_64 Target hw: x86_64 Built by: jenkins@a25f8aaaec03 Version summary: X86_64 3.6.4006 2017-07-03 16:17:39 x86_64 Product model: x86onie Host ID: 248A073D50BC System serial num: \"MT1630X07550\" System UUID: 80c07a32-58b8-11e6-8000-7cfe90fa2840 Uptime: 19d 21h 2m 56.512s CPU load averages: 1.02 / 1.06 / 1.06 Number of CPUs: 4 System memory: 2340 MB used / 5470 MB free / 7810 MB total Swap: 0 MB used / 0 MB free / 0 MB total M2100-aj [standalone: master] (config) #</pre>
Related Commands	N/A
Notes	

show version concise

show version concise

Displays concise version information for the currently running system image.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	<pre>M2100-aj [standalone: master] (config) # show version concise X86_64 3.6.4006 2017-07-03 16:17:39 x86_64 M2100-aj [standalone: master] (config) #</pre>
Related Commands	N/A
Notes	

show voltage

show voltage

Displays voltage level measurements on different sensors.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.1.0000
	3.3.5006

Updated Example

Role	admin
-------------	-------

Example	<pre>switch (config) # show voltage ===== Module Power Meter Reg Expected Actual Status High Low Voltage Voltage Voltage Voltage Range Range ===== MGMT BOARD_MONITOR USB 5V sensor 5.00 5.15 OK 5.55 4.45 MGMT BOARD_MONITOR Asic I/O sensor 2.27 2.11 OK 2.55 1.99 MGMT BOARD_MONITOR 1.8V sensor 1.80 1.79 OK 2.03 1.57 MGMT BOARD_MONITOR SYS 3.3V sensor 3.30 3.28 OK 3.68 2.92 MGMT BOARD_MONITOR CPU 0.9V sensor 0.90 0.93 OK 1.04 0.76 MGMT BOARD_MONITOR 1.2V sensor 1.20 1.19 OK 1.37 1.03 MGMT CPU_BOARD_MONITOR 12V sensor 12.00 11.67 OK 13.25 10.75 MGMT CPU_BOARD_MONITOR 12V sensor 2.50 2.46 OK 2.80 2.20 MGMT CPU_BOARD_MONITOR 2.5V sensor 3.30 3.26 OK 3.68 2.92 MGMT CPU_BOARD_MONITOR SYS 3.3V sensor 3.30 3.24 OK 3.68 2.92 MGMT CPU_BOARD_MONITOR SYS 3.3V sensor 1.80 1.79 OK 2.03 1.57 MGMT CPU_BOARD_MONITOR 1.8V sensor 1.20 1.24 OK 1.37 1.03 switch (config) #</pre>
----------------	---

Related Commands	N/A
-------------------------	-----

Notes	
--------------	--

show chassis ha**show chassis ha**

Displays Chassis HA parameters and status.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # show chassis ha 2-node HA state: Box management IP: 172.30.1.200/16 interface: mgmt0 local role: master local slot: 1 other state: ready reset count: 0 switch (config) #</pre>
Related Commands	chassis ha
Notes	This command is applicable only for director switch systems.

4.17 Network Management Interfaces

4.17.1 SNMP

Simple Network Management Protocol (SNMP), is a network protocol for the management of a network and the monitoring of network devices and their functions. SNMP supports asynchronous event (trap) notifications and queries.

MLNX-OS supports:

- SNMP versions v1, v2c and v3
- SNMP trap notifications
- Standard MIBs
- Mellanox private MIBs

4.17.1.1 Standard MIBs

Table 31 - Standard MIBs – Textual Conventions and Conformance MIBs

MIB	Standard	Comments
INET-ADDRESS-MIB	RFC-4001	
SNMPV2-CONF		
SNMPV2-TC	RFC 2579	
SNMPV2-TM	RFC 3417	
SNMP-USM-AES-MIB	RFC 3826	
IANA-LANGUAGE-MIB	RFC 2591	
IANA-RTPROTO-MIB	RFC 2932	
IANAifType-MIB		
IANA-ADDRESS-FAMILY-NUMBERS-MIB		



Starting from version 3.4.1600, IB interfaces in interfaces tables (i.e. ifTable, ifxTable) have changed from SX<if>/<port> to IB/port.

Table 32 - Standard MIBs – Chassis and Switch

MIB	Standard	Comments
RFC1213-MIB	RFC 1213	
IF-MIB	RFC 2863	ifXTable only supported.
ENTITY-MIB	RFC 4133	
ENTITY-SENSOR-MIB	RFC 3433	Fan and temperature sensors

Table 32 - Standard MIBs – Chassis and Switch

MIB	Standard	Comments
ENTITY-STATE-MIB	RFC 4268	Fan and temperature states
Bridge MIB	RFC 4188	dot1dTpFdbGroup and dot1dStaticGroup are not supported in this MIB, it is supported as a part of Q-Bridge-MIB.
Q-Bridge MIB	RFC 4363	The following SNMP groups are not supported: <ul style="list-style-type: none"> • qBridgeVlanStatisticsGroup, • qBridgeVlanStatisticsOverflowGroup , • qBridgeVlanHCStatisticsGroup, • qBridgeLearningConstraintsGroup. The following SNMP tables are not supported: <ul style="list-style-type: none"> • dot1qTpGroupTable (dynamic MC MAC addresses) • dot1qForwardAllTable (GMRP) • dot1qForwardUnregisteredTable (GMRP) dot1qVlanCurrentTable (GVRP)
RSTP-MIB	RFC 4318	
LLDP-MIB	802.1AB-2005	
ENTITY-SENSOR-MIB	RFC 3433	<ul style="list-style-type: none"> • Port module transmit/receiver power sensors • Fan, temperature sensors
BGP4-MIB	RFC 4273	Only supports the following tables: <ul style="list-style-type: none"> • bgpLocalAs • bgpPeerLocalAddr • bgpPeerState bgpIdentifier
OSPF-MIB	RFC 4750	

4.17.1.2 Private MIB

Table 33 - Private MIBs Supported

MIB	Description
MELLANOX-SMI-MIB	Mellanox Private MIB main structure (no objects)
MELLANOX-PRODUCTS-MIB	List of OID – per managed system (sysObjID)
MELLANOX-IF-VPI-MIB	IfTable extensions
MELLANOX-EFM-MIB	Partially deprecated MIB (based on Mellanox-MIB) Traps definitions and test trap set scalar are supported.
MELLANOX-ENTITY-MIB	Enhances the standard ENTITY-MIB (contains GUID and ASIC revision).
MELLANOX-POWER-CYCLE	Allows rebooting the switch system
MELLANOX-SW-UPDATE-MIB	Allows viewing what SW images are installed, uploading and installing new SW images
MELLANOX-CONFIG-DB	Allows loading, uploading, or deleting configuration files
MELLANOX-ENTITY-STATE-MIB	Extension to support state change traps Note: Currently supported for power supply insertion and extraction only
MELLANOX-XSTP-MIB	Extension to support STP information
MELLANOX-DCB-TRAPS	Extension traps for ETC and PFC
MELLANOX-QOS	Proprietary QoS MIBs

Mellanox private MIBs can be downloaded from the [Mellanox Support](#) webpage.

4.17.1.3 Mellanox Private Traps

The following private traps are supported by MLNX-OS®.

Table 34 - SNMP Traps

Trap	Action Required
asicChipDown	Reboot the system.
asicOverTempReset	Check fans and environmental temperature.
asicOverTemp	Check fans and environmental temperature.
lowPower	Add/connect power supplies.
internalBusError	N/A
procCrash	Generate SysDump and contact Mellanox support.
cpuUtilHigh	N/A
procUnexpectedExit	Generate SysDump and contact Mellanox support.
diskSpaceLow	Clean images and sysDump files using the commands “image delete” and “file debug-dump delete”.

Table 34 - SNMP Traps

Trap	Action Required
systemHealthStatus	Refer to Health Status table.
lowPowerRecover	N/A
insufficientFans	Check Fans and environmental conditions.
insufficientFansRecover	N/A
insufficientPower	Add/connect power supplies, or change power mode using the command “power redundancy mode”.
insufficientPowerRecover	N/A

For additional information refer to MELLANOX-EFM-MIB.



For event-to-MIB mapping, please refer to [Table 26, “Supported Event Notifications and MIB Mapping,”](#) on page 301.

4.17.1.4 Configuring SNMP

➤ **To set up the SNMP:**

Step 1. Activate the SNMP server on the MLNX-OS switch (in configure mode) using the following commands:



Community strings are case sensitive.

```
switch (config) # snmp-server enable
switch (config) # snmp-server enable notify
switch (config) # snmp-server community public ro
switch (config) # snmp-server contact "contact name"
switch (config) # snmp-server host <host IP address> traps version 2c public
switch (config) # snmp-server location "location name"
switch (config) # snmp-server user admin v3 enable
switch (config) # snmp-server user admin v3 prompt auth md5 priv des
```

4.17.1.5 Configuring an SNMPv3 User

➤ **To configure SNMPv3 user:**

Step 1. Configure the user using the command:

```
switch (config) # snmp-server user [role] v3 prompt auth <hash type> priv <privacy type>
```

where

- user role – admin

- auth type – md5 or sha
- priv type – des or aes-128

Step 2. Enter authentication password and its confirmation.

Step 3. Enter privacy password and its confirmation.

```
switch (config) # snmp-server user admin v3 prompt auth md5 priv des
Auth password: *****
Confirm: *****
Privacy password: *****
Confirm: *****
switch (config) #
```

To retrieve the system table, run the following SNMP command:

```
snmpwalk -v3 -l authPriv -a MD5 -u admin -A "<Authentication password>" -x DES -X
"<privacy password>" <system ip> SNMPv2-MIB::system
```

4.17.1.6 Configuring an SNMP Notification

➤ *To set up the SNMP Notification (traps or informs):*

Step 1. Make sure SNMP and SNMP notification are enable. Run:

```
switch (config) # snmp-server enable
switch (config) # snmp-server enable notify
switch (config) #
```

Step 2. Configure SNMP host with the desired arguments (IP Address, SNMP version, authentication methods). More than one host can be configured. Each host may have different attributes. Run:

```
switch (config) # snmp-server host 10.134.47.3 traps version 3 user my-username auth
sha my-password
switch (config) #
```

Step 3. Verify the SNMP host configuration. Run:

```
switch (config) # show snmp host
Notifications enabled:      yes
Default notification community: public
Default notification port:  162

Notification sinks:

  10.134.47.3
    Enabled:                yes
    Port:                   162 (default)
    Notification type:      SNMP v3 trap
    Username:               my-username
    Authentication type:    sha
    Privacy type:           aes-128
    Authentication password: (set)
    Privacy password:       (set)

switch (config) #
```

Step 4. Configure the desired event to be sent via SNMP. Run:

```
switch (config) # snmp-server notify event interface-up
switch (config) #
```



This particular event is used as an example only.

Step 5. Verify the list of traps and informs being sent to out of the system. Run:

```
switch (config) # show snmp events
Events for which traps will be sent:
asic-chip-down: ASIC (Chip) Down
cpu-util-high: CPU utilization has risen too high
disk-space-low: Filesystem free space has fallen too low
health-module-status: Health module Status
insufficient-fans: Insufficient amount of fans in system
insufficient-fans-recover: Insufficient amount of fans in system recovered
insufficient-power: Insufficient power supply
interface-down: An interface's link state has changed to down
interface-up: An interface's link state has changed to up
internal-bus-error: Internal bus (I2C) Error
liveness-failure: A process in the system was detected as hung
low-power: Low power supply
low-power-recover: Low power supply Recover
new_root: local bridge became a root bridge
paging-high: Paging activity has risen too high
power-redundancy-mismatch: Power redundancy mismatch
process-crash: A process in the system has crashed
process-exit: A process in the system unexpectedly exited
snmp-authtrap: An SNMP v3 request has failed authentication
topology_change: local bridge triggerred a topology change
unexpected-shutdown: Unexpected system shutdown
switch (config) #
```



To print event notifications to the terminal (SSH or CONSOLE) refer to [Section 4.6.1, “Monitor,”](#) on page 255.

4.17.1.7 SNMP SET Operations

MLNX-OS allows the user to use SET operations via SNMP interface. This is needed to configure a user/community supporting SET operations.

4.17.1.7.1 Enabling SNMP SET

➤ *To allow SNMP SET operations using SNMPv1/v2:*

Step 1. Enable SNMP communities. Run:

```
switch (config) # snmp-server enable communities
```

Step 2. Configure a read-write community. Run:

```
switch (config) # snmp-server community my-community-name rw
```

- Step 3.** Make sure SNMP communities are enabled (enabled by default). Make sure “(DISABLED)” does not appear beside “Read-only communities” / “Read-write communities”.
Run:

```
switch (config) # show snmp
SNMP enabled: yes
SNMP port: 161
System contact:
System location:
Read-only communities:
    public

Read-write communities:
    my-community-name
switch (config) # show snmp
No Listen Interfaces.
```

- Step 4.** Configure this RW community in your MIB browser.

➤ **To allow SNMP SET operations using SNMPv3:**

- Step 1.** Create an SNMPv3 user. Run:

```
switch (config) # snmp-server user myuser v3 auth sha <password1> priv aes-128 <password2>
```



It is possible to use other configuration options not specified in the example above. Please refer to the command “[snmp-server user](#)” on page 529 for more information.

- Step 2.** Make sure the username is enabled for SET access and has admin capability level. Run:

```
switch (config) # show snmp user
User name: myuser
  Enabled overall:      yes
  Authentication type:  sha
  Privacy type:         aes-128
  Authentication password: (set)
  Privacy password:     (set)
  Require privacy:      yes
SET access:
  Enabled:              yes
  Capability level:     admin
```

MLNX-OS supports the OIDs for SET operation listed in Table 35 which are expanded upon in the following subsections.

Table 35 - Supported SET OIDs

MIB Name	OID Name	OID
MELLANOX-EFM-MIB	sendTestTrapSet	1.3.6.1.4.1.33049.2.1.1.1.6.0
SNMPv2-MIB	sysName	1.3.6.1.2.1.1.5.0

Table 35 - Supported SET OIDs

MIB Name	OID Name	OID
MELLANOX-CONFIG-DB	mellanoxConfigDBCcmdExecute	1.3.6.1.4.1.33049.12.1.1.2.3.0
	mellanoxConfigDBCcmdFilename	1.3.6.1.4.1.33049.12.1.1.2.2.0
	mellanoxConfigDBCcmdStatus	1.3.6.1.4.1.33049.12.1.1.2.4.0
	mellanoxConfigDBCcmdStatusString	1.3.6.1.4.1.33049.12.1.1.2.5.0
	mellanoxConfigDBCcmdUri	1.3.6.1.4.1.33049.12.1.1.2.1.0
	MELLANOX-POWER-CYCLE	mellanoxPowerCycleCmdExecute
	mellanoxPowerCycleCmdStatus	1.3.6.1.4.1.33049.10.1.1.2.2.0
	mellanoxPowerCycleCmdStatusString	1.3.6.1.4.1.33049.10.1.1.2.3.0
MELLANOX-SW-UPDATE	mellanoxSWUpdateCmdSetNext	1.3.6.1.4.1.33049.11.1.1.2.1.0
	mellanoxSWUpdateCmdUri	1.3.6.1.4.1.33049.11.1.1.2.2.0
	mellanoxSWUpdateCmdExecute	1.3.6.1.4.1.33049.11.1.1.2.3.0
	mellanoxSWUpdateCmdStatus	1.3.6.1.4.1.33049.11.1.1.2.4.0
	mellanoxSWUpdateCmdStatusString	1.3.6.1.4.1.33049.11.1.1.2.5.0
	mellanoxSWActivePartition	1.3.6.1.4.1.33049.11.1.1.3.0.0
	mellanoxSWNextBootPartition	1.3.6.1.4.1.33049.11.1.1.4.0.0

4.17.1.7.2 Sending a Test Trap SET Request

MLNX-OS allows the user to use test the notification mechanism via SNMP SET. Sending a SET request with the designated OID triggers a test trap.

Prerequisites:

1. Enable SET operations by following the instructions in [Section 4.17.1.7.1, “Enabling SNMP SET,”](#) on page 494.
2. Configure host to which to send SNMP notifications.
3. Set a trap receiver in the MIB browser.

➤ *To send a test trap:*

Step 1. Send a SET request to the switch IP with the OID 1.3.6.1.4.1.33049.2.1.1.1.6.0.

Step 2. Make sure the test trap is received by the aforementioned trap receiver (OID: 1.3.6.1.4.1.33049.2.1.2.13).

4.17.1.7.3 Setting Hostname with SNMP

HPE supports setting system hostname using an SNMP SET request as described in SNMPv2-MIB (sysName, OID: 1.3.6.1.2.1.1.5.0).

The restrictions on setting a hostname via CLI also apply to setting a hostname through SNMP. Refer to the command “[hostname](#)” on page 133 for more information.

4.17.1.7.4 Power Cycle with SNMP

HPE supports power cycling its systems using an SNMP SET request as described in MELLANOX-POWER-CYCLE MIB.

Power cycle command is issued via the OID `mellanoxPowerCycleCmdExecute`. The following options are available:

- Reload – saves any unsaved configuration and reloads the switch
- Reload discard – reboots the system and discards of any unsaved changes
- Reload force – forces an expedited reload on the system even if it is busy without saving unsaved configuration (equals the CLI command `reload force`)
- Reload slave – reloads the slave management on dual management systems (must be executed from the master management module)



On dual management systems it is advised to connect via the BIP to make sure commands are executed from the master management.

4.17.1.7.5 Changing Configuration with SNMP

HPE supports making configuration changes on its systems using SNMP SET requests. Configuration requests are performed by setting several values (arguments) and then executing a command by setting the value for the relevant operation.

It is possible to set the parameters and execute the commands on the same SNMP request or separate them to several SET operations. Upon executing a command, the values of its arguments remain and can be read using GET commands.

Once a command is executed there may be two types of errors:

- Immediate: This error results in a failure of the SNMP request. This means a critical error in the SNMP request has occurred or that a previous SET request is being executed
- Delayed: The SET request has been accepted by the switch but an error occurred during its execution.

For example, when performing a fetch (download) operation, an immediate error can occur when the given URL is invalid. A delayed error can occur if the download process fails due to network connectivity issues.

The following parameters are arguments are supported:

- Command URI – URI to fetch the configuration file from or upload the file to (for supported URI format please refer to the CLI command “configuration fetch” for more details)
- Config file name – filename to save the configuration file to or to upload to remote location

The following commands are supported:

- BinarySwitchTo – replaces the configuration file with a new binary configuration file. This option fetches the configuration file from the URI provided in the `mellanoxConfigD-BCmdUri` and switches to that configuration file. This command should be preceded by a reload command in order for the new configuration to apply.
- TextApply – fetches a configuration file in human-readable format and applies its configuration upon the current configuration.
- BinaryUpload – uploads a binary format configuration file of the current running configuration or an existing configuration file on the switch to the URI in the `mellanoxConfigD-BCmdUri` command. The filename parameter indicates what configuration file on the switch to upload.
- TextUpload – uploads a human-readable configuration file of the current running configuration or an existing configuration file on the switch to the URI in the `mellanoxConfigD-BCmdUri` command. The filename parameter indicates what configuration file on the switch to upload (same as the CLI command `configuration text generate file <filename> upload`).
- ConfigWrite – saves active configuration to a filename on the switch as given in the filename parameter. In case filename is “active”, active configuration is saved to the current saved configuration (same as the CLI command `configuration write`).
- BinaryDelete – deletes a binary based configuration file
- TextDelete – deletes a text based configuration file

4.17.1.7.6 Upgrading MLNX-OS Software with SNMP

HPE supports upgrading MLNX-OS software using an SNMP SET request as described in MEL-LANOX-SW-UPDATE MIB.

The software upgrade command is issued via the OID `mellanoxSWUpdateCmdExecute`. The following options are available:

- Update – fetches the image from a specified URI (equivalent to the command “image fetch” followed by “image install”)

The image to update from is defined by the OID `mellanoxSWUpdateCmdUri`. The restrictions on the URI are identical to what is supported in the CLI command “image fetch” on page 213.

- Set-Next – changes the image for the next boot equivalent to the CLI command “image boot”)

The partition from which to boot is defined by the OID `mellanoxSWUpdateCmdSetNext`. The parameters for this OID are as follows:

- 0 – no change
- 1 – partition 1
- 2 – partition 2
- 3 – next partition (default)

Using the OIDs `mellanoxSWUpdateCmdStatus` and `mellanoxSWUpdateCmdStatusString` you may view the status of the latest operation performed from the aforementioned in either integer values, or human-readable forms, respectively. The integer values presented may be as follows:

- 0 – no operation
- 1-100 – progress%
- 101 – success
- 200 – failure

4.17.1.8 IF-MIB and Interface Information

MLNX-OS supports displaying information of switch ports, LAG ports, MLAG ports and VLAN interfaces on all systems via SNMP interface. This feature is enabled by default. The interface information is available in the `ifTables`, `ifXTable` and `mellanoxIfVPITable`. Additionally, traps for interface up/down, and internal link suboptimal speed are enabled. The user has the ability to enable one or both of these traps.

Interface up/down traps are sent whenever there is a change in the interface's operational state. These traps are suppressed for internal links when the internal link's speed does not match the configured speed of the link (mismatch condition).

4.17.2 JSON API

JavaScript Object Notation (JSON) is a machine-to-machine data-interchange format which is supported in MLNX-OS® CLI.

The JSON API allows executing CLI commands and receiving outputs in JSON format which can be easily parsed by the calling software.



The JSON API is available on x86 based systems only.

4.17.2.1 Authentication

The JSON API protocol runs over HTTP/HTTPS and uses the existing web authentication mechanism.

In order to access the system via HTTP/HTTPS, an HTTP/HTTPS client is needed to send POST requests to the system.



HTTP access to the web-based management console needs to be enabled using the command “web http enable” to allow POST requests.

The HTTP client must first be authenticated by sending a POST request to the following URL:

```
http://<switch-ip-address>/admin/launch?script=rh&template=login&action=login
```

The POST request content should contain the following data:

```
"f_user_id=<user name>&f_password=<user password>"
```

After a successful login, a session id (cookie) is returned to be used for other HTTP requests in the system.

See [Section 4.17.2.6, “JSON Examples,”](#) on page 506 for examples.

4.17.2.2 Sending the Request

After successful authentication, the HTTP client can start sending JSON requests. All requests (POST and GET) should be sent to the following URL:

```
http://<switch-ip-address>/admin/launch?script=json
```

After the request is handled in the system the HTTP client receives a JSON response with an indication of the request execution result. If there is data resulting from the request, it is returned as part of the response.

See [Section 4.17.2.3, “JSON Request Format,”](#) on page 500 for the CLI request format).

See [Section 4.17.2.4, “JSON Response Format,”](#) on page 502 for the reply format.

JSON requests may also be sent using the WebUI. For more information on using the WebUI with JSON, please refer to [Section 4.17.2.7, “JSON Request Using WebUI,”](#) on page 512.

4.17.2.3 JSON Request Format

4.17.2.3.1 JSON Execution Requests

JSON execution requests are HTTP POST requests that contain CLI commands to be executed in the system.

Execution request can contain a single command or multiple commands to be executed.

Single command execution request format:

```
{  
  "cmd": "<CLI command to execute>"  
}
```

Example:

```
{  
  "cmd": "show interface ethernet 1/1"  
}
```

Multiple command execution request format:

```
{
  "commands":["<CLI cmd 1>", "<CLI cmd 2>", ... , <CLI cmd n>]
}
```

Example:

```
{
  "commands":
  [
    "show interface ethernet 1/1",
    "show interface ethernet 1/2"
  ]
}
```

In case of a multiple command request, the execution of the commands is done in the order they appear in the execution list. Note that the execution of a multiple command request will be stopped upon first failure. That is, in case the execution of one of the commands fails, none of the remaining commands will be executed.

See [Section 4.17.2.6, “JSON Examples,” on page 506](#) for examples..

Execution Type

Execution requests can be either synchronous (default) or asynchronous.

Synchronous requests will wait for a JSON response from the system. The synchronous request has a defined wait time after which the user will receive a timeout response. The timeout for a synchronous request is configurable by the user and is 30 seconds by default (see the CLI command [“json-gw synchronous-request-timeout” on page 538](#)).

Asynchronous requests will return immediately after sending the request with a reply containing a "job_id" key. The user can use the given job id to later query for request status and execution results. Queries for asynchronous request results are guaranteed to be accessible up to 60 seconds after the request has been completed.

To specify the execution type, the user needs to add the following key to the JSON execution request:

```
"execution_type": "<async|sync>"
```

Example:

```
{
  "execution_type": "async",
  "cmd": "show interface ethernet 1/1"
}
```

See [Section 4.17.2.6, “JSON Examples,” on page 506](#) for examples.

4.17.2.3.2 JSON Query Requests

JSON Query requests are HTTP GET requests that contain a job id parameter. Using a query request, the user can get information on the current execution state of an ongoing request or the

execution results of a completed request. To send a query request, the user should add the following parameters to the JSON URL:

```
job_id=<job number>
```

Example:

```
http://<switch-ip-address>/admin/launch?script=json&job_id=<job number>
```

See [Section 4.17.2.6, “JSON Examples,”](#) on page 506 for more examples.

4.17.2.4 JSON Response Format

4.17.2.4.1 Single Command Response Format

The HTTP POST response format structure is a JSON object consisting of 4 name-value pairs as follows:

```
{
  "executed_command": "<CLI command that was executed>",
  "status" = "<OK|ERROR>",
  "status_message" = "<information on the status received>",
  "data" = {the information that was asked for in the request}
}
```

- `executed_command` – the CLI command that was executed in the request
- `status` – the result of the request execution:
 - “OK” if the execution is successful
 - “ERROR” in case of a problem with the executionThe value type of this key is “string”.
- `data` – a JSON object containing the information requested. Returns an empty string if there is no data.
- `status message` – additional information on the received status. May be empty. The value type of this key is “string”.

Example:

```
{
  "executed_command": "show interface ethernet 1/1",
  "status": "OK",
  "status_message": "",
  "data":
  {
    "speed": "40GbE",
    "admin_state": "up"
  }
}
```

See [Section 4.17.2.6, “JSON Examples,”](#) on page 506 for more examples.

4.17.2.4.2 Multiple Command Response Format

The HTTP response format structure is a JSON object consisting of a list of JSON results. Each JSON structure in the list is structured the same as in the single command execution response (see the previous section).

However, the status field can contain in this case an additional value, “ABORTED”, in case a previous command failed. This status value indicates that the command has not been executed at all in the system.

```
{
  "results": [
    {
      "executed_command": "<...>",
      "status": "<OK|ERROR|ABORTED>",
      "status_message": "<...>",
      "data": {...}
    },
    {
      "executed_command": "<...>",
      "status": "<OK|ERROR|ABORTED>",
      "status_message": "<...>",
      "data": {...}
    },
    ...
    {
      "executed_command": "<...>",
      "status": "<OK|ERROR|ABORTED>",
      "status_message": "<...>",
      "data": {...}
    }
  ]
}
```

Example:

```
{
  "results": [
    {
      "executed_command": "show interface ethernet 1/1",
      "status": "OK",
      "status_message": "",
      "data": {"speed": "40GbE", "admin_state": "up"}
    },
    {
      "executed_command": "show interface ethernet 1/100",
      "status": "ERROR",
      "status_message": "wrong interface name",
      "data": ""
    },
    {
      "executed_command": "<show interface ethernet 1/2>",
      "status": "ABORTED",
      "status_message": "",
      "data": ""
    }
  ]
}
```

See [Section 4.17.2.6, “JSON Examples,”](#) on page 506 for more examples.

4.17.2.4.3 Query Response Format

Response to a query request can be of two types. In case the request completes its execution, the response will be similar to the single/multiple command response format, depending on the format of the request, and will display the execution results.

In case the execution is not complete yet, the response format will be similar to the single command response format. However, the status field will contain in this case the value "PENDING" to indicate that the request is still in progress. In addition, the "executed_command" field will contain the current request command being handled by the system.

Example:

```
{
  "executed_command": "show interface ethernet 1/1",
  "status": "PENDING",
  "status_message": "",
  "data": ""
}
```

See [Section 4.17.2.6, “JSON Examples,”](#) on page 506 for examples.

4.17.2.4.4 Asynchronous Response Format

Response to an asynchronous request is similar to the HTTP response format of the single command response. However, an additional unique field will be added, “job_id”, containing the job id number for querying the request later. The value of the job_id key is of type string.

Another difference is that the "executed_command" field will be empty.



Set commands normally do not return any data or output. If a set command does return an output, it will be displayed in the "status_message" field.

Example:

```
{
  "executed_command": ""
  "status": "OK"
  "status_message": ""
  "data": ""
  "job_id": "2754930426"
}
```

See Section 4.17.2.6, “JSON Examples,” on page 506 for examples.

4.17.2.5 Supported Commands

4.17.2.5.1 Set Commands

All non-interactive CLI set commands are supported.



Interactive commands are commands which require user interaction to complete (e.g., type “yes” to confirm). These commands are not supported by the JSON API.

4.17.2.5.2 Show Commands

Not all CLI show commands are currently supported by the JSON API. Unsupported commands return an error indication.

Support for all show commands will be completed in future MLNX-OS releases.

For a list of currently supported “show” commands, please refer to [Appendix C, “Show Commands Supported by JSON API,”](#) on page 1360.

4.17.2.6 JSON Examples

The following examples use curl (a common tool in Linux systems) to send HTTP POST requests to the system.

4.17.2.6.1 Authentication Example

Before sending JSON HTTP request, the user must first authenticate. Run the following from your server's shell to create a login session ID in the file: /tmp/cookie.

```
curl -c /tmp/cookie -d "f_user_id=admin&f_password=admin"
"http://10.10.10.10/admin/launch?script=rh&template=login&action=login"
```

Upon a successful login, you will receive a reply similar to the following:

```
<!DOCTYPE HTML PUBLIC "-//IETF//DTD HTML 2.0//EN">
<html><head>
<title>302 Found</title>
</head><body>
<h1>Found</h1>
<p>The document has moved <a href="http://10.10.10.10/admin/launch?script=rh&tem-
plate=home">here</a>.</p>
<hr>
<address>Apache Server at 10.10.10.10 Port 80</address>
</body></html>
```

The session id can now be used in all other JSON http requests to the system.

4.17.2.6.2 Synchronous Execution Request example

Single Command

This example sends a request to query the system profile.

Request (save it to a file named req.json):

```
{"cmd": "show system profile"}
```

Send the request:

```
curl -b /tmp/cookie -X POST -d @req.json "http://10.10.10.10/admin/launch?script=json"
```

Response:

When the system finishes processing the request, the user will receive a response similar to the following:

```
{
  "status": "OK",
  "executed_command": "show system profile",
  "status_message": "",
  "data": {
    "Profile": "ib",
    "Adaptive Routing": "yes",
    "Number of SWIDs": "1"
  }
}
```

Multiple Commands

This example sends a request to change an interface description and then queries for its status.

Request (save it to a file named req.json):

```
{"commands": ["interface ib 1/1 description test description",
  "show interfaces ib 1/1 status"]}
```

Send the request:

```
curl -b /tmp/cookie -X POST -d @req.json "http://10.10.10.10/admin/launch?script=json"
```

Response:

When the system finishes processing the request, the user will receive a response similar to the following:

```

{
  "results": [
    {
      "status": "OK",
      "executed_command": "interface ib 1/1 description test description",
      "status_message": "",
      "data": ""
    },
    {
      "status": "OK",
      "executed_command": "show interfaces ib 1/1 status",
      "status_message": "",
      "data": {
        "IB1/1": [
          {
            "Description": "test description",
            "Speed": "fdr",
            "Logical port state": "Initialize",
            "Physical port state": "LinkUp",
            "Current line rate": "56.0 Gbps",
            "IB Subnet": "infiniband-default"
          }
        ]
      }
    }
  ]
}

```

4.17.2.6.3 Asynchronous Execution Request example

This example sends an asynchronous request to change an interface description and then queries for its status.

Request (save it to a file named req.json):

```

{"execution_type": "async",
 "commands": ["interface ib 1/1 description test description",
 "show interfaces ib 1/1 status"]}

```

Send the request:

```

curl -b /tmp/cookie -X POST -d @req.json "http://10.10.10.10/admin/launch?script=json"

```

Response:

The system will immediately return a response similar to the following:

```
{
  "executed_command": "",
  "status": "OK",
  "status_message": "",
  "data": "",
  "job_id": "91329386"
}
```

4.17.2.6.4 Query Request Example

This example sends a request to query for a `job_id` received from a previous execution request.

Request:

The request is an http GET operation to the JSON URL with the "job_id" parameter.

Send the request:

```
curl -b /tmp/cookie -X GET -d @req.json "http://10.10.10.10/admin/
launch?script=json&job_id=91329386"
```

Response:

If the system is still processing the request, the user will receive a response similar to the following:

```
{
  "executed_command": " interface ib 1/1 description test description ",
  "status": "PENDING",
  "status_message": "",
  "data": ""
}
```

If the system is done processing the request, the user will receive a response similar to the following:

```
{
  "results": [
    {
      "status": "OK",
      "executed_command": "interface ib 1/1 description test description",
      "status_message": "",
      "data": ""
    },
    {
      "status": "OK",
      "executed_command": "show interfaces ib 1/1 status",
      "status_message": "",
      "data": {
        "IB1/1": [
          {
            "Description": "test description",
            "Speed": "fdr",
            "Logical port state": "Initialize",
            "Physical port state": "LinkUp",
            "Current line rate": "56.0 Gbps",
            "IB Subnet": "infiniband-default"
          }
        ]
      }
    }
  ]
}
```

4.17.2.6.5 Error Response Example

General Error

This example sends a request with an illegal JSON structure.

Request - without closing bracket "]" (save it to a file named req.json):

```
{
  "commands": ["interface ib 1/1 description test description",
  "show interfaces ib 1/1 status"]
}
```

Send the request:

```
curl -b /tmp/cookie -X POST -d @req.json "http://10.10.10.10/admin/launch?script=json"
```

Error response:

```
{
  "status": "ERROR",
  "executed_command": "",
  "status_message": "Handle request failed. Reason:\nIllegal JSON structure found in
given JSON data.\nExpecting , delimiter: line 1 column 95 (char 94)",
  "data": ""
}
```

Multiple Command Request Failure

This example sends a multiple command request where one command fails.

Request - with a non-existing interface (1/200) (save it to a file named req.json):

```
{
  "execution_type": "sync",
  "commands": [
    "interface ib 1/1 speed sdr",
    "interface ib 1/200 speed sdr",
    "interface ib 1/3 speed sdr"
  ]
}
```

Send the request:

```
curl -b /tmp/cookie -X POST -d @req.json "http://10.10.10.10/admin/launch?script=json"
```

Error response:

```
{
  "results": [
    {
      "status": "OK",
      "executed_command": "interface ib 1/1 speed sdr",
      "status_message": "",
      "data": ""
    },
    {
      "status": "ERROR",
      "executed_command": "interface ib 1/200 speed sdr",
      "status_message": "% 1st Interface does not exist",
      "data": ""
    },
    {
      "status": "ABORTED",
      "executed_command": "interface ib 1/3 speed sdr",
      "status_message": "",
      "data": ""
    }
  ]
}
```

4.17.2.7 JSON Request Using WebUI

The MLNX-OS® WebUI also allows users to send JSON HTTP POST requests.

Login to the WebUI → Go to the “Setup” tab → Select “JSON API” from the left side menu.



This section is displayed only if JSON API is enabled using the command “json-gw enable”.

4.17.2.7.1 To execute a JSON request

- Step 1.** Choose “Execute JSON command”
- Step 2.** Choose the “execution_type” from the drop down list
- Step 3.** In the "cmd" field type the CLI command to execute
- Step 4.** Press “Submit”

The JSON response is then shown in the “JSON Response” box below.

The HTTP method (HTTP POST in this case) and the URL used to send the request will be displayed next to their respective field.

Figure 12: JSON API WebUI Example

The screenshot displays the HPE StoreFabric SN2700M Management Console interface. The top navigation bar includes the Hewlett Packard Enterprise logo and the console title. Below the navigation bar, there are several icons representing different system components like Security, System, Ports, Status, etc. The main content area is titled 'JSON API' and features a sidebar on the left with a list of configuration categories. The 'JSON API' category is selected. The main content area is divided into three sections:

- JSON Configuration:** Contains a checkbox for 'Enable JSON API' which is checked. Below it are 'Apply' and 'Cancel' buttons.
- JSON Commands:** Contains two radio buttons: 'Execute JSON command' (selected) and 'Query asynchronous job status'. Below these is a text input field for 'Enter a CLI command to be executed:' containing the command '{ "execution_type": "sync", "cmd": "show xml-gw" }'. There are 'Submit' and 'Cancel' buttons below the input field.
- JSON Response:** Shows the HTTP Method as 'POST' and the URL as 'http://10.7.144.37/admin/launch?script=json'. Below this is a large text area containing the JSON response:


```
{
  "status": "OK",
  "executed_command": "show xml-gw",
  "status_message": "",
  "data": {
    "XML Gateway enabled": "yes"
  }
}
```

4.17.2.7.2 To Query an asynchronous JSON request

- Step 1.** Choose “Query asynchronous job status”
- Step 2.** Type the job id in the “Job ID” text box
- Step 3.** Press “Query Status”

The JSON response is then shown in the "JSON Response" box below.

The HTTP method (HTTP GET in this case) and the URL used to send the request will be displayed next to the "HTTP Method" and "URL" field respectively.

4.17.3 XML API

MLNX-OS XML API is documented in the *MLNX-OS® XML API Reference Guide*.

4.17.4 Commands

4.17.4.1 SNMP Commands

The commands in this section are used to manage the SNMP server.

snmp-server auto-refresh

```
snmp-server auto-refresh {enable | interval <time>}  
no snmp-server auto-refresh enable
```

Configures SNMPD refresh settings.
The no form of the command disables SNMPD refresh mechanism.

Syntax Description	enable	Enables SNMPD refresh mechanism.
	interval	Sets SNMPD refresh interval.
	time	In seconds. Range: 20-500.
Default	Enabled. Interval: 60 secs	
Configuration Mode	Config	
History	3.2.3000	
	3.4.1100	Added time parameter and updated notes
Role	admin	
Example	switch (config) # snmp-server auto-refresh interval 120	
Related Commands	show snmp	
Notes	<ul style="list-style-type: none">• When configuring an interval lower than 60 seconds, the following warning message appears asking for confirmation: “Warning: this configuration may increase CPU utilization, Type 'YES' to confirm: YES”.• When disabling SNMP auto-refresh, information is retrieved no more than once every 60 seconds just like SNMP tables that do not have an auto-refresh mechanism.	

snmp-server community

snmp-server community <community> [ro | rw]
no snmp-server community <community>

Sets a community name for either read-only or read-write SNMP requests. The no form of the command sets the community string to default.

Syntax Description	community	Community name.
	ro	Sets the read-only community string.
	rw	Sets the read-write community string.
Default	Read-only community: "public" Read-write community: ""	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch(config) # snmp-server community private rw switch (config) # show snmp SNMP enabled: yes SNMP port: 161 System contact: System location: Read-only community: public Read-write community: private Interface listen enabled: yes No Listen Interfaces. Traps enabled: yes Default trap community: public Default trap port: 162 No trap sinks configured. switch(config) #</pre>	
Related Commands	show snmp	
Notes	<ul style="list-style-type: none"> • If neither the "ro" or the "rw" parameters are specified, the read-only community is set as the default community • If the read-only community is specified, only queries can be performed • If the read-write community is specified, both queries and sets can be performed 	

snmp-server contact

snmp-server contact <contact name>
no snmp-server contact

Sets a value for the sysContact variable in MIB-II.
The no form of the command resets the parameter to its default value.

Syntax Description	contact name	Contact name.
Default	""	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # snmp-server contact my-name switch (config) # show snmp SNMP enabled: yes SNMP port: 161 System contact: my-name System location: Read-only community: public Read-write community: private Interface listen enabled: yes No Listen Interfaces. Traps enabled: yes Default trap community: public Default trap port: 162 No trap sinks configured. switch (config) #</pre>	
Related Commands	show snmp	
Notes		

snmp-server enable

snmp-server enable
no snmp-server enable

Enables SNMP-related functionality (SNMP engine, and traps)
 The no form of the command disables the SNMP server.

Syntax Description	N/A
Default	SNMP is enabled by default
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	switch (config) # snmp-server enable
Related Commands	show snmp
Notes	

snmp-server enable communities

snmp-server enable communities
no snmp-server enable communities

Enables community-based authentication.
The no form of the command disables community-based authentication.

Syntax Description	N/A
Default	SNMP server communities are enabled by default
Configuration Mode	Config
History	N/A
Role	admin
Example	switch (config) # snmp-server enable communities
Related Commands	show snmp
Notes	

snmp-server enable multi-communities

snmp-server enable multi-communities
no snmp-server enable multi-communities

Enables multiple communities to be configured.
 The no form of the command disables multiple communities to be configured.

Syntax Description	N/A
Default	SNMP server multi-communities are disabled by default
Configuration Mode	Config
History	N/A
Role	admin
Example	switch (config) # snmp-server enable multi-communities
Related Commands	show snmp
Notes	

snmp-server enable notify

snmp-server enable notify
no snmp-server enable notify

Enables sending of SNMP traps and informs from this system.
The no form of the command disables sending of SNMP traps and informs from this system.

Syntax Description	N/A
Default	SNMP notifies are enabled by default
Configuration Mode	Config
History	N/A
Role	admin
Example	<code>switch (config) # snmp-server enable notify</code>
Related Commands	<code>show snmp</code>
Notes	SNMP traps are only sent if there are trap sinks configured with the “snmp-server host...” command, and if these trap sinks are themselves enabled.

snmp-server enable set-permission

snmp-server enable set-permission <MIB-name>
no snmp-server enable set-permission <MIB-name>

Allows SNMP SET requests for items in a specified MIB.
 The no form of the command disallows SNMP SET requests for items in a specified MIB.

Syntax Description	N/A
Default	SNMP MIBs are all given permission for SET requests by default
Configuration Mode	Config
History	3.6.3004
Role	admin
Example	switch (config) # snmp-server enable set-permission MELLANOX-SW-UPDATE
Related Commands	show snmp set-permission
Notes	

snmp-server host

```
snmp-server host <IP address> {disable | {traps | informs} [<community> |
<port> | version <snmp version>]}
no snmp-server host <IPv4 or IPv6 address> {disable | {traps| informs} [<com-
munity> | <port>]}
```

Configures hosts to which to send SNMP traps.
The no form of the commands removes a host from which SNMP traps should be sent.

Syntax Description	IP address	IPv4 or IPv6 address.
	disable	Temporarily disables sending of traps to this host.
	community	Specifies trap community string.
	port	Overrides default UDP port for this trap sink.
	snmp version	Specifies the SNMP version of traps to send to this host.
Default	No hosts are configured Default community is “public” Default UDP port is 162 Default SNMP version is 2c	
Configuration Mode	Config	
History	3.1.0000	First version
	3.2.1050	Add inform option
Role	admin	

Example

```
switch (config) # snmp-server host 10.10.10.10 traps version 1
switch (config) # show snmp
SNMP enabled:          yes
SNMP port:             161
System contact:
System location:

Read-only communities:
    public

Read-write communities:
    (none)

Interface listen enabled: yes
No Listen Interfaces.

Traps enabled:         yes
Default trap community: public
Default trap port:    162

Trap sinks:
    10.10.10.10
        Enabled: yes
        Type: traps version 1
        Port: 162 (default)
        Community: public (default)
switch (config) #
```

Related Commands

```
show snmp
snmp-server enable
```

Notes

This setting is only meaningful if traps are enabled, though the list of hosts may still be edited if traps are disabled. Refer to “snmp-server enable” command.

snmp-server listen

```
snmp-server listen {enable | interface <ifName>}  
no snmp-server listen {enable | interface <ifName> }
```

Configures SNMP server interface access restrictions.
The no form of the command disables the listen interface restricted list for SNMP server.

Syntax Description	enable	Enables SNMP interface restrictions on access to this system.
	ifName	Adds an interface to the “listen” list for SNMP server. For example: “mgmt0”, “mgmt1”.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # snmp listen enable switch (config) # show snmp SNMP enabled: yes SNMP port: 161 System contact: System location: Read-only community: public Read-write community: private Interface listen enabled: yes No Listen Interfaces. Traps enabled: yes Default trap community: public Default trap port: 162 Trap sinks: 10.10.10.10 Enabled: yes Type: traps version 1 Port: 3 Community: public (default) switch (config) #</pre>	
Related Commands	show snmp	
Notes	If enabled, and if at least one of the interfaces listed is eligible to be a listen interface, then SNMP requests will only be accepted on those interfaces. Otherwise, SNMP requests are accepted on any interface.	

snmp-server location

snmp-server location <system location>
no snmp-server location

Sets a value for the sysLocation variable in MIB-II.
 The no form of the command clears the contents of the sysLocation variable.

Syntax Description	system location	String.
Default	""	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # snmp-server location lab switch (config) # show snmp SNMP enabled: yes SNMP port: 161 System contact: my-name System location: lab Read-only community: public Read-write community: private Interface listen enabled: yes No Listen Interfaces. Traps enabled: yes Default trap community: public Default trap port: 162 No trap sinks configured. switch (config) #</pre>	
Related Commands	show snmp	
Notes		

snmp-server notify

snmp-server notify {community <community> | event <event name> | port <port> | send-test}

no snmp-server notify {community | event <event name> | port}

Configures SNMP notifications (traps and informs).

The no form of the commands negate the SNMP notifications.

Syntax Description	community	Sets the default community for traps sent to hosts which do not have a custom community string set.
	event	Specifies which events will be sent as traps.
	port	Sets the default port to which traps are sent.
	send-test	Sends a test trap.
Default	Community: public All informs and traps are enabled Port: 162	
Configuration Mode	Config	
History	3.1.0000	First version
	3.2.1050	Changed traps to notify
Role	admin	
Example	<pre>switch (config) # snmp-server community public switch (config) # show snmp SNMP enabled: yes SNMP port: 1000 System contact: my-name System location: lab Read-only community: public Read-write community: private Interface listen enabled: yes No Listen Interfaces. Traps enabled: yes Default trap community: public Default trap port: 162 No trap sinks configured. switch (config) #</pre>	

Related Commands	show snmp show snmp events
-------------------------	-------------------------------

- | | |
|--------------|---|
| Notes | <ul style="list-style-type: none">• This setting is only meaningful if traps are enabled, though the list of hosts may still be edited if traps are disabled• Refer to Mellanox MIB file for the list of supported traps |
|--------------|---|
-
-

snmp-server port

snmp-server port <port>
no snmp-server port

Sets the UDP listening port for the SNMP agent.
The no form of the command resets the parameter to its default value.

Syntax Description	port	UDP port.
Default	161	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # snmp-server port 1000 switch (config) # show snmp SNMP enabled: yes SNMP port: 1000 System contact: my-name System location: lab Read-only community: public Read-write community: private Interface listen enabled: yes No Listen Interfaces. Traps enabled: yes Default trap community: public Default trap port: 162 No trap sinks configured. switch (config) #</pre>	
Related Commands	show snmp	
Notes		

snmp-server user

```
snmp-server user {admin | <username>} v3 {[encrypted] auth <hash-type>
<password> [priv <privacy-type> [<password>]] | capability <cap> | enable
<sets> | prompt auth <hash-type> [priv <privacy-type>] | require-privacy}
no snmp-server user {admin | <username> } v3 {[encrypted] auth <hash-type>
<password> [priv <privacy-type> [<password>]] | capability <cap> | enable
<sets> | prompt auth <hash-type> [priv <privacy-type>]}
```

Specifies an existing username, or a new one to be added.
The no form of the command disables access via SNMP v3 for the specified user.

Syntax Description	v3	Configures SNMP v3 users
	auth	Configures SNMP v3 security parameters, specifying passwords in plaintext on the command line (note: passwords are always stored encrypted)
	capability	Sets capability level for SET requests
	enable	Enables SNMP v3 access for this user
	encrypted	Configures SNMP v3 security parameters, specifying passwords in encrypted form
	prompt	Configures SNMP v3 security parameters, specifying passwords securely in follow-up prompts, rather than on the command line
	require-privacy	Requires privacy (encryption) for requests from this user
Default	No SNMP v3 users defined	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # snmp-server user admin v3 enable switch (config) # show snmp user User name: admin Enabled overall: yes Authentication type: sha Privacy type: aes-128 Authentication password: (NOT SET; user disabled) Privacy password: (NOT SET; user disabled) SET access: Enabled: yes Capability level: admin switch (config) #</pre>	

Related Commands show snmp user

Notes

- The username chosen here may be anything that is valid as a local UNIX username (alphanumeric, plus '-', '_', and '.'), but these usernames are unrelated to, and independent of, local user accounts. That is, they need not have the same capability level as a local user account of the same name. Note that these usernames should not be longer than 31 characters, or they will not work.
 - The hash algorithm specified is used both to create digests of the authentication and privacy passwords for storage in configuration, and also in HMAC form for the authentication protocol itself.
 - There are three variants of the command, which branch out after the “v3” keyword. If “auth” is used next, the passwords are specified in plaintext on the command line. If “encrypted” is used next, the passwords are specified encrypted (hashed) on the command line. If “prompt-pass” is used, the passwords are not specified on the command line the user is prompted for them when the command is executing. If “priv” is not specified, only the auth password is prompted for. If “priv” is specified, the privacy password is prompted for; entering an empty string for this prompt will result in using the same password specified for authentication.
-

show snmp

show snmp [auto-refresh | engineID | events | host | user]

Displays SNMP-server configuration and status.

Syntax Description	auto-refresh	SNMP refreshed mechanism status.
	engineID	SNMP Engine ID.
	events	SNMP events.
	host	List of notification sinks.
	user	SNMP users.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # show snmp user User name: Hendrix Enabled overall: yes Authentication type: sha Privacy type: des Authentication password: (set) Privacy password: (set) Require privacy: yes SET access: Enabled: yes Capability level: admin switch (config) #</pre>	
Related Commands	show snmp	
Notes		

show snmp auto-refresh

show snmp auto-refresh

Displays SNMPD refresh mechanism status.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # show snmp auto-refresh ===== SNMP auto refresh ===== Auto-refresh enabled: yes Refresh interval (sec): 60 ===== Auto-Refreshed tables ===== entPhysicalTable ifTable ifXTable</pre>
Related Commands	snmp-server auto-refresh
Notes	

show snmp set-permission

show snmp set-permission

Displays SNMP SET permission settings.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.6.3004
Role	admin
Example	<pre>switch (config) # show snmp set-permission ----- MIB Name Set Enable ----- MELLANOX-CONFIG-DB-MIB yes MELLANOX-EFM-MIB yes MELLANOX-POWER-CYCLE yes MELLANOX-SW-UPDATE no RFC1213-MIB no</pre>
Related Commands	snmp-server enable set-permission
Notes	

4.17.4.2 XML API Commands

xml-gw enable

xml-gw enable
no xml-gw enable

Enables the XML gateway.
The no form of the command disables the XML gateway.

Syntax Description	N/A
Default	XML Gateway is enabled
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	<pre>switch (config) # xml-gw enable switch (config) # show xml-gw XML Gateway enabled: yes switch (config) #</pre>
Related Commands	show xml-gw
Notes	

show xml-gw

show xml-gw

Displays the XML gateway setting.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000
Role	admin
Example	<pre>switch (config) # show xml-gw XML Gateway enabled: yes switch (config) #</pre>
Related Commands	xml-gw enable
Notes	

4.17.4.3 JSON API Commands

json-gw enable

json-gw enable
no json-gw enable

Enables the JSON API.
The no form of the command disables the JSON API.

Syntax Description	N/A
Default	JSON API is enabled
Configuration Mode	Config
History	3.6.3004
Role	admin
Example	switch (config) # json-gw enable
Related Commands	show json-gw
Notes	This command is available on x86 switch systems only.

show json-gw**show json-gw**

Displays the JSON API setting.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.6.3004 3.6.4000 Updated Example and Related Commands.
Role	admin
Example	<pre>switch (config) # show json-gw JSON Gateway enabled: yes Synchronous request timeout: 30 JSON API version: 1.0</pre>
Related Commands	<pre>json-gw enable json-gw synchronous-request-timeout <time out value> no json-gw synchronous-request-timeout</pre>
Notes	This command is available on x86 switch systems only.

json-gw synchronous-request-timeout

json-gw synchronous-request-timeout <time out value>
no json-gw synchronous-request-timeout

Defines a timeout value for synchronous JSON requests (in seconds).
The no form of the command returns the timeout value to its default.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.6.3004 3.6.4000 Updated Example and Related Commands.
Role	admin
Example	switch (config) # show json-gw JSON Gateway enabled: yes Synchronous request timeout: 30 JSON API version: 1.0
Related Commands	json-gw enable json-gw synchronous-request-timeout <time out value> no json-gw synchronous-request-timeout
Notes	This command is available on x86 switch systems only.

4.18 Puppet Agent

Puppet is a software that allows network administrators to automate repetitive tasks. MLNX-OS includes a built-in agent for the open-source “Puppet” configuration change management system. The Puppet agent enables configuring HPE M-series Switches in accordance with the standard “puppet-netdev-stdlib” type library and with the “Mellanox-netdev-stdlib-mlxos” and “Mellanox-netdev-ospf-stdlib” type libraries provided by HPE to the Puppet community.

For more information, please refer to the CLI commands, to the NetDev documentation at <https://github.com/puppetlabs/puppet-netdev-stdlib> and to Mellanox’s Puppet modules GitHub page at <https://github.com/Mellanox>.

4.18.1 Setting the Puppet Server

➤ *To set the puppet server:*

Step 1. Define the Puppet server (the name has to be a DNS and not IP). Run:

```
switch (config) # puppet-agent master-hostname <please_type_your_hostname_DNS_here>
switch (config) #
```

Step 2. Enable the Puppet agent. Run:

```
switch (config) # puppet-agent enable
switch (config) #
```

Step 3. (Optional) Verify there are no errors in the Puppet agent log. Run:

```
switch (config) # show puppet-agent log continuous
switch (config) #
```

4.18.2 Accepting the Switch Request



This is to be performed on the first run only.

➤ *To accept the switch’s request:*

Option 1 – using Puppet CLI commands:

Step 1. Ensure the certificate request. Run:

```
# puppet cert list
"<switch>"
(F4:B4:20:3B:2B:11:76:37:14:34:D0:D1:03:ED:3D:B5)
```

Step 2. Sign the certificate request if the cert_name parameter (e.g. switch1.domain) is in the list. Run:

```
# puppet cert sign <full_domain_name>
```

Step 3. Verify the request is removed from the Puppet certification list. Run:

```
# puppet cert list
```

Option 2 – accept certificate requests in the puppet server console:

- Step 1.** Go to the “nodes requests” page (the button is at the top right), and wait for a certificate request for the switch and then accept it.

Figure 13: Accepting an Agent Request through the Console



4.18.3 Installing Modules on the Puppet Server

HPE uses netdev-stdlib types and provides a package of HPE providers for those types which have to be installed at the Puppet server prior to the first Puppet configuration run (before configuring resources on the HPEswitch).

To install those modules, run the following commands in the Puppet server:

```
# puppet module install netdevops-netdev_stdlib
# puppet module install mellanox-netdev_ospf_stdlib
# puppet module install mellanox-netdev_stdlib_mlnxos
```



In case of an already installed module, please use the command “puppet module upgrade <module_name>” or “puppet module install <module_name> -force” instead of “puppet module install <module_name>” to reinstall the modules.

For more information please refer to the Network Automation Tools document or Puppet category in the Mellanox community site at: <http://community.mellanox.com/community/support/solutions>.

4.18.4 Writing Configuration Classes

➤ *To write configuration classes:*

- Step 1.** Assigning Configuration Classes to a Node

Configuration files can be written and changed in the puppet server machine in the directory “/etc/puppetlabs/puppet/manifests/” (or “/etc/puppet/manifests” in case of an open source puppet server).

The file “/etc/puppetlabs/puppet/manifests/site.pp” is the main file for Puppet-classes-to-nodes association. To associate a configuration to a Puppet agent node, just append association lines as below:

```
import "netdev_vlan_example"
import "netdev_l2_vlan_example"
import "netdev_lag_example"
node 'switch-6375dc.mtr.labs.mlnx' {

    netdev_device { $hostname: }

    include vlan_example # Asserts a class vlan_example in one of the files
    include l2_interface_example

    include lag_example

}
```



If you have a puppet console, you may assign classes of configuration in the following way:

- Add the relevant classes (using the console add class button on the “nodes” page).
- Assign the classes to the relevant nodes/groups in the puppet server console (in the console node/group page -> edit -> Classes).

Step 2. Update VLAN

Manifest example (located in “/etc/puppetlabs/puppet/manifests/netdev_vlan_example.pp”).

```
class vlan_example{

    $vlans = {
        'Vlan244' => {vlan_id => 244, ensure => present},
        'Vlan245' => {vlan_id => 245, ensure => present},
    }

    create_resources( netdev_vlan, $vlans )
}
```

Step 3. Update Layer 2 Interface.

Manifest example (located in “/etc/puppetlabs/puppet/manifests/netdev_l2_interface_example.pp”)

```
class vlans_ensure_example{

    $vlans = {
        'Vlan347' => {vlan_id => 347, ensure => present},
        'Vlan348' => {vlan_id => 348, ensure => present},
        'Vlan349' => {vlan_id => 349, ensure => present},
    }

    create_resources( netdev_vlan, $vlans )
}

class l2_interface_example{

    include vlans_ensure_example #class to Ensure VLANs before assigning

    $l2_interfaces = {
        'ethernet 1/3' => {ensure => absent, vlan_tagging => disable}, #default
        'ethernet 1/4' => {ensure => present, vlan_tagging => enable,
        tagged_vlans => [Vlan348,Vlan347], untagged_vlan => Vlan349} #hybrid
    }

    create_resources( netdev_l2_interface, $l2_interfaces )
}
```

Step 4. Update LAG.

Manifest example (located in “/etc/puppetlabs/puppet/manifests/netdev_lag_example.pp”)

```
class lag_example{

    $lags = {
        'port-channel 101' => {ensure => present,
        links => ['ethernet 1/12', 'ethernet 1/13'], lacp => active},
        'port-channel 102' => {ensure => present,
        links => ['ethernet 1/6','ethernet 1/5'], lacp => disabled},
    }

    create_resources( netdev_lag, $lags )
}
```



You may add classes to ensure that all assigned links are with the same layer 1 and layer 2 configurations (similarly to the way we did in update l2_interface section with vlans_ensure_example class).

4.18.5 Supported Configuration Capabilities

4.18.5.1 Ethernet and Port-Channel Interface Capabilities

Table 36 - Ethernet and Port-Channel Interface Capabilities

Field	Description	Values	Example
ensure	Sets the given values or restores the interface to default	absent, present	ensure => present
speed	Sets the speed of the interface.	auto* 10m 100m 1g 10g 40g 56g	speed => 1g
admin	Disables/enables interface admin state.	up, down	admin => up
mtu	Configures the maximum transmission unit frame size for the interface.	Ethernet: 1518-9216	mtu => 1520
description	Sets the Ethernet and LAG description.	Text	description => "changed_by_puppet"

4.18.5.2 VLAN Capabilities

Table 37 - VLAN Capabilities

Field	Description	Values	Example
ensure	Creates or destroys the VLAN given as a resource ID	absent, present	ensure => present
vlan_id	The VLAN ID	1-4094 (integer)	vlan_id => 245

4.18.5.3 Layer 2 Ethernet Interface Capabilities

Table 38 - L2 Ethernet and Port-Channel Interface Capabilities

Field	Description	Values	Example
ensure	Sets the given values or restores the Layer 2 interface to default.	absent, present	ensure => present
vlan_tagging	VLAN tagging mode	enable,disable	vlan_tagging => enable
tagged_vlans	List of tagged (trunked) VLANs	2-4994 (range)	tagged_vlans => [Vlan348,Vlan347]
untagged_vlan	Untag (access) VLAN	<VLAN name>	untagged_vlan => Vlan349

4.18.5.4 LAG (Port-Channel) Capabilities

Table 39 - LAG Capabilities

Field	Description	Values	Example
ensure	creates or destroys the port-channel given as a resource ID	absent, present	ensure => present
lACP	The LACP mode of the LAG	passive active on	lACP => on
links	List of ports assigned to the LAG	List of link names	links => ['ethernet 1/6','ethernet 1/5']

4.18.5.5 Layer 3 Interface Capabilities

Table 40 - L3 Interface Capabilities

Field	Description	Values	Example
ensure	Creates or destroys the interface VLAN specified in the resource ID.	present, absent	ensure => present
ipaddress	Sets IP address on the Layer 3 interface (requires netmask).	A valid IP address	ipaddress => '192.168.4.2'
netmask	Sets netmask for the IP address.	A valid netmask (of the form X.1X2.X3.X4), which creates a valid combination with the given IP address	netmask => '255.255.255.0'
method	Configures the method of the L3 interface (currently supports only static method).	static	method => static

4.18.5.6 OSPF Interface Capabilities

Table 41 - OSPF Interface Capabilities

Field	Description	Values	Example
ensure	Creates or destroys the OSPF interface of the associated interface of the VLAN specified in the resource ID	present, absent	ensure => present

Table 41 - OSPF Interface Capabilities

Field	Description	Values	Example
area_id	The associated area ID	Integer representing an IP	area_id => '7200'
Type	The network type	broadcast, point_to_point	type => 'point_to_point'

4.18.5.7 OSPF Area Capabilities

Table 42 - OSPF Area Capabilities

Field	Description	Values	Example
ensure	Creates or destroys the OSPF area specified in the resource ID	present, absent	ensure => present
router_id	The OSPF area associated router ID (currently supports only default router)	default	router_id => 'default'
ospf_area_mode	The OSPF area mode	normal, stub, nssa	ospf_area_mode => 'stub'
subnets	A list of associated subnets	List of subnets	["192.168.4.0/24", "192.168.5.0/24"]

4.18.5.8 Router OSPF Capabilities

Table 43 - Router OSPF Capabilities

Field	Description	Values	Example
ensure	Enables/disables the router ID specified in the resource ID	present, absent	ensure => present

4.18.5.9 Protocol LLDP, SNMP, IP Routing and Spanning Tree Capabilities

Table 44 - Protocol Enable/Disable Capabilities

Field	Description	Values	Example
ensure	Enables/disables the protocol specified in the resource ID	present, absent	ensure => present

4.18.5.10 Fetched Image Capabilities

Table 45 - Fetched Image Capabilities

Field	Description	Values	Example
ensure	Enables/disables the protocol specified in the resource ID	present, absent	ensure => present
protocol	Specifies the protocol for fetch method	http, https, ftp, tftp, scp, sftp	protocol => scp

Table 45 - Fetched Image Capabilities

Field	Description	Values	Example
host	The host where the file-name located	DNS/IP	host => my_DNS
user	The username for fetching the image	Username	user => my_username
password	The password for fetching the image	Password	password => my_pass
location	The location of the file name in the host file system	Directory full path	location => '/tmp'
force_delete	Remove all the images or only the ones which are not installed on any partition, before fetching	yes, no	force_delete => no

4.18.5.11 Installed Image Capabilities

Table 46 - Installed Image Capabilities

Field	Description	Values	Example
ensure	Specifies if the image version given in as resource ID is ensured to be installed or not	present, absent	ensure => present
is_next_boot	Ensures that the installed image is the next boot partition	yes, no	is_next_boot => yes
configuration_write	Writes configurations to database.	yes, no	configuration_write => yes
force_reload	Reload if image is in other partition.	yes, no	force_reload => no

4.18.6 Supported Resources for Each Type

Table 47 - Fetched Image Capabilities

Resource Type	Puppet Type Name	Supported Resource IDs	Example
Network device	netdev_device	\$hostname	netdev_device { \$hostname: }
Layer 1 interface	netdev_interface	'ethernet <#ID>', 'port-channel <#id>', 'ib <#ID>'	netdev_interface{'ethernet 1/3': ensure => absent}

Table 47 - Fetched Image Capabilities

Resource Type	Puppet Type Name	Supported Resource IDS	Example
Layer 2 interface	netdev_l2_interface	'ethernet <#ID>', 'port-channel <#id>'	netdev_l2_interface{'ethernet 1/3': ensure => absent}
VLAN	netdev_vlan	VLAN name string	netdev_vlan {'Vlan244': vlan_id => 244, ensure => present }
LAG	netdev_lag	'port-channel <#id>'	netdev_lag {'port-channel 101': ensure => present }
Layer 3 interface	netdev_l3_interface	'vlan <#ID>'	netdev_l3_interface { 'vlan 4': ipaddress => '192.168.4.2', netmask => '255.255.255.0' }
OSPF interface	netdev_ospf_interface	'vlan <#ID>'	netdev_ospf_interface { 'vlan 4': ensure => present, area_id => '10' }
OSPF area	netdev_ospf_area	Valid area ID (representing an IP)	netdev_ospf_area{'10': ensure => present, ospf_area_mode=>'stub'}
OSPF router	netdev_router_ospf	Currently only supports 'default'	netdev_router_ospf {'default': ensure => present }
Protocol	mlnx_protocol	ip_routing, lldp, snmp, spanning_tree	mlnx_protocol { 'ip_routing': ensure => present }
Fetched image	mlnx_fetched_img	The image file name	mlnx_fetched_image { 'image-PPC_M460EX-3.3.4300.img': ensure => present }
Installed image	mlnx_installed_img	The image version name	mlnx_installed_img { '3.3.4300': ensure => present }

4.18.7 Troubleshooting

This section presents common issues that may prevent the switch from connecting to the puppet server.

4.18.7.1 Switch and Server Clocks are not Synchronized

This can be fixed by using NTP to synchronize the clocks at the switch (using the CLI command `ntp`) and at the server (e.g. using `ntpdate`).

4.18.7.2 Outdated or Invalid SSL Certificates Either on the Switch or the Server

This can be fixed on the switch using the CLI command `puppet-agent clear-certificates` (requires `puppet-agent restart` to take effect).

On the server it can be fixed by running `puppet cert clean <switch_fqdn>` (FQDN is the Fully Qualified Domain Name which consists of a hostname and a domain suffix).

4.18.7.3 Communications Issue

Make sure it is possible to ping the puppet server hostname from the switch (using the CLI command `ping`).

If the hostname is not reachable (e.g. no DNS server) it can be statically added to the switch local hosts lookup (using the CLI command `ip host`).

Make sure that port 8140 is open (using the command `tracpath {<hostname> | <ip>}/8140`).

4.18.8 Commands

puppet-agent

puppet-agent

Enters puppet agent configuration mode.

Syntax Description	N/A
Default	None
Configuration Mode	Config
History	3.3.4200
Role	admin
Example	switch (config) # puppet-agent switch (config puppet-agent) #
Related Commands	
Notes	

master-hostname

master-hostname <hostname>
no master-hostname

Sets the puppet server hostname.
 The no form of the command resets the parameter to its default.

Syntax Description	hostname	Puppet server hostname. Free string may be entered.
Default	puppet	
Configuration Mode	Config Puppet	
History	3.3.4200	
Role	admin	
Example	<pre>switch (config puppet-agent) # master-hostname my-puppet-server-host-name switch (config puppet-agent) #</pre>	
Related Commands		
Notes		

enable

enable
no enable

Enables the puppet server on the switch.
The no form of the command disables the puppet server.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config Puppet
History	3.3.4200
Role	admin
Example	<pre>switch (config puppet-agent) # enable switch (config puppet-agent) #</pre>
Related Commands	
Notes	

run-interval

run-interval <time>

Configures the time interval in which the puppet agent reports to the puppet server.

Syntax Description	time	Can be in seconds (“30” or “30s”), minutes (“30m”), hours (“6h”), days (“2d”), or years (“5y”).
Default	30m	
Configuration Mode	Config Puppet	
History	3.3.4302	
Role	admin	
Example	<pre>switch (config puppet-agent) # run-interval 40m switch (config puppet-agent) #</pre>	
Related Commands	show puppet-agent	
Notes		

restart

puppet-agent restart

Restarts the puppet agent.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config Puppet
History	3.3.4200
Role	admin
Example	<pre>switch (config puppet-agent) # restart switch (config puppet-agent) #</pre>
Related Commands	
Notes	

show puppet-agent

show puppet-agent

Displays Puppet agent status and configuration.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.3.4200
	3.3.4302 Updated output with run interval
Role	admin
Example	<pre>switch (config puppet-agent) # show puppet-agent Puppet agent is disabled Puppet master hostname: puppet Run interval: 40m switch (config puppet-agent) #</pre>
Related Commands	
Notes	

show puppet-agent log

show puppet-agent log [[not] [matching | continuous] <string> | files [[not] matching] <string>]

Displays the Puppet agent's log file.

Syntax Description	continuous	Puppet agent log messages as they arrive.
	files	Displays archived Puppet agent log files.
	matching	Displays Puppet agent log that match a given string.
	not	Displays Puppet agent log that do not meet a certain string.
	string	Free string.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.4200	
Role	admin	
Example	<pre>switch (config puppet-agent) # show puppet-agent log Mon Nov 04 11:52:42 +0000 2013 Puppet (notice): Starting Puppet client version 3.2.3 Mon Nov 04 11:52:44 +0000 2013 Puppet (warning): Unable to fetch my node definition, but the agent run will continue: Mon Nov 04 11:52:44 +0000 2013 Puppet (warning): Could not intern from pson: source '*#<Puppet::Node:0x7f' not in PSON! Mon Nov 04 11:53:21 +0000 2013 /Netdev_vlan[Vlan104]/ensure (notice): created Mon Nov 04 11:53:22 +0000 2013 /Netdev_vlan[Vlan101]/ensure (notice): created Mon Nov 04 11:53:23 +0000 2013 /Netdev_vlan[Vlan102]/ensure (notice): created Mon Nov 04 11:53:24 +0000 2013 /Netdev_vlan[Vlan103]/ensure (notice): created Mon Nov 04 11:53:40 +0000 2013 /Netdev_l2_interface[ethernet 1/6]/untagged_vlan (notice): untagged_vlan changed 'default' to 'Vlan103' Mon Nov 04 11:53:43 +0000 2013 /Netdev_l2_interface[ethernet 1/7]/untagged_vlan (notice): untagged_vlan changed 'default' to 'Vlan103' Mon Nov 04 11:53:48 +0000 2013 /Netdev_vlan[Vlan100]/ensure (notice): created Mon Nov 04 11:53:48 +0000 2013 /Netdev_l2_interface[ethernet 1/5]/vlan_tagging (notice): vlan_tagging changed 'enable' to 'disable' Mon Nov 04 11:53:48 +0000 2013 /Netdev_l2_interface[ethernet 1/5]/tagged_vlans (notice): tagged_vlans changed '[' to '[Vlan100,Vlan101,Vlan102]' Mon Nov 04 11:53:51 +0000 2013 /Netdev_l2_interface[ethernet 1/1]/tagged_vlans (notice): tagged_vlans changed '[' to '[Vlan101,Vlan104]' Mon Nov 04 11:53:51 +0000 2013 /Netdev_l2_interface[ethernet 1/1]/untagged_vlan (notice): untagged_vlan changed 'default' to 'Vlan100' Mon Nov 04 11:53:54 +0000 2013 /Netdev_l2_interface[ethernet 1/3]/tagged_vlans (notice): tagged_vlans changed '[' to '[Vlan101,Vlan104]' Mon Nov 04 11:53:54 +0000 2013 /Netdev_l2_interface[ethernet 1/3]/untagged_vlan (notice): untagged_vlan changed 'default' to 'Vlan100' Mon Nov 04 11:53:58 +0000 2013 /Netdev_l2_interface[ethernet 1/4]/vlan_tagging (notice): vlan_tagging changed 'enable' to 'disable' Mon Nov 04 11:53:58 +0000 2013 /Netdev_l2_interface[ethernet 1/4]/tagged_vlans (notice): tagged_vlans changed '[' to '[Vlan100,Vlan101,Vlan102]' Mon Nov 04 11:54:03 +0000 2013 /Netdev_l2_interface[ethernet 1/2]/tagged_vlans (notice): tagged_vlans changed '[' to '[Vlan101,Vlan104]' Mon Nov 04 11:54:03 +0000 2013 /Netdev_l2_interface[ethernet 1/2]/untagged_vlan (notice): untagged_vlan changed 'default' to 'Vlan100' Mon Nov 04 11:54:06 +0000 2013 Puppet (notice): Finished catalog run in 47.90 seconds switch (config puppet-agent) #</pre>	

Related Commands

Notes

4.19 IP Table Filtering

IP table filtering is a mechanism that allows the user to apply actions to a specific control packet flow identified by a certain flow key.

This mechanism is used in order to protect switch control traffic against attacks. For example, it could allow traffic coming from a specific trusted management subnet only, block the SNMP UDP port from receiving traffic, and force ping rate to be lower than a specific threshold.

Each IP table rule is defined by key, priority, and action:

- **Key** – the key is a combination of physical port and layer 3 parameters (e.g. SIP, DIP, SPORT, DPORT, etc.), and other fields. Each part of the key, can be set to a specific value or masked.
- **Priority** – each rule in the IP table is assigned a priority, and the rule with the highest priority whose key matches the packet executes the action.
- **Action** – the action describes the behavior of packets which match the key. The action type may be drop, accept, rate limit, etc.

An IP table rule is bound to an IP interface that can be a management out-of-band interface, VLAN interface, or router port interface. Once bound, all traffic received (ingress rule) or transmitted (egress rule) in this direction is being verified with all bounded rules.

Once a match was found, the rule action is executed. If no match is found, the default policy of the chain shall apply.



IP table rules get a lower priority than ACL mechanism.

4.19.1 Configuring IP Table Filtering

Prerequisite for IPv6:

```
switch (config) # ipv6 enable
```

➤ **To configure IPv4 table filtering:**

Step 1. Select the policy that applies to the input/output chain. (Default policy is accept.) Run:

```
switch (config)# ip filter chain input policy drop
switch (config)# ip filter chain output policy accept
```

Step 2. Append filtering rules to the list or set a specific rule number, select a target, and (optional) any additional filter conditions. For example, run:

```
switch (config)# ip filter chain input rule append tail target rate-limit 2 protocol
udp
switch (config)# ip filter chain input rule set 2 target drop protocol icmp in-intf
mgmt1
switch (config)# ip filter chain output rule append tail target drop protocol icmp
```

Step 3. Enable IP table filtering. Run:

```
switch (config) # ip filter enable
```

Step 4. Verify IP table filtering configuration. Run:

```
switch (config) # show ip filter configured
Packet filtering for IPv4: enabled
IPv4 configuration:
```

```
-----
Chain: 'input'   Policy: 'accept'
-----
```

```
Rule : 1
  Target      : rate-limit 2 pps
  Protocol    : udp
  Source      : all
  Destination : all
  Interface   : all
  State       : any
  Other Filter : -
```

```
Rule : 2
  Target      : drop
  Protocol    : icmp
  Source      : all
  Destination : all
  Interface   : mgmt1(ingress)
  State       : any
  Other Filter : -
```

```
-----
Chain: 'output' Policy: 'accept'
-----
```

```
Rule : 1
  Target      : drop
  Protocol    : icmp
  Source      : all
  Destination : all
  Interface   : all
  State       : any
  Other Filter : -
```

4.19.2 Modifying IP Table Filtering

- *To modify IP table filtering configuration:*

```
switch (config) # ip filter chain input rule modify 3 target reject-with icmp6-adm-prohibited source-addr 10::0 /126
```

- *To delete an existing IP table filtering rule:*

```
switch (config) # no ip filter chain input rule 2
```

- *To delete all existing IP table filtering rules:*

```
switch (config) # no ip filter chain output rule all
```

- *To insert an IP table filtering rule in a chain:*

```
switch (config) # ip filter chain input rule 2 set target drop protocol tcp dest-port 22 in-intf mgmt1
```

4.19.3 Rate-limit Rule Configuration

Using a rate-limit target allows to create a rule to limit the rate of certain traffic types. The limit is specified in packets per second (pps) and can be anywhere between 1-1000 pps. When enabled, the system takes the user specified rate and converts it into units of 1/10000 of a second. Therefore, any value greater than 100 can have a slight difference when the rule is displayed using the show command.

Unlike other rules which are a match type of rule, limiting packets should be followed by a rule that drops additional packets of the same “type”. Alternatively, this can be implicitly achieved by setting the chain policy to “drop” so that it drops packets not processed by matching rules. Otherwise, no effect of the rule is observed as the remaining traffic simply gets accepted.



Rate-limit is implemented with an average rate and a burst-limit. Rate values are specified in pps and take a range from 1-1000 pps. For rate values in the range 1-100, the burst value is set equal to the rate value. For rate values in the range 101-1000, the burst limit is set to 100.

4.19.4 Commands

ip filter enable ipv6 filter enable

{ip | ipv6} filter enable
no {ip | ipv6} filter enable

Enables IP filtering.
The no form of the command disables IP filtering.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config
History	3.5.1000
Role	admin
Example	switch (config) # ip filter enable switch (config) #
Related Commands	N/A
Notes	It is recommended to run this command only after configuring all of the IP table filter parameters.

ip filter chain policy

ipv6 filter chain policy

```
{ip | ipv6} filter chain <chain_name> policy {accept | drop}
no {ip | ipv6} filter chain <chain_name> policy
```

Configures default policy for a specific chain (if no rule matches this default policy action shall apply).

The no form of the command resets default policy for a specific chain.

Syntax Description	chain_name	Selects a chain for which to add or modify a filter: <ul style="list-style-type: none">• input – input chain or ingress interfaces• output – output chain or egress interfaces
	accept	Accepts all traffic by default for this chain
	drop	Drops all traffic by default for this chain
Default	Accept for input and output chains	
Configuration Mode	Config	
History	3.5.1000	
Role	admin	
Example	switch (config) # ipv6 filter chain input policy accept switch (config) #	
Related Commands	N/A	
Notes		

ip filter chain rule target

ipv6 filter chain rule target

```
{ip | ipv6} filter chain <chain_name> rule <oper> target <target> [<param>]
no {ip | ipv6} filter chain <chain_name> rule {<number> | all}
```

Inserts rule before specified rule number.

The no form of the command deletes rule for a specific chain.

Syntax Description		
chain_name		A chain to which to add or modify a filter: <ul style="list-style-type: none"> input – input chain or ingress interfaces output – output chain or egress interfaces
rule		<ul style="list-style-type: none"> append tail – appends operation to the bottom of operation list insert <oper_num> – inserts operation at specified position (existing operation at that position moves back in the list) modify <oper_num> – modifies existing operation at specified position. Only the parameters specified in this invocation are altered; everything else is left untouched. move <oper_num1> to <oper_num2> – moves one operation to another place in the operation list set <oper_num> – sets operation at specified position (overwrites existing)
target		<ul style="list-style-type: none"> accept – allows the packets that match the rule into the management plane drop – drops packets that match the rule rate-limit – allows with rate limiting in packets per sec (PPS) reject-with – drops the packet and replies with an ICMP error message

param

- comment <text> – specifies description string for this rule (60 chars max)
- dest-addr <ip> – IP matching a specific destination address or address range. A specific IPv4 address can be provided or an entire subnet by giving an address along with netmask in dot notation or as a CIDR notation (e.g. /24).
- not-dest-addr <ip> – IP not matching a specific destination address range
- dest-port <port(s)> – matching a specific destination port or port range
- not-dest-port <port(s)> – port not matching a specific destination port or port range
- dup-delete – deletes any preexisting duplicates of this rule
- in-intf – interface matching a specific inbound interface
- not-in-intf <if_name> – interface not matching a specific inbound interface
- out-intf <if_name> – matches a specific outbound interface
- not-out-intf <if_name> – interface not matching a specific outbound interface

param4 (cont.)

- protocol <if_name> – matches a specific protocol
 - tcp
 - udp
 - icmp
 - all
- not-protocol <protocol> – does not match a specific protocol
 - tcp
 - udp
 - icmp
 - all
- source-addr <ip> – matches a specific source address range
- not-source-addr <ip> – does not match a specific source address range
- source-port <port(s)> – matches a specific source port or port range
- not-source-port <port(s)> – does not match a specific source port or port range
- state – matches packets in a particular state.
Possible values:
 - established – packet associated with an established connection which has seen traffic in both directions
 - related – packet that starts a new connection but is related to an existing connection
 - new – packet that starts a new, unrelated connection
 - A combination can be entered separated by commas

Default	N/A
Configuration Mode	Config
History	3.5.1000
Role	admin
Example	<pre>switch (config) # ipv6 filter enable chain input rule append tail target drop state related protocol all dup-delete switch (config) #</pre>

Related Commands	N/A
Notes	<ul style="list-style-type: none">• The source and destination ports may each be either a single number, or a range specified as “<low>-<high>”. For example: “10-20” would specify ports 10 through 20 (inclusive).• The port parameter only works in conjunction with TCP and UDP.• Setting a “positive” rule removes any corresponding “not-” rules, and vice-versa• The “state” parameter is a classification of the packet relative to existing connections• If TCP or UDP are selected for the “protocol” parameter, source and/or destination ports may be specified. If ICMP is selected, these options are either ignored, or an error is produced.

4.20 Resource Scale

MLNX-OS allows dynamic allocation of internal resources so that different internal subsystems could use as much resources as are available until resource exhaustion is reached.

Internal subsystems (e.g. ACL, OF, IP router) may use internal resources according to configured allocation policy mode which could be one of the following:

- Loose – a configuration that supports flexible user experience while providing protection to assure some protection against flooding of ARP
- Strict – allows backward compatibility



Transition between modes saves configuration and reloads the system.

The default configuration on different types of systems is as follows:

- SwitchX®-2 x86: Loose in Ethernet profile
- Spectrum™: Loose

4.20.1 Ethernet Resources

4.20.1.1 Strict Mode

Table 48 presents the number of resources available for each SwitchX® based node in strict mode.

Table 48 - Number of Resources per Node in Strict Mode

Resource	Max Resources
Number of ACL rules	1488
Number of MAC addresses	48K
Number of IPv4 neighbors	2048
Number of IPv4 UC routes	4094
Number of IPv4 MC routes	671
Number of IPv4 (ECMP) UC routes	2K

4.20.1.2 Loose Mode – SwitchX®

Table 49 presents the number of resources available for each SwitchX® based node in loose mode.

Table 49 - Number of Resources per Node in Strict Mode for SwitchX Based Systems

Resource	Max Resources
Number of ACL rules	5120
Number of MAC addresses	48K
Number of IPv4 neighbors	8000
Number of IPv4 UC routes	10936
Number of IPv4 MC routes	2047
Number of IPv4 (ECMP) UC routes	5312

4.20.1.3 Loose Mode – Spectrum™

Table 50 presents the number of resources available for each Spectrum™ based node in strict mode.

Table 50 - Number of Resources per Node in Strict Mode for Spectrum Based Systems

Resource	Max Resources
Number of ACL rules	5120
Number of MAC addresses	88K
Number of IPv4 neighbors	8000
Number of IPv4 UC routes	10936
Number of IPv4 MC routes	2047
Number of IPv4 (ECMP) UC routes	5312

4.20.2 Commands

system resource table

system resource table {loose | strict}

no system resource table

Configures system resource table.

The no form of the command restores the system to its default mode.

Syntax Description	loose	Sets system resource table mode as loose
	strict	Sets system resource table mode as strict
Default	SwitchX®-2 x86: Loose Spectrum™: Loose	
Configuration Mode	Config	
History	3.5.1000	
	3.6.3004	Added support for Proxy-ARP
Role	admin	
Example	switch (config) # system resource table strict	
Related Commands	N/A	
Notes	<ul style="list-style-type: none"> • x86 based systems support strict and loose modes • Spectrum based systems only support loose mode • Transition between modes saves configuration and reloads the system (after user approval) 	

show system resource table

show system resource table [<table-id>]

Displays all system resource in-use value.

Syntax Description	table-id	Displays information for a specific in-use resource table
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.5.1000	
	3.6.3004	Added support for Proxy-ARP
Role	admin	
Example	<pre>switch (config) # show system resource table ----- Table-Id In-Use ----- acl 0 ipv4-uc 1 ipv4-mc 0 ipv4-neigh 0 ipv6-uc 0 ipv6-mc 0 ipv6-neigh 0 System mode: loose Total configured entries: 1 switch (config) # show system resource table acl ----- Table-Id In-Use ----- acl 0 0 eth-ipv4-uc 7500 0 ib-ipv4-uc 3750 0 ib-ipv4-grh 1875 0 uc-route 160 0 ipv4-mc 0 0 Mode: loose Total configured entries: 0</pre>	
Related Commands	N/A	
Notes		

4.21 Linux Dockers

MLNX-OS adds the ability for users to run their own applications on a Linux docker's image embedded in the switch SW. The container is a pure application sandbox with resource isolation in terms of memory and compute from the system code/NOS. The container implementation complements MLNX-OS's VM support to provide a new set of capabilities:

- Access to network traffic – containers are implemented in MLNX-OS in the same name space as the network devices. This allows the SW to send and receive packets from the switch's ports by opening a standard Linux socket over the network device, using an IP address that has been set to the device via the legacy management interface (e.g. JSON over HTTP).



The socket should have a unique port number to prevent ambiguity of applications between the container and the MLNX-OS.

- Calling the SDK interfaces – Applications running in the docker container are able to implement its own set of tools such as telemetry features within the network devices. By calling the switch SDK APIs, it can read data that is not exposed in the MLNX-OS user interface, or register to receive events that occur in the system (e.g. port up/down).



The container implementation does not limit the container developer from calling the SDK to set parameters yet. This is strongly discouraged as it may cause unexpected system behavior where the MLNX-OS and the container application manage the same resources.

- Query the Linux tables provisioned by MLNX-OS such as neighbor cache, routing tables, L3 interfaces attributes etc.

It is possible to configure multiple containers, however, they would compete for the same memory and compute resources pre-allocated by MLNX-OS (varies for different systems). For the proper function of the overall system, it is strongly recommended that all resource configuration is done from the container by calling the legacy MLNX-OS user interfaces such as JSON.

4.21.1 Commands

docker

docker
no docker

Enables dockers then enters docker configuration context.
The no form of the command disables dockers, removes configuration, and deletes all containers and docker images.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.6.2940
Role	admin
Example	switch (config) # docker switch (config docker) #
Related Commands	N/A
Notes	

commit

commit <container-name> <image-name> <image-version>

Creates a new image from a running container.

Syntax Description	container-name	Name of the running container to commit
	image-name	Name of the new image to be created
	image-version	Version of the new image to be created
Default	N/A	
Configuration Mode	Config Docker	
History	3.6.2940	
Role	admin	
Example	switch (config docker) # commit mycontainer test latest	
Related Commands	N/A	
Notes		

remove image

remove image <image-name> <image-version>

Removes an image from the Linux docker service.

Syntax Description	image-name	Name of the new image to be deleted
	image-version	Version of the new image to be deleted
Default	N/A	
Configuration Mode	Config Docker	
History	3.6.3520 3.6.2940	
Role	admin	
Example	switch (config docker) # remove image test latest	
Related Commands	docker	
Notes		

exec**exec <container-name> <program-executable>**

Executes a program within a running container.

Syntax Description	container-name	Name of the running container to commit
	program-executable	Linux command
Default	N/A	
Configuration Mode	Config Docker	
History	3.6.3520 3.6.2940	
Role	admin	
Example	switch (config docker) # exec mycontainer "ls -la"	
Related Commands	docker	
Notes		

load

load <image-name>

Loads an image from a TAR archive.

Syntax Description	image-name	Name of the TAR image to be loaded
Default	N/A	
Configuration Mode	Config Docker	
History	3.6.2940	
Role	admin	
Example	switch (config docker) # load test	
Related Commands	docker	
Notes		

pull

pull <image-name>[:<version>]

Pulls a docker image from a docker repository.

Syntax Description	image-name	Image name Format: Name:Version If only “Name” is provided, “version” defaults to latest
Default	N/A	
Configuration Mode	Config Docker	
History	3.6.2940	
Role	admin	
Example	<pre>switch (config docker) # pull test Using default tag: latest latest: Pulling from library/test 45a2e645736c: Pull complete Digest: sha256:c577af3197aacedf79c5a204cd7f493c8e07ffbbe7f88f7600bf19c688c38799 Status: Downloaded newer image for test:latest switch (config docker) #</pre>	
Related Commands	docker	
Notes		

save

save <image-name> <version>

Saves an image to a TAR archive.

Syntax Description	image-name	Image name Format: Name Version If only "Name" is provided, "Version" defaults to latest
Default	N/A	
Configuration Mode	Config Docker	
History	3.6.2940	
Role	admin	
Example	<pre>switch (config docker) # save test Saving: test.img this could take a while... Compressing: test.img this could take a while... switch (config docker) #</pre>	
Related Commands	docker	
Notes		

shutdown

shutdown
no shutdown

Stops all docker containers, and deletes all non-auto containers.
The no form of the command enables the docker Linux service and runs all configured auto-start containers

Syntax Description	N/A
Default	N/A
Configuration Mode	Config Docker
History	3.6.2940
Role	admin
Example	switch (config docker) # no shutdown
Related Commands	docker
Notes	

start

start <image-name> <image-version> <container-name> <starting-point>
no start <container-name>

Starts a new container from an image.

The no form of the command stops a running docker container.

Syntax Description	image-name	Name of the new image to be started
	image-version	Version of the image to be started
	container-name	Name of the running container to commit
	starting-point	<ul style="list-style-type: none">• <code>init</code> – persistent, start the container after boot, when system initialization is done• <code>data-path-ready</code> – persistent, start the container after boot, when data-path is ready to be configured• <code>now</code> – start the container now, this is not persistent
Default	N/A	
Configuration Mode	Config Docker	
History	3.6.2940	
	3.6.3520	
	3.6.4110	Added example output
Role	admin	
Example	<pre>switch (config docker) # start centos latest test now Starting docker container. Please wait (this can take a minute)... switch (config docker) # switch (config docker) # no start test switch (config docker) # start busybox latest mmm now privileged ? network Add network privileges to the container (--privilege flag) sdk Add required mounts to use Mellanox SDK from the container</pre>	
Related Commands	docker	
Notes	The no form of the command will also remove the container if it is not persistent.	

image upload

image upload <filename> <upload_url>

Uploads an image file to a remote host.

Syntax Description	filename	Name of file
	upload_url	FTP, TFTP, SCP and SFTP are supported (e.g. scp://username[:password]@hostname/path/filename)
Default	N/A	
Configuration Mode	Config	
History	3.6.2940	
Role	admin	
Example	switch (config) # image upload centos.img.gz scp://username:password@192.168.10.125/var/www/html/<image_name>	
Related Commands	N/A	
Notes		

file image upload

file image upload <filename> <upload_url>

Uploads a file to a remote host.

Syntax Description	filename	Name of file
	upload_url	FTP, TFTP, SCP and SFTP are supported (e.g. scp://username[:password]@hostname/path/filename)
Default	N/A	
Configuration Mode	Config	
History	3.6.2940	
Role	admin	
Example	switch (config) # file image upload centos.img.gz scp://username:password@192.168.10.125/var/www/html/<image_name>	
Related Commands	N/A	
Notes		

docker label

[no] docker label <label name>

Creates a label which can be used as shared storage between containers.
The no form of the command removes the label.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.6.4110
Role	admin
Example	switch (config) # docker label switch (config) #
Related Commands	N/A
Notes	

docker copy-sdk

docker copy-sdk

The command provides access to the switch SDK APIs, enabling applications running on dockers access to the switch hardware.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.6.4110
Role	admin
Example	switch (config) # docker copy-sdk switch (config) #
Related Commands	N/A
Notes	

show docker images

show docker images

Display docker images.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.6.3520 3.6.2940
Role	admin
Example	<pre>switch (config) # show docker images ----- Image Version Created Size ----- ubuntu latest Less than a secon 117MB d ago ubuntu-sdk v1 41 seconds ago 215MB</pre>
Related Commands	N/A
Notes	

show docker ps

show docker ps

Display docker containers.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.6.3520 3.6.2940
----------------	----------------------

Role	admin
-------------	-------

Example	<pre>switch (config) # show docker ps ----- Container Image:Version Created Status ----- my_ubuntu_app ubuntu:latest 56 seconds ago Up 50 seconds</pre>
----------------	---

Related Commands	N/A
-------------------------	-----

Notes	
--------------	--

show docker labels

show docker labels

Displays docker labels.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.6.4110
Role	admin
Example	<pre> switch (config) # docker label label_name1 (config) # docker label label_name2 (config) # docker start busybox latest cont_name1 data-path-ready init now (config) # docker start busybox latest cont_name1 data-path-ready init now (config) # docker start busybox latest cont_name1 now label privileged (config) # docker start busybox latest cont_name1 now label dagan label_name1 label_name2 (config) # docker start busybox latest cont_name1 now label label_name1 Attempting to start docker container. Please wait (this can take a minute)... (config) # docker start busybox latest cont_name2 init label label_name1 (config) # show docker labels Storage label : label_name1 configured containers list : cont_name2 active containers list : cont_name1 Storage label : label_name2 </pre>
Related Commands	N/A
Notes	

5 Ethernet Switching

5.1 Interface

Interface Ethernet have the following physical set of configurable parameters

- Admin state – enabling or disabling the interface
- Flow control – admin state per direction (send or receive)
- MTU (Maximum Transmission Unit) – 1500-9216 bytes
- Speed – 1/10/40/56/100GbE (depending interface type and system)
- Description – user defined string
- Module-type – the type of the module plugged in the interface




To use 40GbE QSFP interfaces as 10GbE (via QSA adapter), the speed must be manually set with the command “speed 10000” under the interface configuration mode.

5.1.1 Break-Out Cables

The break-out cable is a unique HPE capability, where a single physical quad-lane QSFP port is divided into 2 dual-lane ports or 4 single-lane ports. It maximizes the flexibility of the end user to use the HPE M-series Switch with a combination of dual-lane, single-lane and quad-lane interfaces according to the specific requirements of its network. Certain ports cannot be split at all, and there are ports which can be split into 2 ports only (for more information please refer to your Switch System Hardware User Manual). Splitting a port changes the notation of that port from x/y to x/y/z with “x/y” indicating the previous notation of the port prior to the split and “z” indicating the number of the resulting single-lane port (1,2 or 1,2,3,4). Each sub-physical port is then handled as an individual port. For example: splitting port 10 into 4 lanes gives the following new ports: 1/10/1, 1/10/2, 1/10/3, 1/10/4.

Figure 14: Break-Out Cable

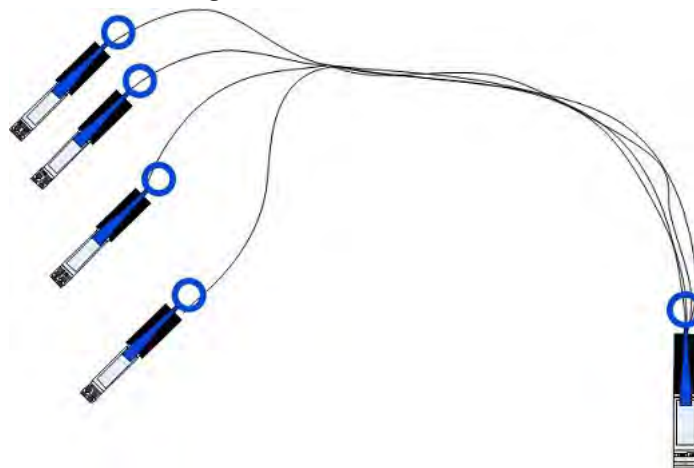

A split-4 operation results in blocking a quad-lane port in addition to the one being split. A set of hardware restrictions determine which of the ports can be split.

Specific ports can be split by using a QSFP 1X4 breakout cable to split one single-lane port into 4 lanes (4 SFP+ connectors). These 4 lanes then go, one lane to each of the 4 SFP+ connectors.



Splitting the interface deletes all configuration on that interface.

When splitting an interface's traffic into 4 data streams (four lanes) one of the other ports on the switch is disabled (unmapped).

5.1.1.1 Changing the Module Type to a Split Mode

➤ *To split an interface:*

Step 1. Shut down all the ports related to the interface. Run:

- in case of split-2, shut down the current interface only
- in case of split-4, shut down the current interface and the other interface according switch system's spec

```
switch (config) # interface ethernet 1/1
switch (config interface ethernet 1/1) # shutdown
switch (config interface ethernet 1/1) # exit
switch (config) # interface ethernet 1/4
switch (config interface ethernet 1/4) # shutdown
```

Step 2. Split the ports as desired. Run:

```
switch (config interface ethernet 1/4) # module-type qsfp-split-4
switch (config interface ethernet 1/4) #
```

Step 3. The following warning will be displayed:

the following interfaces will be unmapped: 1/420 1/19.

Choose Yes when prompted Type 'yes' to confirm split

The <ports> field in the warning refers to the affected ports from splitting port <inf> in the applied command.



Please beware that splitting a port into 4 prevents you from accessing the splittable port, and an additional one. For example, in the procedure above, ports 3 and 4 become unaccessible.

5.1.1.2 Unsplitting a Split Port

➤ *To unsplit a split port:*

Step 1. Shut down all of the split ports. Run:

```
switch (config interface ethernet 1/4/4) # shutdown
switch (config interface ethernet 1/4/4) # exit
switch (config) # interface ethernet 1/4/3
switch (config interface ethernet 1/4/3) # shutdown
switch (config interface ethernet 1/4/3) # exit
switch (config) # interface ethernet 1/4/2
switch (config interface ethernet 1/4/2) # shutdown
switch (config interface ethernet 1/4/2) # exit
switch (config) # interface ethernet 1/4/1
switch (config interface ethernet 1/4/1) # shutdown
```

Step 2. From the first member of the split (1/4/1), change the module-type back to QSFP. Run:

```
switch (config interface ethernet 1/4/1) # module-type qsfp
```



The module-type can be changed **only** from the first member of the split and **not** from the interface which has been split.

The following warning will be displayed:

The following interfaces will be unmapped: 1/4/1 1/4/2 1/4/3 1/4/4.

Step 3. Type “yes” when prompted “Type 'yes' to confirm unsplit.”

5.1.2 56GbE Link Speed

HPE offers proprietary speed of 56Gb/s per Ethernet interface.



The following OPNs support 56GbE:

- MSX6036F-xxxx
- MSX1036x-xxxS
- MSX1024x-xxxS
- MSX1012x-xxxx
- MSX6012F-xxxx
- MSX6018F-xxxx

The following OPNs do not support 56GbE:

- MSX6036T-xxxx
- MSX1036x-xxxR
- MSX6012T-xxxx
- MSX6018T-xxxx



56GbE speed is not supported on SwitchX® (A1) ASIC based switch systems.

➤ **To achieve 56GbE link speed:**

Step 1. Make sure your system is 56Gb/s capable (e.g. SX6036F, SX1024, and SX1036).

Step 2. Set the system profile to be eth-single-switch, and reset the system:

```
switch (config) # system profile eth-single-profile
```

Step 3. Set the speed for the desired interface to 56GbE as follows. Run:

```
switch (config) # interface ethernet 1/1
switch (config interface ethernet 1/1) # speed 56000
switch (config interface ethernet 1/1) #
```

Step 4. Verify the speed is 56GbE

```
switch (config) # show interfaces ethernet 1/1
Eth1/1
Admin state: Enabled
Operational state: Down
Description: N\A
Mac address: 00:02:c9:5d:e0:26
MTU: 1522 bytes
Flow-control: receive off send off
Actual speed: 56 Gbps
Switchport mode: access
Rx
0 frames
0 unicast frames
0 multicast frames
0 broadcast frames
0 octets
0 error frames
0 discard frames
Tx
0 frames
0 unicast frames
0 multicast frames
0 broadcast frames
0 octets
0 discard frames
switch (config) #
```

5.1.3 Transceiver Information

MLNX-OS offers the option of viewing the transceiver information of a module or cable connected to a specific interface. The information is a set of read-only parameters burned onto the EEPROM of the transceiver by the manufacture. The parameters include identifier (connector type), cable type, speed and additional inventory attributes.

➤ **To display transceiver information of a specific interface, run:**

```
switch (config) # show interfaces ethernet 1/60 transceiver
Port 1/60 state
  identifier           : QSFP+
  cable/module type    : Passive copper, unequalized
  ethernet speed and type: 56GigE
  vendor               : Mellanox
  cable length         : 1m
  part number          : MC2207130-001
  revision             : A3
  serial number        : MT1238VS04936
switch (config) #
```



The indicated cable length is rounded up to the nearest natural number.

5.1.4 High Power Transceivers

HPE M-series Switch systems offer high power transceiver (LR4) support in the following ports:

Table 51 - LR4/ER4 switch support

Transceiver			Switch OPN	Supported Ports
Speed	Protocol	Power Consumption [W]		
40G	LR4/ER4	3.5	SX1036/SX1700	1, 3, 33, 35
			SX1024/SX1400	50, 52, 54, 56, 58, 60
			SX1024/SX1400	50, 52, 54, 56, 58, 60
			SN2100/SN2410/SN2700	All ports
100G	LR4	4.5	SN2100	1, 2, 15, 16
			SN2410	49, 50, 55, 56
			SN2700	1, 2, 31, 32

If a high power transceiver (e.g. LR4) is inserted to a port that does not support it, the link does not go up, and the following warning message is displayed: “Warning: High power transceiver is not supported” when the command “show interfaces ethernet” is run.

5.1.5 Forward Error Correction

Forward Error Correction (FEC) mechanism adds extra data to the transmitted information. The receiving device uses this additional data to verify that the received data contains no errors. If the receiving side discovers errors within the received data it is able to correct some of these errors. The number of errors that can be corrected depends on the FEC algorithm and the amount of redundant data.

100GbE HPE M-series to HPE M-series Ethernet connections always enable standard Reed Solomon (RS) FEC on all cables.

If a HPE system is connected to a 3rd party system, then FEC is only activated if the 3rd party requests it also.

5.1.6 Commands

interface ethernet

interface ethernet <slot>/<port>[/<subport>]-[<slot>/<port>[/<subport>]]

Enters the Ethernet interface or Ethernet interface range configuration mode.

Syntax Description	<slot>/<port>	Ethernet port number.
	subport	Ethernet subport number. to be used in case of split port.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	First version
	3.2.1100	Added range support
Role	admin	
Example	<pre>switch (config) # interface ethernet 1/1 switch (config interface ethernet 1/1) # exit switch (config) # interface ethernet 1/1-1/10 switch (config interface ethernet 1/1-1/10) #</pre>	
Related Commands	show interfaces ethernet	
Note		

boot-delay

boot-delay [<time>]
no boot-delay

Configures interface boot-delay timer.
The no form of the command returns boot-delay time to its default value.

Syntax Description	time	Boot delay time in seconds Range: 0-600
Default	0 seconds	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.6.2002	
Role	admin	
Example	switch (config interface ethernet 1/1) # boot-delay 60	
Related Commands	show interfaces ethernet	
Note	This command delays the interface from boot time of the interface Configuration save and system reboot is required for the configuration to take effect.	

flowcontrol

flowcontrol {receive | send} {off | on} [force]

Enables or disables IEEE 802.3x link-level flow control per direction for the specified interface.

Syntax Description	receive send	receive - ingresses direction send - egresses direction
	off on	on - enables IEEE 802.3x link-level flow control for the specified interface on receive or send. off - disables IEEE 802.3x link-level flow control for the specified interface on receive or send
	force	Forces command implementation.
	Default	receive off, send off
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.1.0000	
	3.3.4500	Added MLAG port-channel configuration mode
Role	admin	
Example	<pre>switch (config interface ethernet 1/1) # flowcontrol receive off switch (config interface ethernet 1/1) #</pre>	
Related Commands	show interfaces ethernet	
Note	N/A	

module-type

module-type <type> [force]
no module-type <type> [force]

Splits the interface to two or four separate interfaces, or merges them back to a single interface (QSFP).

The no form of the command resets the interface to its default configuration.

Syntax Description	type	qsfp - Port runs at 40000/56000Mbps qsfp-split-2 - Port is split and runs at 2X10000Mb/s qsfp-split-4 - Port is split and runs at 4X10000Mb/s
	force	Force the split operation without asking for user confirmation.
Default	QSFP	
Configuration Mode	Config Interface Ethernet	
History	3.1.1400	
	3.5.0000	Added note
	3.6.3640	Added note
	3.6.4006	Added note
Role	admin	
Example	<pre>switch (config interface ethernet 1/4) # module-type qsfp-split-4 The following interfaces will be unmapped: 1/4 1/1 Type 'yes' to confirm split: yes switch (config interface ethernet 1/4) #</pre>	

Related Commands

Note

- Port can't be splitted when storm-control is configured on port
 - Force command don't remove storm-control configuration. Error output:
% Storm control configuration must be removed from interface Eth1/2
 - After a split port is created or deleted, the forwarding mode for each split port is set according to the global configuration
 - The affected interfaces should be disabled prior to the operation
 - In order to unsplit the interface, use the command with “qsfps”, the speed is set to 40Gb/s “module-type qsfps”
 - The following speeds are supported on the different Ethernet interface types:
 - qsfps - 1G, 10G, 25G, 40G, 50G, 56G, 100G
 - qsfps-split-2 - 1G, 10G, 25G, 50G
 - qsfps-split-4 - 1G, 10G, 25G
-
-

mtu

mtu <frame-size>

Configures the Maximum Transmission Unit (MTU) frame size for the interface.

Syntax Description	frame-size	This value may be 1500-9216 bytes
Default	1500 bytes	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.1.0000	
	3.3.4500	Added MLAG port-channel configuration mode
Role	admin	
Example	switch (config interface ethernet 1/1) # mtu 9216 switch (config interface ethernet 1/1) #	
Related Commands	show interfaces ethernet	
Note		

shutdown

shutdown
no shutdown

Disables the interface.
The no form of the command enables the interface.

Syntax Description	N/A
Default	The interface is enabled.
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel
History	3.1.0000 3.3.4500 Added MLAG port-channel configuration mode
Role	admin
Example	switch (config interface ethernet 1/1) # shutdown switch (config interface ethernet 1/1) #
Related Commands	show interfaces ethernet
Note	

description

description <string>
no description

Sets an interface description.

The no form of the command returns the interface description to its default value.

Syntax Description	string	40 bytes
Default	""	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.1.0000	
	3.3.4500	Added MLAG port-channel configuration mode
Role	admin	
Example	switch (config interface ethernet 1/1) # description my-interface switch (config interface ethernet 1/1) #	
Related Commands	show interfaces ethernet	
Note		

speed

speed <port speed> [force]
no speed

Sets the speed of the interface.

The no form of the command sets the speed of the interface to its default value.

Syntax Description	port speed	The following options are available: 1G or 1000 - 1GbE 10G or 10000 - 10GbE 25G or 25000 - 25GbE 40G or 40000 - 40GbE 50G or 50000 - 50GbE 56G or 56000 - 56GbE 100G or 100000 - 100GbE
	force	Forces speed change configuration
Default	Depends on the port module type, see the “Notes” section below.	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.1.0000	
	3.3.4500	Added MLAG port-channel configuration mode
	3.5.0000	Added 25GbE, 50GbE, and 100GbE speeds and updated notes
Role	admin	
Example	switch (config interface ethernet 1/1) # speed 40G switch (config interface ethernet 1/1) #	
Related Commands	show interfaces ethernet	
Note	<ul style="list-style-type: none"> • The default speed depends on the interface capabilities, interface capable of 40GbE will have 40GbE speed by default • SwitchX systems do not support 25GbE, 50GbE, and 100GbE speeds • Not all interfaces support all speed options 	

load-interval

load-interval <time>
no load-interval

Sets the interface counter interval.
The no form of the command resets the interval to its default value.

Syntax Description	time	In seconds.
Default	300 seconds.	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.3.0000	
	3.3.4500	Added MLAG port-channel configuration mode
Role	admin	
Example	switch (config interface ethernet 1/1) # load-interval 30 switch (config interface ethernet 1/1) #	
Related Commands	show interfaces ethernet	
Note	This interval is used for the ingress rate and egress rate counters.	

ip address dhcp

ip address dhcp
no ip address dhcp

Enables DHCP on this Ethernet interface.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config Interface Ethernet set as router interface Config Interface Port Channel set as router interface
History	3.4.2008
Role	admin
Example	switch (config interface ethernet 1/1) # ip address dhcp switch (config interface ethernet 1/1) #
Related Commands	interface ethernet show interfaces ethernet
Note	

fec-override

fec-override <fec-configuration> [force]

no fec-override <fec-configuration> [force]

Changes FEC configuration on a specific port or range of ports.

The no form of the command resets this parameter to its default value.

Syntax Description	fec-configuration	<ul style="list-style-type: none">• auto – auto-FEC selection• no-fec – disables FEC• fec-on – enables FEC
	force	Forces configuration (does not require toggling interface to take effect)

Default	Auto-FEC selection
Configuration Mode	Config Interface Ethernet
History	3.5.0000
	3.6.2002 Added force option
Role	admin
Example	switch (config interface ethernet 1/2) # fec-override fec-on
Related Commands	show interfaces ethernet
Notes	<ul style="list-style-type: none">• This command is supported only on Spectrum™ based switch systems• Use this command with caution. There is no limitation in configuring non-standard FEC. It may cause the link to malfunction.

clear counters**clear counters**

Clears the interface counters.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config Interface Ethernet Config Interface Port Channel
History	3.1.0000 3.3.4500 Added MLAG port-channel configuration mode
Role	admin
Example	<code>switch (config interface ethernet 1/1) # clear counters</code>
Related Commands	<code>show interfaces ethernet</code>
Note	

show interfaces status

show interfaces ethernet <inf>

Displays the configuration and status for the interface.

Syntax Description	inf	Interface number: <slot>/<port>.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.4006	
Role	admin	
Example	switch (config) # show interfaces status	

```
-----  
Port          Oper State      Admin   Speed      Description  
-----  
mgmt0         Down           Enabled 1000Mb/s (auto)-  
mgmt1         Down           Enabled UNKNOWN -  
Eth1/1        Down           Enabled 100 Gbps -  
Eth1/2        Up             Enabled 100 Gbps -  
Eth1/3        Up             Enabled 100 Gbps -  
Eth1/4        Up             Enabled 100 Gbps -  
Eth1/5        Up             Enabled 100 Gbps -  
Eth1/6        Down           Enabled 100 Gbps -  
Eth1/7        Down           Enabled 100 Gbps -  
Eth1/8        Down           Enabled 100 Gbps -  
Eth1/9        Down           Enabled 100 Gbps -  
Eth1/10       Up             Enabled 100 Gbps -  
Eth1/11       Up             Enabled 100 Gbps -  
Eth1/12       Up             Enabled 100 Gbps -  
Eth1/13       Up             Enabled 100 Gbps -  
Eth1/14       Down           Enabled 100 Gbps -  
Eth1/15       Up             Enabled 100 Gbps -  
Eth1/16       Up             Enabled 100 Gbps -  
Eth1/17       Down           Enabled 100 Gbps -  
Eth1/18       Down           Enabled 100 Gbps -  
Eth1/19       Down           Enabled 100 Gbps -  
Eth1/20       Down           Enabled 100 Gbps -  
Eth1/21       Down           Enabled 100 Gbps -  
Eth1/22       Down           Enabled 100 Gbps -  
Eth1/23       Down           Enabled 100 Gbps -  
Eth1/24       Down           Enabled 100 Gbps -  
Eth1/25       Down           Enabled 100 Gbps -  
Eth1/26       Down           Enabled 100 Gbps -  
Eth1/27       Down           Enabled 100 Gbps -  
Eth1/28       Down           Enabled 100 Gbps -  
Eth1/29       Down           Enabled 100 Gbps -  
Eth1/30       Down           Enabled 100 Gbps -  
Eth1/31       Down           Enabled 100 Gbps -  
Eth1/32       Down           Enabled 100 Gbps -  
switch (config) #
```

Related Commands

Note

If a high power transceiver (e.g. LR4) is inserted to a port that does not support it, the link does not go up, and the following warning message is displayed: “Warning: High power transceiver is not supported” when running the command “show interfaces ethernet” is run. For more information, please refer to [Section 5.1.4, “High Power Transceivers,”](#) on page 592.

show interfaces ethernet

show interfaces ethernet <inf>

Displays the configuration and status for the interface.

Syntax Description	inf	Interface number: <slot>/<port>.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.0000	
	3.6.1002	Added “error packets” counter to Tx, “Last change in operational status”, and “Isolation group” to output
	3.6.2002	Added “boot delay” parameters to output
	3.6.3640	Added support for “forwarding mode”
	3.6.4110	Updated example output “Forwarding mode”
Role	admin	

Example

```

switch (config) # show interfaces ethernet 1/14

Eth1/14
  Admin state: Enabled
  Operational state: Up
  Last change in operational status: 4w4d and 22:35:26 ago (1 oper
change)
  Boot delay time: 60 sec
  Boot delay timer status: N/A
  Description: N\A
  Mac address: f4:52:14:5c:73:f8
  MTU: 1500 bytes(Maximum packet size 1522 bytes)
  Fec: auto
  Flow-control: receive off send off
  Actual speed: 40 Gbps
  Width reduction mode: disabled
  DHCP client: Disabled
  IP Address: 8.9.14.9 /24
  Broadcast address: 8.9.14.255
  Arp timeout: 1500 seconds
  VRF: default
  MAC learning mode: Enabled
  Isolation group: N\A
  Last clearing of "show interface" counters : Never
  60 seconds ingress rate: 168 bits/sec, 21 bytes/sec, 1 packets/sec
  60 seconds egress rate: 160 bits/sec, 20 bytes/sec, 1 packets/sec

Rx
  559480          packets
  4335            unicast packets
  550812         multicast packets
  4333           broadcast packets
  56941600       bytes
  0              error packets
  0              discard packets

Tx
  557579         packets
  4332           unicast packets
  548912         multicast packets
  4335           broadcast packets
  54615032       bytes
  0              error packets
  0              discard packets
##
Forwarding mode: inherited cut-through
##

```

Related Commands**Note**

If a high power transceiver (e.g. LR4) is inserted to a port that does not support it, the link does not go up, and the following warning message is displayed: “Warning: High power transceiver is not supported” when running the command “show interfaces ethernet” is run. For more information, please refer to [Section 5.1.4, “High Power Transceivers,”](#) on page 592.

show interfaces counters

show interfaces [ethernet|port-channel] <inf> counters [priority <prio>]

Displays the extended counters for the interface.

Syntax Description	inf	Interface number: <slot>/<port>
	priority	Displays interface extended counters per priority. Range: 0-7 or “all”
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.0000	
	3.5.1000	Added notes
	3.6.1002	Added “error packets” counter to Tx
	3.6.4006	Added extended output for storm-control
Role	admin	

Example

```

switch (config) # show interfaces ethernet 1/1 counters

Rx
 0          packets
 0          unicast packets
 0          multicast packets
 0          broadcast packets
 0          bytes
 0          packets of 64 bytes
 0          packets of 65-127 bytes
 0          packets of 128-255 bytes
 0          packets of 256-511 bytes
 0          packets of 512-1023 bytes
 0          packets of 1024-1518 bytes
 0          packets Jumbo
 0          error packets
 0          discard packets
 0          fcs errors
 0          undersize packets
 0          oversize packets
 0          pause packets
 0          unknown control opcode
 0          symbol errors
(appears only on L2 ethernet ports and port-channels supported inter-
faces)
..0          packets
..0          unicast packets
..0          multicast packets
..
 0          error packets
 0          discard packets
 0          discard packets by Storm Control
 0          fcs errors
 0          undersize packets

Tx
 0          packets
 0          unicast packets
 0          multicast packets
 0          broadcast packets
 0          bytes
 0          error packets
 0          discard packets
 0          pause packets
 0          TX wait
 0          TX wait useconds
 0          queue depth TC0
 0          queue depth TC1
 0          queue depth TC2
 0          queue depth TC3
 0          queue depth TC4
 0          queue depth TC5
 0          queue depth TC6
 0          queue depth TC7
switch (config) #

```

Related Commands

Note

- Spectrum™ based systems display queue depth for TC0 - TC7
 - SwitchX® based systems display queue depth for TC0 - TC3 only
-
-

show interfaces ethernet description

show interfaces ethernet [<inf>] description

Displays the admin status and protocol status for the specified interface.

Syntax Description	inf	Interface number: <slot>/<port>.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.0000	
	3.4.1100	Updated Example
Role	admin	
Example	<pre>switch (config) # show interfaces ethernet description Interface Admin state Operational state ----- - Eth1/58 Enabled Down Eth1/59 Enabled Up Eth1/60 Enabled Down (Suspend) switch (config) # show interfaces ethernet 1/60 description Eth1/60 Admin state: Enabled Operational state: Down (Suspend) switch (config) #</pre>	
Related Commands		
Note		

show interfaces ethernet rates

show interfaces ethernet [<inf>] rates [<transfer-rate-unit>]

Displays the current transfer rate of the interface.

Syntax Description	transfer-rate-unit	<ul style="list-style-type: none">• KB – displays interface transfer rate in KB/s• MB – displays interface transfer rate in MB/s• GB – displays interface transfer rate in GB/s• If no parameter is entered transfer rate is displayed in readable unit (KB/MB/GB/BS) depending on the range
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.2002	
Role	admin	
Example	switch (config) # show interfaces ethernet rates KB	
	<pre>Port egress ingress avg rate (KB/s) pkts/sec avg rate (KB/s) pkts/sec ----- Eth1/1 0 0 0.032 1 Eth1/2 0 0 0.032 1 Eth1/3 0 0 0 0 ... switch (config) #</pre>	
Related Commands		
Note		

show interfaces ethernet status**show interfaces ethernet [<inf>] status**

Displays the status, speed and negotiation mode of the specified interface.

Syntax Description	inf	Interface number: <slot>/<port>.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.0000	
	3.4.1100	Updated Example
Role	admin	
Example	<pre>switch (config) # show interfaces ethernet status Port Operational state Speed Negotiation ---- - Eth1/58 Down 40 Gbps No-Negotiation Eth1/59 Up 40 Gbps No-Negotiation Eth1/60 Down (Suspend) 40 Gbps No-Negotiation switch (config) #</pre>	
Related Commands		
Note		

show interfaces ethernet transceiver

show interfaces ethernet [<inf>] transceiver

Displays the transceiver info.

Syntax Description	inf	interface number: <slot>/<port>
---------------------------	-----	---------------------------------

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.1.0000
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config) # show interfaces ethernet 1/1 transceiver Port 1/1 state identifier : QSFP+ cable/module type : Optical cable/module ethernet speed and type: 40GBASE - SR4 vendor : Mellanox cable_length : 50 m part number : MC2210411-SR4 revision : A1 serial number : TT1151-00006 switch (config) #</pre>
----------------	---

Related Commands	
-------------------------	--

Note	<ul style="list-style-type: none">• For a full list of the supported cables and transceivers, please refer to http://www.hpe.com/support/hpesc• If a high power transceiver (e.g. LR4) is used, it will be indicated in the field “cable/module type”.
-------------	--

show interfaces ethernet transceiver counters

show interfaces ethernet [<inf>] transceiver counters

Displays PHY counters.

Syntax Description	inf	interface number: <slot>/<port>
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.1002	
Role	admin	
Example	<pre>switch (config) # show interfaces ethernet 1/1 transceiver counters Rx phy received bits 17725862707200 phy symbol errors 0 phy corrected bits 0</pre>	

Related Commands

Note

- The counter “phy received bits” provides information on the total amount of traffic received and can be used to estimate the ratio of error traffic
- The counter “phy symbol errors” provides information on the error traffic that was not corrected because the FEC algorithm could not do it or because FEC was not active on this interface
- The counter “phy corrected bits” provides the number of corrected bits by the active FEC mode (RS/FC)
- This command is only supported on Spectrum™ based switch systems

show interfaces ethernet transceiver counters details

show interfaces ethernet [<inf>] transceiver counters

Displays all PHY counters.

Syntax Description	inf	interface number: <slot>/<port>
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.1002	
Role	admin	
Example	<pre>switch (config) # show interfaces ethernet 1/1 transceiver counters details ----- Phy counters ----- Symbol errors 0 Sync headers errors 0 Edpl/bip errors lane0 0 Edpl/bip errors lane1 0 Edpl/bip errors lane2 0 Edpl/bip errors lane3 0 FC corrected blocks lane0 0 FC corrected blocks lane1 0 FC corrected blocks lane2 0 FC corrected blocks lane3 0 FC uncorrectable blocks lane0 0 FC uncorrectable blocks lane1 0 FC uncorrectable blocks lane2 0 FC uncorrectable blocks lane3 0 RS corrected blocks 0 RS uncorrectable blocks 0 RS no errors blocks 1130552748 RS single error blocks 0 RS corrected symbols total 0 RS corrected symbols lane0 0 RS corrected symbols lane1 0 RS corrected symbols lane2 0 RS corrected symbols lane3 0 Link down events 0 Successful recovery events 0 Time since last clear 176127</pre>	
Related Commands		
Note	The number of lanes displayed depends on interface splitter ratio (4-way-split – each split has only 1 lane; 2-way-split – each split has 2 lanes)	

show interfaces ethernet transceiver diagnostics

show interfaces ethernet [<inf>] transceiver diagnostics

Displays cable channel monitoring and diagnostics info for this interface. Tx and Rx power are reported in mW and dBm units.

Syntax Description	inf	Interface number: <slot>/<port>
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.2002	
	3.6.4006	Updated output to report Tx and Rx power in mW and dBm units.
Role	admin	

Example

```
switch (config) # show interfaces ethernet 1/35 transceiver diagnostics
Port 1/35 transceiver diagnostic data:
```

```
Temperature (-127C to +127C)
```

```
Temperature           : 32 C
Hi Temp Alarm Thresh : 80 C
Low Temp Alarm Thresh : -10 C
Temperature Alarm     : None
```

```
Voltage ( 0 to 6.5535 V)
```

```
Voltage           : 3.24250 V
Hi Volt Alarm Thresh : 3.50000 V
Low Volt Alarm Thresh : 3.10000 V
Voltage Alarm     : None
```

```
Tx Bias Current ( 0 to 131 mA)
```

```
Ch1 Tx Current      : 6.60000 mA
Ch2 Tx Current      : 6.60000 mA
Ch3 Tx Current      : 6.60000 mA
Ch4 Tx Current      : 6.60000 mA
Hi Tx Crnt Alarm Thresh : 8.50000 mA
Low Tx Crnt Alarm Thresh : 5.49200 mA
Ch1 Tx Current Alarm : None
Ch2 Tx Current Alarm : None
Ch3 Tx Current Alarm : None
Ch4 Tx Current Alarm : None
```

```
Tx Power ( 0 mW to 6.5535 mW / 8.1647 dBm)
```

```
Ch1 Tx Power      : 0.98970 mW / -0.04496 dBm
Ch2 Tx Power      : 1.12020 mW / 0.49296 dBm
Ch3 Tx Power      : 1.13240 mW / 0.54000 dBm
Ch4 Tx Power      : 1.07200 mW / 0.30195 dBm
Hi Tx Power Alarm Thresh : 3.46730 mW / 5.39991 dBm
Low Tx Power Alarm Thresh : 0.07240 mW / -11.40261 dBm
Ch1 Tx Power Alarm : None
Ch2 Tx Power Alarm : None
Ch3 Tx Power Alarm : None
Ch4 Tx Power Alarm : None
```

```
Rx Power ( 0 mW to 6.5535 mW / 8.1647 dBm)
```

```
Ch1 Rx Power      : 1.14760 mW / 0.59791 dBm
Ch2 Rx Power      : 0.99280 mW / -0.03138 dBm
Ch3 Rx Power      : 1.01120 mW / 0.04837 dBm
Ch4 Rx Power      : 1.09500 mW / 0.39414 dBm
Hi Rx Power Alarm Thresh : 3.46730 mW / 5.39991 dBm
Low Rx Power Alarm Thresh : 0.04670 mW / -13.30683 dBm
Ch1 Rx Power Alarm : None
Ch2 Rx Power Alarm : None
Ch3 Rx Power Alarm : None
Ch4 Rx Power Alarm : None
```

```
Vendor Date Code (dd-mm-yyyy) : 15-05-2016
```

Related Commands**Note**

This example is for a QSFP transceiver

show interfaces ethernet transceiver raw

show interfaces ethernet [<inf>] transceiver raw

Displays cable info for this interface.

Syntax Description	inf	Interface number: <slot>/<port>
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.1002	
Role	admin	
Example	<pre>switch (config) # show interfaces ethernet 1/7 transceiver raw Port 1/7 raw transceiver data: I2C Address 0x50, Page 0, 0:255: 0000 0d 02 06 00 00 00 00 00 00 00 00 00 00 00 00 0010 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 0020 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 0030 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 0040 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 0050 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 0060 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 0070 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 0080 0d 00 23 08 00 00 00 00 00 00 00 05 8d 00 00 ..#. 0090 00 00 01 a0 4d 65 6c 6c 61 6e 6f 78 20 20 20 20 ...Mellanox 00a0 20 20 20 20 0f 00 02 c9 4d 43 32 32 30 37 31 33MC220713 00b0 30 2d 30 30 41 20 20 20 41 33 02 03 05 00 46 66 0-00A A3...Ff 00c0 00 00 00 00 4d 54 31 32 32 37 56 53 30 30 36 34 ...MT1227VS0064 00d0 32 20 20 20 31 32 30 37 30 38 20 20 00 00 00 e4 2 120708 00e0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00f0 00 00 00 00 00 00 00 00 00 00 00 02 00 00 30 00 00 I2C Address 0x50, Pages 1, 128:255: 0080 0d 02 06 00 00 00 00 00 00 00 00 00 00 00 00 0090 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00a0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00b0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00c0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00d0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00e0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00f0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00</pre>	

Related Commands


Note

5.2 Interface Isolation

Interface isolation provides the ability to group interfaces in sets where traffic from each port is isolated from other interfaces in the group. The isolated interfaces in the group, however, are able to communicate with the interface marked as privileged.

5.2.1 Configuring Isolated Interfaces

Figure 15: Interface Isolation Example

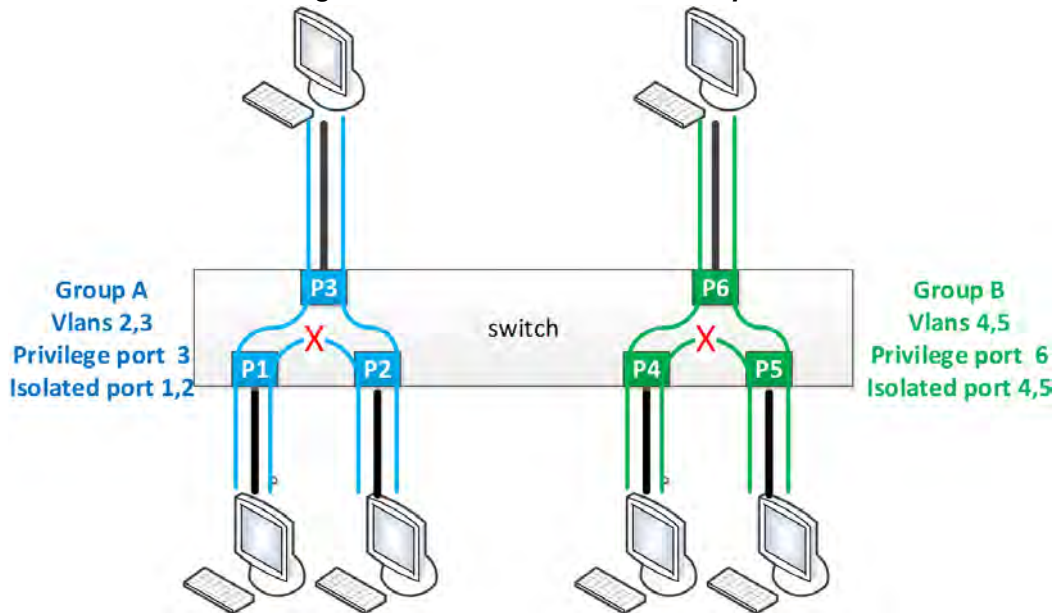

➤ **To configure isolated interfaces:**

Step 1. Create the VLANs to be used. Run:

```
switch (config) # vlan 2-5
(config vlan 2-5) # exit
```

Step 2. Unlock isolation interface protocol. Run:

```
switch (config) # protocol isolation-group
```

Step 3. Create isolation Group A. Run:

```
switch (config) # isolation-group GroupA
```

Step 4. Assign VLANs 2 and 3 to isolation Group A. Run:

```
(config isolation-group GroupA) # vlan 2-3
(config isolation-group GroupA) # exit
```

Step 5. Create isolation Group B. Run:

```
switch (config) # isolation-group GroupB
```

Step 6. Assign VLANs 4 and 5 to isolation Group B. Run:

```
(config isolation-group GroupB) # vlan 4-5
(config isolation-group GroupB) # exit
```

Step 7. Set Ethernet interfaces 1-3 to access for VLAN 3. Run:

```
(config) # interface ethernet 1/1 switchport access vlan 3
(config) # interface ethernet 1/2 switchport access vlan 3
(config) # interface ethernet 1/3 switchport access vlan 3
```

Step 8. Isolate Ethernet interfaces 1 and 2 and set Ethernet interfaces 3 as privileged. Run:

```
(config) # interface ethernet 1/1-1/2 isolation-group GroupA mode isolated
(config) # interface ethernet 1/3 isolation-group GroupA mode privileged
```

Step 9. Enable isolation Group A. Run:

```
(config) # isolation-group GroupA no shutdown
```

Step 10. Set Ethernet interfaces 4-6 to trunk. Run:

```
(config) # interface ethernet 1/4 switchport mode trunk
(config) # interface ethernet 1/5 switchport mode trunk
(config) # interface ethernet 1/6 switchport mode trunk
```

Step 11. Isolate Ethernet interfaces 4 and 5 and set Ethernet interfaces 6 as privileged. Run:

```
(config) # interface ethernet 1/4-1/5 isolation-group GroupA mode isolated
(config) # interface ethernet 1/6 isolation-group GroupA mode privileged
```

Step 12. Enable isolation Group B. Run:

```
(config) # isolation-group GroupB no shutdown
```

Step 13. Verify configuration. Run:

```
(config) # show isolation-group
Isolation group: GroupA
State:           Enabled
VLANs:           2, 3
Privileged port: Eth1/3
Isolated ports:  Eth1/1, Eth1/2

Isolation group: GroupB
State:           Enabled
VLANs:           4, 5
Privileged port: Eth1/6
Isolated ports:  Eth1/4, Eth1/5
```

5.2.2 Commands

protocol isolation-group

protocol isolation-group
no protocol isolation-group

Enables interface isolation and unlocks further isolation-group commands. The no form of the command disables interface isolation and locks other isolation-group commands.

Syntax Description	N/A
---------------------------	-----

Default	Disabled
Configuration Mode	Config
History	3.6.1002
Role	admin
Example	<code>switch (config) # protocol isolation-group</code>
Related Commands	
Note	<ul style="list-style-type: none">• MLAG must be disabled before enabling interface isolation• When disabled, all configuration is lost

isolation-group

isolation-group <name>
no isolation-group <name>

Creates isolation group.
 The no form of the command deletes isolation group.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.6.1002
Role	admin
Example	switch (config) # isolation-group mygroup
Related Commands	protocol isolation-group
Note	<ul style="list-style-type: none"> • The no form of this command deletes the isolation group, removes its attached ports, and the VLANs from the group • Up to 64 isolation groups can be created

shutdown

shutdown
no shutdown

Enables isolation group.
The no form of the command disables isolation group.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config Isolation Group
History	3.6.1002
Role	admin
Example	<code>switch (config isolation-group mygroup) # no shutdown</code>
Related Commands	<code>protocol isolation-group</code> <code>isolation-group</code>
Note	Enabling isolation groups fails if there are VLANs with ports both inside and outside the group.

vlan

vlan <vid>
no vlan <vid>

Adds a VLAN to isolation group.
 The no form of the command removes a VLAN from an isolation group.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config Isolation Group
History	3.6.1002
Role	admin
Example	switch (config isolation-group mygroup) # vlan 10
Related Commands	protocol isolation-group isolation-group
Note	<ul style="list-style-type: none"> • Enabling isolation groups fails if there are VLANs with ports both inside and outside the group • The VLAN must be created before running this command • All interfaces in the VLAN must be attached to only this isolation group • The VLAN added cannot have a respective VLAN interface

isolation-group mode

isolation-group <name> mode {isolated | privileged}
no isolation-group <name> mode {isolated | privileged}

Adds a VLAN to isolation group.

The no form of the command removes a VLAN from an isolation group.

Syntax Description	name	The isolation group name
	isolated	Configures this interface as isolated
	privileged	Configures this interface as privileged
Default	N/A	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel	
History	3.6.1002	
Role	admin	
Example	<pre>switch (config interface ethernet 1/2) # isolation-group mygroup mode privileged</pre>	
Related Commands		
Note	<ul style="list-style-type: none">• Enabling isolation groups fails if there are VLANs with ports both inside and outside the group• The VLAN must be created before running this command• All interfaces in the VLAN must be attached to only this isolation group• The VLAN added cannot have a respective VLAN interface	

show isolation-group

show isolation-group <name>

Displays isolation group information.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.6.1002
Role	admin
Example	<pre>switch (config) # show isolation-group mygroup State: Enabled VLANs: 3, 4, 3000 Privileged port: Eth1/25 Isolated ports: Eth1/1, Eth1/2, Eth1/3, Eth1/4, Eth1/5, Eth1/17, Eth1/18, Eth1/19, Eth1/20, Eth1/21, Eth1/27, Eth1/28, Eth1/29, Po60, Po777</pre>
Related Commands	
Note	

5.3 Link Aggregation Group (LAG)

Link Aggregation protocol describes a network operation in which several same speed links are combined into a single logical entity with the accumulated bandwidth of the originating ports. LAG groups exchange Lag Aggregation Control Protocol (LACP) packets in order to align the functionality between both endpoints of the LAG. To equally send traffic on all LAG links, the switch uses a hash function which can use a set of attributes as key to the hash function.

As many as 16 physical ports can be aggregated on a single LAG.

5.3.1 Configuring Static Link Aggregation Group (LAG)

➤ *To configure a static LAG:*

Step 1. Log in as admin.

Step 2. Enter config mode. Run:

```
switch > enable
switch # configure terminal
```

Step 3. Create a port-channel entity. Run:

```
switch (config) # interface port-channel 1
switch (config interface port-channel 1) #
```

Step 4. Change back to config mode.

```
switch (config interface port-channel 1) # exit
switch (config) #
```

Step 5. Add a physical port to the port-channel. Run:

```
switch (config interface ethernet 1/4) # channel-group 1 mode on
switch (config interface ethernet 1/4) #
```



If the physical port is operationally up, this port becomes an active member of the aggregation. Consequently, it becomes able to convey traffic.

5.3.2 Configuring Link Aggregation Control Protocol (LACP)

➤ *To configure LACP:*

Step 1. Log in as admin.

Step 2. Enter config mode. Run:

```
switch > enable
switch # configure terminal
```

Step 3. Create a port-channel entity. Run:

```
switch (config) # interface port-channel 1
switch (config interface port-channel 1) #
```

Step 4. Change back to config mode. Run:

```
switch (config interface port-channel 1) # exit
switch (config) #
```

Step 5. Enable LACP in the switch. Run:

```
switch (config) # lacp
switch (config) #
```

Step 6. Add a physical port to the port-channel. Run:

```
switch (config interface ethernet 1/4) # channel-group 1 mode active/passive
switch (config interface ethernet 1/4) #
```

5.3.3 Commands

interface port-channel

```
interface port-channel <1-4096>[-<2-4096>]
no interface port-channel <1-4096>[-<2-4096>]
```

Creates a LAG and enters the LAG configuration mode. There is an option to create a range of LAG interfaces.

The no form of the command deletes the LAG, or range of LAGs.

Syntax Description	1-4096 / 2-4096	LAG number
Default	N/A	
Configuration Mode	Config	
History	3.1.1400	First version
	3.2.1100	Added range support
	3.4.0000	Added note
	3.6.3640	Added note
Role	admin	
Example	<pre>switch (config)# interface port-channel 1 switch (config interface port-channel 1) # exit switch (config)# interface port-channel 1-10 switch (config interface port-channel 1-10) #</pre>	
Related Commands		
Note	<ul style="list-style-type: none"> • If a LAG is also an IPL, attempting to delete it without first deleting the IPL is rejected by the management. • LAG have forwarding mode in accordance with the global configuration 	

lACP

lACP
no lACP

Enables LACP in the switch.
The no form of the command disables LACP in the switch.

Syntax Description	N/A
Default	LACP is disabled.
Configuration Mode	Config
History	3.1.1400
Role	admin
Example	switch (config)# lACP switch (config)#
Related Commands	
Note	

lacp system-priority

lacp system-priority <1-65535>
no lacp system-priority

Configures the LACP system priority.
 The no form of the command sets the LACP system-priority to default.

Syntax Description	1-65535	LACP system-priority.
Default	32768	
Configuration Mode	Config	
History	3.1.1400	
Role	admin	
Example	<pre>switch (config)# lacp system-priority 1 switch (config)# show lacp interfaces port-channel Port-channel Module Admin Status is enabled Port-channel System Identifier is 00:02:c9:5c:61:70 LACP System Priority: 3 switch (config)#</pre>	
Related Commands		
Note		

lACP (interface)

lACP {rate fast | port-priority <1-65535>}

no lACP {rate fast | port-priority}

Configures the LACP interface parameters.

The no form of the command sets the LACP interface configuration to default.

Syntax Description	rate fast	Sets LACP PDUs on the port to be in fast (1 second) or slow rate. (30 seconds).
	1-65535	LACP port-priority.
Default	rate - slow (30 seconds) port-priority 32768	
Configuration Mode	Config	
History	3.1.1400	
Role	admin	
Example	<pre>switch (config interface ethernet 1/7)# lACP rate fast switch (config interface ethernet 1/7)# show lACP interfaces ethernet 1/7 Port : 1/7 ----- Port State = Down Channel Group : 1 Pseudo port-channel = Po1 LACP port-priority = 32768 LACP Rate = Slow LACP Activity : Passive LACP Timeout : Short Aggregation State : Aggregation, Defaulted, Port LACP Port Admin Oper Port Port Port State Priority Key Key Number State ----- 1/7 Down 128 1 1 0x7 0x0 switch (config)#</pre>	
Related Commands		
Note	Configuring LACP rate (fast or slow) will configure the peer port to send (fast or slow), it does not make any affect on the local port LACP rate.	

port-channel load-balance ethernet

port-channel load-balance ethernet <method>
no port-channel load-balance ethernet <method>

Configures the port-channel load balancing distribution function method.
 The no form of the command sets the distribution function method to default.

Syntax Description	method	Possible load balance methods: <ul style="list-style-type: none"> • destination-ip • destination-mac • destination-port • source-destination-ip • source-destination-mac • source-destination-port • source-ip • source-mac • source-port
Default	source-destination-mac	
Configuration Mode	Config	
History	3.1.1400	
Role	admin	
Example	<pre>switch (config)# port-channel load-balance ethernet destination-ip source-port source-mac switch (config)# show interfaces port-channel load-balance destination-ip,source-mac,source-port switch (config)#</pre>	
Related Commands		
Note	Several load balance methods can be configured (refer to the example)	

channel-group

channel-group <1-4096> [mode {on | active | passive}]
no channel-group

Assigns and configures a physical interface to a port channel.
The no form of the command removes a physical interface from the port-channel.

Syntax Description	1-4096	The port channel number.
	mode on	Static assignment the port to LAG. LACP will not be enabled on this port.
	mode active/passive	Dynamic assignment of the port to LAG. LACP will be enabled in either passive or active mode.
Default	N/A	
Configuration Mode	Config Interface Ethernet	
History	3.1.1400	
	3.4.0008	Added a note
	3.6.3640	Added a note
	3.6.4006	Added a note
Role	admin	
Example	switch (config interface ethernet 1/7)# channel-group 1 mode active	

Related Commands show interfaces port-channel summary
 show interfaces port-channel compatibility-parameters
 show lacp interfaces ethernet

- Note**
- Setting the mode to active/passive is possible only in LACP is enabled.
 - The first port in the LAG decide if the LAG will be static (“on”) or LACP (“active”, “pasive”).
 - All the ports in the LAG must have the same configuration, determines by the first port added to the LAG. The port with a different configuration will be rejected, for the list of dependencies refer to ‘show interfaces port-channel compatibility-parameters’
 - A physical port may only be part of one channel-group
 - Added support to check if the forwarding mode of the interface is the same as the forwarding mode of LAG. Error output:
% Channel-group and Ethernet port have different port forwarding mode configuration
 - Port can`t be added to port-channel when storm-control is configured on port. Error output:
% Interface * has storm control configuration and can't be added to LAG
-

lACP-individual enable

lACP-individual enable [force]
no lACP-individual enable [force]

Configures the LAG to act with LACP-individual capabilities.
The no form of the command disables the LACP-individual capability.

Syntax Description	force	Toggles the interface after enabling LACP-individual.
---------------------------	-------	---

Default	N/A
----------------	-----

Configuration Mode	Config Interface Port Channel
---------------------------	-------------------------------

History	3.4.1100
----------------	----------

Role	admin
-------------	-------

Example	switch (config interface port-channel 10)# lACP-individual enable force
----------------	---

Related Commands	
-------------------------	--

Note	If a switch is connected via LAG to a host without LACP capability, running this command on that LAG allows a member port (with the lowest numerical priority value), acting as an individual, to communicate with the host.
-------------	--

ip address dhcp

ip address dhcp
no ip address dhcp

Enables DHCP on this LAG interface.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config Interface Port Channel set as router interface
History	3.4.2008
Role	admin
Example	<pre>switch (config interface port channel 10) # ip address dhcp switch (config interface port channel 10) #</pre>
Related Commands	<pre>interface port-channel show interface port-channel</pre>
Note	

show lacp counters

show lacp counters

Displays the LACP PDUs counters.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.1.1400
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config)# show lacp counters LACPDUs Marker Marker Response LACPDUs Port Sent Recv Sent Recv Sent Recv Illegal Unknown ----- Port-channel: 1 ----- 1/7 0 0 0 0 0 0 0 0 switch (config) # switch (config)#</pre>
----------------	--

Related Commands	
-------------------------	--

Note	
-------------	--

show lacp interfaces ethernet

show lacp interface ethernet <inf>

Displays the LACP interface configuration and status.

Syntax Description	inf	Interface number, for example "1/1".
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.1400	
Role	admin	
Example	<pre>switch (config) # show lacp interfaces ethernet 1/4 Port : 1/4 ----- Port State = Down Channel Group : 1 Pseudo port-channel = Po1 LACP port-priority = 128 LACP Rate = Slow LACP Activity : Passive LACP Timeout : Short Aggregation State : Aggregation, Defaulted, Port LACP Port Admin Oper Port Port Port State Priority Key Key Number State ----- 1/4 Down 128 1 1 0x4 0x0 switch (config) #</pre>	
Related Commands		
Note		

show lacp interfaces neighbor

show lacp interfaces neighbor

Displays the LACP interface neighbor status.

Syntax Description	N/A	
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.1400	First version
	3.4.0000	Updated output
Role	admin	

Example

```

switch (config) # show lacp interfaces neighbor
Flags:
A - Device is in Active mode
P - Device is in Passive mode

Channel group 1 neighbors

Port 1/4
-----
Partner System ID           : 00:00:00:00:00:00
Flags                       : A
LACP Partner Port Priority  : 0
LACP Partner Oper Key      : 0
LACP Partner Port State    : 0x0

Port State Flags Decode
-----
Activity : Active
Aggregation State : Aggregation, Sync, Collecting, Distributing

MLAG channel group 25 neighbors

Port 1/49
-----
Partner System ID           : 00:02:c9:fa:c4:c0
Flags                       : A
LACP Partner Port Priority  : 255
LACP Partner Oper Key      : 33
LACP Partner Port State    : 0xbc

Port State Flags Decode
-----
Activity : Active
Aggregation State : Aggregation, Sync, Collecting, Distributing,

MLAG channel group 28 neighbors

Port 1/51
-----
Partner System ID           : f4:52:14:10:d8:f1
Flags                       : A
LACP Partner Port Priority  : 255
LACP Partner Oper Key      : 33
LACP Partner Port State    : 0xbc

Port State Flags Decode
-----
Activity : Active
Aggregation State : Aggregation, Sync, Collecting, Distributing,

switch (config) #

```

Related Commands**Note**

show lacp

show lacp

Displays the LACP global parameters.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.4.0000
Role	admin
Example	<pre>switch (config) # show lacp Port-channel Module Admin Status is enabled switch (config) #</pre>
Related Commands	
Note	

show lacp interfaces system-identifier

show lacp interfaces {mlag-port-channel | port-channel} <instance> system-identifier

Displays the system identifier of LACP.

Syntax Description	instance	LAG or MLAG instance.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.4.0000	
Role	admin	
Example	<pre>switch (config)# show lacp interfaces port-channel 2 system-identifier Priority: 12345 MAC: 00:02:C9:AC:2A:60 switch (config)#</pre>	
Related Commands		
Note		

show interfaces port-channel

show interfaces port-channel <port-channel>

Displays port-channel configuration properties.

Syntax Description	port-channel	LAG interface whose properties to display
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.4000	
	3.4.1100	Updated Example
	3.6.1002	Added "error packets" counter to Tx
Role	admin	
Example	switch (config) # show interfaces port-channel 2	

```
Po2

Admin state: Enabled
Operational state: Up
Description: N\A
Mac address: 00:00:00:00:00:00
MTU: 9216 bytes (Maximum packet size 9238 bytes)
lacp-individual mode: Enabled
Flow-control: receive off send off
Actual speed: 2 X 40 Gbps
Width reduction mode: disabled
Switchport mode: trunk
MAC learning mode: Enabled
Last clearing of "show interface" counters : Never
60 seconds ingress rate: 2440 bits/sec, 305 bytes/sec, 5 packets/sec
60 seconds egress rate: 2440 bits/sec, 305 bytes/sec, 5 packets/sec

Rx
 24060          packets
 23447          unicast packets
   598          multicast packets
    15          broadcast packets
1796876        bytes
     0          error packets
     0          discard packets

Tx
 23961          packets
 23454          unicast packets
   496          multicast packets
    11          broadcast packets
1805778        bytes
     0          error packets
     4          discard packets
switch (config) #
```

Related Commands

Note

show interfaces port-channel counters

show interfaces port-channel <port-channel> **counters**

Displays the extended counters for the interface.

Syntax Description	port-channel	LAG interface whose properties to display
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.1002	
Role	admin	
Example	switch (config) # show interfaces port-channel 3 counters	

```
Rx
 0          packets
 0          unicast packets
 0          multicast packets
 0          broadcast packets
 0          bytes
 0          packets of 64 bytes
 0          packets of 65-127 bytes
 0          packets of 128-255 bytes
 0          packets of 256-511 bytes
 0          packets of 512-1023 bytes
 0          packets of 1024-1518 bytes
 0          packets Jumbo
 0          error packets
 0          discard packets
 0          fcs errors
 0          undersize packets
 0          oversize packets
 0          pause packets
 0          unknown control opcode
 0          symbol errors
```

```
Tx
1000000    packets
 0          unicast packets
1000000    multicast packets
 0          broadcast packets
1505000000 bytes
1000000    error packets
 0          discard packets
 0          pause packets
```

```
switch (config) #
```

Related Commands

Note

show interfaces port-channel compatibility-parameters**show interfaces port-channel compatibility-parameters**

Displays port-channel parameters.

Syntax Description	N/A	
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.4000	
	3.6.3640	Added “forwarding mode” as compatibility parameter to output.
Role	admin	
Example	<pre>switch (config) # show interfaces port-channel compatibility-parameters * Port-mode * Speed * MTU * Flow Control * Access VLAN * Allowed VLAN list * Flowcontrol & PFC * Channel-group mode * CoS parameters * MAC learning disable * Forwarding mode Static configuration on the port should be removed: * ACL port binding * Static mrouter * sflow * OpenFlow * port mirroring local analyzer port * Static mac address switch (config) #</pre>	
Related Commands		
Note		

show interfaces port-channel load-balance

show interfaces port-channel load-balance

Displays the type of load-balancing in use for port-channels.

Syntax Description	N/A	N/A
---------------------------	-----	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.3.4000
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config) # show interfaces port-channel load-balance source-destination-mac switch (config) #</pre>
----------------	---

Related Commands	
-------------------------	--

Note	
-------------	--

show interfaces port-channel summary


show interfaces port-channel summary

Displays a summary for the port-channel interfaces.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.1400 3.4.1100 Updated Example
Role	admin
Example	<pre>switch (config) # show interfaces port-channel summary Flags: D - Down, U - Up, P - Up in port-channel (members) S - Suspend in port-channel (members), I - Individual ----- Group Port- Type Member Ports Channel ----- 1 Po2(U) LACP Eth1/58(D) Eth1/59(I) Eth1/60(S) 2 Po5(D) LACP Eth1/1(S) Eth1/33(I) 3 Po10(U) LACP Eth1/49(P) Eth1/50(P) Eth1/51(S) Eth1/52(S) switch (config) #</pre>
Related Commands	
Note	

5.4 MLAG

Figure 16: Basic MLAG Setup

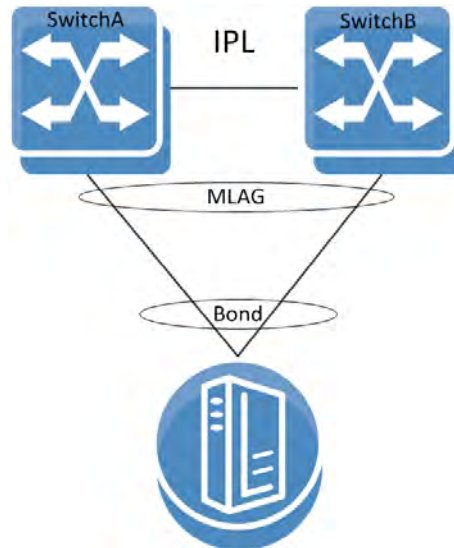

All nodes in an MLAG must be of the same CPU type (i.e., x86).



Each switch configuration is independent and it is user responsibility to make sure to configure both switches similarly pertaining MLAG (e.g. MLAG port-channel VLAN membership, static MAC, ACL, etc).

A link aggregation group (LAG) is used for extending the bandwidth from a single link to multiple links and provide redundancy in case of link failure. Extending the implementation of the LAG to more than a single device provides yet another level of redundancy that extends from the link level to the node level. This extrapolation of the LAG from single to multiple switches is referred to as multi-chassis link aggregation (MLAG).



MLAG is currently supported for 2 switches only.



The VIP address must be on the same management IP subnet.

A peered device (host or switch) connecting to switches running an MLAG runs a standard LAG and is unaware of the fact that the LAG connects to two separate switches.



MLAG links currently mandate disabling xSTP control protocol. However, interfaces not part of an MLAG can run any protocol independently.

The MLAG switches share an inter-peer link (IPL) between them for carrying control messages in a steady state or data packages in failure scenarios. Thus, the bandwidth of the IPL should be defined accordingly. The IPL itself can be a LAG and may be constructed of either 10GbE or 40GbE links. In such a case, PFC must be configured on this IPL. [Figure 17, “Basic MLAG Topology,” on page 655](#) illustrates this. The IPL serves the following purposes:

- MLAG protocol control – keepalive messages, MAC sync, MLAG port sync, etc.
- MLAG port failure – serves redundancy in case of a fallen link on one of the MLAG switches
- Layer-3 failure – serves redundancy in case of a failed connection between the MLAG switches and the rest of the L3 network should there be one



The IPL VLAN interface must be used only for MLAG protocol and must not be used by any other interfaces (e.g. port-channel, Ethernet).

The MLAG protocol is made up of the following components to be expanded later:

- Keepalive
- Unicast and multicast sync
- MLAG port sync

When positioned at the top of rack (ToR) and connecting with a Layer-3 uplink, the MLAG pair acts as the L3 border for the hosts connected to it. To allow default gateway redundancy, both MLAG switches should be addressed by the host via the same default gateway address.

MLAG uses an IP address (VIP) that is always directed to the MLAG-VIP master node.

When running MLAG with L3, VRRP or MAGP must be deployed. For more information, refer to [Section 6.8, “VRRP,” on page 1295](#) or [Section 6.9, “MAGP,” on page 1310](#) respectively.



When MLAG is connected through a Layer-2 based uplink, there is no need to apply default gateway redundancy towards hosts since this function is implemented on the L2/L3 border points of the network.

The two peer switches need to carry the exact same configuration of the MLAG attributes for guaranteeing proper functionality of the MLAG.



Ensuring that both switches are configured identically is the responsibility of the user and is not monitored by the MLNX-OS software.



When working with MLAG the maximum number of MAC addresses is limited to 47,970. Without it, the number of MAC addresses would be 55,872.



When transitioning from standalone into a group or vice versa, a few seconds are required for the node state to stabilize. During that time, group features such as Gateway HA, SM HA, and MLAG commands should not be executed. To run group features, wait for the CLI prompt to turn into [standalone:master], [<group>:master] or [<group>:standby] instead of [standalone:*unknown*] or [<group>:*unknown*].



In a scenario where there is no IP communication between the MGMT ports of the MLAG switches (for example when one MGMT port is disconnected), the following CLI prompt is displayed:

```
<hostname>[<mlag cluster name>:unknown]#
```

This does not reflect the MLAG state, but only the state of the cluster.

5.4.1 MLAG Keepalive and Failover

Master election in MLAG is based on the IPs of the nodes taking part of the MLAG. The master elected is that which has the highest IPL VLAN interface local IP address.



MLAG master/slave roles take effect in fault scenarios such as split-brain, peer faults, and during software upgrades.

The MLAG pair of switches periodically exchanges a keepalive message on a user configurable interval. If the keepalive message fails to arrive for three consecutive intervals the switches break into two standalone switches. In such case the remaining active switch begins to act as a standalone switch and assumes that its previously peering MLAG switch has failed.

To avoid a scenario where failure on the IPL causes both MLAG peers to assume that their peer has failed, a safety mechanism based on UDP packets running via the management plane is maintained and alerts both peers of IPL failure. In such a case of IPL failure, the slave shuts down its interfaces to avoid a split brain scenario and the master becomes a standalone switch.

5.4.2 Unicast and Multicast Sync

Unicast and multicast sync is a mechanism which syncs the unicast and multicast FDBs of the MLAG peers. It prevents unicast asymmetric traffic from loading the network with flood traffic and multicast traffic from being processed.

5.4.3 MLAG Port Sync

Under normal circumstances, traffic from the IPL cannot pass through the MLAG ports (the IPL is isolated from the MLAG ports). If one of the MLAG links break, the other MLAG switch opens that isolation and allows traffic from its peer through the IPL to flow via the MLAG port which accesses the destination of the fallen link.

5.4.4 MLAG Virtual System-MAC

A pair of MLAG switches uses a single virtual system MAC for L2 protocols (such as LACP) operating on the MLAG ports.

The virtual system MAC is automatically computed based on the MLAG VIP name, but can be manually set using the command “system-mac”.

MLAG relies on systems to have the same virtual system MAC. Therefore, if a system MAC mismatch is detected, the slave shuts down its interfaces.

5.4.5 Upgrading MLAG Pair


Switches in the same MLAG group must have the same MLNX-OS version.

When peers identify having different versions, they enter an upgrading state in which the slave peer waits for a specific period of time (according to the command “upgrade-timeout” on page 671) before closing its ports.

For more information on MLAG upgrade, please see Section 4.4.2, “Upgrading MLNX-OS HA Groups,” on page 201.

5.4.6 Configuring MLAG

This section provides a basic example of how to configure two switches and a server in an MLAG setup.

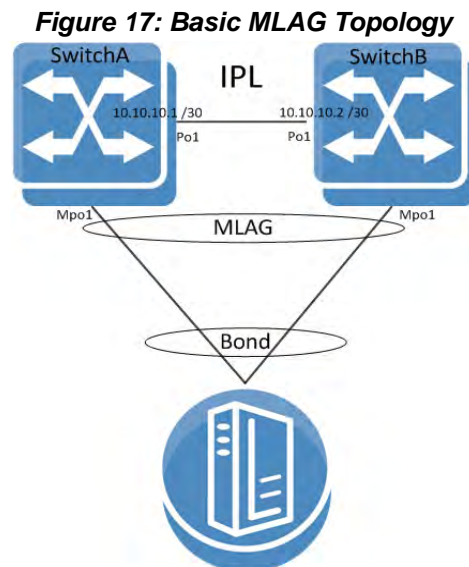

For more advanced configuration options, please refer to the following Mellanox Community post: <https://community.mellanox.com/docs/DOC-2262>.

➤ **To configure L2 MLAG:**

Prerequisites:

Step 1. Enable IP routing. Run:

```
switch (config)# ip routing
```

Step 2. (Recommended) Enable LACP in the switch. Run:

```
switch (config)# lacp
```

Step 3. Enable QoS on the switch to avoid congestion on the IPL port. Run:

```
switch (config)# dcb priority-flow-control enable force
```

Step 4. Enable the MLAG protocol commands. Run:

```
switch (config)# protocol mlag
```

Configuring the IPL:

Step 1. Create a VLAN for the inter-peer link (IPL) to run on. Run:

```
switch (config)# vlan 4000
switch (config vlan 4000)#
```

Step 2. Create a LAG. Run:

```
switch (config)# interface port-channel 1
switch (config interface port-channel 1)#
```

Step 3. Map a physical port to the LAG in active mode (LACP). Run:

```
switch (config)# interface ethernet 1/1 channel-group 1 mode active
```

Step 4. Set this LAG as an IPL. Run:

```
switch (config interface port-channel 1)# ipl 1
```

Step 5. Enable QoS on this specific interface. Run:

```
switch (config interface port-channel 1)# dcb priority-flow-control mode on force
```

Step 6. Create a VLAN interface. Run:

```
switch (config)# interface vlan 4000
switch (config interface vlan 4000)#
```

Step 7. Set an IP address and netmask for the VLAN interface.

Configure IP address for the IPL link on both switches:

Note: The IPL IP address should not be part of the management network, it could be any IP address and subnet that is not in use in the network. This address is not advertised outside the switch.

On SwitchA, run:

```
switch (config interface vlan 4000)# ip address 1.1.1.1 /30
```

On SwitchB, run:

```
switch (config interface vlan 4000)# ip address 1.1.1.2 /30
```


- Step 8.** Map the VLAN interface to be used on the IPL and set the peer IP address (the IP address of the IPL port on the second switch) of the IPL peer port. IPL peer ports must be configured on the same netmask.

On SwitchA, run:

```
switch (config interface vlan 4000)# ipl 1 peer-address 1.1.1.2
```

On SwitchB, run:

```
switch (config interface vlan 4000)# ipl 1 peer-address 1.1.1.1
```

- Step 9.** Configure a virtual IP (VIP) for the MLAG. MLAG VIP (Virtual IP) is important for retrieving peer information.

Note: The IP address should be within the subnet of the management interface (mgmt0). Do not use mgmt1. The management network is used for keep-alive messages between the switches. The MLAG domain must be unique name for each MLAG domain. In case you have more than one pair of MLAG switches on the same network, each domain (consist of two switches) should be configured with different name.

On SwitchA, run:

```
switch (config)# mlag-vip my-vip ip 10.234.23.254 /24
```

On SwitchB, run:

```
switch (config)# mlag-vip my-vip
```

- Step 10.** (Optional) Configure a virtual system MAC for the MLAG. Run:

```
switch (config)# mlag system-mac 00:00:5E:00:01:5D
```

Creating an MLAG interface:

- Step 1.** Create an MLAG interface for the host. Run:

```
switch (config)# interface mlag-port-channel 1
switch (config interface mlag-port-channel 1)#
```

- Step 2.** Disable STP. Run:

```
switch (config interface mlag-port-channel 1)# spanning-tree port type edge
switch (config interface mlag-port-channel 1)# spanning-tree bpdufilter enable
```

- Step 3.** Bind an Ethernet port to the MLAG group. Run:

```
switch (config interface ethernet 1/2)# mlag-channel-group 1 mode on
```

- Step 4.** Create and enable the MLAG interface. Run:

```
switch (config interface mlag-port-channel 1)# no shutdown
```



STP must be disabled (no spanning-tree) on the MLAG switches when there is at least 1 MLAG port-channel connected to a switch and not to a host.

Enabling MLAG:

- Step 1.** Enable MLAG. Run:

```
switch [my-vip: master] (config mlag)# no shutdown
```



When running MLAG with L3, VRRP or MAGP must be deployed. For more information, refer to Section 6.8, “VRRP,” on page 1295 or Section 6.9, “MAGP,” on page 1310 respectively.

➤ **To verify MLAG configuration:**

Step 1. Examine MLAG configuration and status. Run:

```
SX2 [mellanox: master] (config)# show mlag
Admin status: Enabled
Operational status: Up
Reload-delay: 1 sec
Keepalive-interval: 30 sec
Upgrade-timeout: 60 min
System-mac: 00:00:5E:00:01:5D

MLAG Ports Configuration Summary:
Configured: 1
  Disabled:  0
  Enabled:   1

MLAG Ports Status Summary:
Inactive:    0
Active-partial: 0
Active-full:  1

MLAG IPLs Summary:
ID  Group          Vlan      Operational  Local      Peer
   Port-Channel Interface  State       IP address  IP address
-----
1   Po1            1         Up           10.10.10.1  10.10.10.2

Peers state Summary:
System-id      State  Hostname
-----
F4:52:14:2D:9B:88  Up    <SX2>
F4:52:14:2D:9B:08  Up    SX1
switch [mellanox: master] (config)#
```

Step 2. Examine the MLAG summary table. Run:

```
switch [my-vip: master] (config)# show interfaces mlag-port-channel summary
MLAG Port-Channel Flags: D-Down, U-Up
P-Partial UP, S - suspended by MLAG
Port Flags: D - Down, P - Up in port-channel (members)
S - Suspend in port-channel (members), I - Individual
Group
Port-Channel      Type      Local Ports      Peer Ports
(D/P/S/I)         (D/P/S/I)      (D/P/S/I)
-----
1 Mpo2(U)         Static     Eth1/2(P)        Eth1/2(P)

switch (config)#
```

Step 3. Examine the MLAG statistics. Run:

```
switch [my-vip: master] (config)# show mlag statistics
IPL 1:
Rx Heartbeat : 516
Tx Heartbeat : 516
Rx IGMP tunnel : 0
Tx IGMP tunnel : 0
RX mlag-notification: 0
TX mlag-notification: 0
Rx port-notification : 0
Tx port-notification : 0
Rx FDB sync : 0
Tx FDB sync : 0
RX LACP manager: 1
TX LACP manager: 0
switch (config)#
```

Enabling L3 Forwarding with User VRF

If you want to use a VRF for IP routing and forwarding on an MLAG topology, it is recommended to configure an additional VLAN interface with the same user VRF context as the non-MLAG L3 interface that has to route through the same physical ports as the IPL. This would allow forwarding L3 traffic through this VLAN interface on the same ports as the IPL.

5.4.7 Commands

protocol mlag

```
protocol mlag
no protocol mlag
```

Enables MLAG functionality and unhides the MLAG commands.
The no form of the command hides the MLAG commands and deletes its database.

Syntax Description

Default	no protocol mlag
Configuration Mode	Config
History	3.3.4500
Role	admin
Example	switch (config) # protocol mlag switch (config) #
Related Commands	
Note	<ul style="list-style-type: none"> • Running the no form of this command hides MLAG commands. • MLAG may be enabled without IP routing, but without IP routing an IPL vLAN interface cannot be configured and thus MLAG does not function. • MLAG may be enabled without IGMP snooping, but if IGMP snooping is disabled, multicast FDBs do not sync.

mlag

mlag

Enters MLAG configuration mode.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.3.4500
Role	admin
Example	switch (config) # mlag switch (config mlag) #
Related Commands	
Note	

shutdown

shutdown
no shutdown

Disables MLAG.
The no form of the command enables MLAG.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config MLAG
History	3.3.4500
Role	admin
Example	<pre>switch (config mlag) # no shutdown switch (config mlag) #</pre>
Related Commands	
Note	This parameter must be similar in all MLAG peers.

interface mlag-port-channel

```
interface mlag-port-channel <if-number>  
no interface mlag-port-channel <if-number>
```

Creates an MLAG interface.

The no form of the command deletes the MLAG interface.

Syntax Description	if-number	Integer. Interface number range: 1-1000.
Default	N/A	
Configuration Mode	Config	
History	3.3.4500	
Role	admin	
Example	<pre>switch (config) # interface mlag-port-channel 1 switch (config interface mlag-port-channel 1) #</pre>	
Related Commands		
Note	<ul style="list-style-type: none"> • The maximum number of interfaces is 64. • The default Admin state is disabled. • Range configuration is possible on this interface. • This interface number must be the same in all the MLAG switches. 	

ipl

ipl <ipl-id>
no ipl <ipl-id>

Sets this LAG as an IPL port.
The no form of the command resets this LAG as regular LAG.

Syntax Description	ipl-id	IPL ID. Only "1" IPL port is supported.
Default	no ipl	
Configuration Mode	Config Interface Port Channel	
History	3.3.4500	
Role	admin	
Example	switch (config interface port-channel 1)# ipl 1	
Related Commands		
Note	<ul style="list-style-type: none">• If a LAG is set as IPL, only the commands "[no] shutdown", "no ipl" and "no interface port-channel" become applicable.• A LAG interface set as IPL must have default LAG configuration, otherwise the set is rejected. Force option can be used.	

ipl peer-address

```
ipl <ipl-id> peer-address <IP-Address>
no ipl <ipl-id>
```

Maps a VLAN interface to be used for an IPL LAG and sets the peer IP address of the IPL peer port.

The no form of the command deletes a peer IPL LAG and unbinds this VLAN interface from the IPL function.

Syntax Description	ipl-id	IPL ID. Only "1" IPL port is supported.
	IP-Address	IPv4 address.
Default	N/A	
Configuration Mode	Config Interface VLAN	
History	3.3.4500	
Role	admin	
Example	<pre>switch (config interface vlan 1)# ipl 1 peer-address 10.10.10.10 switch (config interface vlan 1)#</pre>	
Related Commands		
Note	<ul style="list-style-type: none"> • The subnet mask is the same subnet mask of the VLAN interface. • This VLAN interface should be used for IPL only. 	

keep-alive-interval

keep-alive-interval <value>
no keep-alive-interval

Configures the interval during which keep-alive messages are issued between the MLAG switches.

The no form of the command resets this parameter to its default value.

Syntax Description	value	Time in seconds. Range: 1-300.
Default	1 second	
Configuration Mode	Config MLAG	
History	3.3.4500	
Role	admin	
Example	switch (config mlag) # keep-alive-interval 1 switch (config mlag) #	
Related Commands		
Note	This parameter must be similar in all MLAG peers.	

mlag-channel-group mode

mlag-channel-group <if-number> mode {on | active | passive}
no mlag-channel-group

Binds an Ethernet port to the MLAG LAG.
 The no form of the command deletes the binding.

Syntax Description	if-number	Integer. Interface number range: 1-1000.
	on	Binds to static MLAG.
	active	Sets MLAG LAG in LACP active mode.
	passive	Sets MLAG LAG in LACP passive mode.
Default	N/A	
Configuration Mode	Config Interface Ethernet	
History	3.3.4500	
Role	admin	
Example	<pre>switch (config interface ethernet 1/1)# mlag-channel-group 1 mode on switch (config interface ethernet 1/1)#</pre>	
Related Commands		
Note		

mlag-vip

mlag-vip <domain-name> ip [<ip-address> {<masklen> | netmask} [force]]
no mlag-vip

Sets the VIP domain and IP address for MLAG.
The no form of the command deletes the VIP domain and IP address.

Syntax Description	domain-name	MLAG group name
	<ip-address>	IP address
	<masklen>	Format example: /24. Note that a space is required between the IP address and the mask.
	<netmask>	Format example: 255.255.255.0. Note that a space is required between the IP address and the mask.
	force	Forces the IP address if another IP is already configured.
Default	N/A	
Configuration Mode	Config	
History	3.3.4500	
Role	admin	
Example	<pre>switch (config)# mlag-vip my-mlag-domain ip 10.10.10.254/24 switch (config)#</pre>	
Related Commands		
Note	<ul style="list-style-type: none">• This IP address must be configured in one of the MLAG switches and must be in the box management subnet.• Other switches in the MLAG must join the same domain name.	

reload-delay

reload-delay <value>
no reload-delay

Specifies the amount of time that MLAG ports are disabled after system reboot.

The no form of the command resets this parameter to its default value.

Syntax Description	value	Time in seconds. Range: 0-300.
Default	30 seconds	
Configuration Mode	Config MLAG	
History	3.3.4500	
Role	admin	
Example	<pre>switch (config mlag) # reload-delay 30 switch (config mlag) #</pre>	
Related Commands		
Note	<ul style="list-style-type: none"> • This interval allows the switch to learn the IPL topology to identify the master and sync the MAC address before opening the MLAG ports. • This parameter must be similar in all MLAG peers. 	

system-mac

system-mac <virtual-mac>
no system-mac <virtual-mac>

Configures virtual system MAC.
The no form of the command resets this value to its default value.

Syntax Description	virtual-mac	MAC address
Default	Default is calculated according to the MLAG-VIP name, using the base MAC as VRRP MAC prefix (00:00:5E:00:01:xx) with the suffix hashed from the mlag-vip name 0...255.	
Configuration Mode	Config MLAG	
History	3.4.2008	
Role	admin	
Example	<pre>switch (config mlag) # system-mac 00:00:5E:00:01:5D switch (config mlag) #</pre>	
Related Commands		
Note	This parameter must be configured the same in all MLAG peers.	

upgrade-timeout

upgrade-timeout <time>
no upgrade-timeout

Configures the time period during which an MLAG slave keeps its ports active while in upgrading state.

The no form of the command resets the parameter value to its default.

Syntax Description	time	Time in minutes. Range: 0-120 minutes.
Default	60	
Configuration Mode	Config MLAG	
History	3.4.2008	
Role	admin	
Example	<pre>switch (config mlag) # upgrade-timeout 60 switch (config mlag) #</pre>	
Related Commands		
Note	This parameter must be configured the same in all MLAG peers.	

show mlag

show mlag

Displays MLAG configuration and status.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.3.4500	
	3.3.5006	Updated example
	3.4.2008	Updated example with system MAC and upgrade timeout

Role	admin
-------------	-------

Example	<pre>SX2 [mellanox: master] (config)# show mlag Admin status: Enabled Operational status: Up Reload-delay: 1 sec Keepalive-interval: 30 sec Upgrade-timeout: 60 min System-mac: 00:00:5E:00:01:5D MLAG Ports Configuration Summary: Configured: 1 Disabled: 0 Enabled: 1 MLAG Ports Status Summary: Inactive: 0 Active-partial: 0 Active-full: 1 MLAG IPLs Summary: ID Group Vlan Operational Local Peer Port-Channel Interface State IP address IP address ----- 1 Po1 1 Up 10.10.10.1 10.10.10.2 MLAG Members Summary: System-id State Hostname ----- F4:52:14:2D:9B:88 Up <SX2> F4:52:14:2D:9B:08 Up SX1 SX2 [mellanox: master] (config)#</pre>
----------------	--

Related Commands	
-------------------------	--

Note	
-------------	--

show mlag-vip

show mlag-vip

Displays MLAG VIP configuration and status.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.3.4500
Role	admin
Example	<pre>switch (config)# show mlag-vip MLAG VIP ===== MLAG group name: my-mlag-group MLAG VIP address: 1.1.1.1/30 Active nodes: 2 Hostname VIP-State IP Address ----- SwitchA master 10.10.10.1 SwitchB standby 10.10.10.2 switch (config)#</pre>
Related Commands	
Note	

show interfaces mlag-port-channel

show interfaces mlag-port-channel <if-number>

Displays the MLAG LAG configuration and status.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.3.4500
	3.6.1002 Added “error packets” counter to Tx

Role	admin
-------------	-------

Example	<pre>switch (config)# show interfaces mlag-port-channel 1 Mpol Admin state: Enabled Operational state: Down Description: N\A Mac address: 00:00:00:00:00:00 MTU: 1500 bytes (Maximum packet size 1522 bytes) Flow-control: receive off send off Actual speed: 0 Gbps Width reduction mode: disabled Switchport mode: access Last clearing of "show interface" counters : Never 60 seconds ingress rate: 0 bits/sec, 0 bytes/sec, 0 packets/sec 60 seconds egress rate: 0 bits/sec, 0 bytes/sec, 0 packets/sec Rx 0 packets 0 unicast packets 0 multicast packets 0 broadcast packets 0 bytes 0 error packets 0 discard packets Tx 0 packets 0 unicast packets 0 multicast packets 0 broadcast packets 0 bytes 0 error packets 0 discard packets switch (config)#</pre>
----------------	--

Related Commands	
-------------------------	--

Note	
-------------	--

show interfaces mlag-port-channel counters

show interfaces mlag-port-channel <if-number> counters

Displays the extended counters for the interface.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.6.1002
Role	admin
Example	<pre>switch (config)# show interfaces mlag-port-channel 3 counters Rx 12 packets 0 unicast packets 12 multicast packets 0 broadcast packets 2700 bytes 0 packets of 64 bytes 0 packets of 65-127 bytes 12 packets of 128-255 bytes 0 packets of 256-511 bytes 0 packets of 512-1023 bytes 0 packets of 1024-1518 bytes 0 packets Jumbo 0 error packets 0 discard packets 0 fcs errors 0 undersize packets 0 oversize packets 0 pause packets 0 unknown control opcode 0 symbol errors Tx 0 packets 0 unicast packets 0 multicast packets 0 broadcast packets 152100000000 bytes 100000000 error packets 0 discard packets 0 pause packets switch (config)#</pre>

Related Commands

Note

show interfaces mlag-port-channel summary

show interfaces mlag-port-channel summary

Displays MLAG summary table.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.3.4500	First version
	3.4.0000	Added notes and updated example
	3.4.1100	Updated Example

Role	admin
-------------	-------

Example	<pre>switch [my-vip: standby] (config)# show interfaces mlag-port-channel summary MLAG Port-Channel Flags: D-Down, U-Up P-Partial UP, S - Suspended by MLAG Port Flags: D - Down, P - Up in port-channel (members) S - Suspend in port-channel (members), I - Individual Group Port-Channel Type Local Ports Peer Ports (D/U/P/S) (D/P/S/I) ----- 1 Mpo2(U) Static Eth1/2(P) Eth1/2(P) 2 Mpo3(U) Static Eth1/4(P) Eth1/8(P) 3 Mpo4(U) LACP Eth1/5(P) Eth1/5(P) switch (config)#</pre>
----------------	--

Related Commands	
-------------------------	--

Note	<ul style="list-style-type: none">• If a cluster is not available, the column “Peer Ports” shows “N/A”. If the cluster is available but is not configured on the peer, the “Peer Ports” column shows nothing.• If the system happens to be busy, peer ports may be unavailable and the following prompt may appear in the output: “System busy and partial information is presented – please try again later”.• The “I” flag indicates an interface which is part of a port-channel and in individual state• The “S” flag indicates an interface which is part of a port-channel and in suspended state
-------------	--

show mlag statistics

show mlag statistics

Displays the MLAG IPL counters.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.3.4500 3.4.0000 Updated example
Role	admin
Example	<pre>switch (config)# show mlag statistics IPL 1: RX Heartbeat: 439908 TX Heartbeat: 439951 RX IGMP tunnel: 0 TX IGMP tunnel: 1 RX mlag-notification: 0 TX mlag-notification: 12 RX port-notification: 56 TX port-notification: 73 RX FDB sync: 424 TX FDB sync: 778 RX LACP manager: 38 TX LACP manager: 21</pre>
Related Commands	
Note	

5.5 VLANs

A Virtual Local Area Network (VLAN) is an L2 segment of the network which defines a broadcast domain and is identified by a tag added to all Ethernet frames running within the domain. This tag is called a VLAN ID (VID) and can take a value of 1-4094.

Each port can have a switch mode of either:

- Access – Access port is a port connected to a host. It can accept only untagged frames, and assigns them a default configured VLAN (Port VLAN ID). On egress, traffic sent from the access port is untagged.
- Access-dcb – This mode is HPE specific that receives ingress untagged traffic but sends egress priority tag (VLAN ID = 0)
- Hybrid – Hybrid port is a port connected to either switches or hosts. It can receive both tagged and untagged frames and assigns untagged frames a default configured VLAN (Port VLAN ID). It receives tagged frames with VLANs of which the port is a member (these VLANs' names are allowed). On egress, traffic of allowed VLANs sent from the Hybrid port is sent tagged, while traffic sent with PVID is untagged.
- Trunk – Trunk port is a port connecting 2 switches. It accepts only tagged frames with VLANs of which the port is a member. On egress, traffic sent from the Trunk port is tagged. By default, a Trunk port is, automatically, a member on all current VLANs.

5.5.1 Configuring Access Mode and Assigning Port VLAN ID (PVID)

➤ *To configure Access mode and assign PVID to interfaces:*

Step 1. Log in as admin.

Step 2. Enter config mode. Run:

```
switch > enable
switch # configure terminal
```

Step 3. Create a VLAN. Run:

```
switch (config) # vlan 6
switch (config vlan 6) #
```

Step 4. Change back to config mode. Run:

```
switch (config vlan 6) # exit
switch (config) #
```

Step 5. Enter the interface context. Run:

```
switch (config) # interface ethernet 1/22
switch (config interface ethernet 1/22) #
```

Step 6. From within the interface context, configure the interface mode to Access. Run:

```
switch (config interface ethernet 1/22) # switchport mode access
switch (config interface ethernet 1/22) #
```

Step 7. From within the interface context, configure the Access VLAN membership. Run:

```
switch (config interface ethernet 1/22) # switchport access vlan 6
switch (config interface ethernet 1/22) #
```

Step 8. Change back to config mode. Run:

```
switch (config interface ethernet 1/22) # exit
switch (config) #
```

5.5.2 Configuring Hybrid Mode and Assigning Port VLAN ID (PVID)

➤ *To configure Hybrid mode and assign PVID to interfaces:*

Step 1. Log in as admin.

Step 2. Enter config mode. Run:

```
switch > enable
switch # configure terminal
```

Step 3. Create a VLAN. Run:

```
switch (config) # vlan 6
switch (config vlan 6) #
```

Step 4. Change back to config mode. Run:

```
switch (config vlan 6) # exit
switch (config) #
```

Step 5. Enter the interface context. Run:

```
switch (config) # interface ethernet 1/22
switch (config interface ethernet 1/22) #
```

Step 6. From within the interface context, configure the interface mode to Access. Run:

```
switch (config interface ethernet 1/22) # switchport mode hybrid
switch (config interface ethernet 1/22) #
```

Step 7. From within the interface context, configure the Access VLAN membership. Run:

```
switch (config interface ethernet 1/22) # switchport access vlan 6
switch (config interface ethernet 1/22) #
```

Step 8. Change to config mode again. Run:

```
switch (config interface ethernet 1/22) # exit
switch (config) #
```

5.5.3 Configuring Trunk Mode VLAN Membership

➤ *To configure Trunk mode VLAN membership:*

Step 1. Log in as admin.

Step 2. Enter config mode. Run:

```
switch > enable
switch # configure terminal
```

Step 3. Create a VLAN. Run:

```
switch (config) # vlan 10
switch (config vlan 10) #
```

Step 4. Change back to config mode. Run:

```
switch (config vlan 10) # exit
switch (config) #
```

Step 5. Enter the interface context. Run:

```
switch [standalone: master] (config) # interface ethernet 1/35
switch [standalone: master] (config interface ethernet 1/35) #
```

Step 6. From within the interface context, configure the interface mode to Trunk. Run:

```
switch [standalone: master] (config interface ethernet 1/35) # switchport mode trunk
switch [standalone: master] (config interface ethernet 1/35) #
```

5.5.4 Configuring Hybrid Mode VLAN Membership

➤ *To configure Hybrid mode VLAN membership:*

Step 1. Log in as admin.

Step 2. Enter config mode. Run:

```
switch > enable
switch # configure terminal
```

Step 3. Create a VLAN. Run:

```
switch (config) # vlan 10
switch (config vlan 10) #
```

Step 4. Change back to config mode. Run:

```
switch (config vlan 10) # exit
switch (config) #
```

Step 5. Enter the interface context. Run:

```
switch (config) # interface ethernet 1/35
switch (config interface ethernet 1/35) #
```

Step 6. From within the interface context, configure the interface mode to Hybrid. Run:

```
switch (config interface ethernet 1/35) # switchport mode hybrid
switch (config interface ethernet 1/35) #
```

Step 7. From within the interface context, configure the allowed VLAN membership. Run:

```
switch (config interface ethernet 1/35) # switchport hybrid allowed-vlan add 10
switch (config interface ethernet 1/35) #
```

Step 8. Change to config mode again. Run:

```
switch (config interface ethernet 1/35) # exit
switch (config) #
```


5.5.5 Commands

vlan

vlan {<vlan-id> | <vlan-range>}
no vlan {<vlan-id> | <vlan-range>}

Creates a VLAN or range of VLANs, and enters a VLAN context.
 The no form of the command deletes the VLAN or VLAN range.

Syntax Description	vlan-id	1-4094.									
	vlan-range	Any range of VLANs.									
Default	VLAN 1 is enabled by default.										
Configuration Mode	Config										
History	3.1.1400										
Role	admin										
Example	<pre>switch (config) # vlan 10 switch (config vlan 10) # show vlan</pre> <table border="1"> <thead> <tr> <th>VLAN</th> <th>Name</th> <th>Ports</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>default</td> <td>Eth1/2, Eth1/3, Eth1/4/1, Eth1/4/2 ...</td> </tr> <tr> <td>10</td> <td></td> <td></td> </tr> </tbody> </table> <pre>switch (config vlan 10) #</pre>		VLAN	Name	Ports	1	default	Eth1/2, Eth1/3, Eth1/4/1, Eth1/4/2 ...	10		
VLAN	Name	Ports									
1	default	Eth1/2, Eth1/3, Eth1/4/1, Eth1/4/2 ...									
10											
Related Commands	show vlan switchport mode switchport [trunk hybrid] allowed-vlan										
Note	Interfaces are not added automatically to VLAN unless configured with trunk or hybrid mode with “all” option turned on.										

name

name <vlan-name>
no name

Adds VLAN name.
The no form of the command deletes the VLAN name.

Syntax Description	vlan-name	40-character long string.																														
Default	No name available.																															
Configuration Mode	Config VLAN																															
History	3.1.1400																															
Role	admin																															
Example	<pre>switch (config) # vlan 10 switch (config vlan 10) # name my-vlan-name switch (config vlan 10) # show vlan</pre> <table border="1"><thead><tr><th>VLAN</th><th>Name</th><th>Ports</th></tr></thead><tbody><tr><td>1</td><td>default</td><td>Eth1/2, Eth1/3, Eth1/4/1, Eth1/4/2, Eth1/5,</td></tr><tr><td></td><td></td><td>Eth1/6, Eth1/7, Eth1/8, Eth1/9, Eth1/10,</td></tr><tr><td></td><td></td><td>Eth1/11, Eth1/12, Eth1/13, Eth1/14, Eth1/15,</td></tr><tr><td></td><td></td><td>Eth1/16, Eth1/17, Eth1/18, Eth1/19, Eth1/20,</td></tr><tr><td></td><td></td><td>Eth1/21, Eth1/22, Eth1/23, Eth1/24, Eth1/25,</td></tr><tr><td></td><td></td><td>Eth1/26, Eth1/27, Eth1/28, Eth1/29, Eth1/30,</td></tr><tr><td></td><td></td><td>Eth1/31, Eth1/32, Eth1/33, Eth1/34, Eth1/35,</td></tr><tr><td></td><td></td><td>Eth1/36, Po34, Po4096</td></tr><tr><td>10</td><td>my-vlan-name</td><td></td></tr></tbody></table>		VLAN	Name	Ports	1	default	Eth1/2, Eth1/3, Eth1/4/1, Eth1/4/2, Eth1/5,			Eth1/6, Eth1/7, Eth1/8, Eth1/9, Eth1/10,			Eth1/11, Eth1/12, Eth1/13, Eth1/14, Eth1/15,			Eth1/16, Eth1/17, Eth1/18, Eth1/19, Eth1/20,			Eth1/21, Eth1/22, Eth1/23, Eth1/24, Eth1/25,			Eth1/26, Eth1/27, Eth1/28, Eth1/29, Eth1/30,			Eth1/31, Eth1/32, Eth1/33, Eth1/34, Eth1/35,			Eth1/36, Po34, Po4096	10	my-vlan-name	
VLAN	Name	Ports																														
1	default	Eth1/2, Eth1/3, Eth1/4/1, Eth1/4/2, Eth1/5,																														
		Eth1/6, Eth1/7, Eth1/8, Eth1/9, Eth1/10,																														
		Eth1/11, Eth1/12, Eth1/13, Eth1/14, Eth1/15,																														
		Eth1/16, Eth1/17, Eth1/18, Eth1/19, Eth1/20,																														
		Eth1/21, Eth1/22, Eth1/23, Eth1/24, Eth1/25,																														
		Eth1/26, Eth1/27, Eth1/28, Eth1/29, Eth1/30,																														
		Eth1/31, Eth1/32, Eth1/33, Eth1/34, Eth1/35,																														
		Eth1/36, Po34, Po4096																														
10	my-vlan-name																															
Related Commands	show vlan switchport mode switchport [trunk hybrid] allowed-vlan																															
Note	Name can not be added to a range of VLANs.																															

show vlan

show vlan [id <vlan-id>]

Displays the VLAN table.

Syntax Description	vlan-id	1-4094.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.1400	
Role	admin	
Example	<pre>switch (config vlan 10) # show vlan VLAN Name Ports ---- - 1 default Eth1/2, Eth1/3, Eth1/4/1, Eth1/4/2 ... 10 my-vlan-name</pre>	
Related Commands	<pre>show vlan switchport mode switchport [trunk hybrid] allowed-vlan vlan</pre>	
Note		

switchport mode

switchport mode {access | dot1q-tunnel | trunk | hybrid | access-dcb}
no switchport mode

Sets the switch port mode.

The no form of the command sets the switch port mode to access.

Syntax Description	access	Untagged port. 802.1q tagged traffic are filtered. Egress traffic is untagged.
	dot1q-tunnel	Allows both tagged and untagged ingress Ethernet packets. Egress packets are tagged with a second VLAN (802.1Q) header.
	trunk	802.1q tagged port, untagged traffic is filtered.
	hybrid	Both 802.1q tagged and untagged traffic is allowed on the port.
	access-dcb	Untagged port, egress traffic is priority tagged.
Default	access	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.1.1400	
	3.3.4500	Added MLAG port-channel configuration mode
	3.4.3000	Added dot1q-tunnel parameter
Role	admin	
Example	<pre>switch (config) # interface ethernet 1/7 switch (config interface ethernet 1/7) # switchport mode access switch (config interface ethernet 1/7) # show interfaces switchport Interface Mode Access vlan Allowed vlans ----- ----- ----- ----- Eth1/2 access 1 Eth1/3 access 1 Eth1/4/1 access 1 Eth1/4/2 access 1 Eth1/5 access 1 Eth1/6 access 1 ... Po34 access 1 Po4096 access 1 switch (config interface ethernet 1/7) #</pre>	

Related Commands show vlan
 show interfaces switchport
 switchport access vlan
 switchport [trunk | hybrid] allowed-vlan
 switchport dot1q-tunnel qos-mode
 vlan

Note

switchport dot1q-tunnel qos-mode

switchport dot1q-tunnel qos-mode {pipe | uniform}
no switchport dot1q-tunnel qos-mode

Assigns QoS to the service provider's traffic.
The no form of the command resets the parameter value to its default.

Syntax Description	pipe	Gives the service provider's traffic QoS 0
	uniform	Gives the service provider's traffic the same QoS as the customer's traffic
Default	pipe	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.4.3000	
Role	admin	
Example	switch (config interface ethernet 1/1) # switchport dot1q-tunnel qos-mode uniform switch (config interface ethernet 1/1) #	
Related Commands	show vlan show interfaces switchport switchport access vlan switchport [trunk hybrid] allowed-vlan vlan	
Note		

switchport access

switchport access vlan <vlan-id>
no switchport access vlan

Sets the port access VLAN.
 The no form of the command sets the port access VLAN to 1.

Syntax Description	vlan-id	1-4094.																																								
Default	1																																									
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel																																									
History	3.1.1400	First version																																								
	3.2.0500	Format change (removed hybrid and access-dcb options). Previous command format was: “switchport {hybrid access-dcb access} vlan <vlan-id>”																																								
	3.3.4500	Added MLAG port-channel configuration mode																																								
Role	admin																																									
Example	<pre>switch (config) # interface ethernet 1/7 switch (config interface ethernet 1/7) # switchport access vlan 10 switch (config interface ethernet 1/7) # show interfaces switchport</pre> <table border="1"> <thead> <tr> <th>Interface</th> <th>Mode</th> <th>Access vlan</th> <th>Allowed vlans</th> </tr> </thead> <tbody> <tr> <td>Eth1/2</td> <td>access</td> <td>1</td> <td></td> </tr> <tr> <td>Eth1/3</td> <td>access</td> <td>1</td> <td></td> </tr> <tr> <td>Eth1/4/1</td> <td>access</td> <td>1</td> <td></td> </tr> <tr> <td>Eth1/4/2</td> <td>access</td> <td>1</td> <td></td> </tr> <tr> <td>Eth1/5</td> <td>access</td> <td>1</td> <td></td> </tr> <tr> <td>Eth1/6</td> <td>access</td> <td>1</td> <td></td> </tr> <tr> <td>Eth1/7</td> <td>access</td> <td>10</td> <td></td> </tr> <tr> <td>....</td> <td></td> <td></td> <td></td> </tr> <tr> <td>Po4096</td> <td>access</td> <td>1</td> <td></td> </tr> </tbody> </table> <pre>switch (config interface ethernet 1/7) #</pre>		Interface	Mode	Access vlan	Allowed vlans	Eth1/2	access	1		Eth1/3	access	1		Eth1/4/1	access	1		Eth1/4/2	access	1		Eth1/5	access	1		Eth1/6	access	1		Eth1/7	access	10					Po4096	access	1	
Interface	Mode	Access vlan	Allowed vlans																																							
Eth1/2	access	1																																								
Eth1/3	access	1																																								
Eth1/4/1	access	1																																								
Eth1/4/2	access	1																																								
Eth1/5	access	1																																								
Eth1/6	access	1																																								
Eth1/7	access	10																																								
....																																										
Po4096	access	1																																								
Related Commands	<pre>show vlan show interfaces switchport switchport mode switchport [trunk hybrid] allowed-vlan vlan</pre>																																									
Note	<p>This command is not applicable for interfaces with port mode trunk. only one option (“access”, “access-dcb” or “hybrid”) is applicable to configure on the port, depends on the switchport mode of the port.</p>																																									

switchport {hybrid, trunk} allowed-vlan

switchport {hybrid, trunk} allowed-vlan {<vlan> | add <vlan> | remove <vlan> all | except <vlan> | none}

Sets the port allowed VLANs.

Syntax Description	vlan	VLAN ID (1-4094) or VLAN range.
	add	Adds VLAN or range of VLANs.
	remove	Removes VLANs or range of VLANs.
	all	Adds all VLANs in available in the VLAN table. New VLANs added to the VLAN table are added automatically.
	except	Adds all VLANs expect this VLAN or VLAN range.
	none	Removes all VLANs.
Default	N/A	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.1.1400	
Role	admin	
Example	<pre>switch (config) # interface ethernet 1/7 switch (config interface ethernet 1/7) # switchport hybrid allowed-vlan all switch (config interface ethernet 1/7) #show interfaces switchport Interface Mode Access vlan Allowed vlans ----- ----- ----- ----- Eth1/2 access 1 Eth1/3 access 1 Eth1/4/1 access 1 Eth1/4/2 access 1 Eth1/5 access 1 Eth1/6 access 1 Eth1/7 hybrid 1 1, 10 Po34 access 1 Po4096 access 1 switch (config interface ethernet 1/7) #</pre>	

Related Commands show vlan
 show interfaces switchport
 switchport access vlan
 switchport mode
 vlan

Note This command is not applicable for interfaces with port mode access or access-dcb.

switchport voice

switchport voice vlan <vlan-id>
no switchport voice vlan

Configures voice VLAN for the interface.
The no form of the command disables voice VLAN.

Syntax Description	vlan-id 1-4094.
Default	Disabled
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel
History	3.6.1002
Role	admin
Example	<pre>switch (config) # interface ethernet 1/7 switch (config interface ethernet 1/7) # switchport voice vlan 10 switch (config interface ethernet 1/7) # show interfaces switchport Interface Mode Access vlan Allowed vlans ----- ----- ----- ----- Eth1/2 access 1 Eth1/3 access 1 Eth1/4/1 access 1 Eth1/4/2 access 1 Eth1/5 access 1 Eth1/6 access 1 Eth1/7 access 10 ... Po4096 access 1 switch (config interface ethernet 1/7) #</pre>
Related Commands	lldp med-tlv-select show vlan show interfaces switchport switchport mode switchport [trunk hybrid] allowed-vlan vlan
Note	

show interface switchport

show interface switchport

Displays all interface switch port configurations.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.1400
Role	admin
Example	<pre>switch (config) #show interfaces switchport Interface Mode Access vlan Allowed vlans ----- ----- ----- ----- Eth1/2 access 1 Eth1/3 access 1 Eth1/4/1 access 1 Eth1/4/2 access 1 Eth1/5 access 1 Eth1/6 access 1 Eth1/7 hybrid 1 1, 10 Po34 access 1 Po4096 access 1 switch (config)#</pre>
Related Commands	<pre>show vlan switchport access vlan switchport mode vlan</pre>
Note	

5.6 Voice VLAN


This feature allows configuring a port to provide QoS to voice and data traffic in a scenario where a terminal is connected to an IP phone which is in turn connected to the port on the switch. The IP phone bridges the data traffic from the terminal into the switch port. Any voice traffic from the IP phone is also sent to the same port with no differentiation. Therefore it is in the administrator's interest to provide different QoS to the voice traffic and the data traffic by placing the voice traffic on a different VLAN from the data traffic.

This can be achieved by configuring a voice VLAN on the desired switch port using LLDP-MED TLVs. Media Endpoint Discovery (MED) TLVs allow the switch to apply certain policies by informing the remote media device to configure itself using different TLV.

In this use-case scenario we employ the use of the network policy TLV, which is defined as per TIA-TR41. The network policy TLV can be used to inform a specific VLAN to use for an application stream.

MLNX-OS® allow the user to configure the VLAN for voice traffic. In [Figure 18](#), the user configures a voice VLAN of 25 and the switch port has a PVID of 50. Therefore all the voice traffic is switched onto VLAN 25 and the untagged packets from the terminal are switched into VLAN 50.

Figure 18: Tagging Voice Packets with a Different VLAN ID

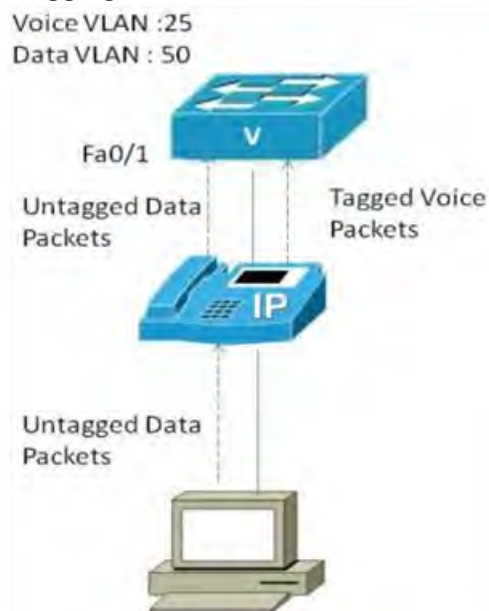

5.6.1 Configuring Voice VLAN

➤ *To configure LLDP-MED TLV, run:*

```
switch (config) # interface ethernet 1/4
switch (config interface ethernet 1/4) # lldp med-tlv-select media-capabilities
switch (config interface ethernet 1/4) # lldp med-tlv-select network-policy
switch (config interface ethernet 1/4) # lldp med-tlv-select all
```

➤ **To verify LLDP-MED TLV configuration, run:**

```
switch (config) # show lldp interfaces
TLV flags:
PD: port-description, SN: sys-name, SD: sys-description, SC: sys-capabilities, MA: man-
agement-address
ETS-C: ETS-Configuration, ETS-R: ETS-Recommendation, AP: Application Priority, PFC:
Priority Flow Control
CEE: Converged Enhanced Ethernet DCBX version
MED-CAP: Media Capabilities
MED-NWP: MED-Network Policy

Interface Receive   Transmit   TLVs
-----
Eth1/1   Enabled   Enabled   PD, SD
Eth1/2   Enabled   Enabled   PD, SN, SD, SC, MA, PFC, AP, ETS-C, ETS-R
Eth1/3   Disabled  Disabled  PD, SN, SD, SC, MA, PFC, AP, ETS-C, ETS-R, MED-NWP
Eth1/4   Enabled   Enabled   PD, SN, SD, SC, MA, PFC, AP, ETS-C, ETS-R,
MED-CAP, MED-NWP
Eth1/5   Enabled   Enabled   PD, SN, SD, SC, MA, PFC, AP, ETS-C, ETS-R
Eth1/6   Enabled   Enabled   PD, SN, SD, SC, MA, PFC, AP, ETS-C, ETS-R
...

switch (config) # show lldp interfaces ethernet 1/4
TLV flags:
PD: port-description, SN: sys-name, SD: sys-description, SC: sys-capabilities, MA: man-
agement-address
ETS-C: ETS-Configuration, ETS-R: ETS-Recommendation, AP: Application Priority, PFC:
Priority Flow Control
CEE: Converged Enhanced Ethernet DCBX version
MED-CAP: Media Capabilities
MED-NWP: MED-Network Policy

Interface Receive   Transmit   TLVs
-----
Eth1/4   Enabled   Enabled   PD, SN, SD, SC, MA, PFC, AP, ETS-C, ETS-R,
MED-CAP, MED-NWP

switch (config) # show lldp interfaces ethernet 1/4 med-cap
Media Capabilities:
  LLDP-MED Capab   : Yes
  Network Policy   : Yes
  Location Id      : No
  Ext Power MDI-PSE: No
  Ext Power MDI-PD : No

Network Policy:
  Application Type : 1 (Voice)
  VLAN Id         : 11
  L2 Priority      : 0
  DSCP Value      : 0
```

➤ **To configure voice VLAN:****Step 1.** Create a VLAN. Run:

```
switch (config) # vlan 200
switch (config vlan 200) # exit
switch (config) #
```

Step 2. Set the interface mode to be hybrid. Run:

```
switch (config) # interface ethernet 1/4 switchport mode hybrid
switch (config) # interface ethernet 1/4 switchport hybrid allowed-vlan 200
```

Step 3. Assign the VLAN to the interface. Run:

```
switch (config) # interface ethernet 1/4 switchport voice vlan 200
```

Step 4. (Optional) Change the PVID of the port so that untagged packets go to a different VLAN than the default. Run:

```
switch (config)# vlan 300
switch (config vlan 300)# exit
switch (config)# interface ethernet 1/4 switchport access vlan 300
```

Step 5. Verify the configuration. Run:

```
switch (config)# show interfaces switchport
```

Interface	Mode	Access vlan	Allowed vlans
Eth1/1	access	1	
Eth1/2	access	1	
Eth1/3	access	1	
Eth1/4	hybrid	300	200
Eth1/5	access	1	
...			

```
switch (config)# show lldp interfaces ethernet 1/4
TLV flags:
PD: port-description, SN: sys-name, SD: sys-description, SC: sys-capabilities, MA: man-
agement-address
ETS-C: ETS-Configuration, ETS-R: ETS-Recommendation, AP: Application Priority, PFC:
Priority Flow Control
CEE: Converged Enhanced Ethernet DCBX version
MED-CAP: Media Capabilities
MED-NWP: MED-Network Policy

Interface Receive Transmit TLVs
-----
Eth1/4 Enabled Enabled PD, SN, SD, SC, MA, PFC, AP, ETS-C, ETS-R,
MED-CAP, MED-NWP
```

```
switch (config)# show lldp interfaces ethernet 1/4 med-cap
Media Capabilities:
  LLDP-MED Capab   : Yes
  Network Policy   : Yes
  Location Id      : No
  Ext Power MDI-PSE: No
  Ext Power MDI-PD : No

Network Policy:
  Application Type : 1 (Voice)
  VLAN Id         : 200
  L2 Priority      : 0
  DSCP Value      : 0
```

➤ **To remove voice VLAN and LLDP-MED TLV:**

Step 1. Remove the voice VLAN from the interface. Run:

```
switch (config)# no interface ethernet 1/4 switchport voice vlan
```

Step 2. Disable the MED TLV from the interface. Run:

```
switch (config)# interface ethernet 1/4 lldp med-tlv-select none
```

5.6.2 Limitations

1. LLDP MED cannot be enabled on a router port interface and vice versa (i.e. a port that has LLDP MED enabled cannot be configured as a router port interface).
2. LLDP MED cannot be enabled on a LAG and vice versa (i.e. a port that has LLDP MED enabled cannot be configured as a LAG).
3. If switchport is in trunk, dot1q-tunnel, or dcbx-access, configuring either the TLV or Voice VLAN gives a warning message.

5.7 QinQ

A QinQ VLAN tunnel enables a service provider (SP) to segregate the traffic of different customers in their infrastructure, while still giving the customer a full range of VLANs for their internal use by adding a second 802.1Q VLAN tag to an already tagged frame.

So let us assume for example that an SP exists which needs to offer L2 connectivity to two corporations, “X” and “Y”, that have campuses located in both “A”, “B”. All campuses run Ethernet LANs, and the customers intend to connect through the SP’s L2 VPN network so that their campuses are in the same LAN (L2 network). Hence, it would be desirable for “X”, “Y” to have a single LAN each in both “A”, “B” which could easily exceed the VLAN limit of 4096 of the 802.1Q specification.

5.7.1 QinQ Operation Modes

QinQ can be enabled on a port or according to predefined conditions.



C-VLAN is the VLAN tag assigned to the ingress traffic of a QinQ-enabled interface. S-VLAN is the VLAN tag assigned to the egress traffic of a QinQ-enabled interface.

- ACL-mode: Adding and removing S-VLAN is determined by an ACL-dependent action
- Port-mode: All ingress traffic to a specific QinQ-enabled interface is tagged with an additional VLAN 802.1Q tag (also known as S-VLAN). The S-VLAN ID is equal to that interface’s PVID (access VLAN).

The S-VLAN tag is added regardless of whether the traffic is tagged or untagged. Traffic coming out from this port, has the S-VLAN stripped from it.

5.7.2 Configuring QinQ

➤ *To configure QinQ:*

Step 1. Create the C-VLAN. Run:

```
switch (config) # vlan 200
switch (config vlan 200) # exit
```

Step 2. Enter the configuration mode of an Ethernet, LAG, or MLAG interface. Run:

```
switch (config) # interface port-channel 100
```

Step 3. Change the switchport mode of the interface to enable QinQ. Run:

```
switch (config interface port-channel 100) # switchport mode dot1q-tunnel
```

Step 4. Change its port VLAN ID (PVID). This configures the S-VLAN. Run:

```
switch (config interface port-channel 100) # switchport access vlan 200
```

Step 5. Verify the configuration. Run:

```
switch (config interface port-channel 100) # show interface port-channel 100

Po100
  Admin state: Enabled
  Operational state: Up
  Description: N\A
  Mac address: 00:00:00:00:00:00
    MTU: 1500 bytes(Maximum packet size 1522 bytes)
  lacp-individual mode: Disabled
  Flow-control: receive off send off
  Actual speed: 1 X 40 Gbps
  Width reduction mode: disabled
  Switchport mode: dot1q-tunnel
  QoS mode: uniform
  MAC learning mode: Enabled
  Last clearing of "show interface" counters : Never
  60 seconds ingress rate: 0 bits/sec, 0 bytes/sec, 0 packets/sec
  60 seconds egress rate: 0 bits/sec, 0 bytes/sec, 0 packets/sec

Rx
  0 packets
  0 unicast packets
  0 multicast packets
  0 broadcast packets
  0 bytes
  0 error packets
  0 discard packets

Tx
  0 packets
  0 unicast packets
  0 multicast packets
  0 broadcast packets
  0 bytes
  0 discard packets
switch (config interface port-channel 100) #
```

Step 6. Verify the configuration. Run:

```
switch (config interface port-channel 100) # show interfaces switchport
Interface      Mode      Access vlan    Allowed vlans
-----
Eth1/1         access    1
Eth1/2         access    1
Eth1/3         access    1
Eth1/4         access    1
Eth1/5         access    1
Eth1/6         access    1
...
Eth1/27        access    1
Eth1/33        access    1
Eth1/34        access    1
Eth1/35        access    1
Eth1/36        access    1
Po400          dot1q-tunnel 200
switch (config interface port-channel 100) #
```

5.7.3 Commands

switchport dot1q-tunnel qos-mode

switchport dot1q-tunnel qos-mode {pipe | uniform}
no switchport dot1q-tunnel qos-mode

Assigns QoS to the service provider's traffic.

The no form of the command resets the parameter value to its default.

Syntax Description	pipe	Gives the service provider's traffic the same QoS as the customer's traffic
	uniform	Gives the service provider's traffic QoS 0
Default	pipe	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.4.3000	
Role	admin	
Example	<pre>switch (config interface ethernet 1/1) # switchport dot1q-tunnel qos- mode uniform switch (config interface ethernet 1/1) #</pre>	

Related Commands show vlan
 show interfaces switchport
 switchport access vlan
 switchport [trunk | hybrid] allowed-vlan
 vlan

Note

5.8 MAC Address Table

5.8.1 Configuring Unicast Static MAC Address

You can configure static MAC addresses for unicast traffic. This feature improves security and reduces unknown unicast flooding.

➤ *To configure Unicast Static MAC address:*

Step 1. Log in as admin.

Step 2. Enter config mode. Run:

```
switch > enable
switch # configure terminal
```

Step 3. Run the command “mac-address-table static unicast <destination mac address> vlan <vlan identifier(1-4094)> interface ethernet <slot>/<port>”.


```
switch (config) # mac-address-table static 00:11:22:33:44:55 vlan 1 interface ethernet
1/1
```

5.8.2 MAC Learning Considerations

MAC learning may be disabled using the command `mac-learning disable` which is beneficial in the following situations:

- To prevent denial-of-service attacks
- To manage the available MAC address table space by controlling which interfaces can learn MAC addresses
- To duplicate to a dedicated server (port7) all the packets that one host (host1; port1) sends to another (host2; port2), like in port mirroring. To accomplish this, MAC learning is disabled on port2. In this case the FDB does not obtain the MAC address of host2. Also, to prevent broadcast to every port, it is possible to configure a VLAN (VLAN 80) which ports 1, 2 and 7 are member of.

Figure 19: MAC Learning Disable Example Case

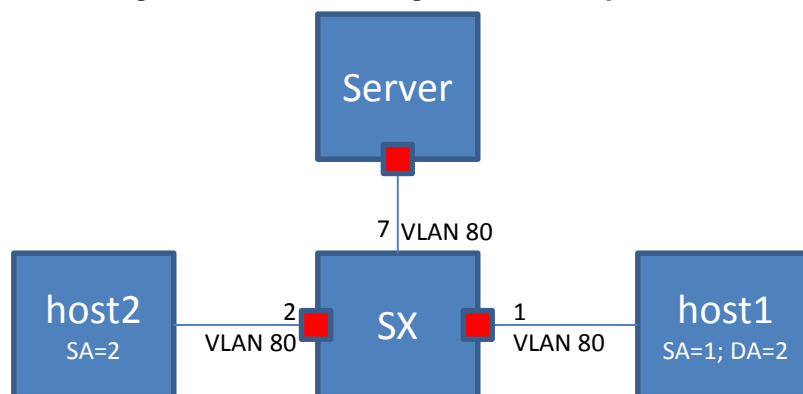

5.8.3 Commands

mac-address-table aging-time

mac-address-table aging-time <age>
no mac-address-table aging-time

Sets the maximum age of a dynamically learnt entry in the MAC address table.

The no form of the command resets the aging time of the MAC address table to its default.

Syntax Description	age	10-1000000 seconds.
Default	300	
Configuration Mode	Config	
History	3.1.0600	
Role	admin	
Example	switch (config) # mac-address-table aging-time 50 switch (config) # show mac-address-table aging-time Mac Address Aging Time: 50 switch (config) #	
Related Commands	show mac-address-table show mac-address-table aging time	
Note		

mac-address-table static

mac-address-table static <mac address> vlan <vlan> interface <if-type> <if-number>

no mac-address-table static <mac address> vlan <vlan> interface <if-type> <if-number>

Configures a static MAC address in the forwarding database.
The no form of the command deletes a configured static MAC address from the forwarding database.

Syntax Description	mac address	Destination MAC address.
	vlan	VLAN ID or VLAN range.
	if-type	Ethernet or port-channel interface type.
	if-number	The interface number (i.e. 1/1, 3).
Default	No static MAC addresses available in default.	
Configuration Mode	Config	
History	3.1.0600	
Role	admin	
Example	<pre>switch (config) # mac-address-table static aa:aa:aa:aa:aa:aa vlan 1 interface ethernet 1/7 switch (config) # show mac-address-table Switch ethernet-default Vlan Mac Address Type Interface ---- - 1 aa:aa:aa:aa:aa:aa static Eth1/7 Number of unicast: 1 Number of multicast: 0 switch (config) #</pre>	
Related Commands	<pre>show mac-address-table mac-address-table aging time</pre>	
Note	The no form of the command will not clear a dynamic MAC address. Dynamic MAC addresses are cleared using the “clear mac-address-table dynamic” command.	

mac-learning disable

mac-learning disable
no mac-learning disable

Disables MAC-address learning.
The no form of the command enables MAC-address learning.

Syntax Description	N/A
Default	Enabled
Configuration Mode	Config Interface Ethernet Config Interface Port Channel
History	3.1.0600
Role	admin
Example	<pre>switch (config interface ethernet 1/1) # mac-learning disable</pre>
Related Commands	
Note	<ul style="list-style-type: none">• When adding a port to a LAG, the port needs to be aligned with the LAG's configuration• When removing a port from a LAG, the port remains in whichever configuration the LAG is in• Disabling MAC learning is not supported on a local analyzer port.• Disabling MAC learning is not supported on an IPL LAG.

clear mac-address-table dynamic

clear mac-address-table dynamic

Clear the dynamic entries in the MAC address table.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0600
Role	admin
Example	<pre>switch (config) # clear mac-address-table dynamic switch (config) #</pre>
Related Commands	<pre>mac-address-table aging-time mac-address-table static show mac-address-table</pre>
Note	This command does not clear the MAC addresses learned on the mgmt0 port. Static entries are deleted using the “no mac-address-table static” command.

show mac-address-table

show mac-address-table [**address** <mac-address> | **interface ethernet** <if-number> | **vlan** [<vlan> | **range** <range>] | **unicast** | **multicast**]

Displays the static and dynamic unicast and multicast MAC addresses for the switch. Various of filter options available.

Syntax Description	mac-address	Filter the table to a specific MAC address.
	if-number	Filter the table to a specific interface.
	vlan	Filter the table to a specific VLAN number (1-4094).
	range	Filter the table to a range of VLANs.
	unicast	Filter the table to a unicast addresses only.
	multicast	Filter the table to a multicast addresses only.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.0600	
	3.3.4500	Updated Example
Role	admin	
Example	<pre>switch (config) # show mac-address-table Switch ethernet-default Vlan Mac Address Type Interface ---- - 1 00:00:00:00:00:01 Static Po5 1 00:00:3D:5C:FE:16 Dynamic Eth1/1 1 00:00:3D:5D:FE:1B Dynamic Eth1/2 Number of unicast: 2 Number of multicast: 0 switch (config) #</pre>	
Related Commands	mac-address-table static clear mac-address-table	
Note		

show mac-address-table aging-time

show mac-address-table aging-time

Displays the MAC address table aging time.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0600
Role	admin
Example	<pre>switch (config) # mac-address-table aging-time 300 switch (config) # show mac-address-table aging-time Mac Address Aging Time: 300 switch (config) #</pre>
Related Commands	<pre>mac-address-table aging-time mac-address-table static clear mac-address-table</pre>
Note	MAC addresses learned on the mgmt0 is not shown by this command.

show mac-address-table interface

show mac-address-table interface [port-channel | mlag-port-channel <if>]

Displays the MAC address table of a port channel or an MLAG port channel.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.6.4006
Role	admin
Example	<pre>switch (config) # show mac-address-table ----- Vlan Mac Address Type Port ----- 1 E4:1D:2D:37:11:22 Static Eth1/1 1 E4:1D:2D:37:3E:11 Static Po5 Number of unicast: 2 Number of multicast: 0 switch (config) # show mac-address-table interface port-channel 5 ----- Vlan Mac Address Type Port ----- 1 E4:1D:2D:37:3E:11 Static Po5 Number of unicast: 1 Number of multicast: 0</pre>
Related Commands	mac-address-table static clear mac-address-table

Note

show mac-address-table summary

show mac-address-table summary

Displays total number of unicast/multicast MAC address entries.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.6.2002
Role	admin
Example	<pre>switch (config) # show mac-address-table summary Number of unicast: 4 Number of multicast: 0</pre>
Related Commands	<pre>mac-address-table static clear mac-address-table</pre>
Note	

5.9 Spanning Tree

The operation of Rapid Spanning Tree Protocol (RSTP) provides for rapid recovery of connectivity following the failure of a bridge/bridge port or a LAN. The RSTP component avoids this delay by calculating an alternate root port, and immediately switching over to the alternate port if the root port becomes unavailable. Thus, using RSTP, the switch immediately brings the alternate port to forwarding state, without the delays caused by the listening and learning states. The RSTP component conforms to IEEE standard 802.1D 2004.

RSTP enhancements is a set of functions added to increase the volume of RSTP in HPE M-series Switches. It adds a set of capabilities related to the behavior of ports in different segments of the network. For example: the required behavior of a port connected to a non-switch entity, such as host, is to converge quickly, while the required behavior of a port connected to a switch entity is to converge based on the RSTP parameters.

Additionally, it adds security issues on a port and switch basis, allowing the operator to determine the state and role of a port or the entire switch should an abnormal event occur. For example: If a port is configured to be root-guard, the operator will not allow it to become a root-port under any circumstances, regardless of any BPDU that will have been received on the port.

5.9.1 Port Priority and Cost

When two ports on a switch are part of a loop, the STP port priority and port path cost configuration determine which port on the switch is put in the forwarding state and which port is put in the blocking state.

To configure port priority use the following command:

```
switch (config interface ethernet <inf>)# spanning-tree port-priority <0-240>
```

To configure port path cost use the following command:

```
switch (config interface ethernet <inf>)# spanning-tree cost <1-200000000>
```

5.9.2 Port Type

Port type has the following configuration options:

- **edge** – is not assumed to be converged by the RSTP learning/forwarding mechanism. It converges to forwarding quickly.



It is recommended to configure the port type for all ports connected to hosts as edge ports.

- **normal** – is assumed to be connected to a switch, thus it tries to be converged by the RSTP learning/forwarding. However, if it does not receive any BPDUs, it is operationally moved to be edge.
- **network** – is assumed to be connected to a switch. If it does not receive any BPDUs, it is moved to discarding state.

Each of these configuration options is mutually exclusive.

Port type is configured using the command `spanning-tree port type`. It may be applied globally on the switch (Config) level, which configures all switch interfaces. Another option is to configure ports individually by entering the interface's configuration mode.

- Global configuration:

```
switch (config)# spanning-tree port type {edge , normal , network} default
```

- Interface configuration:

```
switch (config interface ethernet <inf>)# spanning-tree port type {edge , normal, network}
```

5.9.3 BPDU Filter

Using BPDU filter prevents the CPU from sending/receiving BPDUs on specific ports.

BPDU filtering is configured per interface. When configured, the port does not send any BPDUs and drops all BPDUs that it receives. To configure BPDU filter, use the following command:

```
switch (config interface ethernet <inf>)# spanning-tree bpdupfilter {enable , disable}
```



Configuring BPDU filtering on a port connected to a switch can cause bridging loops because the port filters any BPDU it receives and goes to forwarding state.

5.9.4 BPDU Guard

BPDU guard is a security feature which, when enabled, shuts down the port in case it receives BPDU packets. This feature becomes useful when connecting to an unauthorized switch.

To configure BPDU guard use the following command:

```
switch (config interface ethernet <inf>)# spanning-tree port type <type> bpduguard
```

5.9.5 Loop Guard

Loop guard is a feature that prevents loops in the network.

When a blocking port in a redundant topology transitions to the forwarding state (accidentally), an STP loop occurs. This happens when BPDUs are no longer received by one of the ports in a physically redundant topology.

Loop guard is useful in switched networks where devices are connected point-to-point. A designated bridge cannot disappear unless it sends an inferior BPDU or brings the link down on a point-to-point connection.



The loop guard configuration is only allowed on “network” port type.

If loop guard is enabled and the port does not receive BPDUs, the port is put into an inconsistent state (blocking) until the port starts to receive BPDUs again. A port in the inconsistent state does

not transmit BPDUs. If BPDUs are received again, loop guard alters its inconsistent state condition. STP converges to a stable topology without the failed link or bridge after loop guard isolates the failure.

Disabling loop guard moves all loop-inconsistent ports to listening state.

To configure loop guard use the following command:

```
switch (config interface ethernet <inf>)# spanning-tree guard loop
```

5.9.6 Root Guard

Configuring root guard on a port prevents that port from becoming a root port. A port put in root-inconsistent (blocked) state if an STP convergence is triggered by a BPDU that makes that port a root port. The port is unblocked after the port stops sending BPDUs.

To configure loop guard use the following command:

```
switch (config interface ethernet <inf>)# spanning-tree guard root
```

5.9.7 MSTP

Spanning Tree Protocol (STP) is a mandatory protocol to run on L2 Ethernet networks to eliminate network loops and the resulting broadcast storm caused by these loops. Multiple STP (MSTP) enables the virtualization of the L2 domain into several VLANs, each governed by a separate instance of a spanning tree which results in a network with higher utilization of physical links while still keeping the loop free topology on a logical level.


Up to 64 MSTP instances can be configured on a switch.

For MSTP network design over Mellanox L2 VMS, please refer to [Mellanox Virtual Modular Switch Reference Guide](#).

5.9.8 RPVST

Rapid Per-VLAN Spanning Tree (RPVST) flavor of the STP provides finer-grained traffic by paving a spanning-tree instance per each configured VLAN. Like MSTP, it allows a better utilization of the network links comparing to RSTP.

Figure 20 exhibits a typical RPVST network configuration to get a better utilization on the inter-switch trunk ports.

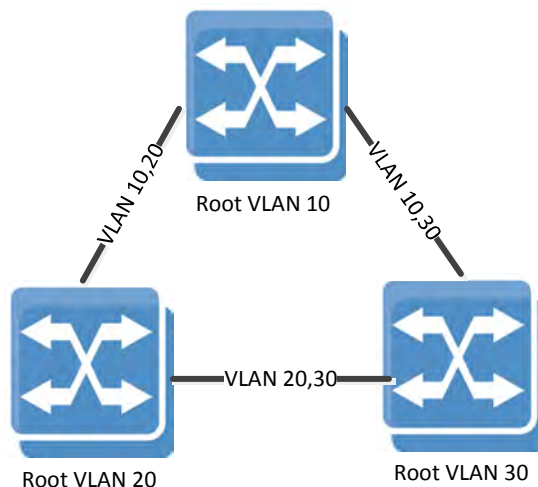Figure 20: RPVST Network Config

5.9.8.1 RPVST and VLAN Limitations

When the STP of the switch is set to RPVST, spanning tree is set on each of the configured VLANs in the system by default. To enable the spanning tree mode, the command “spanning-tree” must be run.

Each VLAN runs an STP state machine and an RPVST instance. There is a global limitation on the number of active state machines that can operate in MLNX-OS. Enforcement of this limitation is done through the maximum number of VLANs allowed in the system. On x86 switch systems the limitation is 128 VLANs. The more ports the switch system has the less VLANs it can support.

Table 52 - Supported VLANs by RPVST per Switch System

Switch System Model	Number of Supported VLANs
x86 systems	128
SX1012	17
SX1016	13
SX1024	13
SX1035	13
SX1036	13


The state machine takes attributes like forward time, hello time, max age and priority, etc.



When configuring priority on a VLAN in RPVST, the operational priority given to the VLAN is a summation of what the user configured and the value of the VLAN itself. For example running “spanning-tree vlan 10 priority 32768” yields a priority of 32778 for VLAN 10.

5.9.8.2 RPVST and RSTP Interoperability

Figure 21: RPVST and RSTP Cluster

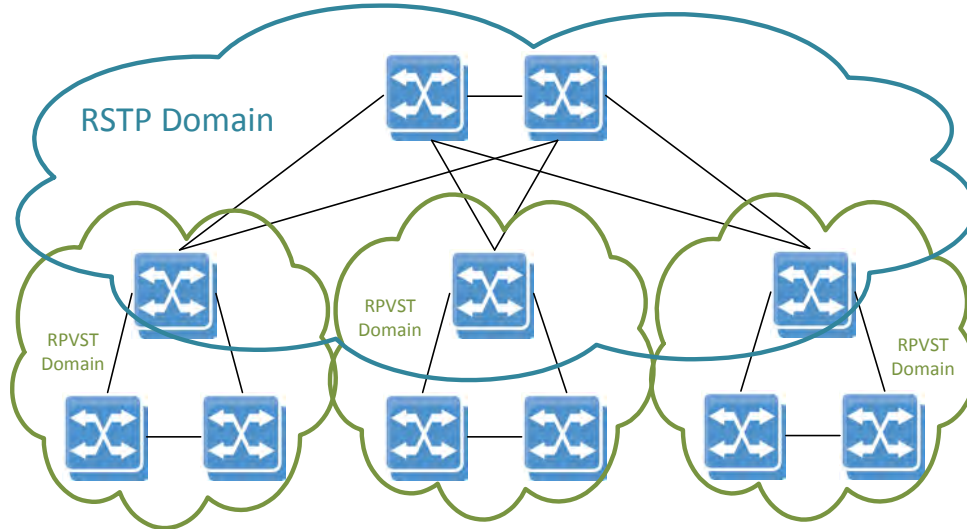

RPVST domains can be interconnected by a standard 802.1Q domain that runs RSTP protocol. While the RSTP domain builds a single common instance spanning tree, the RPVST domains at the edge continue to build a tree per VLAN while exchanging tagged RPVST multicast BPDUs.

(This exchange may happen on untagged RPVST BPDUs as well.) The switch devices that are in the boundary between the RPVST and the RSTP domains should be configured as RPVST mode.

When set to RPVST mode, the switch continues to run the common instance spanning tree (CIST) state machine on VLAN 1 by exchanging IEEE BPDUs with the legacy RSTP switches.

To successfully connect RSTP and RPVST domains, the system administrator must align the native VLAN configuration across all network switches, or in other words, the internal identification of untagged packets to VLAN.

5.9.9 Commands

spanning-tree

spanning-tree
no spanning-tree

Globally enables the spanning tree feature.
 The no form disables the spanning tree feature.

Syntax Description	N/A
Default	Spanning tree is enabled.
Configuration Mode	Config
History	3.1.0000

Role	admin
Example	switch (config) # no spanning-tree switch (config) #
Related Commands	show spanning-tree
Note	

spanning-tree mode

spanning-tree mode {rst | mst | rpvst}
no spanning-tree mode

Changes the spanning tree mode.
The no form of the command sets the parameter to its default value.

Syntax Description	mst	Multiple spanning tree.
	rst	Rapid spanning tree.
	rpvst	Rapid per-VLAN spanning tree.
Default	rst	
Configuration Mode	Config	
History	3.3.4150	
Role	admin	
Example	switch (config)# spanning-tree mode mst	
Related Commands		
Note	<ul style="list-style-type: none">On x86 switch systems, the number of VLANs supported by RPVST are 128	

spanning-tree (timers)

spanning-tree [**forward-time** <time in secs> | **hello-time** <time in secs> | **max-age** <time in secs>]

no spanning-tree [**forward-time** | **hello-time** | **max-age** | **priority**]

Sets the spanning tree timers.

The no form of the command sets the timer to default.

Syntax Description	forward-time	Controls how fast a port changes its spanning tree state from Blocking state to Forwarding state. Parameter range: 4-30 seconds.
	hello-time	Determines how often the switch broadcasts its hello message to other switches when it is the root of the spanning tree. Parameter range: 1-2 seconds.
	max-age	Sets the maximum age allowed for the Spanning Tree Protocol information learnt from the network on any port before it is discarded. Parameter range: 6-40 seconds.
Default	forward-time: 15 seconds hello-time: 2 seconds max-age: 20 seconds	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # spanning-tree forward-time switch (config) #	
Related Commands	show spanning-tree	
Note	The following formula applies on the spanning tree timers: $2 * (\text{ForwardTime} - 1) \geq \text{MaxAgeTime} \geq 2 * (\text{Hello Time} + 1)$	

spanning-tree port type (default global)

spanning-tree port type {edge [bpdufilter | bpduguard] | network [bpduguard] | normal [bpduguard]} default
no spanning-tree port type default

Configures all switch interfaces as edge/network/normal ports. These ports can be connected to any type of device.

The no form of the command disables the spanning tree operation.

Syntax Description	edge	Assumes all ports are connected to hosts/servers.
	bpdufilter	Configures to enable the spanning tree BPDU filter.
	bpduguard	Configures to enable the spanning tree BPDU guard.
	network	Assumes all ports are connected to switches and bridges.
	normal	The port type (edge or network) determines according to the spanning tree operational mode.
Default	Normal	
Configuration Mode	Config	
History	3.1.0000	
	3.4.0008	Updated command syntax
Role	admin	
Example	switch (config) # spanning-tree port type edge default switch (config) #	
Related Commands	show spanning-tree	
Note		

spanning-tree priority

spanning-tree priority <bridge-priority>
no spanning-tree priority

Sets the spanning tree bridge priority.
 The no form of the command sets the bridge priority to default.

Syntax Description	bridge-priority	Sets the bridge priority for the spanning tree. Its value must be in steps of 4096, starting from 0. Only the following values are applicable: 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, 61440.
Default	32786	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	switch (config) # spanning-tree priority 4096 switch (config) #	
Related Commands	show spanning-tree	
Note		

spanning-tree port-priority

spanning-tree port-priority <priority>
no spanning-tree port-priority

Configures the spanning-tree interface priority.
The no form of the command returns configuration to its default.

Syntax Description	priority	Spanning tree interface priority. The possible values are: 0, 16, 32,48, 64, 80, 96, 112, 128,144, 160, 176, 192, 208, 224, 240.
Default	128	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.1.0000 3.3.4500	Added MLAG port-channel configuration mode
Role	admin	
Example	switch (config) # interface ethernet 1/1 switch (config interface ethernet 1/1) # spanning-tree port-priority 16 switch (config interface ethernet 1/1) #	
Related Commands	show spanning-tree	
Note		

spanning-tree cost

spanning-tree cost <port cost>
no spanning-tree cost

Configures the interface cost of the spanning tree.
 The no form of the command returns configuration to its default.

Syntax Description	port cost	Sets the spanning tree cost of an interface. Value range is 0-200000000.
Default	The default cost is derived from the speed. 1Gbps 20000 10Gbps 2000 40Gbps 500 56Gbps 357	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.1.0000	
	3.3.4500	Added MLAG port-channel configuration mode
Role	admin	
Example	<pre>switch (config) # interface ethernet 1/1 switch (config interface ethernet 1/1) # spanning-tree cost 1000 switch (config interface ethernet 1/1) #</pre>	
Related Commands	show spanning-tree	
Note	<ul style="list-style-type: none"> LAG default cost is calculated by dividing the port speed by the number of active links in UP state. For example: if there were 4 links in the LAG out of which only two are in UP state, assuming the port speed is 10Gbps, the LAG cost will be $2000/2 = 1000$. When configuring the cost for a LAG, the cost will be fixed to this configuration, no matter what the number of active links (UIP state) in the LAG is Unstable network may cause the LAG cost to change dynamically assuming the cost parameter is not configured for anything else other than default 	

spanning-tree port type

spanning-tree port type <port type>
no spanning-tree port type

Configures spanning-tree port type
The no form of the command returns configuration to default.

Syntax Description	default	According to global configuration
	edge	Assumes all ports are connected to hosts/servers.
	normal	The port type (edge or network) determines according to the spanning tree operational mode.
	network	Assumes all ports are connected to switches and bridges.
	bpdufilter	Configures to enable the spanning tree BPDU filter.
	bpduguard	Configures to enable the spanning tree BPDU guard.
Default	Globally defined by the command “spanning-tree port type <port-type> default”	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.1.0000	
	3.3.4500	Added MLAG port-channel configuration mode
Role	admin	
Example	<pre>switch (config) # interface ethernet 1/1 switch (config interface ethernet 1/1) # spanning-tree port type edge switch (config interface ethernet 1/1) #</pre>	
Related Commands	show spanning-tree	
Note		

spanning-tree guard

spanning-tree guard {loop | root}
no spanning-tree guard {loop | root}

Configures spanning-tree guard.
 The no form of the command returns configuration to default.

Syntax Description	loop	Enables loop-guard on the interface. If the loop-guard is enabled, upon a situation where the interface fails to receive BPDUs the switch will not egress data traffic on this interface.
	root	Enables root-guard on the interface. If root-guard is enabled on the interface, the interface will never be selected as root port.
Default	loop-guard and root-guard are disabled.	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.1.0000	
	3.3.4500	Added MLAG port-channel configuration mode
Role	admin	
Example	<pre>switch (config) # interface ethernet 1/1 switch (config interface ethernet 1/1) # spanning-tree guard root switch (config interface ethernet 1/1) #</pre>	
Related Commands	show spanning-tree	
Note		

spanning-tree bpdudfilter

spanning-tree bpdudfilter {disable | enable}
no spanning-tree bpdudfilter

Configures spanning-tree BPDU filter on the interface. The interface will ignore any BPDU that it receives and will not send PDUs, The STP state on the port will move to the forwarding state.

The no form of the command returns the configuration to default.

Syntax Description	disable	Disables the BPDU filter on this port.
	enable	Enables the BPDU filter on this port.
Default	BPDU filter is disabled.	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config) # interface ethernet 1/1 switch (config interface ethernet 1/1) # spanning-tree bpdudfilter enable</pre>	
Related Commands	show spanning-tree	
Note	This command can be used when the switch is connected to hosts.	

clear spanning-tree counters

clear spanning-tree counters

Clears the spanning-tree counters.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.1.0000
Role	admin
Example	switch (config) # clear spanning-tree counters switch (config) #
Related Commands	show spanning tree
Note	

spanning-tree mst max-hops

spanning-tree mst max-hops <max-hops>
no spanning-tree mst max-hops

Specifies the max hop value inserts into BPDUs that sent out as the root bridge.

The no form of the command sets the parameter to its default value.

Syntax Description	max-hops	Max hop value. The range is 6-40.
Default	20	
Configuration Mode	Config	
History	3.3.4150	
Role	admin	
Example	switch (config)# spanning-tree mst max-hops 20 switch (config)#	
Related Commands		
Note	<ul style="list-style-type: none">• The max hop setting determines the number of bridges in an MST region that a BPDU can traverse before it is discarded• This command is available when global STP mode is set to MST	

spanning-tree mst priority

spanning-tree mst <mst-instance> priority <priority>
no spanning-tree mst <mst-instance> priority

Configures the specified instance's priority number.
 The no form of the command sets the parameter to its default value.

Syntax Description	mst-instance	MST instance. Range is 1-64.
	priority	MST instance port priority. Possible values are: 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, 61440
Default	32768	
Configuration Mode	Config	
History	3.3.4150	
Role	admin	
Example	switch (config)# spanning-tree mst 1 priority 32768 switch (config)#	
Related Commands		
Note	<ul style="list-style-type: none"> The bridge priority is the four most significant digits of the bridge ID, which is used by spanning tree algorithms to select the root bridge and choose among redundant links. Bridge ID numbers range from 0-65535 (16 bits); bridges with smaller bridge IDs are elected over other bridges. This command is available when global STP mode is set to MST 	

spanning-tree mst vlan

spanning-tree mst <mst-instance> vlan <vlan-range>
no spanning-tree mst <mst-instance> vlan <vlan-range>

Maps a VLAN or a range of VLANs into an MSTP instance.
The no form of the command unmaps a VLAN or a range of VLANs from MSTP instances.

Syntax Description	mst-instance	MST instance. Range is 1-64.
	vlan <vlan-range>	A single VLAN or a range of VLANs. The format is <vlan> or <from-vlan>-<to-vlan>.
Default	N/A	
Configuration Mode	Config	
History	3.3.4150	
Role	admin	
Example	switch (config)# spanning-tree mst 1 vlan 10-20 switch (config)#	
Related Commands		
Note	This command is available when global STP mode is set to MST	

spanning-tree mst revision

spanning-tree mst revision <number>
no spanning-tree mst revision

Configures the MSTP revision number.
 The no form of the command sets the parameter to its default value.

Syntax Description	number	The MST revision number. Range is 0-65535.
Default	0	
Configuration Mode	Config	
History	3.3.4150	
Role	admin	
Example	<pre>switch (config)# spanning-tree mst revision 1 switch (config)#</pre>	
Related Commands		
Note	<ul style="list-style-type: none"> • The revision number is one of three parameters, along with the MST name and VLAN-to-instance map, that identify the switch's MST region • This command is available when global STP mode is set to MST 	

spanning-tree mst name

spanning-tree mst name <name>
no spanning-tree mst name

Configures the MSTP name.
The no form of the command sets the parameter to its default value.

Syntax Description	name	MST name: Up to 32 characters.
Default	N/A	
Configuration Mode	Config	
History	3.3.4150	
Role	admin	
Example	switch (config)# spanning-tree mst name my-mst switch (config)#	
Related Commands		
Note	<ul style="list-style-type: none">• The name is one of three parameters, along with the MST revision number and VLAN-to-instance map, that identifies the switch's MST region• This command is available when global STP mode is set to MST	

spanning-tree mst root

spanning-tree mst <mst-instance> root <role>
no spanning-tree mst <mst-instance> root

Changes the bridge priority for the specified MST instance to the following values:

- Primary – 8192
- Secondary – 16384

The no form of the command sets the parameter to its default value.

Syntax Description	mst-instance	MSTP instance. Possible range is 1-64.
	role	Values: “primary” or “secondary”.
Default	primary	
Configuration Mode	Config	
History	3.3.4150	
Role	admin	
Example	switch (config)# spanning-tree mst name my-mst switch (config)#	
Related Commands		
Note	<ul style="list-style-type: none"> • The root command is a way to automate a system configuration while ‘playing’ with the priority field. The priority field granularity may be too explicit for some users in case you wish to have 2 levels of priority (primary and secondary). So by default all the switches get the same priority and while using the root option you can get the role of master and backup by setting the priority field to a predefined value. • This command is available when global STP mode is set to MST. 	

spanning-tree mst port-priority

spanning-tree mst {mst-instance} port-priority <priority>
no spanning-tree mode

Changes the spanning tree mode.
The no form of the command sets the parameter to its default value.

Syntax Description	mst-instance	MST instance. Range is 0-4094.
	priority	MST instance port priority. Valid values are: 0, 16, 32, 48, 64, 80, 96, 112, 128, 144, 160, 176, 192, 208, 224 and 240.
Default	rst	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel	
History	3.3.4150	
Role	admin	
Example	switch (config interface ethernet 1/1)# spanning-tree mst 1 port-priority 32768 switch (config interface port-channel 1)# spanning-tree mst 1 port-priority 32768	
Related Commands		
Note	This command is available when global STP mode is set to MST.	

spanning-tree mst cost

spanning-tree mst {mst-instance} cost <cost-value>
no spanning-tree mode

Configures the cost per MSTP instance.
 The no form of the command sets the parameter to its default value.

Syntax Description	mst-instance	MST instance. Range is 1-64.
	cost-value	MST instance port cost. Range is 0-200000000.
Default	2000 for 10Gb/s, 500 for 40Gb/s, 20000 for 1Gb/s, 357 for 56Gb/s	
Configuration Mode	Config Interface Port Channel	
History	3.3.4150	
Role	admin	
Example	<pre>switch (config interface ethernet 1/1)# spanning-tree mst 1 cost 4000 switch (config interface port-channel 1)# spanning-tree mst 1 cost 4000 switch (config)#</pre>	
Related Commands		
Note	This command is available when global STP mode is set to MST.	

spanning-tree vlan forward-time

spanning-tree vlan <vid> forward-time <secs>
no spanning-tree vlan <vid> forward-time

Configures how fast an interface changes its spanning tree state from Blocking to Forwarding.
The no form of the command resets the parameter value to its default.

Syntax Description	secs	Parameter range: 4-30 seconds.
Default	15 seconds	
Configuration Mode	Config	
History	3.4.1100	
Role	admin	
Example	switch (config) # spanning-tree vlan 10 forward-time 15	
Related Commands	show spanning-tree	
Note	<ul style="list-style-type: none">• The following formula applies on the spanning tree timers: $2 * (\text{ForwardTime} - 1) \geq \text{MaxAgeTime} \geq 2 * (\text{Hello Time} + 1)$• This command is available when global STP mode is set to RPVST	

spanning-tree vlan hello-time

spanning-tree vlan <vid> hello-time <secs>
no spanning-tree vlan <vid> hello-time

Configures how often the switch broadcasts its hello message to other switches when it is the root of the spanning tree.
 The no form of the command resets the parameter value to its default.

Syntax Description	secs	Parameter range: 1-2 seconds.
Default	2 seconds	
Configuration Mode	Config	
History	3.4.1100	
Role	admin	
Example	switch (config) # spanning-tree vlan 10 hello-time 2	
Related Commands	show spanning-tree	
Note	<ul style="list-style-type: none"> The following formula applies on the spanning tree timers: $2 * (\text{ForwardTime} - 1) \geq \text{MaxAgeTime} \geq 2 * (\text{Hello Time} + 1)$ This command is available when global STP mode is set to RPVST 	

spanning-tree vlan max-age

spanning-tree vlan <vid> max-age <secs>
no spanning-tree vlan <vid> max-age

Sets the maximum age allowed for the Spanning Tree Protocol information learned from the network on any port before it is discarded.
The no form of the command resets the parameter value to its default.

Syntax Description	secs	Parameter range: 6-40 seconds.
Default	20 seconds	
Configuration Mode	Config	
History	3.4.1100	
Role	admin	
Example	switch (config) # spanning-tree vlan 10 max-age 20	
Related Commands	show spanning-tree	
Note	<ul style="list-style-type: none">• The following formula applies on the spanning tree timers: $2 * (\text{ForwardTime} - 1) \geq \text{MaxAgeTime} \geq 2 * (\text{Hello Time} + 1)$• This command is available when global STP mode is set to RPVST	

spanning-tree vlan priority

spanning-tree vlan <vid> priority <priority>
no spanning-tree vlan <vid> priority

Configures RPVST instance port priority.
 The no form of the command resets the parameter value to its default.

Syntax Description	priority	Possible values are: 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, 61440.
Default	32768	
Configuration Mode	Config	
History	3.4.1100	
Role	admin	
Example	switch (config) # spanning-tree vlan 10 priority 32768	
Related Commands	show spanning-tree	
Note	<ul style="list-style-type: none"> The following formula applies on the spanning tree timers: $2 * (\text{ForwardTime} - 1) \geq \text{MaxAgeTime} \geq 2 * (\text{Hello Time} + 1)$ This command is available when global STP mode is set to RPVST 	

show spanning-tree

show spanning-tree

Displays spanning tree information.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.1.0000
	3.4.1100 Updated Example with R and G flags

Role	admin
-------------	-------

Example	<pre>switch (config) # show spanning-tree Switch ethernet-default Spanning tree protocol is enabled rst Spanning tree force version:2 Root ID Priority 32768 Address 00:02:c9:7a:e9:40 Cost 1000 Port Eth1/32 Hello Time 2 sec Max Age 20 sec Forward Delay 15 sec Bridge ID Priority 32768 Address 00:02:c9:96:c6:d0 Hello Time 2 sec Max Age 20 sec Forward Delay 15 sec L - Loop Inconsistent R - Root Inconsistent G - BPDU Guard Inconsistent Interface Role Sts Cost Prio Type ---- - Eth1/9 Designated Forwarding 500 128 normal Eth1/22 Designated Discarding(R) 500 128 normal Eth1/32 Root Forwarding 500 128 normal Eth1/39 Disabled Discarding(G) 2000 128 normal switch (config) #</pre>
----------------	--

Related Commands	<pre>clear spanning-tree counters spanning-tree</pre>
-------------------------	---

Note	
-------------	--

show spanning-tree detail

show spanning-tree detail

Displays detailed spanning-tree configuration and statistics.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.0000 3.6.4110 Updated example output
Role	admin
Example	<pre>switch (config) # show spanning-tree detail Switch ethernet-default Spanning tree protocol is enabled Bridge is executing the rst compatible Spanning Tree Protocol Bridge Identifier has priority 32768, address f4:52:14:55:e7:f0 Configured hello time 2, max age 20, forward delay 15 Current root has priority 32768, address 00:02:c9:a8:e3:50 Root port is Eth1/35(Ethernet1/35),cost of root path is 2000 Number of topology changes 80,last change occurred 03:11:26 ago Last TCN received from Eth1/49 Timers: hold 6 hello 2, max age 20, forward delay 15 default port type: normal, default bpdu filter: disabled, default bpdu guard: disabled switch (config) #</pre>
Related Commands	clear spanning-tree counters spanning-tree
Note	

show spanning-tree interface

```
show spanning-tree interface {ethernet <slot>/<port> | port-channel  
<port-channel> | mlag-port-channel <mlag-port-channel>
```

Display running state for specific interfaces.

Syntax Description	ethernet	Ethernet interface.
	port-channel	LAG instance.
	mlag-port-channel	MLAG instance.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.4150	
Role	admin	
Example	<pre>switch (config) # show spanning-tree interface ethernet 1/2 Eth1/2 is Disabled Discarding Port path cost 500, Port priority 128, Port Identifier 128.5 Designated root has priority 0, address unknown Designated bridge has priority 0, address unknown Designated port id 0.0, designated path cost 0 Number of transitions to forwarding state: 0 Port type: normal PortFast is: off Bpdu filter: disabled Bpdu guard: disabled Loop guard: disabled Root guard: disabled Link type: point-to-point BPDU: sent: 0 received: 0 switch (config) #</pre>	
Related Commands	clear spanning-tree counters spanning-tree	
Note		

show spanning-tree mst

show spanning-tree mst [**details** | **<instance>** **interface** {**ethernet** **<slot>/<port>** | **port-channel** **<port-channel>** | **mlog-port-channel** **<mlog-port-channel>**}]

Displays basic multi-spanning-tree information.

Syntax Description	<table border="1"> <tr> <td>details</td> <td>Displays detailed multi-spanning-tree configuration and statistics.</td> </tr> <tr> <td>ethernet</td> <td>Ethernet interface.</td> </tr> <tr> <td>port-channel</td> <td>LAG instance.</td> </tr> <tr> <td>mlog-port-channel</td> <td>MLAG instance.</td> </tr> </table>	details	Displays detailed multi-spanning-tree configuration and statistics.	ethernet	Ethernet interface.	port-channel	LAG instance.	mlog-port-channel	MLAG instance.
details	Displays detailed multi-spanning-tree configuration and statistics.								
ethernet	Ethernet interface.								
port-channel	LAG instance.								
mlog-port-channel	MLAG instance.								
Default	N/A								
Configuration Mode	Any Command Mode								
History	3.3.4150								
Role	admin								
Example	<pre>switch (config) # show spanning-tree mst MST0 vlans mapped: 1-1023,1025-2047,2049-3071,3073-4094 Interface Role Sts Cost Prio Type ----- - Eth1/9 Designated Forwarding 500 128.9 point-to-point Eth1/10 Designated Forwarding 500 128.10 point-to-point Eth1/11 Back Up Discarding 500 128.22 point-to-point switch (config) #</pre>								
Related Commands	clear spanning-tree counters spanning-tree								
Note									

show spanning-tree root

show spanning-tree root

Displays root multi-spanning-tree information.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.3.4150
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config) # show spanning-tree root Instance Priority MAC addr Root Cost Hello Time Max Age FWD Dly Root Port ----- - MST0 32768 00:02:c9:71:ed:40 500 2 20 15 Eth1/20 MST1 32768 00:02:c9:71:f0:c0 0 2 20 15 - MST2 0 00:02:c9:71:f0:c0 0 2 20 15 - MST3 32768 00:02:c9:71:f0:c0 0 2 20 15 - switch (config) #</pre>
----------------	---

Related Commands	<pre>clear spanning-tree counters spanning-tree</pre>
-------------------------	---

Note	
-------------	--

show spanning-tree vlan

show spanning-tree vlan <vid> [detail | interface {ethernet <slot>/<port> | port-channel <port-channel> | mlag-port-channel <mlag-port-channel>}]

Displays spanning tree information.

Syntax Description	vid	VLAN ID. Range is also supported. Format: <vid1>[-<vid2>]
	detail	Displays detailed RPVST configuration and statistics.
	ethernet	Ethernet interface.
	port-channel	LAG instance.
	mlag-port-channel	MLAG instance.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.4.1100	
Role	admin	
Example	<pre>switch (config) # show spanning-tree vlan 10 Switch ethernet-default Spanning tree protocol is enabled rpvst Spanning tree force version:2 Vlan 10 Root ID Priority 10 Address 00:02:c9:96:c6:d0 This bridge is the root Hello Time 2 sec Max Age 20 sec Forward Delay 15 sec Bridge ID Priority 10 Address 00:02:c9:96:c6:d0 Hello Time 2 sec Max Age 20 sec Forward Delay 15 sec L - Loop Inconsistent Interface Role Sts Cost Prio Type ----- - Mpo21 Designated Forwarding 500 128 normal Mpo20 Back Up Discarding 500 128 normal switch (config) #</pre>	

Related Commands clear spanning-tree counters
spanning-tree

Note

Show spanning-tree vlan topo-change-history

show spanning-tree vlan <vid> topo-change-history

Displays spanning-tree topology change notification history per vlan.

Syntax Description	vid	VLAN ID. Range is also supported. Format: <vid1>[-<vid2>]
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.4110	
Role	admin	
Example	<pre>switch (config) # show spanning-tree vlan 50 topo-change-history Vlan 50 ----- Interface Date Time ----- Eth1/49 07/18/17 04:39:58 Eth1/49 07/18/17 04:39:55 Eth1/49 07/18/17 04:38:11 Eth1/49 07/18/17 04:38:09</pre>	
Related Commands	spanning-tree	
Note		

Show spanning-tree mst topo-change-history

Show spanning-tree mst <mst-instance> topo-change-history

Displays spanning-tree topology change notification history per instance.

Syntax Description	mst-instance	MST instance. Range is 1-64.
---------------------------	--------------	------------------------------

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.6.4110
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config) # show spanning-tree mst 5 topo-change-history Instance 5 ----- Interface Date Time ----- Eth1/49 07/18/17 04:43:51 Eth1/49 07/18/17 04:43:33</pre>
----------------	---

Related Commands	spanning-tree
-------------------------	---------------

Note	
-------------	--

show spanning-tree topo-change-history

show spanning-tree topo-change-history

Displays spanning-tree topology change notification history.

Syntax Description	mst-instance	MST instance. Range is 1-64.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.4110	
Role	admin	
Example	<pre>switch (config) # show spanning-tree topo-change-history ----- Interface Date Time ----- Eth1/49 07/27/17 09:39:38 Eth1/35 07/27/17 09:35:42 Eth1/35 07/27/17 09:35:40 Eth1/35 07/27/17 09:35:08 Eth1/35 07/27/17 09:35:06 Eth1/35 07/27/17 09:32:05 Eth1/35 07/27/17 09:32:03 Eth1/35 07/27/17 09:31:42 Eth1/35 07/27/17 09:31:40</pre>	
Related Commands	spanning-tree	
Note		

5.10 OpenFlow

MLNX-OS supports OpenFlow 1.0 (on SwitchX®) and 1.3 (on Spectrum™). OpenFlow is a network protocol that facilitates direct communication between network systems via Ethernet. Software Defined Networks (SDN) allows a centralist management of network equipment. OpenFlow allows the SDN controller to manage SDN equipment. The OpenFlow protocol allows communication between the OpenFlow controller and OpenFlow agent.

OpenFlow is useful to manage switches and allow applications running on the OpenFlow controller to have access to the switch's data path and provide functionality such as flow steering, security enhancement, traffic monitoring and more.

The OpenFlow controller communicates with the OpenFlow switch over secured channel using OpenFlow protocol.

An OpenFlow switch contains a flow table which contains flows inserted by the OpenFlow controller. And the OpenFlow switch performs packet lookup and forwarding according to those rules.

HPE OpenFlow switch implementation is based on the hybrid model, allowing the coexistence of an OpenFlow pipeline and a normal pipeline. In this model, a packet is forwarded according to OpenFlow configuration, if such configuration is matched with the packet parameters. Otherwise, the packet is handled by the normal (regular forwarding/routing) pipeline.

The OpenFlow specification defines:

“OpenFlow-hybrid switches support both OpenFlow operation and normal Ethernet switching operation, i.e. traditional L2 Ethernet switching, VLAN isolation, L3 routing (IPv4 routing, IPv6 routing...), ACL and QoS processing. Those switches must provide a classification mechanism outside of OpenFlow that routes traffic to either the OpenFlow pipeline or the normal pipeline. For example, a switch may use the VLAN tag or input port of the packet to decide whether to process the packet using one pipeline or the other, or it may direct all packets to the OpenFlow pipeline.”

Utilizing the built-in capabilities of the hybrid switch/router is the main benefit of the hybrid mode. It increases network performance and efficiency – faster processing of new flows as well as lower load on the controllers. The hybrid switch processes non-OpenFlow data through its local management plane and achieve better efficiency and use of resources, compared to the pure OpenFlow switch.

5.10.1 Flow Table

The flow table contains flows which are used to perform packet lookup, modification and forwarding. Each flow has a 12 tuple key. The key is used in order to classify a packet into a certain flow. The key contains the flowing fields: ingress port, source MAC, destination MAC, Ether-Type, VLAN ID, PCP, source IP, destination IP, IP protocol, IP ToS bits, TCP/UDP source port and TCP/UDP destination port.

The flow key can have a specific value for each field or wildcard which signals to the switch to ignore this part of the key.

Each packet passes through the flow table once a match is found; the switch performs the actions configured to the specific flow by the OpenFlow controller.

Upkeeping a flow table enables the switch to forward incoming traffic with a simple lookup on its flow table entries. OpenFlow switches perform a check for matching entries on, or ignore using a wildcard, specific fields of the ingress traffic. If the entry exists, the switch performs the action associated with that flow entry. Packets without a flow entry match are forwarded according to the normal pipeline (hybrid switch).

Every flow entry contains one of the following parameters:

1. Header fields for matching purposes with each entry containing a specific value or a wildcard which could match all entries.
2. Matching packet counters which are useful for statistical purposes, in order to keep track of the number of packets.
3. Actions which specify the manner in which to handle the packets of a flow which can be any of the following:
 - Forwarding the packet
 - Dropping the packet
 - Forwarding the packet to the OpenFlow controller
 - Modifying the VLAN, VLAN priority (PCP), and/or stripping the VLAN header




The flow table on SwitchX® supports up to 1000 flows.

5.10.2 OpenFlow 1.3 Support

The OpenFlow (OF) pipeline is deployed in parallel to the usual MLNX-OS® pipeline.

The ingress port must be deployed in hybrid mode so as to serve both the OF and normal MLNX-OS pipeline.

Figure 22: MLNX-OS and OpenFlow Pipeline

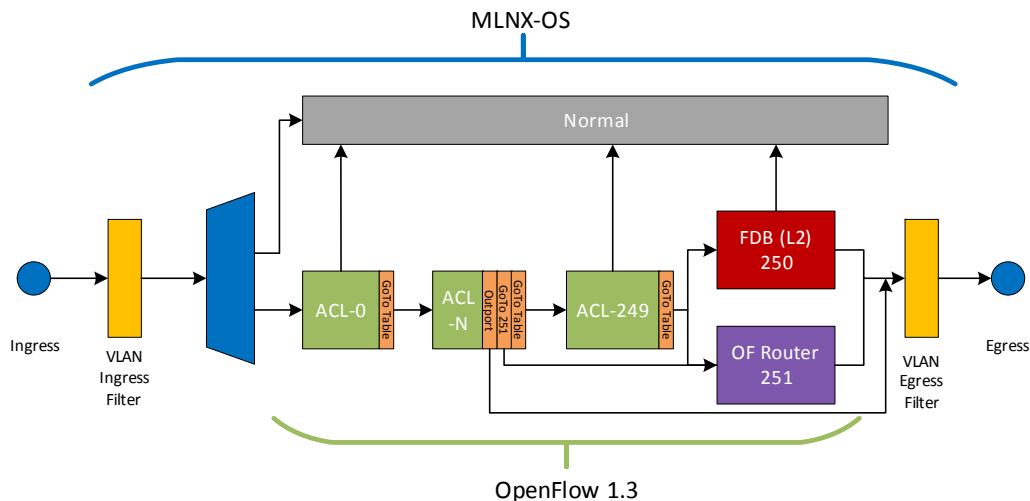

The ingress packet which passes the VLAN filter and is a match to the user ACL tables either progresses to the regular MLNX-OS flow, or the OpenFlow pipeline depending on the port coupling.

Table 53 presents a general summary of the capabilities of the OpenFlow 1.3 pipeline, which are described in detail further on in the document.

Table 53 - OpenFlow 1.3 Pipeline Capabilities Summary Table

Table	Match	Actions	Group	Meters
ACLs [0-249]	<ul style="list-style-type: none"> • in_port • dl_src • dl_dst • dl_type • vlan_vid • vlan_pcp • ip_src • ip_dst • ipv6_dst • ipv6_src • ip_proto • ip_dscp • ip_ecn • ip_ttl • 14_src_poert • 14_dst_port • metadata 0xFFFF (Dynamic key) (Arbitrary mask) 	<ul style="list-style-type: none"> • Push/pop VLAN • SET_TTL • DEC_TTL • Set queue • Eth SRC/DST MAC • VLAN ID • PCP • DSCP • ECN • Output • Group • Meters • Normal 	<ul style="list-style-type: none"> • ALL - Output ports • Select - {weights} Output ports (without LAG) • FF - Output ports 	<ul style="list-style-type: none"> • KBPS/PKTS - {Burst} • Drop
FDB [250]	<ul style="list-style-type: none"> • vlan_vid • dl_dst (Exact match) 	<ul style="list-style-type: none"> • OUTPUT • DROP • Normal 	Select - {Weights} Output ports (without LAG)	N/A
Router [251]	<ul style="list-style-type: none"> • ipv4_dst • ipv6_dst (LPM) 	<ul style="list-style-type: none"> • DEC_TTL • SET_DMAC • OUTPUT • DROP <p>(Must have DEC_TTL and SET_DMAC when Output action is implemented)</p>	Select - {Weights} Output ports + set_dmac + dec_ttl	N/A

5.10.2.1 ACL Rule Tables (0-249)

An Access Control List (ACL) is a list of permissions attached to an object, to filter or match switches packets. When the pattern is matched at the hardware lookup engine, a specified action

(e.g. permit/deny) is applied. The rule fields represent flow characteristics such as source and destination addresses, protocol and VLAN ID.

ACL support currently allows actions of permit or deny rules, and supports only ingress direction. ACL search pattern can be taken from either L2 or L3 fields.

5.10.2.1.1 Supported ACL Matching Rules

Ingress packets, arriving the ACL, are matched against any combination of the following parameters (defined as the key):

- OXM_OF_METADATA – matches according to metadata
- OXM_OF_IN_PORT – matches according to ingress port (exact match or wildcard)
- OXM_OF_ETH_SRC – matches source MAC address
- OXM_OF_ETH_DST – matches destination MAC address
- OXM_OF_ETH_TYPE – matches EtherType



When match rule is set to match eth_type 9100, VLAN ID matching does not work.

- OXM_OF_VLAN_VID – matches VLAN ID
- OXM_OF_VLAN_PCP – matches priority level
- OXM_OF_IPV4_SRC – matches source IPv4 address
- OXM_OF_IPV4_DST – matches destination IPv4 address
- OXM_OF_IPV6_SRC – matches source IPv6 address
- OXM_OF_IPV6_DST – matches destination IPv6 address
- OXM_OF_IPV6_ND_TARGET



OXM_OF_IPV6_ND_TARGET match rule is not supported.

- OXM_OF_IP_PROTO – matches IP protocols (exact match or wildcard)
- OXM_OF_IP_DSCP – matches IP DSCP field (exact match or wildcard)
- OXM_OF_IP_ECN – matches network ECN (exact match or wildcard)
- OXM_OF_NW_TTL – matches network TTL (exact match or wildcard)
- OXM_OF_TCP_SRC – matches source TCP
- OXM_OF_TCP_DST – matches destination TCP
- OXM_OF_UDP_SRC – matches source UDP
- OXM_OF_UDP_DST – matches destination UDP

- OXM_OF_SCTP_SRC – matches source SCTP
- OXM_OF_SCTP_DST – matches destination SCTP
- OXM_OF_ICMPV4_TYPE – matches ICMP type
- OXM_OF_ICMPV4_CODE – matches ICMP code
- OXM_OF_ARP_OP – matches ARP OP code
- OXM_OF_ARP_SPA – matches sender protocol address
- OXM_OF_ARP_TPA – matches target protocol address

There is a default set of match keys configured. To see what it is, please run the command “show openflow table match-keys” on your machine. To alter it, please use the command “openflow table match-keys”.

5.10.2.1.2 Supported Rule Table Instructions

The intercepted packet is processed according to the instructions on the rule tables. The supported instructions are as follows:

- DROP - drops packet
- OFPIT_GOTO_TABLE – sends the packet for processing by another rule table
- OFPIT_METER - policer function; drops packet if it exceeds kbps/pktps limit
- OFPIT_WRITE_METADATA – writes meta-data with mask <METADATA>/0xFFF
- OFPIT_EXPERIMENTE – sends the packet for processing by another controller
- OFPIT_APPLY_ACTIONS – applies certain actions specified in the section below

5.10.2.1.3 Supported ACL Apply Actions

The following actions are applied on ingress packets once a match is achieved on the ACL table:

- OFPAT_OUTPUT – the packet is sent out to a port (may also be a controller port)
- OFPAT_GROUP – the packet is sent out to a group

3 types of group ports are supported:

- All: The packet is broadcasted on all ports which are part of the defined group
- Selected: The packets are distributed toward the group ports according to a weight mechanism
- Fast-Failover (FF): FF is a group of ports, one of which is defined as the primary port through which the packets are transported. In a failure scenario (defined as part of the group definition), traffic becomes transported through the most eligible backup port (from the list of backup ports). Once the failure scenario ends, traffic is routed again through the primary port
- OFPAT_POP_VLAN – strips 802.1Q (VLAN) tag from the packet
- OFPAT_PUSH_VLAN – adds 802.1Q (VLAN) tag from the packet

- OFPAT_SET_NW_TTL – modifies network TTL
- OFPAT_DEC_NW_TTL – decrements network TTL
- OFPAT_SET_FIELD – ACL set fields detailed in section below
- Normal

5.10.2.1.4 Supported ACL Set Fields

The following modifications may be implemented on ingress packets:

- OXM_OF_ETH_SRC – sets the source MAC address of the packet
- OXM_OF_ETH_DST – sets the destination MAC address of the packet
- OXM_OF_VLAN_VID – sets the VLAN ID of the packet
- OXM_OF_VLAN_PCP – sets the VLAN priority code point (PCP; 0-7)
- OXM_OF_IP_DSCP – sets IP DSCP
- OXM_OF_IP_ECN – sets network ECN

5.10.2.1.5 Supported ACL Meters

- ACL tables support up to 968 meters with 1 band (drop) per meter.
- Valid meter ID range: 1-969
- Only the rate or the burst size fields can be modified using OFPMC_MODIFY
- OFPMF_BURST meter type can be OFPMF_KBPS (KB/s) or OFPMF_PKTPS (number of packets per second) but not both

Meter actions:

- OFPMBT_DROP – drops packet according to meter configuration

5.10.2.2 FDB Table (250)

The FDB table is the same one shared with regular MLNX-OS® configuration (e.g. learning, static macs, etc). The cumulative number of supported FDB rules is 88KB. FDB may only configure rules with priority of 0x8000. Hard timeout is supported for FDB table rules. FDB rules cannot have wildcard on VID/ETH_DST.

The default action for the FDB table is normal and this cannot be changed by the user.

5.10.2.2.1 Supported FDB Apply Actions

- OFPAT_OUTPUT – the packet is sent out to a port (may be controller port)
- DROP – drops packet
- Normal

5.10.2.2 Supported FDB Matching Rules

- OXM_OF_VLAN_VID – matches VLAN ID
- OXM_OF_ETH_DST – matches destination MAC address

5.10.2.3 Router Table (251)

The OpenFlow router table and the regular MLNX-OS router table share the same HW resources, but are separated logically.

The cumulative number of supported FDB & router rules is 88K. Hard timeout, where the switch removes a rule after a configured timer expires, is supported for router table rules. Switch systems ignore rule priority and configure rules according to masklen in DST IPv4/IPv6 match. A rule with action output must have SET_FIELD with ETH_DST and DEC_NW_TTL. The default action for the router table is DROP.

Set DMAC can be assigned only to one output port. When a new rule with a set DMAC and a new output port is configured, the previous rules are removed from the HW. Later, if the new configuration is deleted, the previous rules get reinstalled in HW.

Note that all sent packets from the Router Table are without a VLAN header (untagged).

5.10.2.3.1 Supported Router Apply Actions

- OFPAT_OUTPUT – the packet is sent out to a port (may be controller port)
- OFPAT_DEC_NW_TTL – decrements network TTL
- OFPAT_SET_DMAC – OFPAT_SET_FIELD with OFPXMT_OFB_ETH_DST
- DROP – drops packet



When an output action is implemented, DEC_TTL and SET_DMAC must also be set.

5.10.2.3.2 Supported Router Set Fields

- OXM_OF_ETH_DST – sets the destination MAC address of the packet

5.10.2.3.3 Supported Router Matching Rules

- OXM_OF_IPV4_DST – matches destination IPv4 address
- OXM_OF_IPV6_DST – matches destination IPv6 address

5.10.3 Configuring OpenFlow

➤ *To run OpenFlow on a switch:*

Step 1. Unlock the OpenFlow CLI commands. Run:

```
switch (config) # protocol openflow
```

Step 2. Configure interfaces to be managed by OpenFlow. Run:

```
switch (config) # interface ethernet 1/1-1/4 openflow mode hybrid
```

Step 3. Configure the OpenFlow controller IP and TCP port. Run:

```
switch (config) # openflow controller-ip 10.209.0.205 tcp-port 6633
```



Spectrum based systems do not support a different controller port other than the default (6633).

Step 4. (Optional) Verify the OpenFlow configuration. Run:

```
switch (config) # show openflow
OpenFlow version: OF VERSION 1.0
Table size: 1000, 0 in use
Active controller ip: 10.209.0.205 port: 6633
Connection status: HANDSHAKE_COMPLETE (CONNECTED)
Forward-to-controller: ospf lldp arp-unicast arp-broadcast (all)
Enabled ports: Eth1/1      Eth1/2      Eth1/3      Eth1/4
switch (config) #
```



To be able to configure the switch using the controller, you should see the following line in the output:

Connection status must be: HANDSHAKE_COMPLETE (CONNECTED).

5.10.4 Configuring Secure Connection to OpenFlow

Since OpenFlow requires a certificate signed by the certificate authority (CA), the default certificate, which is self-signed, must be replaced.

➤ **Changing default certificate for secure OpenFlow connection:**

Step 1. Import the certificate to be used. Run:

```
switch (config) # crypto certificate name my-openflow public-cert pem "-----BEGIN CER-
TIFICATE-----
> MIIDYzCCAksCCQC9EPbMuxjNBzANBgkqhkiG9w0BAQsFADBeMQswCQYDVQQGEWJJ
...
> fEt2ui9taB1dl9480xDsGUxwUDX4Y0s/bQDjp99z+cKXUe2eYzeEwnTdrCzPZuQo
> -----END CERTIFICATE-----"
Successfully installed certificate with name 'my-openflow'
```

Step 2. Import key of certificate. Run:

```
switch (config) # crypto certificate name my-openflow private-key pem "-----BEGIN RSA
PRIVATE KEY-----
> MIIEpAIBAAKCAQEAYpJnZkwbhmt71Kf/M06cy7QmWWHhCozzWRwuWKGse+MxSmfC
...
> QAUPOVR1lSyIEYU+X0rMHc/9tgUh/8C7mBKwj7dccMmnRWz2djsjg==
> -----END RSA PRIVATE KEY-----"
```

Step 3. Designate “my-openflow” as the global default certificate for authentication of this system to clients. Run:

```
switch (config) # crypto certificate default-cert name my-openflow
```

Step 4. Import the CA certificate which signed for the controller. Run:

```
switch (config) # # crypto certificate name rootCA public-cert pem "-----BEGIN CERTIFICATE-----
> MIIDjzCCAnegAwIBAgIJALVou4mcQtxlMA0GCSqGSIb3DQEBCwUAMF4xCzAJBgNV
...
> +ZfQIOCFs8gY4BDq73W4ugr38mqIA8UXXAMPwgjCbK4NyOh0rJlP6WT8fYzvunct
> -----END CERTIFICATE-----"
Successfully installed certificate with name 'rootCA'
```

Step 5. Adds the “rootCA” to the default CA certificate list. Run:

```
switch (config) # crypto certificate ca-list default-ca-list name rootCA
```

Step 6. Save configuration. Run:

```
switch (config) # configuration write
```

Step 7. Reboot the switch. Run:

```
switch (config) # reload
```

Step 8. Verify configuration. Run:

```
switch (config) # show crypto certificate
Certificate with name 'system-self-signed'
  Comment:                system-generated self-signed certificate
  Private Key:             present
  Serial Number:           0x543e2efc3a5ecdbe18b5b5e744598424
  SHA-1 Fingerprint:      14eld36035c7a5fea9f7f0f423572c9954cb9fac

  Validity:
    Starts:                 2016/09/12 12:44:10
    Expires:                2017/09/12 12:44:10

  Subject:
    Common Name:            switch
    Country:                IS
    State or Province:     TBD
    Locality:               TBD
    Organization:           TBD
    Organizational Unit:    TBD
    E-mail Address:         TBD

  Issuer:
    Common Name:            switch
    Country:                IS
    State or Province:     TBD
    Locality:               TBD
    Organization:           TBD
    Organizational Unit:    TBD
    E-mail Address:         TBD
```

```

Certificate with name 'my-openflow' (default-cert)
  Private Key:           present
  Serial Number:        0xbd10f6ccbb18cd07
  SHA-1 Fingerprint:    1e0e3302182ab56f2cbd3ca21722dec55299d670

Validity:
  Starts:                2016/09/12 15:16:48
  Expires:               2018/01/25 14:16:48

Subject:
  Common Name:          switch
  Country:              *
  State or Province:    Some-State
  Locality:             *
  Organization:         Mlnx
  Organizational Unit:  e2e
  E-mail Address:      none@nowhere.com

Issuer:
  Common Name:          ca
  Country:              *
  State or Province:    Some-State
  Locality:             *
  Organization:         Mlnx
  Organizational Unit:  e2e

Certificate with name 'rootCA'
  Private Key:           not present
  Serial Number:        0xb568bb899c42dc65
  SHA-1 Fingerprint:    9855536f6ee0177356ffbd54ffe803bc83fb4c6

Validity:
  Starts:                2016/09/08 10:34:23
  Expires:               2019/06/29 10:34:23

Subject:
  Common Name:          ca
  Country:              *
  State or Province:    Some-State
  Locality:             *
  Organization:         Mlnx
  Organizational Unit:  e2e

Issuer:
  Common Name:          ca
  Country:              *
  State or Province:    Some-State
  Locality:             *
  Organization:         Mlnx
  Organizational Unit:  e2e

```

Step 9. Configure secure controller IP connection. Run:

```
switch (config) # controller-ip 10.10.10.10 tls
```

5.10.5 Commands

protocol openflow

protocol openflow
no protocol openflow

Unhides the OpenFlow commands.
The no form of the command hides the OpenFlow commands.

Syntax Description	N/A
Default	no protocol openflow
Configuration Mode	Config
History	3.3.4200
Role	admin
Example	switch (config) # protocol openflow switch (config) #
Related Commands	
Note	

openflow description (SwitchX)**openflow description <string>**

Sets the OpenFlow description.

Syntax Description	string	Free string.
Default	N/A	
Configuration Mode	Config	
History	3.3.4302	
	3.6.1002	Updated Note
Role	admin	
Example	<pre>switch (config) # openflow description OF-switch-104 switch (config) # show openflow detail OpenFlow version: OF VERSION 1.0 Table size: 1000, 0 in use Active controller ip: 10.209.1.39 port: 6633 Connection status: HANDSHAKE_COMPLETE (CONNECTED) Forward-to-controller: ospf lldp arp-unicast arp-broadcast (all) Enabled ports: Eth1/10 Eth1/11 Eth1/13 Eth1/19 Echo period: 10 sec Keep alive period: 30 sec Messages in (last session): 86290 Messages out (last session): 47984 Disconnect count: 0 Openflow description: OF-switch-104 Datapath ID: 00:00:00:02:c9:a8:e3:50 Not supporting buffering Not supporting emergency flows Not supporting port statistics Not supporting IP reassemble Supporting spanning tree Not supporting queue statistics switch (config) #</pre>	
Related Commands		
Note	Not supported on Spectrum based switch systems	

openflow mode hybrid

openflow mode hybrid
no openflow mode

Enables OpenFlow on the port.
The no form of the command returns the port to its default state.

Syntax Description	N/A
Default	no openflow mode
Configuration Mode	Config Interface Ethernet
History	3.3.4200 3.6.2100 Updated Note section
Role	admin
Example	<pre>switch (config interface ethernet 1/1)# openflow mode hybrid switch (config interface ethernet 1/1)#</pre>
Related Commands	
Note	On Spectrum based systems, it is possible to run “interface port-channel <port number> openflow mode hybrid”

openflow add-flows

openflow add-flows <FLOW ID> [FLOW-TEXT]

The command adds OpenFlow Flow.
If FLOW-TEXT is not provided the commands deletes the configured OpenFlow flows.

Syntax Description	FLOW ID	Range: 0 - 65535
	FLOW-TEXT	Text of the flow configuration
Default	N/A	
Configuration Mode	Config Interface Ethernet	
History	3.6.4006	
Role	admin	
Example	<pre>switch (config interface ethernet 1/1)# openflow add-flows switch (config interface ethernet 1/1)#</pre>	
Related Commands		
Note		

openflow add-group

openflow add-group <GROUP-TEXT>

The command Adds OpenFlow Group.

Syntax Description	GROUP-TEXT	Text of the group configuration
---------------------------	------------	---------------------------------

Default	N/A
----------------	-----

Configuration Mode	Config Interface Ethernet
---------------------------	---------------------------

History	3.6.4006
----------------	----------

Role	admin
-------------	-------

Example	switch (config interface ethernet 1/1)# openflow add-group switch (config interface ethernet 1/1)#
----------------	---

Related Commands	
-------------------------	--

Note	
-------------	--

openflow mod-group

openflow mod-group <GROUP-TEXT>

The command modifies matching OpenFlow GROUP ID.

Syntax Description	GROUP-TEXT	Text of the group configuration
Default	N/A	
Configuration Mode	Config Interface Ethernet	
History	3.6.4006	
Role	admin	
Example	<pre>switch (config interface ethernet 1/1)# openflow mod-group switch (config interface ethernet 1/1)#</pre>	
Related Commands		
Note		

openflow del-group

openflow del-group <GROUP-TEXT>

The command deletes matching OpenFlow GROUP ID.

Syntax Description	GROUP-TEXT	Text of the group configuration
Default	N/A	
Configuration Mode	Config Interface Ethernet	
History	3.6.4006	
Role	admin	
Example	<pre>switch (config interface ethernet 1/1)# openflow del-group switch (config interface ethernet 1/1)#</pre>	
Related Commands		
Note		

openflow add-meter

openflow add-meter <METER-TEXT>

The command adds OpenFlow Meter.

Syntax Description	METER-TEXT	Text of the meter configuration
Default	N/A	
Configuration Mode	Config Interface Ethernet	
History	3.6.4006	
Role	admin	
Example	<pre>switch (config interface ethernet 1/1)# openflow add-meter switch (config interface ethernet 1/1)#</pre>	
Related Commands		
Note		

openflow mod-meter

openflow mod-meter <METER-TEXT>

The command modifies matching OpenFlow METER ID.

Syntax Description	METER-TEXT	Text of the meter configuration
---------------------------	------------	---------------------------------

Default	N/A
----------------	-----

Configuration Mode	Config Interface Ethernet
---------------------------	---------------------------

History	3.6.4006
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config interface ethernet 1/1)# openflow mod-meter switch (config interface ethernet 1/1)#</pre>
----------------	---

Related Commands	
-------------------------	--

Note	
-------------	--

openflow del-meter

openflow del-meter <METER-TEXT>

The command deletes matching OpenFlow METER ID.

Syntax Description	METER-TEXT	Text of the meter configuration
Default	N/A	
Configuration Mode	Config Interface Ethernet	
History	3.6.4006	
Role	admin	
Example	<pre>switch (config interface ethernet 1/1)# openflow del-meter switch (config interface ethernet 1/1)#</pre>	
Related Commands		
Note		

openflow re-apply flows

openflow re-apply flows <FLOW-ID>

The command re-applies matching FLOW ID.

Syntax Description	FLOW-ID	Range: 0 - 65535
Default	N/A	
Configuration Mode	Config Interface Ethernet	
History	3.6.4006	
Role	admin	
Example	switch (config interface ethernet 1/1)# openflow re-apply flows switch (config interface ethernet 1/1)#	
Related Commands		
Note		

openflow re-apply groups

openflow re-apply groups <GROUP-ID>

The command re-applies matching GROUP ID.

Syntax Description	GROUP-ID	Range: 0 - 65535
Default	N/A	
Configuration Mode	Config Interface Ethernet	
History	3.6.4006	
Role	admin	
Example	<pre>switch (config interface ethernet 1/1)# openflow re-apply groups switch (config interface ethernet 1/1)#</pre>	
Related Commands		
Note		

openflow re-apply meters

openflow re-apply meters <METER-ID>

The command re-applies matching METER ID.

Syntax Description	METER-ID	Range: 0 - 65535
Default	N/A	
Configuration Mode	Config Interface Ethernet	
History	3.6.4006	
Role	admin	
Example	<pre>switch (config interface ethernet 1/1)# openflow re-apply meters switch (config interface ethernet 1/1)#</pre>	
Related Commands		
Note		

controller-ip

openflow controller-ip <ip-address> [tls] [tcp-port <tcp-port>]
no openflow controller-ip <ip-address>

Sets the OpenFlow controller's IP & TCP port.
 The no form of the command sets the parameter to its default.

Syntax Description	ip-address	The IPv4 address of the OpenFlow controller
	tls	Configures secure connection to OpenFlow controller
	tcp-port	Sets the TCP port number of the OpenFlow controller
Default	TCP port 6633	
Configuration Mode	Config OpenFlow	
History	3.6.1002	
	3.6.2002	Added "tls" parameter
Role	admin	
Example	switch (config openflow) # controller-ip 10.10.10.10 tls tcp-port 6633	
Related Commands		
Note	This command is only supported on Spectrum™ based switch systems	

controller-ip

openflow controller-ip <ip-address> [tcp-port <tcp-port>]
no openflow controller-ip [tcp-port <tcp-port>]

Sets the OpenFlow controller's IP & TCP port.
The no form of the command sets the parameter to its default.

Syntax Description	ip-address	The IPv4 address of the OpenFlow controller
	tcp-port	Sets the TCP port number of the OpenFlow controller
Default	TCP port 6633	
Configuration Mode	Config OpenFlow	
History	3.3.4200	
Role	admin	
Example	switch (config openflow) # controller-ip 10.10.10.10 tcp-port 6633	
Related Commands		
Note	This command is only supported on SwitchX based switch systems	

datapath-id

datapath-id <value>

no datapath-id

Sets a specific identifier for the switch with which the controller is communicating.

The no form of the command resets the parameter to its default value.

Syntax Description	value	The most significant 16 bits of the agent data-path ID. Range is 0x0000-0xFFFF in hexa.
Default	0x0000	
Configuration Mode	Config OpenFlow	
History	3.3.4200	
Role	admin	
Example	<pre>switch (config openflow) # datapath-id 0x1234 switch (config openflow) #</pre>	
Related Commands		
Note		

forward-to-controller

forward-to-controller {[ospf] [lldp] [arp-unicast] [arp-broadcast] all | none}

Forwards the selected traffic types to the controller from all the ports on which OpenFlow enabled.

Syntax Description	ospf	Forwards OSPF traffic to the controller
	lldp	Forwards LLDP traffic to the controller
	arp-unicast	Forwards ARP-unicast traffic to the controller
	arp-broadcast	Forwards ARP-broadcast traffic to the controller
	all	Forwards all traffic types to the controller
	none	Forwards no traffic to the controller
Default	None	
Configuration Mode	Config OpenFlow	
History	3.3.4200	
Role	admin	
Example	<pre>switch (config openflow) # forward-to-controller all switch (config openflow) #</pre>	
Related Commands		
Note	This command is only supported on SwitchX based switch systems	

openflow table match-keys

```
openflow table <table_id[-table_id]> match-keys <key_list>
no openflow table <table_id[-table_id]> match-keys [<key_list>]
```

Adds ACL keys to an OpenFlow table.

The no form of the command removes ACL keys from the OpenFlow table.

Syntax Description	table_id	OpenFlow table ID for adding/removing key values. Can be one ID or range. Valid values: 0-249.
	key_list	Key value(s)
Default	TBD	
Configuration Mode	Any Command Mode	
History	3.6.3004	
Role	admin	
Example	switch (config) # openflow table 1 match-keys metadata ip_proto	
Related Commands		
Note	<ul style="list-style-type: none"> • OpenFlow match rules are installed according to the configured match keys • New match keys are configured only when the table is empty (i.e. does not contain any rules) • This command is only supported on Spectrum™ based switch systems 	

show openflow

show openflow

Displays general information about the OpenFlow protocol configuration.

Syntax Description	N/A
Default	None
Configuration Mode	Any Command Mode
History	3.3.4200 3.3.4302 Removed flow-id parameter 3.6.1002 Updated Example
Role	admin
Example	<pre>switch (config) # show openflow OpenFlow Version: OpenFlow 1.3 Datapath ID: ffff7cfe90e600c0 Controllers Information: Controller State Role Changed (sec) Last Error ----- tcp:1.1.1.1:6633 BACKOFF other 3 Connection timed out tcp:10.10.10.10:6633 ACTIVE other 2067 N/A tcp:10.10.10.30:6633 ACTIVE other 2067 N/A Mapping of OpenFlow ports to their OpenFlow numbers: Interface OF-Port ----- Eth1/12 OF107 Eth1/9 OF109 Eth1/10 OF111 Eth1/7 OF113 Eth1/8 OF115 Eth1/3 OF121 Eth1/4 OF123</pre>
Related Commands	
Note	This command is only supported on Spectrum™ based switch systems

show openflow detail**show openflow detail**

Displays detailed information about the OpenFlow protocol.

Syntax Description	N/A
Default	None
Configuration Mode	Any Command Mode
History	3.3.4200 3.6.1002 Updated Example
Role	admin
Example	<pre>switch (config) # show openflow detail Echo period: 0 sec Keep alive period: 0 sec Messages in (last session): 0 Messages out (last session): 0 Disconnect count: 0 Openflow description: Datapath ID: 02:10:e4:52:14:5d:76:70 Not supporting buffering Not supporting emergency flows Not supporting port statistics Not supporting IP reassemble Supporting spanning tree Not supporting queue statistics</pre>
Related Commands	
Note	This command is only supported on SwitchX based switch systems

show openflow flows

show openflow flows

Displays information about the OpenFlow flows.

Syntax Description	N/A
Default	None
Configuration Mode	Any Command Mode
History	3.3.4302 3.6.1002 Updated Example
Role	admin
Example	<pre>switch (config) # show openflow flows ONFST_FLOW reply (OF1.3) (xid=0x2): cookie=0x0, duration=467.993s, table=0, n_packets=0, n_bytes=0, send_flow_rem priority=8,in_port=125 actions=output:123 cookie=0x0, duration=439.218s, table=0, n_packets=0, n_bytes=0, send_flow_rem priority=9999,in_port=125 actions=output:123 cookie=0x0, duration=467.984s, table=0, n_packets=0, n_bytes=0, send_flow_rem priority=1000 actions=drop cookie=0x0, duration=467.975s, table=0, n_packets=0, n_bytes=0, send_flow_rem priority=200,dl_vlan=222 actions=pop_vlan,output:123 cookie=0x0, duration=467.987s, table=0, n_packets=0, n_bytes=0, send_flow_rem priority=10,dl_vlan=10 actions=output:123 cookie=0x0, duration=468.013s, table=0, n_packets=0, n_bytes=0, send_flow_rem priority=8,dl_dst=01:01:01:01:01:01 actions=output:123 cookie=0x0, duration=467.991s, table=0, n_packets=0, n_bytes=0, send_flow_rem priority=8,dl_src=01:01:01:01:01:01 actions=output:123 cookie=0x0, duration=467.992s, table=0, n_packets=0, n_bytes=0, send_flow_rem priority=5,arp actions=output:123</pre>
Related Commands	
Note	

show openflow flows ethernet-names

```
show openflow flows < |cookie|table > ethernet-names
```

Displays openflow flows configuration with interface names.

Syntax Description	N/A
Default	None
Configuration Mode	Config
History	3.6.4006
Role	admin

Example

```
switch (config) # show openflow flows ethernet-names
OFPST_FLOW reply (OF1.3) (xid=0x2):
cookie=0x0, duration=911.531s, table=0, n_packets=0, n_bytes=0,
priority=0 actions=NORMAL
cookie=0x0, duration=80.662s, table=1, n_packets=0, n_bytes=0,
priority=0,in_port=0,dl_src=02:00:00:00:00:00 actions=output:Eth1/
13,output:123,output:127
cookie=0x0, duration=80.530s, table=1, n_packets=0, n_bytes=0,
priority=1,in_port=1,dl_src=02:01:00:00:00:00 actions=output:Eth1/
13,output:123,output:127
cookie=0x0, duration=80.414s, table=1, n_packets=0, n_bytes=0,
priority=2,in_port=2,dl_src=02:02:00:00:00:00 actions=output:Eth1/
13,output:123,output:127
cookie=0x0, duration=80.296s, table=1, n_packets=0, n_bytes=0,
priority=3,in_port=3,dl_src=02:03:00:00:00:00 actions=output:Eth1/
13,output:123,output:127
cookie=0x0, duration=80.180s, table=1, n_packets=0, n_bytes=0,
priority=4,in_port=4,dl_src=02:04:00:00:00:00 actions=output:Eth1/
13,output:123,output:127
cookie=0x0, duration=80.064s, table=1, n_packets=0, n_bytes=0,
priority=5,in_port=5,dl_src=02:05:00:00:00:00 actions=output:Eth1/
13,output:123,output:127
cookie=0x0, duration=79.948s, table=1, n_packets=0, n_bytes=0,
priority=6,in_port=6,dl_src=02:06:00:00:00:00 actions=output:Eth1/
13,output:123,output:127
cookie=0x0, duration=79.831s, table=1, n_packets=0, n_bytes=0,
priority=7,in_port=7,dl_src=02:07:00:00:00:00 actions=output:Eth1/
13,output:123,output:127
cookie=0x0, duration=79.711s, table=1, n_packets=0, n_bytes=0,
priority=8,in_port=8,dl_src=02:08:00:00:00:00 actions=output:Eth1/
13,output:123,output:127
cookie=0x0, duration=79.591s, table=1, n_packets=0, n_bytes=0,
priority=9,in_port=9,dl_src=02:09:00:00:00:00 actions=output:Eth1/
13,output:123,output:127
cookie=0x0, duration=79.467s, table=1, n_packets=0, n_bytes=0,
priority=10,in_port=10,dl_src=02:0a:00:00:00:00 actions=output:Eth1/
13,output:123,output:127
```

Related Commands

Note

show openflow statistics**show openflow statistics**

Displays information about the OpenFlow flows.

Syntax Description	N/A
Default	None
Configuration Mode	Any Command Mode
History	3.3.4302 3.6.1002 Updated Example
Role	admin
Example	switch (config) # show openflow statistics
Related Commands	
Note	This command is only supported on SwitchX based switch systems

show openflow tables

show openflow tables

Displays information about the OpenFlow tables (size, type, etc.).

Syntax Description	N/A
Default	None
Configuration Mode	Any Command Mode
History	3.3.4200 3.6.1002 Added Example
Role	admin
Example	<pre>switch (config) # show openflow tables Table id: 0 Maximum table size: 1000, 0 in use Key: 12 tuple ACL Supported actions: Modify VID, Mofify PCP, Strip VID</pre>
Related Commands	
Note	This command is only supported on SwitchX based switch systems

show openflow

show openflow [**detail** | **tables** | **flows <id>**]

Displays general information about the OpenFlow protocol configuration.

Syntax Description	detail	Displays detailed information about the OpenFlow protocol.
	tables	Displays information about the OpenFlow tables (size, type, etc.).
	flows <id>	Displays specific flows inside the OpenFlow tables. ID may be a range (e.g. 1-10).
	statistics	Displays OpenFlow statistics.
Default	None	
Configuration Mode	Any Command Mode	
History	3.3.4200	
	3.3.4302	Removed flow-id parameter Added “flows” and “statistics” parameters
Role	admin	
Example	switch (config) # show openflow flows	
Related Commands		
Note	This command is only supported on SwitchX based switch systems	

show openflow groups

show openflow groups

Displays all the configured OpenFlow groups.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.6.3004
Role	admin
Example	<pre>switch (config) # show openflow groups OFPST_GROUP_DESC reply (OF1.3) (xid=0x2): group_id=5566,type=select,bucket=weight:5,actions=out- put:1,bucket=weight:7,actions=output:2,bucket=weight:22,actions=out- put:3</pre>
Related Commands	
Note	This command is only supported on Spectrum™ based switch systems

show openflow groups ethernet-names

show openflow groups ethernet-names

Displays all the configured OpenFlow groups with their interface names.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.6.4006
Role	admin
Example	<pre>switch (config) # show openflow groups OFPST_GROUP_DESC reply (OF1.3) (xid=0x2): group_id=4,type=all,bucket=actions=output:Eth1/13,output:123 group_id=1,type=select,bucket=actions=output:Eth1/7,output:Eth1/ 8,output:Eth1/5,output:123,set_field:11:22:33:44:00:00->eth_dst group_id=2,type=select,bucket=actions=output:Eth1/13 group_id=3,type=all,bucket=actions=output:Eth1/ 13,output:123,set_field:11:22:33:44:00:00->eth_dst</pre>
Related Commands	
Note	This command is only supported on Spectrum™ based switch systems

show openflow meters

show openflow meters [<ID>]

Displays all/specified OpenFlow meters.

Syntax Description	ID	Requested meter ID
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.3004	
Role	admin	
Example	<pre>switch (config) # show openflow meters OFPST_METER_CONFIG reply (OF1.3) (xid=0x2): meter=20 kbps bands= type=drop rate=300 meter=100 kbps bands= type=drop rate=500 meter=200 kbps bands= type=drop rate=500 switch (config) # show openflow meters 20 OFPST_METER_CONFIG reply (OF1.3) (xid=0x2): meter=20 kbps bands= type=drop rate=300</pre>	
Related Commands		
Note	This command is only supported on Spectrum™ based switch systems	

show openflow flows table

show openflow flows table <NUM> [summary]

Displays information/summary of a given OpenFlow flows table.

Syntax Description	NUM	NUM range: 0-252
	summary	Displays given OpenFlow flow table summary
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.3004	
Role	admin	
Example	<pre>switch (config) # show openflow flows table 1 OFPST_FLOW reply (OF1.3) (xid=0x2): cookie=0x0, duration=6.344s, table=1, n_packets=0, n_bytes=0, in_port=127 actions=drop switch (config) # show openflow flows table 1 summary OFPST_AGGREGATE reply (OF1.3) (xid=0x2): packet_count=0 byte_count=0 flow_count=1</pre>	
Related Commands		
Note	This command is only supported on Spectrum™ based switch systems	

show openflow flows cookie

show openflow flows cookie <cookie> [summary]

Displays information/summary of a given OpenFlow flows cookie.

Syntax Description	cookie	Requested cookie ID in the following format: cookie_id.cookie_id/mask_id (e.g. 0x2A, 0x12/ 0x2)
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.3004	
Role	admin	
Example	<pre>switch (config) # show openflow flows cookie 0x11 OFPST_FLOW reply (OF1.3) (xid=0x2): cookie=0x11, duration=2.699s, table=0, n_packets=0, n_bytes=0, actions=NORMAL switch (config) # show openflow flows cookie 0x22 OFPST_FLOW reply (OF1.3) (xid=0x2): cookie=0x22, duration=3.970s, table=1, n_packets=0, n_bytes=0, in_port=127 actions=drop</pre>	
Related Commands		
Note	A cookie may be associated with a flow using the add-flows, and mod-flows commands. This command is only supported on Spectrum™ based switch systems	

show openflow table match-keys

show openflow table <table_id[-table_id]> match-keys

Displays configured ACL keys in OpenFlow table.

Syntax Description	table_id	OpenFlow table ID for adding/removing key values. Can be one ID or range. Valid values: 0-249.																																
Default	N/A																																	
Configuration Mode	Any Command Mode																																	
History	3.6.3004																																	
Role	admin																																	
Example	<pre>switch (config) # show openflow table 2 match-keys</pre> <p>Table: 2 Pending keys:</p> <table border="1"> <thead> <tr> <th>Key name</th> <th>Description</th> </tr> </thead> <tbody> <tr><td>in_port</td><td>Source port</td></tr> <tr><td>dl_src</td><td>Source MAC address</td></tr> <tr><td>dl_dst</td><td>Destination MAC address</td></tr> <tr><td>dl_type</td><td>Ethernet protocol type</td></tr> <tr><td>vlan_vid</td><td>Virtual LAN tag</td></tr> <tr><td>vlan_pcp</td><td>Priority Code Point</td></tr> <tr><td>ip_src</td><td>Source IPv4 address</td></tr> <tr><td>ip_dst</td><td>Destination IPv4 address</td></tr> <tr><td>ip_proto</td><td>IPV4 - Next protocol, IPV6 - Next header</td></tr> <tr><td>ip_dscp</td><td>IP ToS/DSCP or IPv6 traffic class field dscp</td></tr> <tr><td>ip_ecn</td><td>ECN bits from IP header</td></tr> <tr><td>ip_ttl</td><td>IP TTL or IPv6 hop limit</td></tr> <tr><td>l4_src_port</td><td>Source L4 port</td></tr> <tr><td>l4_dst_port</td><td>Destination L4 port</td></tr> <tr><td>metadata</td><td>Matches value in the metadata field</td></tr> </tbody> </table>		Key name	Description	in_port	Source port	dl_src	Source MAC address	dl_dst	Destination MAC address	dl_type	Ethernet protocol type	vlan_vid	Virtual LAN tag	vlan_pcp	Priority Code Point	ip_src	Source IPv4 address	ip_dst	Destination IPv4 address	ip_proto	IPV4 - Next protocol, IPV6 - Next header	ip_dscp	IP ToS/DSCP or IPv6 traffic class field dscp	ip_ecn	ECN bits from IP header	ip_ttl	IP TTL or IPv6 hop limit	l4_src_port	Source L4 port	l4_dst_port	Destination L4 port	metadata	Matches value in the metadata field
Key name	Description																																	
in_port	Source port																																	
dl_src	Source MAC address																																	
dl_dst	Destination MAC address																																	
dl_type	Ethernet protocol type																																	
vlan_vid	Virtual LAN tag																																	
vlan_pcp	Priority Code Point																																	
ip_src	Source IPv4 address																																	
ip_dst	Destination IPv4 address																																	
ip_proto	IPV4 - Next protocol, IPV6 - Next header																																	
ip_dscp	IP ToS/DSCP or IPv6 traffic class field dscp																																	
ip_ecn	ECN bits from IP header																																	
ip_ttl	IP TTL or IPv6 hop limit																																	
l4_src_port	Source L4 port																																	
l4_dst_port	Destination L4 port																																	
metadata	Matches value in the metadata field																																	

Related Commands

Note This command is only supported on Spectrum™ based switch systems

show openflow table match-keys supported

show openflow table <table_id[-table_id]> match-keys supported

Displays list of ACL keys which can be configured in OpenFlow table.

Syntax Description	table_id	OpenFlow table ID for adding/removing key values. Can be one ID or range. Valid values: 0-249.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.3004	
Role	admin	
Example	switch (config) # show openflow table 2 match-keys supported	
	Key name	Description
	-----	-----
	in_port	Source port
	dl_src	Source MAC address
	dl_dst	Destination MAC address
	dl_type	Ethernet protocol type
	vlan_vid	Virtual LAN tag
	vlan_pcp	Priority Code Point
	ip_src	Source IPv4 address
	ip_dst	Destination IPv4 address
	ipv6_dst	Destination IPv6 address
	ipv6_src	Source IPv6 address
	ip_proto	IPV4 - Next protocol, IPV6 - Next header
	ip_dscp	IP ToS/DSCP or IPv6 traffic class field dscp
	ip_ecn	ECN bits from IP header
	ip_ttl	IP TTL or IPv6 hop limit
	l4_src_port	Source L4 port
	l4_dst_port	Destination L4 port
	metadata	Matches value in the metadata field
Related Commands		
Note	This command is only supported on Spectrum™ based switch systems	

5.11 VXLAN

Data centers are being increasingly consolidated and outsourced in an effort to improve the deployment time of applications and reduce operational costs, and applications are constantly raising demand for compute, storage, and network resource. Thus, in order to scale compute, storage, and network resources, physical resources are being abstracted from their logical representation, in what is referred to as server, storage, and network virtualization. Virtualization can be implemented in various layers of computer systems or networks.

Multi-tenant data centers are taking advantage of the benefits of server virtualization to provide a new kind of hosting—a virtual hosted data center. Multi-tenant data centers are ones where individual tenants could belong to a different company or a different department. To a tenant, virtual data centers are similar to their physical counterparts, consisting of end-stations attached to a network, complete with services such as load balancers and firewalls. To tenant systems, a virtual network looks like a normal network, except that the only end-stations connected to the virtual network are those belonging to a tenant’s specific virtual network.

How a virtual network is implemented does not generally matter to the tenant; what matters is that the service provided (Layer 2 (L2) or Layer 3 (L3)) has the right semantics, performance, etc. It could be implemented via a pure routed network, a pure bridged network, or a combination of bridged and routed networks.

VXLAN (Virtual eXtensible Local Area Network) addresses the above requirements of the L2 and L3 data center network infrastructure in the presence of virtual networks in a multi-tenant environment. It runs over the existing networking infrastructure and provides a means to “stretch” an L2 network. Each overlay bridge is called a VXLAN segment. Only machines within the same VXLAN segment can communicate with each other. Each VXLAN segment is identified through a 24-bit segment ID called “VXLAN Network Identifier (VNI)”. A network endpoint that performs a conversion from virtual to physical network and back is called VXLAN Tunnel End-Point or VTEP.

In virtual environments, it is typically required to use logical switches to forward traffic between different virtual machines (VMs) on the same physical host, between virtual machines and the physical machines and between networks. Virtual switch environments use an OVSDB management protocol for configuration and state discovery of the virtual networks. OVSDB protocol allows programmable access to the database of virtual switch configuration.

5.11.1 Configuring VXLAN

➤ *To enable VXLAN:*

Step 1. Configure jumbo frames for NVE ports:

```
switch (config)# interface ethernet 1/1-1/4 mtu 9216 force
```

Step 2. Configure jumbo frames for underlay-facing ports:

```
switch (config)# interface ethernet 1/17 mtu 9216 force
```

Step 3. Create VLAN for all VXLAN traffic:

```
switch (config)# vlan 3
```

Step 4. Configure Overlay interfaces with VXLAN VLAN:

```
switch (config)# interface ethernet 1/17 switchport access vlan 3
```

Step 5. Enable IP routing:

```
switch (config)# ip routing vrf default
```

Step 6. Configure interface on the VXLAN VLAN and configure an IP address for it:

```
switch (config)# interface vlan 3
switch (config interface vlan 3)# ip address 33.33.33.254 255.255.255.0
switch (config interface vlan 3)# interface vlan 3 mtu 9216
```

Step 7. Enable NVE protocol:

```
switch (config)# protocol nve
```

Step 8. Configure interface NVE:

```
switch (config)# interface nve 1
```

Step 9. Create loopback interface to terminate the VXLAN tunnel. The IP address of the interface will be a VTEP endpoint address, and needs to be reachable in the underlay network:

```
switch (config)# interface loopback 1
switch (config interface loopback 1)# ip address 1.2.3.4 255.255.255.255
switch (config)# interface nve 1 vxlan source interface loopback 1
```

Step 10. Configure routing to other VTEP devices:

```
switch (config)# ip route vrf default 1.2.3.5 /32 33.33.33.253
switch (config)# ip route vrf default 1.2.3.6 /32 33.33.33.252
```

Step 11. Configure overlay-facing ports for NVE mode:

```
switch (config)# interface ethernet 1/1 nve mode only force
switch (config)# interface ethernet 1/2 nve mode only force
switch (config)# interface ethernet 1/3 nve mode only force
switch (config)# interface ethernet 1/4 nve mode only force
```

➤ ***For deployments with a controller, set up OVSDDB:***

Step 12. Start OVSDDB server:

```
switch (config)# ovs ovsdb server
```

Step 13. Configure the OVSDDB manager to an IP address of a controller:

```
switch (config)# ovs ovsdb manager remote ssl ip address 10.130.250.5
```

➤ ***For controller-less deployments, configure the bridging from the CLI directly:***

Step 14. Create bridges:

```
switch (config)# interface nve 1 nve bridge 7777
switch (config)# interface ethernet 1/1 nve vlan 10 bridge 7777
```

Step 15. Configure source-node replication:

```
switch (config)# no interface nve 1 nve fdb flood load-balance
```

Step 16. Configure flood addresses for BUM traffic:

```
switch (config)# interface nve 1 nve fdb flood bridge 7777 address 1.2.3.5
switch (config)# interface nve 1 nve fdb flood bridge 7777 address 1.2.3.6
```



Step 17. Configure FDB remote learning:

```
switch (config)# interface nve 1 nve fdb learning remote
```

5.11.2 VMware Network Virtualization and Security Platform (NSX) Configuration

5.11.2.1 Hardware Topology

- 2 ESXi servers pre-configured with VXLAN networking using VMware NSX
- 3 NSX Controllers available for VXLAN unicast type logical switches
- 1 HPE M-series Switch connected to the ESXi servers and to a physical database server
- Out-of-band network for management and a VLAN network to carry VXLAN traffic

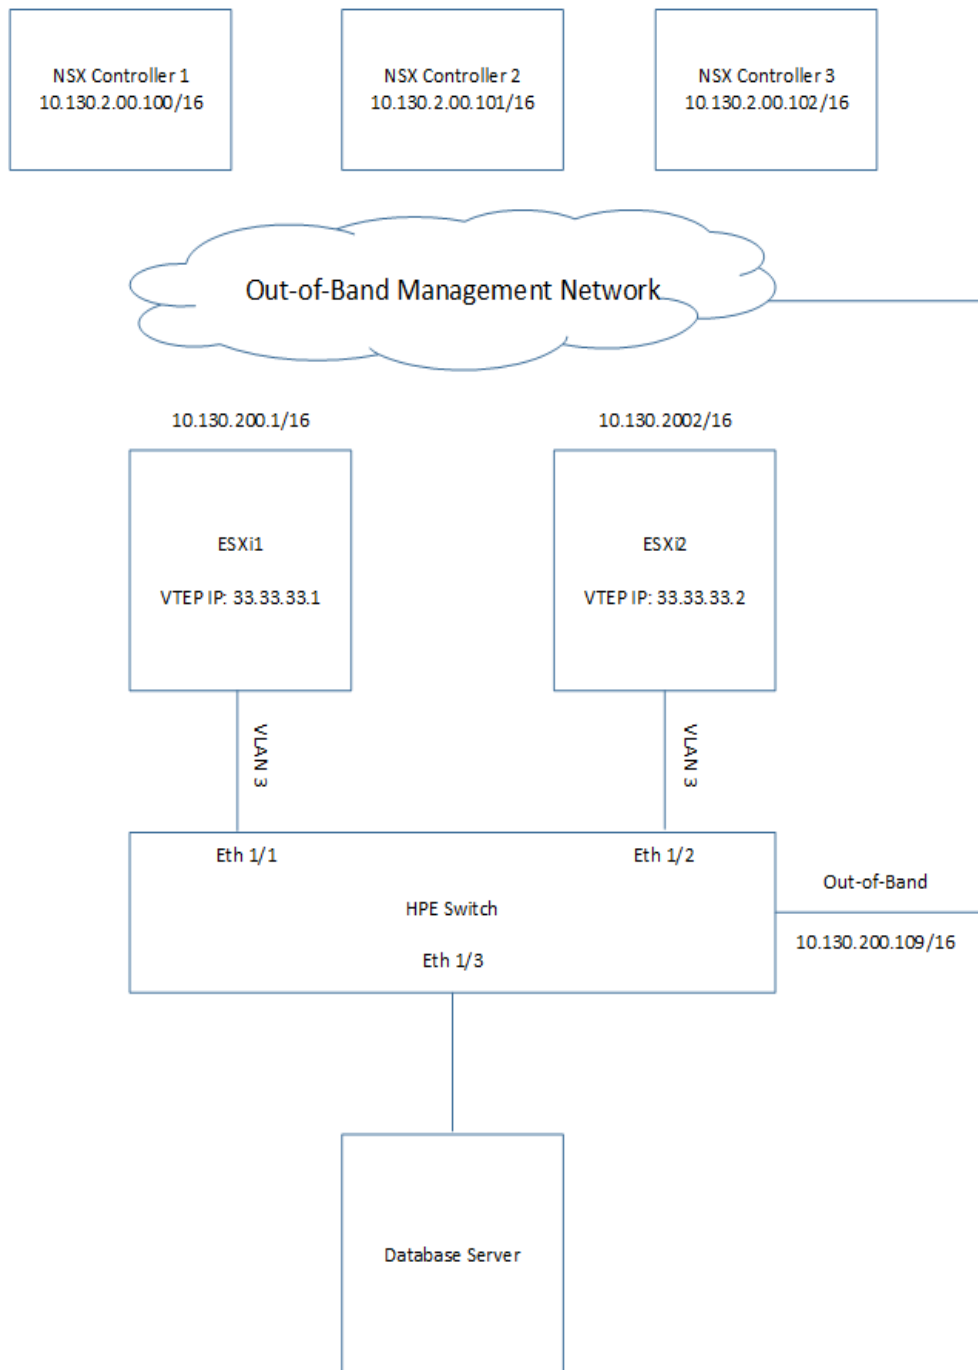

5.11.2.2 Switch Configuration

Step 1. Configure jumbo frames on ESXi and Database server facing interfaces:

```
switch (config)# interface ethernet 1/1-1/3 mtu 9216 force
```

Step 2. Create VLAN 3 to carry VXLAN traffic (if it does not exist yet):

```
switch (config)# vlan 3
```

Step 3. Enable IP routing:

```
switch (config)# ip routing vrf default
```

Step 4. Create an interface on VLAN 3 and assign an IP address to it.

The IP address must be the default gateway of the VXLAN netstack created by NSX after enabling VXLAN traffic on the hosts.

To check the default gateway in vSphere web client select an ESXi host and go to: Configure -> TCP/IP configuration .

The screenshot shows the vSphere web client interface for configuring TCP/IP stacks. The left sidebar shows the navigation menu with 'Networking' expanded and 'TCP/IP configuration' selected. The main area displays the 'TCP/IP Stacks' configuration table.

TCP/IP Stack	VMkernel Adapters	IPv4 Gateway Address
System stacks		
Default	5	10.144.0.1
Custom stacks		
vxlan	1	33.33.33.254

Below the table, the configuration for the selected 'vxlan' stack is shown, including tabs for DNS, Routing, IPv4 Routing Table, IPv6 Routing Table, and Advanced.

```
switch (config)# interface vlan 3
switch (config interface vlan 3)# ip address 33.33.33.254 255.255.255.0
switch (config interface vlan 3)# interface vlan 3 mtu 9216
```

Step 5. Create a loopback interface to communicate with VTEPs on the ESXi servers by routing through "interface vlan 3". This interface will be the VTEP IP assigned to the switch

```
switch (config)# interface loopback 1
switch (config interface loopback 1)# ip address 1.2.3.4 255.255.255.255
```

Step 6. Enable NVE protocol:

```
switch (config)# protocol nve
```

Step 7. Configure interface NVE:

```
switch (config)# interface nve 1
```

Step 8. Configure the source of the NVE interface to be the loopback created above:

```
switch (config)# interface nve 1 vxlan source interface loopback 1
```

Step 9. Start the OVSDB server and connect it to the NSX Controllers

```
switch (config)# ovs ovssdb server
switch (config)# ovs ovssdb manager remote ssl ip address 10.130.200.100
switch (config)# ovs ovssdb manager remote ssl ip address 10.144.200.101
switch (config)# ovs ovssdb manager remote ssl ip address 10.144.200.102
```

Step 10. Configure the port facing the Database server as an NVE port

```
switch (config)# interface ethernet 1/3 nve mode only force
```

Step 11. Get the switch certificate for later configuration in the NSX Manager.

```
switch (config)# show crypto certificate name system-self-signed public-pem
```

Copy the certificate starting with the line:

```
-----BEGIN CERTIFICATE-----
```

until the line:


```
-----END CERTIFICATE-----
```

Make sure to include both of those lines.

5.11.3 NSX Manager Configuration

5.11.3.1 Adding Hosts to Replication Cluster

Step 1. In NSX Manager, go to "Service Definitions" -> "Hardware Devices"

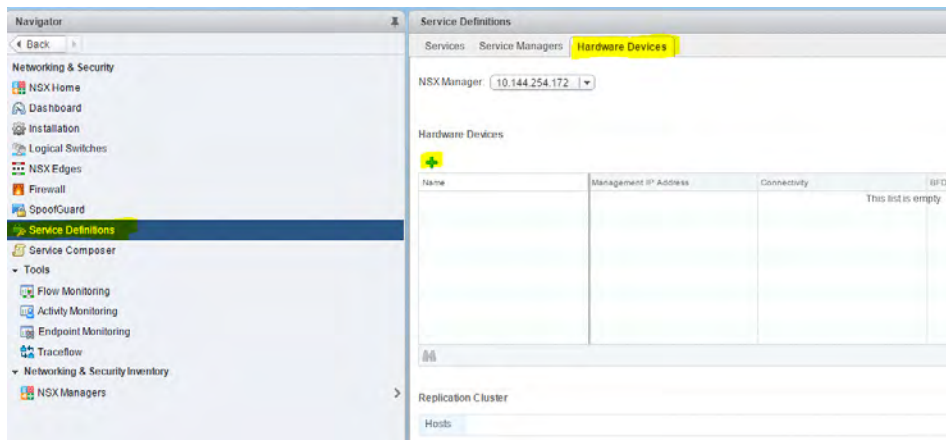

Step 2. Under "Replication Cluster" click Edit

Step 3. Add both of the ESXi servers to the replication cluster

All hosts added to the replication cluster can replicate BUM (Broadcast, Unknown unicast and Multicast) traffic to other ESXi servers.

When the switch needs to send BUM traffic to a virtual machine, it will select one of the hosts in the replication cluster and send the traffic to it, the host will then replicate it to all other ESXi hosts.

It is recommended to add at least 2 ESXi servers to the replication cluster for redundancy.

5.11.3.2 Adding the HPE M-series Switch to NSX

- Step 1.** Under Hardware Devices click the + sign to add a new hardware device.
- Step 2.** Fill in a name for the new hardware device.
- Step 3.** Fill in the switch certificate we got earlier.
- Step 4.** Click OK.

The screenshot shows a dialog box titled "Add Hardware Device". It has the following fields and controls:

- Name:** * mellanox
- Description:** (empty)
- Certificate:** * gwnGYP
qCxisPVXbRJKJg166hUhNWtwgo1x8HPw9Mw
6k82S7Mituk0Phmp29brDd5n8aYK
li1QREVoU+tRAZTcu0tji0s/
Qs3Hr87vxExOoXmV8o9MgVQO9WQBQSwiEV
n8dQ
YxnMGkCyRyeOzXrBm74WtArQNy5Wye3+Is9fQT
9lsQCNCr8PcwXBKvWxeUjA==
-----END CERTIFICATE-----
- Enable BFD
- Buttons: OK, Cancel


- Step 5.** Wait until the new switch is showing as "UP" under the connectivity column, you may need to refresh vSphere client a few times.

Hardware Devices				
	Management IP Address	Connectivity	BFD Enabled	Logical Switches
mellanox	10.130.200.109	Up	✓	0

5.11.4 Mapping a Logical Switch to a Physical Switch Port

- Step 1.** In NSX Manager go to "Logical Switches"

Step 2. Right click the logical switch you wish to map to the physical switch port and select "Manage Hardware Bindings"

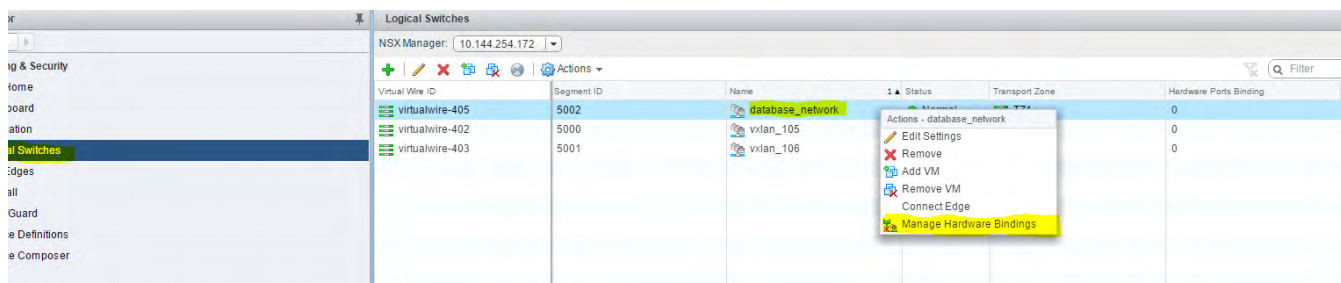


Step 3. Click the "+" sign to add a new mapping instance

Step 4. Click Select under the port column and select port "eth3", this corresponds to "interface ethernet 1/3" we configured earlier as an NVE port in the switch.

Step 5. Under the VLAN column, set the VLAN that will map this logical switch to this specific switch port, you can have multiple logical switches mapped to the same port on a different VLAN (for example to connect a firewall appliance to logical switches). For "access" configuration (no VLAN is required on the host connected to the physical switch port) use VLAN 1.

Step 6. Click OK

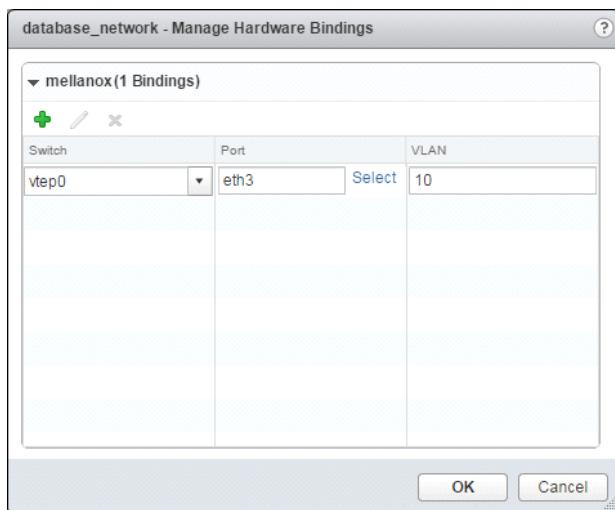

5.11.5 Commands

protocol nve

protocol nve
no protocol nve

Enables NVE functionality and displays NVE commands.
 The no form of the command hides the NVE commands and deletes its data-base.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.6.3004
Role	admin
Example	switch (config) # protocol nve
Related Commands	
Note	This command is only supported on Spectrum™ based switch systems

interface nve

interface nve <nve-id>
no interface nve <nve-id>

Creates VXLAN tunnel.
The no form of the command destroys VXLAN tunnel.

Syntax Description	nve-id	NVE ID range: 1-64
Default	N/A	
Configuration Mode	Config	
History	3.6.3004	
Role	admin	
Example	switch (config) # interface nve 1 switch (config interface nve 1) #	
Related Commands	protocol nve	
Note	This command is only supported on Spectrum™ based switch systems	

nve bridge

nve bridge <vni-id> [name <bridge-name>]
no nve bridge <vni-id>

creates an NVE bridge with a given VNI.
 The no form of the command removes NVE bridge.

Syntax Description	vni-id	VXLAN network identifier range: 0-16777216
Default	bridge-name	“bridge-<vni-id>”
Configuration Mode	Config Interface NVE	
History	3.6.3550 3.6.3212	
Role	admin	
Example	switch (config interface nve 1) # nve bridge 25	
Related Commands		
Note	Number of bridges limited to 500	

nve fdb flood bridge address

nve fdb flood bridge <vni-id> address <ip-address>
no nve fdb flood bridge <vni-id> address [ip-address]

Adds an IP address of a remote VTEP to be used for BUM traffic.

The no form of the command has two input options:

- Entering an IP address removes a specific remote address
- No IP address removes all addresses

Syntax Description	vni-id	VXLAN network identifier range: 0-16777216
Default	N/A	
Configuration Mode	Config Interface NVE	
History	3.6.3550 3.6.3212	
Role	admin	
Example	<pre>switch (config)interface ethernet 1/1 switch (config interface ethernet 1/1) # nve mode only force switch (config interface ethernet 1/1) # nve vlan 2 bridge 25</pre>	
Related Commands		
Note	Number of IP addresses limited to 750	

shutdown

shutdown
no shutdown

Disables VXLAN tunnel.
 The no form of the command enables VXLAN tunnel.

Syntax Description	N/A
Default	Enabled
Configuration Mode	Config Interface NVE
History	3.6.3004
Role	admin
Example	switch (config interface nve 1) # shutdown
Related Commands	interface nve protocol nve
Note	

vxlan source interface loopback

vxlan source interface loopback <loopback-id>
no vxlan source interface loopback <loopback-id>

Binds VXLAN tunnel to a loopback interface.
The no form of the command unbinds VXLAN tunnel from the loopback interface.

Syntax Description	loopback-id	Loopback interface ID Valid range: 0-31
Default	N/A	
Configuration Mode	Config Interface NVE	
History	3.6.3004	
Role	admin	
Example	switch (config interface nve 1) # vxlan source interface loopback 14	
Related Commands	interface nve protocol nve	
Note	The configured loopback interface becomes the VXLAN tunnel endpoint (VTEP) This command is only supported on Spectrum™ based switch systems	

nve mode only

nve mode only [force]
no nve mode only [force]

Sets physical interface to NVE mode.
 The no form of the command removes physical interface from NVE mode.

Syntax Description	force	Forces configuration while interface is admin up
Default	Not in NVE mode	
Configuration Mode	Config Interface Ethernet	
History	3.6.3004	
Role	admin	
Example	switch (config interface ethernet 1/1) # nve mode only	
Related Commands	interface ethernet	
Note	This command is only supported on Spectrum™ based switch systems	

clear nve counters

clear nve counters

Clears NVE counters.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config Interface NVE
History	3.6.3004
Role	admin
Example	<pre>switch (config interface nve 1) # clear nve counters</pre>
Related Commands	<pre>interface nve protocol nve</pre>
Note	This command is only supported on Spectrum™ based switch systems

show interfaces nve

show interfaces nve [<nve-id>]

Displays information about NVE interfaces.

Syntax Description	nve-id	NVE ID range: 1-64
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.3004	
Role	admin	
Example	<pre>switch (config) # show interface nve Remote Manager IP Address Port Connection Type ----- 2.2.2.2 200 tcp NVE member interfaces: Eth1/2, Eth1/7 Interface NVE 1 status: Admin state: up Source interface: loopback 1 17971 encapsulated (Tx) NVE packets 0 decapsulated (Rx) NVE packets 0 dropped NVE-encapsulated packets 0 NVE-encapsulated packets with errors</pre>	
Related Commands		
Note	This command is only supported on Spectrum™ based switch systems	

show interfaces nve counters

show interfaces nve <nve-id> counters

Displays NVE counters.

Syntax Description	nve-id	NVE ID range: 1-64
---------------------------	--------	--------------------

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.6.3004
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config) # show interface nve 1 counters 18330 encapsulated (Tx) NVE packets 0 decapsulated (Rx) NVE packets 0 dropped NVE-encapsulated packets 0 NVE-encapsulated packets with errors</pre>
----------------	--

Related Commands	
-------------------------	--

Note	This command is only supported on Spectrum™ based switch systems
-------------	--

show interfaces nve flood

show interfaces nve <nve-id> flood [vni <vni-id>]

Displays remote VTEP endpoints configured for BUM (broadcast, unknown unicast, multicast) flooding.

Syntax Description	nve-id	NVE ID range: 1-64														
	vni	Displays NVE flooding on specific VNI														
Default	N/A															
Configuration Mode	Any Command Mode															
History	3.6.3004															
Role	admin															
Example	<pre>switch (config) # show interface nve 1 flood</pre> <table border="1"> <thead> <tr> <th>NVE Interface</th> <th>Logical Switch</th> <th>VNI ID</th> <th>Flood IP Address</th> </tr> <tr> <th>-----</th> <th>-----</th> <th>-----</th> <th>-----</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>ls7777</td> <td>7777</td> <td>1.2.3.5</td> </tr> </tbody> </table>				NVE Interface	Logical Switch	VNI ID	Flood IP Address	-----	-----	-----	-----	1	ls7777	7777	1.2.3.5
NVE Interface	Logical Switch	VNI ID	Flood IP Address													
-----	-----	-----	-----													
1	ls7777	7777	1.2.3.5													
Related Commands																
Note	This command is only supported on Spectrum™ based switch systems															

show interfaces nve mac-address-table

show interfaces nve <nve-id> mac-address-table [vni <vni-id>]

Displays MAC address table of NVE interface.

Syntax Description	nve-id	NVE ID range: 1-64																		
	vni	Displays MAC address table of NVE interface with specified VNI																		
Default	N/A																			
Configuration Mode	Any Command Mode																			
History	3.6.3004																			
Role	admin																			
Example	<pre>switch (config) # show interface nve 1 mac-address-table</pre> <table border="1"><thead><tr><th>NVE Interface</th><th>Logical Switch</th><th>VNI ID</th><th>Mac Address</th><th>Address Type</th><th>Remote Endpoint IP Address</th></tr></thead><tbody><tr><td>1</td><td>ls7777</td><td>7777</td><td>e4:1d:2d:a5:f2:0a</td><td>local learned</td><td>N/A</td></tr><tr><td>1</td><td>ls7777</td><td>7777</td><td>00:11:22:33:44:55</td><td>remote configured</td><td>1.2.3.5</td></tr></tbody></table>		NVE Interface	Logical Switch	VNI ID	Mac Address	Address Type	Remote Endpoint IP Address	1	ls7777	7777	e4:1d:2d:a5:f2:0a	local learned	N/A	1	ls7777	7777	00:11:22:33:44:55	remote configured	1.2.3.5
NVE Interface	Logical Switch	VNI ID	Mac Address	Address Type	Remote Endpoint IP Address															
1	ls7777	7777	e4:1d:2d:a5:f2:0a	local learned	N/A															
1	ls7777	7777	00:11:22:33:44:55	remote configured	1.2.3.5															
Related Commands																				
Note	This command is only supported on Spectrum™ based switch systems																			

show interfaces nve mac-address-table local learned unicast

show interfaces nve <nve-id> mac-address-table local learned unicast [vni <vni-id>]

Displays only the locally-learned unicast MAC addresses.

Syntax Description	nve-id	NVE ID range: 1-64												
	vni	Displays MAC addresses on the bridge with the given VNI												
Default	N/A													
Configuration Mode	Any Command Mode													
History	3.6.3004													
Role	admin													
Example	<pre>switch (config) # show interface nve 1 mac-address-table local learned unicast</pre> <table border="1"> <thead> <tr> <th>NVE Interface</th> <th>Logical Switch</th> <th>VNI ID</th> <th>Mac Address</th> <th>Address Type</th> <th>Remote Endpoint IP Address</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>ls7777</td> <td>7777</td> <td>e7:3a:7e:a5:f2:1a</td> <td>local learned</td> <td>N/A</td> </tr> </tbody> </table>		NVE Interface	Logical Switch	VNI ID	Mac Address	Address Type	Remote Endpoint IP Address	1	ls7777	7777	e7:3a:7e:a5:f2:1a	local learned	N/A
NVE Interface	Logical Switch	VNI ID	Mac Address	Address Type	Remote Endpoint IP Address									
1	ls7777	7777	e7:3a:7e:a5:f2:1a	local learned	N/A									
Related Commands														
Note	This command is only supported on Spectrum™ based switch systems													

show interfaces nve mac-address-table remote configured multicast

**show interfaces nve <nve-id> mac-address-table remote configured multicast
[vni <vni-id>]**

Displays only remotely-configured BUM addresses.

Syntax Description	nve-id	NVE ID range: 1-64												
	vni	Displays only MAC addresses on the bridge with the given VNI												
Default	N/A													
Configuration Mode	Any Command Mode													
History	3.6.3004													
Role	admin													
Example	switch (config) # show interface nve 1 mac-address-table remote configured multicast													
	<table border="1"><thead><tr><th>NVE Interface</th><th>Logical Switch</th><th>VNI ID</th><th>Mac Address</th><th>Address Type</th><th>Remote Endpoint IP Address</th></tr></thead><tbody><tr><td>1</td><td>ls7777</td><td>7777</td><td>00:11:22:33:44:55</td><td>remote configured</td><td>1.2.3.5</td></tr></tbody></table>		NVE Interface	Logical Switch	VNI ID	Mac Address	Address Type	Remote Endpoint IP Address	1	ls7777	7777	00:11:22:33:44:55	remote configured	1.2.3.5
NVE Interface	Logical Switch	VNI ID	Mac Address	Address Type	Remote Endpoint IP Address									
1	ls7777	7777	00:11:22:33:44:55	remote configured	1.2.3.5									
Related Commands														
Note	This command is only supported on Spectrum™ based switch systems													

show interfaces nve mac-address-table remote configured unicast

show interfaces nve <nve-id> mac-address-table remote configured unicast [vni <vni-id>]

Displays only remotely-configured unicast addresses.

Syntax Description	nve-id	NVE ID range: 1-64												
	vni	Displays only MAC addresses on the bridge with the given VNI												
Default	N/A													
Configuration Mode	Any Command Mode													
History	3.6.3004													
Role	admin													
Example	<pre>switch (config) # show interface nve 1 mac-address-table remote configured unicast</pre> <table border="1"> <thead> <tr> <th>NVE Interface</th> <th>Logical Switch</th> <th>VNI ID</th> <th>Mac Address</th> <th>Address Type</th> <th>Remote Endpoint IP Address</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>ls7777</td> <td>7777</td> <td>00:11:22:33:44:55</td> <td>remote configured</td> <td>1.2.3.5</td> </tr> </tbody> </table>		NVE Interface	Logical Switch	VNI ID	Mac Address	Address Type	Remote Endpoint IP Address	1	ls7777	7777	00:11:22:33:44:55	remote configured	1.2.3.5
NVE Interface	Logical Switch	VNI ID	Mac Address	Address Type	Remote Endpoint IP Address									
1	ls7777	7777	00:11:22:33:44:55	remote configured	1.2.3.5									
Related Commands														
Note	This command is only supported on Spectrum™ based switch systems													

show interfaces nve peers

show interfaces nve <nve-id> peers [vni <vni-id>]

Displays all remote VTEPs.

Syntax Description	nve-id	NVE ID range: 1-64
	vni	Displays NVE peers on specific VNI
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.3004	
Role	admin	
Example	switch (config) # show interface nve 1 peers	
	<pre>NVE Interface Logical Switch VNI ID Peer IP Address ----- 1 ls7777 7777 1.2.3.5</pre>	
Related Commands		
Note	This command is only supported on Spectrum™ based switch systems	

ovs ovssdb server

ovs ovssdb server
no ovs ovssdb server

Runs OVSSDB-server process and unhides OVS commands.
 The no form of the command deactivates OVSSDB-server process and hides OVS commands.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.6.3004
Role	admin
Example	switch (config) # ovs ovssdb server
Related Commands	
Note	OVSSDB server runs when "protocol openflow" or "protocol nve" are enabled, even when not enabled using this command

ovs ovsdb manager remote

ovs ovsdb manager remote {tcp | ssl} ip-address <ip-address> port <tcp-port>
no ovs ovsdb manager remote {tcp | ssl} ip-address <ip-address> port <tcp-port>

Configures OVSDb to actively connect to a remote manager at a given IP address and TCP port, using either TCP or SSL.
The no form of the command disconnects OVSDb from a remote manager.

Syntax Description	SSL	Connect with TCP protocol
	TCP	Connect with SSL protocol
	ip-address	IP address of remote manager
Default	N/A	
Configuration Mode	Config	
History	3.6.3004	
Role	admin	
Example	switch (config) # ovs ovsdb manager remote tcp ip-address 10.10.10.10 port 20	
Related Commands	ovs ovsdb server	
Note	This command is only supported on Spectrum™ based switch systems	

ovs ovsdb server listen

```
ovs ovsdb server listen {tcp | ssl} port <tcp-port> local ip-address <ip-address>
no ovs ovsdb server listen {tcp | ssl} port <tcp-port> local ip-address <ip-address>
```

Configures OVSDB to listen at a given port of an interface with a given (local) IP address.

The no form of the command disconnects OVSDB from a remote manager.

Syntax Description	SSL	Connect with TCP protocol
	TCP	Connect with SSL protocol
	ip-address	IP address of a given port
Default	N/A	
Configuration Mode	Config	
History	3.6.3004	
Role	admin	
Example	<pre>switch (config) # ovs ovsdb server listen tcp port 20 local ip-address 20.20.20.20</pre>	
Related Commands	ovs ovsdb server	
Note	This command is only supported on Spectrum™ based switch systems	

5.12 IGMP Snooping



While IGMPv3 is supported on SwitchX®, the source is not considered. So a “join” to a group from a specific source (S,G) is treated as a join to the group from all sources (*,G).

The Internet Group Multicast Protocol (IGMP) is a communications protocol used by hosts and adjacent routers on IP networks to establish multicast group memberships. The host joins a multicast-group by sending a join request message towards the network router, and responds to queries sent from the network router by dispatching a join report.

A given port can be either manually configured to be a MRouter port or it can be dynamically manifested when having received a query, hence, the network router is connected to this port. All IGMP Snooping control packets received from hosts (joins/leaves) are forwarded to the MRouter port, and the MRouter port updates its multicast-group data-base accordingly. Each dynamically learned multicast group will be added to all of the MRouter ports on the switch.

As many as 5K multicast groups can be created on the switch.

5.12.1 Configuring IGMP Snooping

You can configure IGMP snooping to establish multicast group memberships.

➤ **To configure IGMP snooping:**

Step 1. Log in as admin.

Step 2. Enter config mode. Run:

```
switch > enable
switch # configure terminal
```

Step 3. Enable IGMP snooping globally. Run:

```
switch (config) # ip igmp snooping
switch (config) #
```

Step 4. Enable IGMP snooping on a VLAN. Run:

```
switch (config) # vlan 2
switch (config vlan 2) # ip igmp snooping
```

5.12.2 Defining a Multicast Router Port on a VLAN

You can define a Multicast Router (MRouter) port on a VLAN in one of the following methods:

➤ **To change the interface switchport to trunk:**

Step 1. Log in as admin.

Step 2. Enter config mode. Run:

```
switch > enable
switch # configure terminal
```

Step 3. Enable IGMP snooping globally. Run:

```
switch (config) # ip igmp snooping
switch (config) #
```

Step 4. Change the interface switchport mode of the port (the interface is member of VLAN 1 by default). Run:

```
switch (config) # interface ethernet 1/1
switch (config interface ethernet 1/1) # switchport mode trunk
```

Step 5. Change back to config mode. Run:

```
switch (config interface ethernet 1/1) # exit
switch (config) #
```

Step 6. Define the MRouter port on the VLAN. Run:

```
switch (config) # vlan 2
switch (config vlan 2) # ip igmp snooping mrouter interface ethernet 1/1
switch (config vlan 2) #
```

➤ **To change the interface switchport to hybrid:**

Step 1. Log in as admin.

Step 2. Enter config mode. Run:

```
switch > enable
switch # configure terminal
```

Step 3. Enable IGMP snooping globally. Run:

```
switch (config) # ip igmp snooping
switch (config) #
```

Step 4. Create a VLAN. Run:

```
switch (config) # vlan 200
switch (config vlan 200) #
```

Step 5. Change back to config mode. Run:

```
switch (config vlan 200) # exit
switch (config) #
```

Step 6. Change the interface switchport mode of the port (the interface is member of VLAN 1 by default). Run:

```
switch (config) # interface ethernet 1/22
switch (config interface ethernet 1/22) # switchport mode hybrid
```

Step 7. Attach the VLAN to the port's interface. Run:

```
switch (config interface ethernet 1/22) # switchport mode hybrid allowed-vlan 200
switch (config interface ethernet 1/22) #
```

Step 8. Change to config mode again. Run:

```
switch (config interface ethernet 1/22) # exit
switch (config) #
```

Step 9. Define the MRouter port on the VLAN. Run:

```
switch (config) # vlan 200
switch (config vlan 200) # ip igmp mrouter interface ethernet 1/22
switch (config vlan 200) #
```

5.12.3 IGMP Snooping Querier

IGMP Snooping Querier complements the IGMP snooping functionality. IGMP Snooping Querier is used to support IGMP snooping in a VLAN where PIM and IGMP are not configured because the multicast traffic does not need to be routed. When IGMP Snooping Querier is enabled, IGMP queries are sent out periodically by the switch through all ports in the VLAN and to which hosts wishing to receive IP multicast traffic respond with IGMP report messages. IGMP Snooping Querier must be used in conjunction with IGMP snooping as IGMP snooping listens to these IGMP reports to establish appropriate forwarding.

➤ **To configure IGMP Snooping Querier:**

Step 1. Enable the IGMP snooping on the switch. Run:

```
switch (config) # ip igmp snooping
```

Step 2. Enable the IGMP snooping querier on a specific VLAN. Run:

```
switch (config) # vlan 10
switch (config vlan 10)# ip igmp snooping querier
```

Step 3. Set the query interval time. Run:

```
switch (config vlan 10)# ip igmp snooping querier query-interval 25
```

Step 4. (Optional) Verify the IGMP snooping querier configuration. Run:

```
switch (config vlan 10)# show ip igmp snooping querier
Snooping querier information for VLAN 10

IGMP Querier Present
Querier IP address: 1.1.1.2
Query interval: 125
Response interval: 100
Group membership interval: 1
Robustness: 2
Version: 2

switch (config vlan 10)#
```

5.12.4 Commands

ip igmp snooping (admin)

ip igmp snooping
no ip igmp snooping

Enables IGMP snooping globally or per VLAN.
 The no form of the command disables IGMP snooping globally or per VLAN.

Syntax Description	N/A
Default	IGMP snooping is disabled, globally and per VLAN.
Configuration Mode	Config Config VLAN
History	3.1.1400
Role	admin
Example	switch (config) # ip igmp snooping switch (config) # vlan 10 switch (config vlan 10) # ip igmp snooping
Related Commands	show ip igmp snooping
Note	IGMP snooping has global admin state, and per VLAN admin state. Both states need to be enabled in order to enable the IGMP snooping on a specific VLAN.

ip igmp snooping (config)

ip igmp snooping {last-member-query-interval <1-25> | proxy reporting mrouter-timeout <60-600> | port-purge-timeout <130-1225> | report-suppression-interval <1-25>}

no ip igmp snooping {last-member-query-interval | proxy reporting | mrouter-timeout | report-suppression-interval}

Configures IGMP global parameters.

The no form of the command resets the IGMP global parameters to default.

Syntax Description	last-member-query-interval <1-25>	Sets the time period (in seconds) with which the general queries are sent by the IGMP querier. After timeout expiration the port will be removed from the multicast group.
	proxy reporting	Enables proxy reporting
	mrouter-timeout <60-600>	Sets the IGMP snooping MRouter port purge time-out after which the port gets deleted if no IGMP router control packets are received. The default value is 125 seconds.
	port-purge-timeout <130-1225>	Sets the IGMP snooping port purge time interval after which the port gets deleted if no IGMP reports are received.
	report-suppression-interval <1-25>	Sets the IGMP snooping report-suppression time interval for which the IGMPv2 report messages for the same group will not get forwarded onto the MRouter ports. The default value is 5 seconds.
Default	last-member-query-interval – 1 second proxy reporting is disabled mrouter-timeout – 125 port-purge-timeout – 260 seconds report-suppression-interval – 5 seconds	
Configuration Mode	Config	
History	3.1.1400	
Role	admin	
Example	switch (config) # ip igmp snooping report-suppression-interval 3	

Related Commands ip igmp snooping (admin)
show ip igmp snooping

Note

ip igmp snooping clear counters

ip igmp snooping clear counters [vlan <vlan-id>]

Clears IGMP snooping counters.

Syntax Description	vlan	Clears IGMP snooping counters per VLAN
Default	N/A	
Configuration Mode	Config	
History	3.6.1002	
Role	admin	
Example	switch (config) # ip igmp snooping clear counters vlan 2	
Related Commands		
Note		

ip igmp snooping fast-leave

ip igmp snooping fast-leave
no ip igmp snooping fast-leave

Enables fast leave processing on a specific interface.
 The no form of the command disables fast leave processing on a specific interface.

Syntax Description	N/A
Default	Normal-leave is enabled.
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel
History	3.1.1400 3.3.4500 Added MLAG port-channel configuration mode
Role	admin
Example	switch (config interface ethernet 1/1) # ip igmp snooping fast-leave
Related Commands	show ip igmp snooping interfaces
Note	

ip igmp snooping mrouter

ip igmp snooping mrouter interface <type> <number>
no ip igmp snooping mrouter interface <type> <number>

Creates a static multicast router port on a specific VLAN, on a specific interface.

The no form of the command removes the static multicast router port from a specific VLAN.

Syntax Description	interface <type> <number> Attaches the group to a specific interface. type - ethernet or port-channel.
Default	No static mroouters are configured.
Configuration Mode	Config VLAN
History	3.1.1400
Role	admin
Example	switch (config)# vlan 1 switch (config vlan 1) # ip igmp snooping mrouter interface ethernet 1/1
Related Commands	show ip igmp snooping mrouter
Note	The multicast router port can be created only if IGMP snooping is enabled both globally and on the VLAN.

ip igmp snooping static-group

ip igmp snooping static-group <IP address> interface <type> <number> [source <source-IP>]

no ip igmp snooping static-group <IP address> interface <type> <number> [source <source-IP>]

Creates a specified static multicast group for specified ports and from a specified source IP address.

The no form of the command deletes the interface from the multicast group.

Syntax Description	IP address	Multicast IP address <224.x.x.x - 239.255.255.255>
	interface	Attach the group to a specific interface
	type	Ethernet or port-channel
	source	Source IP address If omitted, a multicast group is created for all sources
Default	No static groups are configured.	
Configuration Mode	Config VLAN	
History	3.1.1400	
	3.6.2100	Added “source” parameter
Role	admin	
Example	switch (config vlan 1) # ip igmp snooping static-group 230.0.0.1 interface ethernet 1/1	
Related Commands	show ip igmp snooping groups	
Note	If the deleted interface is the last port, it deletes the entire multicast group.	

ip igmp snooping unregistered multicast

ip igmp snooping unregistered multicast <options>
no ip igmp snooping unregistered multicast

Sets the behavior of the snooping switch for unregistered multicast traffic.
The no form of the command sets it default.

Syntax Description	options	<ul style="list-style-type: none">• flood• forward-to-mrouter-ports
Default	flood	
Configuration Mode	Config	
History	3.2.0500	
Role	admin	
Example	switch (config) # ip igmp snooping unregistered multicast flood	
Related Commands	show ip igmp snooping	
Note		

ip igmp snooping version

ip igmp snooping version {2 | 3}

Configures the default operating version to be used for newly created IGMP snooping instances.

Syntax Description	2	Enables IGMPv2
	3	Enables IGMPv3
Default	3	
Configuration Mode	Config Config VLAN	
History	3.6.1002	
	3.6.2100	Updated default
Role	admin	
Example	switch (config vlan 2)# ip igmp snooping version 3	
Related Commands		
Note		

ip igmp snooping querier

ip igmp snooping querier
no ip igmp snooping querier

Enables the IGMP Snooping Querier on a VLAN.
The no form of the command disables the IGMP Snooping Querier on a VLAN.

Syntax Description	N/A
Default	Disable
Configuration Mode	Config VLAN
History	3.3.4200
Role	admin
Example	<pre>switch (config vlan 1)# ip igmp snooping querier switch (config vlan 1)#</pre>
Related Commands	<pre>igmp snooping querier query-interval show ip igmp snooping querier</pre>
Note	

igmp snooping querier query-interval

igmp snooping querier query-interval <time>
no igmp snooping querier query-interval

Configures the query interval.
 The no form of the command rests the parameter to its default.

Syntax Description	time	Time interval between queries (in seconds).
Default	125 seconds	
Configuration Mode	Config VLAN	
History	3.3.4200	
Role	admin	
Example	<pre>switch (config vlan 1)# igmp snooping querier query-interval 20 switch (config vlan 1)#</pre>	
Related Commands	<pre>igmp snooping querier query-interval show ip igmp snooping querier</pre>	
Note		

show ip igmp snooping

show ip igmp snooping

Displays IGMP snooping information for all VLANs or a specific VLAN.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.1.1400
	3.6.1002 Added default IGMP version to output

Role	admin
-------------	-------

Example	<pre>switch (config) # show ip igmp snooping IGMP snooping global configuration: IGMP snooping globally enabled IGMP default version for new VLAN is V3 IGMP snooping operationally enabled Proxy-reporting globally disabled Last member query interval is 1 seconds Mrouter timeout is 125 seconds Port purge timeout is 260 seconds Report suppression interval is 5 seconds IGMP snooping unregistered multicast: flood switch (config) #</pre>
----------------	--

Related Commands	
-------------------------	--

Note	
-------------	--

show ip igmp snooping groups

show ip igmp snooping groups [vlan <vlan ID> [group <group IP >]]

Displays per VLAN the list of multicast groups attached (static or dynamic allocated) per port.

Syntax Description	N/A				
	<table border="1"> <tr> <td>vlan</td> <td>VLAN ID</td> </tr> <tr> <td>group</td> <td>Multicast group IP address</td> </tr> </table>	vlan	VLAN ID	group	Multicast group IP address
vlan	VLAN ID				
group	Multicast group IP address				
Default	N/A				
Configuration Mode	Any Command Mode				
History	<p>3.1.1400</p> <p>3.6.1002 Updated Example</p> <p>3.6.2100 Added “vlan” and “group” parameters and updated Example</p>				
Role	admin				
Example	<pre>switch (config) # show ip igmp snooping groups Vlan ID Source St/Dyn Ports ----- - 1 12.10.10.1 Dyn Eth1/2 1 12.11.11.2 St Eth1/1 Total Num of Dynamic Group Addresses 1 Total Num of Static Group Addresses 1 switch (config) # show ip igmp snooping groups vlan 1 group 224.5.5.5 Snooping group information for VLAN 1 and group 224.5.5.5 Filter Mode: INCLUDE Include sources: 1.2.3.4 V1/V2 Receiver Ports: None V3 Receiver Ports: Port Number: Eth1/1 Include sources: 1.2.3.4 Exclude sources: None</pre>				
Related Commands					
Note					

show ip igmp snooping interfaces

show ip igmp snooping interfaces

Displays IGMP snooping interface information.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.1400
Role	admin
Example	<pre>switch (config) # show ip igmp snooping interfaces interface leave-mode ----- 1/1 Normal 1/2 Normal 1/3 Normal 1/4 Fast ... switch (config) #</pre>
Related Commands	
Note	

show ip igmp snooping membership

show ip igmp snooping membership [vlan <VID> [group <group IP>]]

Displays IGMP snooping querier counters.

Syntax Description	vlan	Displays IGMP snooping querier counters on specific VLAN
	group	Multicast group IP address
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.2100	
Role	admin	
Example	<pre>switch (config) # show ip igmp snooping membership vlan 1 group 224.5.5.5 Snooping membership information for VLAN 1 and group 224.5.5.5 Receiver Port: Eth1/1 Attached Host: 10.10.10.1 Version: 3 Mode: Include Sources: 10.10.10.100 Timeout since the host has been joined: 0:00:02 Expiry timeout: 0:04:18</pre>	
Related Commands		
Note		

show ip igmp snooping mrouter

show ip igmp snooping mrouter

Displays IGMP snooping multicast router information.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.1.1400
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config) # show ip igmp snooping mrouter Vlan Ports ----- - 1 Eth1/1(static) switch (config) #</pre>
----------------	--

Related Commands	
-------------------------	--

Note	
-------------	--

show ip igmp snooping querier

show ip igmp snooping querier [vlan <num>]

Displays running IGMP snooping querier configuration on the VLANs.

Syntax Description	vlan <num>	Displays the IGMP snooping querier configuration running on the specified VLAN.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.4200	
	3.6.2100	Updated Example
Role	admin	
Example	<pre>switch (config) # show ip igmp snooping querier vlan 1 Snooping querier information for VLAN 1 IGMP Querier Present Querier IP address: 10.10.10.10 Query interval: 125 Response interval: 100 Group membership interval: 1 Robustness: 2 Version: 3</pre>	
Related Commands		
Note		

show ip igmp snooping querier counters

show ip igmp snooping querier counters [vlan <num> [group <group-id>]]

Displays IGMP snooping querier counters.

Syntax Description	vlan	Displays IGMP snooping querier counters on specific VLAN
	group	Multicast group IP address
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.1002	
Role	admin	
Example	<pre>switch (config) # show ip igmp snooping querier counters vlan 10 Snooping querier counters for VLAN 10 General queries received: 0 General queries transmitted: 0 Group specific queries received : 0 Group specific queries transmitted : 0 Group source specific queries received : 0 Group source specific queries transmitted : 0 Leave messages received : 0 Leave messages transmitted : 0 V1/V2 reports received : 0 V1/V2 reports transmitted : 0 V3 reports received: 0 V3 reports transmitted: 0</pre>	
Related Commands		
Note		

show ip igmp snooping statistics

show ip igmp snooping statistics

Displays IGMP snooping statistical counters.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.1.1400 3.6.1002 Updated Example 3.6.2100 Updated Example
Role	admin
Example	<pre>switch (config) # show ip igmp snooping statistics Snooping Statistics for VLAN 3770 General queries received : 3 General queries transmitted: 0 Group specific queries received : 0 Group specific queries transmitted: 0 Group and source specific queries received : 0 Group and source specific queries transmitted: 0 V1/V2 reports received : 0 V1/V2 reports transmitted : 0 Leave messages received : 0 Leave messages transmitted: 0 V3 reports received : 12 V3 reports transmitted : 0 Active Groups count: 2 Dropped packets: 0 Joins: 0</pre>
Related Commands	
Note	

show ip igmp snooping vlan

show ip igmp snooping vlan {<vlan/vlan-range> | all}

Displays IGMP configuration per VLAN or VLAN range.

Syntax Description	vlan/vlan range	Displays IGMP VLAN configuration per specific VLAN or VLAN range.
	all	Display IGMP VLAN configuration on all VLAN.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.1400	
Role	admin	
Example	<pre>switch (config) # show ip igmp vlan 1 Vlan 1 configuration parameters: IGMP snooping is enabled IGMP version is V2 Snooping switch is acting as Non-Querier mrouter static port list: Eth1/1 mrouter dynamic port list: none switch (config) #</pre>	
Related Commands		
Note		

5.13 Link Layer Discovery Protocol (LLDP)

The Link Layer Discovery Protocol (LLDP) is a vendor-neutral Link Layer protocol in the Internet Protocol Suite used by network devices for advertising their identity, capabilities, and neighbors on a IEEE 802 LAN. The protocol is formally defined in IEEE 802.1AB.

5.13.1 Configuring LLDP

➤ *To configure the LLDP on the switch:*

Step 1. Log in as admin.

Step 2. Enter config mode. Run:

```
switch > enable
switch # configure terminal
```

Step 3. Enable LLDP globally on the switch. Run:

```
switch (config) # lldp
switch (config) #
```

Step 4. Enable LLDP per interface. Run:

```
switch (config interface ethernet 1/1) # lldp receive
switch (config interface ethernet 1/1) # lldp transmit
```

Step 5. Show LLDP local information. Run:

```
switch (config) # show lldp local

LLDP is Enabled

Local global configuration
Chassis sub type: macAddress (4)
Chassis id: 00:11:22:33:44:55
System Name: "switch-111111"
System Description: my-system-description
Supported capabilities: B
Supported capabilities enabled: B
```

Step 6. Show LLDP remote information. Run:

```
switch (config)# show lldp interfaces ethernet 1/1 remote

Ethernet 1/1
Remote Index: 1
Remote chassis id: 00:11:22:33:44:55 ; chassis id subtype: mac
Remote port-id: ethernet 1/2; port id subtype: local
Remote port description: ethernet 1/2
Remote system name: remote-system
Remote system description: remote-system-description
Remote system capabilities supported: B ; B
```

5.13.2 DCBX

Data Center Bridging (DCB) is an enabler for running the Ethernet network with lossless connectivity using priority-based flow control and enhanced transmission selection. DCBX (exchange) complements the DCB implementation by offering a dynamic protocol that communicates DCB attributes between peering endpoint.

MLNX-OS supports two versions of DCBX TLVs running on top of LLDP:

- DCBX IEEE
- DCBX CEE

By default DCBX IEEE is enabled when LLDP is enabled (LLDP, however, is not enabled by default).

For more information, please refer to the Mellanox Community at:

<https://community.mellanox.com/docs/DOC-2485>.

5.13.3 Commands

lldp

lldp
no lldp

Enables LLDP globally.
The no form of the command disables the LLDP.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config
History	3.2.0300
Role	admin
Example	switch (config)# lldp switch (config)#
Related Commands	show lldp local
Note	

lldp reinit

lldp reinit <seconds>
no lldp reinit

Sets the delay in seconds from enabling the LLDP on the port until re-initialization will be attempted.
 The no form of the command sets the parameter to default.

Syntax Description	seconds	1-10
Default	2	
Configuration Mode	Config	
History	3.2.0300	
Role	admin	
Example	switch (config)# lldp reinit 10 switch (config)#	
Related Commands	show lldp timers	
Note		

lldp timer

lldp timer <seconds>
no lldp timer

Sets the LLDP interval at which LLDP frames are transmitted. (lldpMessageTxInterval)
The no form of the command sets the parameter to default.

Syntax Description	seconds	5-32768
Default	30	
Configuration Mode	Config	
History	3.2.0300	
Role	admin	
Example	switch (config)# lldp timer 10 switch (config)#	
Related Commands	show lldp timers	
Note		

lldp tx-delay

lldp tx-delay <seconds>
no lldp tx-delay

Indicates the delay in seconds between successive LLDP frame transmissions
 The no form of the command sets the parameter to default.

Syntax Description	seconds	1-8192
Default	2	
Configuration Mode	Config	
History	3.2.0300	
Role	admin	
Example	switch (config)# lldp tx-delay 10 switch (config)#	
Related Commands	show lldp timers	
Note	The recommended value for the tx-delay is set by the following formula: $1 \leq \text{lldp tx-delay} \leq (0.25 * \text{lldp timer})$	

lldp tx-hold-multiplier

lldp tx-hold-multiplier <seconds>
no lldp tx-hold-multiplier

The time-to-live value expressed as a multiple of the lldpMessageTxInterval object.

The no form of the command sets the parameter to default.

Syntax Description	seconds	1-8192
Default	2	
Configuration Mode	Config	
History	3.2.0300	
Role	admin	
Example	switch (config)# lldp tx-hold-multiplier 10 switch (config)#	
Related Commands	show lldp timers	
Note	The actual time-to-live value used in LLDP frames, can be expressed by the following formula: $TTL = \min(65535, (lldpMessageTxInterval * lldpMessageTxHoldMultiplier))$ For example, if the value of lldpMessageTxInterval is '30', and the value of lldpMessageTxHoldMultiplier is '4', then the value '120' is encoded in the TTL field in the LLDP header.	

lldp (interface)

lldp {receive | transmit}
no lldp {receive | transmit}

Enables LLDP receive or transmit capabilities.
 The no form of the command disables LLDP receive or transmit capabilities.

Syntax Description	med-tlv-select	Enables LLDP media TLVs
	receive	Enables LLDP receive on this port
	tlv-select	Enables LLDP TLVs
	transmit	Enables LLDP transmit on this port
Default	Enabled for receive and transmit.	
Configuration Mode	Config Interface Ethernet	
History	3.2.0300	
Role	admin	
Example	<pre>switch (config interface ethernet 1/1)# lldp receive switch (config interface ethernet 1/1)#</pre>	
Related Commands	show lldp interface	
Note	The LLDP is disabled by default (globally)	

lldp tlv-select

lldp tlv-select {[dcbx] [dcbx-cee] [port-description] [sys-name] [sys-description] [sys-capabilities] [management-address] [none] all}

Sets the LLDP basic TLVs to be transmitted on this port.

Syntax Description	dcbx	Enables LLDP-DCBX TLVs.
	dcbx-cee	Enables LLDP-DCBX CEE TLVs.
	port-description	LLDP port description TLV.
	sys-name	LLDP system name TLV.
	sys-description	LLDP system description TLV.
	sys-capabilities	LLDP system capabilities TLV.
	management-address	LLDP management address TLV.
	all	all above TLVs.
	none	None of the above TLVs.
Default	all	
Configuration Mode	Config Interface Ethernet	
History	3.2.0300	Initial revision
	3.3.0000	Added “none” parameter
	3.3.4302	Added “dcbx” parameter
	3.3.4402	Added “dcbx-cee” parameter
Role	admin	
Example	switch (config interface ethernet 1/1)# lldp tlv-select port-description sys-name switch (config interface ethernet 1/1)#	
Related Commands	show lldp interface	
Note		

lldp med-tlv-select

lldp med-tlv-select {all | media-capability | network-policy | none}

Configures LLDP media TLV attributes.

Syntax Description	all	Enables all LLDP media TLVs
	media-capabilities	Enables Media Capabilities TLV
	network-policy	Enables Network-Policy TLV
	none	Disables all LLDP media TLVs
Default	Disabled	
Configuration Mode	Config Interface Ethernet	
History	3.6.1002	
Role	admin	
Example	<pre>switch (config interface ethernet 1/1)# lldp med-tlv-select all switch (config interface ethernet 1/1)#</pre>	
Related Commands	show lldp interface	
Note		

dcb application-priority

dcb application-priority <selector> <protocol> <priority>

Adds an application to the application priority table.

Syntax Description	selector	Protocol type: ethertype
	protocol	Protocol field in hexadecimal notation (e.g. '0x8906' for FCoE, '0x8914' for FIP).
	priority	Range: 0-7.
Default	No applications are available. The table is empty.	
Configuration Mode	Config	
History	3.3.4200	
	3.4.0008	
Role	admin	
Example	<pre>switch (config-if)# dcb application-priority ethertype 0x8906 switch (config-if)#</pre>	
Related Commands	show lldp interface	
Note		

clear lldp counters

clear lldp counters [interface ethernet <Device | Port>]

Clears LLDP counters for all ports or for a specific port.

Syntax Description	N/A
Default	N/A
Configuration Mode	Global
History	3.6.4006
Role	admin
Example	<pre>switch (config) # clear lldp counters switch (config) # clear lldp counters interface ethernet 1/1</pre>
Related Commands	N/A
Note	

show lldp local

show lldp local

Displays LLDP local information.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.2.0300
Role	admin
Example	<pre>switch (config)# show lldp local LLDP is Enabled Local global configuration Chassis sub type: macAddress (4) Chassis id: 0002C9030046AF00 System Name: my-switch System Description: SX1036 Supported capabilities: B,R Supported capabilities enabled: B switch (config)#</pre>
Related Commands	
Note	

show lldp interfaces

show lldp interfaces [ethernet <inf> [med-cap | remote]]

Displays LLDP remote interface table information.

Syntax Description	inf	Local interface number (e.g. 1/1)
	med-cap	Displays local port media capabilities information
	remote	Displays LLDP Ethernet remote configuration & status
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.2.0300	First version
	3.3.4200	Updated Example
	3.6.1002	Updated Example
Role	admin	
Example	<pre>switch (config)# show lldp interfaces TLV flags: PD: port-description, SN: sys-name, SD: sys-description, SC: sys-capabilities, MA: management-address ETS-C: ETS-Configuration, ETS-R: ETS-Recommendation, AP: Application Priority, PFC: Priority Flow Control CEE: Converged Enhanced Ethernet DCBX version MED-CAP: Media Capabilities MED-NWP: MED-Network Policy Interface Receive Transmit TLVs ----- Eth1/1 Enabled Enabled PD, SD Eth1/2 Enabled Enabled PD, SN, SD, SC, MA, PFC, AP, ETS-C, ETS-R Eth1/3 Disabled Disabled PD, SN, SD, SC, MA, PFC, AP, ETS-C, ETS-R, MED-NWP Eth1/4 Enabled Enabled PD, SN, SD, SC, MA, PFC, AP, ETS-C, ETS-R, MED-CAP, MED-NWP Eth1/5 Enabled Enabled PD, SN, SD, SC, MA, PFC, AP, ETS-C, ETS-R Eth1/6 Enabled Enabled PD, SN, SD, SC, MA, PFC, AP, ETS-C, ETS-R Eth1/7 Enabled Enabled PD, SN, SD, SC, MA, PFC, AP, ETS-C, ETS-R</pre>	
Related Commands		
Note		

show lldp remote

show lldp remote

Displays LLDP remote information (remote device id, remote port id, remote system name).

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.6.3004
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config)# show lldp remote</pre> <table><thead><tr><th>Local Interface</th><th>Device ID</th><th>Port ID</th><th>System Name</th></tr></thead><tbody><tr><td>Eth1/4</td><td>e4:1d:2d:a5:f3:35</td><td>e4:1d:2d:a5:f3:35</td><td>Not Advertised</td></tr><tr><td>Eth1/10</td><td>e4:1d:2d:44:65:00</td><td>Eth1/10</td><td>arc-switch108</td></tr><tr><td>Eth1/11</td><td>e4:1d:2d:44:65:00</td><td>Eth1/11</td><td>arc-switch108</td></tr><tr><td>Eth1/12</td><td>e4:1d:2d:44:65:00</td><td>Eth1/12</td><td>arc-switch108</td></tr><tr><td>Eth1/13</td><td>e4:1d:2d:44:65:00</td><td>Eth1/13</td><td>arc-switch108</td></tr><tr><td>Eth1/14</td><td>e4:1d:2d:44:65:00</td><td>Eth1/14</td><td>arc-switch108</td></tr><tr><td>Eth1/15</td><td>e4:1d:2d:44:65:00</td><td>Eth1/15</td><td>arc-switch108</td></tr><tr><td>Eth1/16</td><td>e4:1d:2d:44:65:00</td><td>Eth1/16</td><td>arc-switch108</td></tr><tr><td>Eth1/17</td><td>e4:1d:2d:44:65:00</td><td>Eth1/17</td><td>arc-switch108</td></tr><tr><td>Eth1/18</td><td>e4:1d:2d:44:65:00</td><td>Eth1/18</td><td>arc-switch108</td></tr><tr><td>Eth1/19</td><td>e4:1d:2d:44:65:00</td><td>Eth1/19</td><td>arc-switch108</td></tr><tr><td>Eth1/20</td><td>e4:1d:2d:44:65:00</td><td>Eth1/20</td><td>arc-switch108</td></tr><tr><td>Eth1/21</td><td>e4:1d:2d:44:65:00</td><td>Eth1/21</td><td>arc-switch108</td></tr><tr><td>Eth1/22</td><td>e4:1d:2d:44:65:00</td><td>Eth1/22</td><td>arc-switch108</td></tr><tr><td>Eth1/23</td><td>e4:1d:2d:44:65:00</td><td>Eth1/23</td><td>arc-switch108</td></tr><tr><td>Eth1/24</td><td>e4:1d:2d:44:65:00</td><td>Eth1/24</td><td>arc-switch108</td></tr><tr><td>Eth1/25</td><td>e4:1d:2d:44:65:00</td><td>Eth1/25</td><td>arc-switch108</td></tr><tr><td>Eth1/26</td><td>e4:1d:2d:44:65:00</td><td>Eth1/26</td><td>arc-switch108</td></tr><tr><td>Eth1/31</td><td>e4:1d:2d:44:65:00</td><td>Eth1/31</td><td>arc-switch108</td></tr><tr><td>Eth1/32</td><td>e4:1d:2d:44:65:00</td><td>Eth1/32</td><td>arc-switch108</td></tr></tbody></table>	Local Interface	Device ID	Port ID	System Name	Eth1/4	e4:1d:2d:a5:f3:35	e4:1d:2d:a5:f3:35	Not Advertised	Eth1/10	e4:1d:2d:44:65:00	Eth1/10	arc-switch108	Eth1/11	e4:1d:2d:44:65:00	Eth1/11	arc-switch108	Eth1/12	e4:1d:2d:44:65:00	Eth1/12	arc-switch108	Eth1/13	e4:1d:2d:44:65:00	Eth1/13	arc-switch108	Eth1/14	e4:1d:2d:44:65:00	Eth1/14	arc-switch108	Eth1/15	e4:1d:2d:44:65:00	Eth1/15	arc-switch108	Eth1/16	e4:1d:2d:44:65:00	Eth1/16	arc-switch108	Eth1/17	e4:1d:2d:44:65:00	Eth1/17	arc-switch108	Eth1/18	e4:1d:2d:44:65:00	Eth1/18	arc-switch108	Eth1/19	e4:1d:2d:44:65:00	Eth1/19	arc-switch108	Eth1/20	e4:1d:2d:44:65:00	Eth1/20	arc-switch108	Eth1/21	e4:1d:2d:44:65:00	Eth1/21	arc-switch108	Eth1/22	e4:1d:2d:44:65:00	Eth1/22	arc-switch108	Eth1/23	e4:1d:2d:44:65:00	Eth1/23	arc-switch108	Eth1/24	e4:1d:2d:44:65:00	Eth1/24	arc-switch108	Eth1/25	e4:1d:2d:44:65:00	Eth1/25	arc-switch108	Eth1/26	e4:1d:2d:44:65:00	Eth1/26	arc-switch108	Eth1/31	e4:1d:2d:44:65:00	Eth1/31	arc-switch108	Eth1/32	e4:1d:2d:44:65:00	Eth1/32	arc-switch108
Local Interface	Device ID	Port ID	System Name																																																																																		
Eth1/4	e4:1d:2d:a5:f3:35	e4:1d:2d:a5:f3:35	Not Advertised																																																																																		
Eth1/10	e4:1d:2d:44:65:00	Eth1/10	arc-switch108																																																																																		
Eth1/11	e4:1d:2d:44:65:00	Eth1/11	arc-switch108																																																																																		
Eth1/12	e4:1d:2d:44:65:00	Eth1/12	arc-switch108																																																																																		
Eth1/13	e4:1d:2d:44:65:00	Eth1/13	arc-switch108																																																																																		
Eth1/14	e4:1d:2d:44:65:00	Eth1/14	arc-switch108																																																																																		
Eth1/15	e4:1d:2d:44:65:00	Eth1/15	arc-switch108																																																																																		
Eth1/16	e4:1d:2d:44:65:00	Eth1/16	arc-switch108																																																																																		
Eth1/17	e4:1d:2d:44:65:00	Eth1/17	arc-switch108																																																																																		
Eth1/18	e4:1d:2d:44:65:00	Eth1/18	arc-switch108																																																																																		
Eth1/19	e4:1d:2d:44:65:00	Eth1/19	arc-switch108																																																																																		
Eth1/20	e4:1d:2d:44:65:00	Eth1/20	arc-switch108																																																																																		
Eth1/21	e4:1d:2d:44:65:00	Eth1/21	arc-switch108																																																																																		
Eth1/22	e4:1d:2d:44:65:00	Eth1/22	arc-switch108																																																																																		
Eth1/23	e4:1d:2d:44:65:00	Eth1/23	arc-switch108																																																																																		
Eth1/24	e4:1d:2d:44:65:00	Eth1/24	arc-switch108																																																																																		
Eth1/25	e4:1d:2d:44:65:00	Eth1/25	arc-switch108																																																																																		
Eth1/26	e4:1d:2d:44:65:00	Eth1/26	arc-switch108																																																																																		
Eth1/31	e4:1d:2d:44:65:00	Eth1/31	arc-switch108																																																																																		
Eth1/32	e4:1d:2d:44:65:00	Eth1/32	arc-switch108																																																																																		

Related Commands	
-------------------------	--

Note	
-------------	--

show lldp statistics [interface ethernet <inf>]**show lldp statistics [interface ethernet <inf>]**

Displays LLDP interface statistics.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.2.0300
Role	admin
Example	<pre>switch (config)# show lldp statistics interface ethernet 1/1 Interface Frames In In TLVs TLVs Ageout Out Discarded Errors Total Discarded Unrecognize Frames ----- Eth 1/1 0 0 10 0 0 0 0 switch (config)#</pre>
Related Commands	
Note	

show lldp statistics global

show lldp statistics global

Displays LLDP global statistics.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.2.0300
Role	admin
Example	<pre>switch (config)# show lldp timers Remote Table Last Change Time : 10300 Remote Table Inserts : 5 Remote Table Deletes : 0 Remote Table Drops : 0 Remote Table Ageouts : 0 switch (config)#</pre>
Related Commands	
Note	

show lldp timers

show lldp timers

Displays LLDP timers configuration

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.2.0300
Role	admin
Example	<pre>switch (config)# show lldp timers msg-tx-interval:30 tx-delay:2 tx-hold:4 tx-reinit-delay:2 switch (config)#</pre>
Related Commands	
Note	

show dcb application-priority

show dcb application-priority

Displays application priority admin table.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.3.4200
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config)# show dcb application-priority Application priority configuration Selector Protocol Priority ----- Ethertype 0x8906 3 Ethertype 0x8914 3 switch (config)#</pre>
----------------	---

Related Commands	
-------------------------	--

Note	
-------------	--

5.14 Quality of Service (QoS)

5.14.1 QoS Classification

QoS classification assigns a QoS class to the packet. The QoS class of the packet is indicated internally in the switch using the switch-priority parameter (8 possible values).

Switch-priority affects the packet buffering and transmission scheduling. There are 8 possible values for switch-priority. The classification is based on the PCP and DEI fields in the VLAN tag, the DSCP field in the IP header. In addition, the default value can be configured for the incoming port. And the switch-priority of the packet also can be reconfigured by the ACL.

The switch-priority of the packet is used for priority fields re-marking at the egress.

5.14.1.1 Trust Levels

QoS classification depends on the port configuration for QoS trust level which determines which packet header fields derive the switch-priority. The following trust states are supported:

- Trust port
 - Based on port default settings
- Trust L2 (PCP,DEI)
 - Based on packet PCP,DEI fields for VLAN tagged packets
 - Else, based on the port default setting for VLAN un-tagged packets
- Trust L3 (DSCP)
 - Else, based on packet DSCP field for IP packet
 - Else, based on port default setting for non-IP
- Trust both
 - Else, based on packet DSCP for IP packet
 - Else, based on packet PCP,DEI for VLAN tagged packets
 - Else, based on the port default setting

Table 54 and figure summarize the classification rules.

Table 54 - Packet Classification Rules

Packet Type		QoS Classification Config (per Interface)			
IP/MPLS	VLAN	Trust Both	Trust L3	Trust L2	Trust Port
IP/MPLS	Tagged	DSCP	DSCP	PCP,DEI	Port Default
IP/MPLS	Untagged	DSCP	DSCP	Port Default	Port Default
non-IP/MPLS	Tagged	PCP,DEI	Port Default	PCP,DEI	Port Default
non-IP/MPLS	Untagged	Port Default	Port Default	Port Default	Port Default

Default switch-priority is configured as trust L2.

5.14.1.2 Switch Priority to IEEE Priority Mapping

IEEE defines priority value for a packet which is used in the switch for the pause flow control. The device maps the switch-priority into IEEE priority value using device global switch priority to IEEE priority table.

5.14.1.3 Default QoS Configuration

Table 55 - Default QoS Configuration

Parameter	Range	Configuration
Trust level	All ports	Trust L2
DSCP to switch-priority	0-7	0
DSCP to switch-priority	8-15	1
DSCP to switch-priority	16-23	2
DSCP to switch-priority	24-31	3
DSCP to switch-priority	32-39	4
DSCP to switch-priority	40-47	5
DSCP to switch-priority	48-55	6
DSCP to switch-priority	56-63	7
PCP to switch-priority	0	0
PCP to switch-priority	1	1
PCP to switch-priority	2	2
PCP to switch-priority	3	3
PCP to switch-priority	4	4
PCP to switch-priority	5	5
PCP to switch-priority	6	6
PCP to switch-priority	7	7
Port PCP,DEI default	All ports	0
Port switch-priority when “trust port” is enabled	All ports	0
Switch-priority to IEEE priority	0	0
Switch-priority to IEEE priority	1	1
Switch-priority to IEEE priority	2	2
Switch-priority to IEEE priority	3	3
Switch-priority to IEEE priority	4	4
Switch-priority to IEEE priority	5	5
Switch-priority to IEEE priority	6	6

Table 55 - Default QoS Configuration

Parameter	Range	Configuration
Switch-priority to IEEE priority	7	7

5.14.2 QoS Rewrite

Spectrum™ based switch systems enables rewriting QoS identifier values (DSCP, PCP, DEI) of incoming packets.

The configuration for preserving the values or rewriting them is set per ingress port. The configuration of the new values is set per egress port and is based on the mapping from the switch-priority.

In addition, the packets that pass the router module in the switch can be configured to change the “rewrite enable” configuration as well as the switch-priority.

5.14.2.1 Switch-priority to PCP,DEI Re-marking Mapping

Packet PCP and DEI fields can be updated by the switch based on switch-priority to PCP,DEI mapping tables. The mapping can be configured per egress port.

The reason for the mapping is to enable changing interpretation between two administrative domains in the network, or when a source of data is not fully trusted, and the default values are not desired. This mapping takes effect after deriving switch-priority from the PCP,DEI fields.

5.14.2.2 Switch-priority to DSCP Re-marking Mapping

Packet DSCP field can be updated based on switch-priority to DSCP mapping tables. The mapping can be configured per egress port. MPLS packets are untouched regardless this setting.

The reason for the mapping is to enable changing interpretation between two administrative domains in the network, or when a source of data is not fully trusted. This mapping will take effect after deriving switch-priority from the DSCP field.

5.14.2.3 DSCP to Switch-priority in Router

Spectrum™ enables mapping of DSCP to switch-priority in the router using a global mapping table.

This mapping has global configuration for whether to change the “Rewrite/Preserve PCP,DEI” bit. This configuration sets how the DSCP to switch-priority would affect the packet.

5.14.2.4 Default Configuration

- By default no ingress rewrite configuration is set
- By default PCP rewrite configuration in router is set
- The default mapping is as following:
 - Switch-priority=i to PCP,DEI=i,0, i=0-7
 - Switch-priority=i to DSCP=8i, i=0-7

5.14.3 Queuing and Scheduling (ETS) for SwitchX

Enhanced Transmission Selection (ETS) provides a common management framework for assignment of bandwidth to traffic classes, for weighted round robin (WRR) scheduling. If a traffic class does not use all the bandwidth allocated to it, other traffic classes can use that available bandwidth. This allows optimal utilization of the network capacity while prioritizing and providing the necessary resources.

The ETS feature has the following attributes:

- ETS global admin:
 - Enable (default) – scheduling mode is WRR according to the configured bandwidth-per-traffic class
 - Disable – scheduling mode is Strict Priority (SP)
- Bandwidth percentage for each traffic class: By default each traffic class gets an equal share

The default mapping of priority to traffic classes (per interface) is as follows:

- Priority 0,1 mapped to TC 0
- Priority 2,3 mapped to TC 1
- Priority 4,5 mapped to TC 2
- Priority 6,7 mapped to TC 3



TC0 and TC3 are lossy TCs, while TC1 and TC2 can be lossless as well as lossy. It is possible but not recommended to map PFC enabled priorities (lossless traffic) to those TC0 or TC3.

ETS is enabled by default (scheduling is WRR).

➤ **To set the scheduling mode to Strict Priority:**

Step 1. Run the command `dcb ets disable`.

```
switch (config) # no dcb ets enable
```

➤ **To configure the WRR bandwidth percentage:**

Step 1. Make sure ETS feature is enabled. Run:

```
switch (config) # dcb ets enable
```

Step 2. Choose the WRR bandwidth rate and distribution.

By default the WRR distribution function is equal 25% per TC. Changing the WRR bandwidth rate will cause a change in the distribution function, for example if you wish to

schedule more traffic on TC-0, TC-1, TC-2 while reducing the amount of traffic sent on TC-3, run the command `dcb ets tc bandwidth`.

```
switch (config) # dcb ets tc bandwidth 30 30 30 10
# show dcb ets

ETS enabled

TC          Bandwidth
-----
0           30%
1           30%
2           30%
3           10%

Number of Traffic Class: 4
switch (config) #
```



Traffic class priorities are <0-3>, where 0 is the lowest and 3 is the highest.



The sum of all traffic class bandwidth value (in percentage) should be 100, otherwise the command fails.

Step 3. Run the command `show dcb ets` to verify the configuration.

```
switch (config) # show dcb ets
ETS enabled

TC          Bandwidth
-----
0           30%
1           30%
2           10%
3           30%

Number of Traffic Class: 4
switch (config) #
```

5.14.4 Queuing and Scheduling (ETS) for Spectrum

After the output port of the packet is determined and the packet is buffered, it is queued for transmission. Each egress port is combined from the multi-level queuing structure. The scheduling of transmission from the queues relies on various configurations such as ETS weight, flow control, rate shaping etc.

5.14.4.1 Traffic Class

The switch-priority of the packet assigns it to a specific traffic class (TClass). The TClass of the packet determines the packet path in the queuing structure. There are 8 TCs supported by the system.

5.14.4.2 Multicast Aware Traffic Class Mapping

Spectrum™ supports a mode of MC aware TC mapping if the mapping to the TCs is based also on the whether the packet is unicast or multicast. So, packets of the same switch-priority can be mapped to two different TCs, based on their traffic type. With MC aware mode enabled, MC traffic is mapped into 8 MC TCs in parallel to 8 unicast TCs. Unicast TC has strict priority over its parallel multicast TC.

5.14.4.3 Traffic Shapers

Maximum Shapers

TCs can be configured for rate shaping as described in the following:

- TClass queues: shaper per TClass queue
- Port: shaper per port (bytes only)

Shapers support the following configurations:

- Committed Incoming Rate (CIR) [bits/packets per second]
- Committed Burst Size (CBS) [bites/packets]

Each shaper has granularity rate of 1Mb/s, 10Mb/s, 100Mb/s and 1Gb/s (or 128K, 1280K, 12M, 128M pps). The maximum CBS is 3GB or 384M packets.

Minimum Shapers

TC queues can be configured for minimal rate shaping. The minimum shaper configuration overrides all other scheduling configurations. So that if ETS or WRR scheduling allocates to a TC queue lower rate than the configured minimum, that queue receives strictly higher priority over the others. If several queues receive a rate below the configured minimum, the arbitration between them can be configured as a WRR, or as strict according to the queue index.

The configuration of min shaper is identical to the configuration of max shaper.

5.14.4.4 Default Shaper Configuration

Table 56 - Default Shaper Configuration

Parameter	Range	Configuration
Switch-priority to TC	0	0
Switch-priority to TC	1	1
Switch-priority to TC	2	2
Switch-priority to TC	3	3

Table 56 - Default Shaper Configuration

Parameter	Range	Configuration
Switch-priority to TC	4	4
Switch-priority to TC	5	5
Switch-priority to TC	6	6
Switch-priority to TC	7	7
MC-aware TC mapping	All ports	True
Shaping	All ports	No max/min shaping configured

5.14.5 RED and ECN




Supported only on Spectrum™ based switch systems.

Random early detection (RED) is a mechanism that randomly drops packets before the switch buffer fills up in case of congestion. Explicit congestion notification (ECN) is used for congestion control protocols (TCP and RoCE CC – DCQCN) to handle congestion before packets are dropped. RED and ECN can be configured separately or concurrently per traffic class.

Spectrum™ based systems support relative RED/ECN on TC queues. This feature allows the thresholds of the drop/mark actions to behave relatively to the dynamic thresholds configured for the shared buffer.

RED/ECN drop profiles are defined according to 2 parameters as shown in [Figure 23](#):

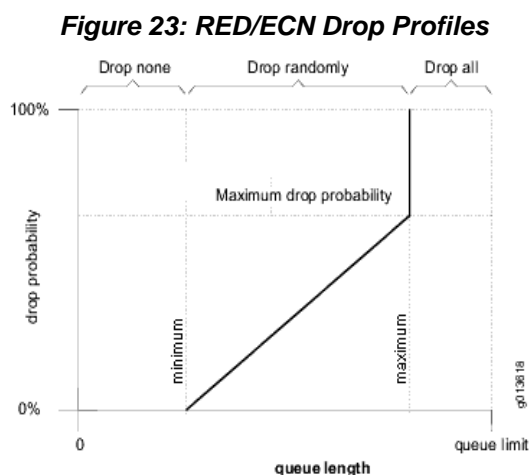

- Minimum – a threshold that defines the average queue length below which the packets are not dropped/marked
- Maximum – a threshold that defines the average queue length above which the packets are always dropped/marked

It is possible to configure the minimum and maximum thresholds to have the same value which would represent a step function from “drop none” to “drop all”.



Spectrum™ based systems support RED/ECN only for unicast traffic classes.

5.14.6 Commands

5.14.6.1 QoS Classification

vlan default priority

vlan default priority [<priority>]
no vlan default priority [<priority>]

Configures default PCP for packets arrived without VLAN tag.
 The no form of the command resets the value to its default.

Syntax Description	priority	Range: 0-7
Default	0	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.6.1002	
Role	admin	
Example	switch (config interface ethernet 1/1) # vlan default priority 0	
Related Commands	N/A	
Notes	This command is only supported on Spectrum™ based switch systems	

vlan default dei

vlan default dei [<dei>]
no vlan default dei [<dei>]

Configures default DEI for packets arrived without VLAN tag.
The no form of the command resets the value to its default.

Syntax Description	N/A
Default	0
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel
History	3.6.1002
Role	admin
Example	switch (config interface ethernet 1/1) # vlan default dei 0
Related Commands	N/A
Notes	This command is only supported on Spectrum™ based switch systems

qos trust

qos trust [port | L2 | L3 | both]
no qos trust [port | L2 | L3 | both]

Configures QoS trust mode for the interface.
 The no form of the command resets the value to its default.

Syntax Description	N/A
Default	L2
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel
History	3.6.1002
Role	admin
Example	switch (config interface ethernet 1/1) # qos trust L2
Related Commands	N/A
Notes	This command is only supported on Spectrum™ based switch systems

qos default switch-priority

qos default switch-priority [<switch-priority>]
no qos default switch-priority [<switch-priority>]

Configures default switch-priority for interface when “port” trust mode is active, or for non-IP and untagged packets in other trust modes.
The no form of the command resets the value to its default.

Syntax Description	switch-priority	Range: 0-7
Default	0	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.6.1002	
Role	admin	
Example	switch (config interface ethernet 1/1) # qos default switch-priority 0	
Related Commands	qos trust	
Notes	This command is only supported on Spectrum™ based switch systems	

qos map pcp dei

qos map pcp <pcp> dei <dei> [to switch-priority <switch-priority>]
no qos map pcp <pcp> dei <dei> [to switch-priority <switch-priority>]

Configures interface PCP,DEI to switch-priority mapping for IP/MPLS and non-IP/MPLS tagged packets in “L2” trust mode and for non-IP/MPLS tagged packets in “both” trust mode.

The no form of the command resets the value to its default.

Syntax Description	N/A
Default	PCP to switch-priority mapping: 0 → 0 1 → 1 2 → 2 3 → 3 4 → 4 5 → 5 6 → 6 7 → 7
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel
History	3.6.1002
Role	admin
Example	switch (config interface ethernet 1/1) # qos map pcp 5 dei 5
Related Commands	qos trust
Notes	This command is only supported on Spectrum™ based switch systems

qos map dscp

qos map dscp <dscp> [to switch-priority <switch-priority>]
no qos map dscp <dscp> [to switch-priority <switch-priority>]

Configures interface DSCP to switch-priority mapping in “L3” or “both” trust mode.

The no form of the command resets the value to its default.

Syntax Description	switch-priority	Range: 0-7
	dscp	Range: 0-63
Default	DSCP to switch-priority mapping:	0-7 → 0 8-15 → 1 16-23 → 2 24-31 → 3 32-39 → 4 40-47 → 5 48-55 → 6 56-63 → 7
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.6.1002	
Role	admin	
Example	switch (config interface ethernet 1/1) # qos map dscp 45	
Related Commands	qos trust	
Notes	This command is only supported on Spectrum™ based switch systems	

show qos**show qos [interface <type> <number>]**

Displays QoS information.

Syntax	Description	N/A
Default	DSCP to switch-priority mapping:	0-7 → 0 8-15 → 1 16-23 → 2 24-31 → 3 32-39 → 4 40-47 → 5 48-55 → 6 56-63 → 7
Configuration Mode	Any Command Mode	
History	3.6.1002	
Role	admin	

Example

```
switch (config) # show qos interface ethernet 1/1
Eth1/1
Trust mode: L2
Default switch-priority: 0
Default PCP: 0
Default DEI: 0
PCP,DEI rewrite: disabled
IP PCP,DEI rewrite: preserve (router is disabled)
DSCP rewrite: disabled

PCP,DEI to switch-priority mapping:
PCP,DEI  switch-priority
-----  -----
0,0      0
1,0      1
2,0      2
...
6,1      6
7,1      7

DSCP to switch-priority mapping:
DSCP     switch-priority
-----  -----
0        0
1        0
2        0
...
62       7
63       7

PCP,DEI rewrite mapping (switch-priority to PCP,DEI):
switch-priority  PCP,DEI
-----  -----
0                0,0
1                1,0
2                2,0
...

DSCP rewrite mapping (switch-priority to DSCP):
switch-priority  DSCP
-----  -----
0                0
1                8
2                16
...
```

Related Commands N/A

Notes This command is only supported on Spectrum™ based switch systems

show interfaces ethernet counters tc

show interfaces ethernet <slot/port> counters tc <priority>

Displays traffic group counters for the specified interface and priority.

Syntax Description	slot/port	Number of Ethernet interface in form of slot/port
	priority	Valid priority values: 0-7 or all
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.3004	
Role	admin	
Example	<pre>switch (config) # show interfaces ethernet 1/1 counters tc 3 TC 3 0 packets 0 bytes 0 queue depth 0 unicast no buffer discard 0 WRED discard</pre>	
Related Commands		
Note	This command is only supported on Spectrum™ based switch systems	

show interfaces ethernet counters pg

show interfaces ethernet <slot/port> counters pg <priority>

Displays port group counters for the specified interface and priority.

Syntax Description	slot/port	Number of Ethernet interface in form of slot/port
	priority	Valid priority values: 0-7 or all
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.3004	
Role	admin	
Example	<pre>switch (config) # show interfaces ethernet 1/1 counters pg 4 PG 4 0 packets 0 bytes 0 queue depth 0 no buffer discard 0 shared buffer discard</pre>	
Related Commands		
Note	This command is only supported on Spectrum™ based switch systems	

show interfaces ethernet counters pfc prio

show interfaces ethernet <slot/port> counters pfc prio <priority>

Displays priority flow control counters for the specified interface and priority.

Syntax Description	slot/port	Number of Ethernet interface in form of slot/port
	priority	Valid priority values: 0-7 or all
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.3004	
Role	admin	
Example	<pre>switch (config) # show interfaces ethernet 1/1 counters pfc prio 1 PFC 1 Rx 0 pause packets 0 pause duration Tx 0 pause packets 0 pause duration</pre>	
Related Commands		
Note	This command is only supported on Spectrum™ based switch systems	

5.14.6.2 QoS Rewrite

qos rewrite pcp

qos rewrite pcp-enable
qos rewrite pcp-disable

Enables or disables PCP,DEI rewrite on the interface.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel
History	3.6.1002
Role	admin
Example	<code>switch (config interface ethernet 1/1) # qos rewrite pcp-enable</code>
Related Commands	
Notes	This command is only supported on Spectrum™ based switch systems

qos rewrite dscp

qos rewrite dscp-enable
qos rewrite dscp-disable

Enables or disables DSCP rewrite on the interface.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel
History	3.6.1002
Role	admin
Example	switch (config interface ethernet 1/1) # qos rewrite dscp-enable
Related Commands	
Notes	This command is only supported on Spectrum™ based switch systems

qos rewrite map switch-priority pcp dei

qos rewrite map switch-priority <switch-priority> pcp <pcp> dei <dei>
no qos rewrite map switch-priority <switch-priority> pcp <pcp> dei <dei>

Configures switch-priority to PCP,DEI mapping on the interface.
The no form of the command resets the value to their defaults.

Syntax Description	switch-priority	Range: 0-7
	pcp	Range: 0-7
	dei	Value: 0
Default	Switch priority to PCP,DEI mapping:	Switch priority → PCP,DEI: 0 → 0,0 1 → 1,0 2 → 2,0 3 → 3,0 4 → 4,0 5 → 5,0 6 → 6,0 7 → 7,0
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.6.1002	
Role	admin	
Example	switch (config interface ethernet 1/1) # qos rewrite map switch -priority 11 pcp 7 dei 0	
Related Commands	N/A	
Notes	This command is only supported on Spectrum™ based switch systems	

qos rewrite map switch-priority dscp

qos rewrite map switch-priority <switch-priority> dscp <dscp>
no qos rewrite map switch-priority <switch-priority> dscp <dscp>

Configures switch-priority to DSCP mapping on the interface.
 The no form of the command resets the value to their defaults.

Syntax Description	N/A
Default	Switch priority to DSCP mapping: 0 → 0 1 → 8 2 → 16 3 → 24 4 → 32 5 → 40 6 → 48 7 → 54
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel
History	3.6.1002
Role	admin
Example	switch (config interface ethernet 1/1) # qos rewrite map switch -priority 5 dscp 40
Related Commands	N/A
Notes	This command is only supported on Spectrum™ based switch systems

qos ip rewrite pcp

qos ip rewrite pcp [disable | enable | preserve]

no qos ip rewrite pcp [disable | enable | preserve]

Enables or preserves the rewrite of PCP, DEI of routed packets in egress interface.

The no form of the command resets the value to their defaults.

Syntax Description	disable	No rewrite occurs
	enable	PCP,DEI are rewritten based on the mapping configured on the egress port
	preserve	Ingress interface configuration determines action
Default	Default is “preserve” when router is disabled Default is “enable” when router is enabled (Router can be enabled/disabled using the “ip routing” command)	
Configuration Mode	Config	
History	3.6.1002	
Role	admin	
Example	switch (config) # qos ip rewrite pcp enable	
Related Commands	N/A	
Notes	The parameter “preserve” is only supported on Spectrum based switch systems	

5.14.6.3 Queuing and Scheduling (ETS)

dcb ets enable

dcb ets enable
no dcb ets enable

Sets the switch egress scheduling mode to be weighted round robin.
 The no form of the command sets the switch egress scheduling mode to be strict priority.

Syntax Description	N/A
Default	ETS is enabled
Configuration Mode	Config
History	3.1.0000 3.6.1002 Updated Note
Role	admin
Example	<pre>switch (config)# dcb ets enable switch (config)# show dcb ets ETS enabled TC Bandwidth ----- 0 25% 1 25% 2 25% 3 25% Number of Traffic Class: 4 switch (config) #</pre>
Related Commands	show dcb ets
Note	The show command output is from a SwitchX® based switch systems

dcb ets tc bandwidth

dcb ets tc bandwidth <tc-0> <tc-1> <tc-2> <tc-3>
no dcb ets tc bandwidth

Configures the bandwidth limit of the traffic class.
The no form of the command sets the bandwidths per traffic class back to its default.

Syntax Description	tc-i	0-100.
Default	25% per traffic class	
Configuration Mode	Config	
History	3.1.0000	
	3.6.1002	Updated Note
Role	admin	
Example	<pre>switch (config)# dcb ets tc bandwidth 20 20 30 30 switch (config) # show dcb ets ETS enabled TC Bandwidth ----- 0 20% 1 20% 2 30% 3 30% Number of Traffic Class: 4 switch (config) #</pre>	
Related Commands	show dcb ets	
Note	<ul style="list-style-type: none">• The sum of all traffic class bandwidth must be equal to 100• This command is only supported on SwitchX® based switch systems	

vlan map-priority

vlan map priority <priority> traffic-class <tc>
no vlan map priority <priority>

Maps an VLAN user priority to a traffic class.
 The no form of the command sets the mapping back to default.

Syntax Description	N/A
Default	Priority 0,1 mapped to tc 0 Priority 2,3 mapped to tc 1 Priority 4,5 mapped to tc 2 Priority 6,7 mapped to tc 3
Configuration Mode	Config Interface Ethernet
History	3.1.0000 3.6.1002 Updated Note
Role	admin
Example	switch (config interface ethernet 1/1) # vlan map-priority 1 traffic-class 2
Related Commands	show dcb ets interface
Note	This command is only supported on SwitchX® based switch systems

show dcb ets (SwitchX)

show dcb ets

Displays ETS configuration and operational data.

Syntax Description	N/A
---------------------------	-----

Default	ETS is enabled.
----------------	-----------------

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.1.0000
	3.6.1002 Updated Note

Role	admin
-------------	-------

Example	<pre>switch (config)# show dcb ets ETS enabled TC Bandwidth ----- 0 25% 1 25% 2 25% 3 25% Number of Traffic Class: 4</pre>
----------------	--

Related Commands	
-------------------------	--

Note	The show command output is from a SwitchX® based switch system
-------------	--

show dcb ets interface

show dcb ets interface <type> <number>

Displays ETS configuration and operational data, per interface.

Syntax Description	type	ethernet or port-channel
	number	interface number, i.e. 1/1
Default	ETS is enabled.	
Configuration Mode	Any Command Mode	
History	3.1.0000	
Role	admin	

Example

```
switch (config)# show dcb ets interface ethernet 1/1
```

```
ETS Port Mode           :ON MODE
ETS Oper State          :INIT STATE
ETS State Machine Type  :Assymmetric
```

```
-----
ETS Local Port Info
-----
```

```
TC bandwidth table
-----
```

TC	Bandwidth	RecomBandwidth
0	25%	25%
1	25%	25%
2	25%	25%
3	25%	25%

```
priority assignment table
-----
```

Priority	TC
0	0
1	0
2	1
3	1
4	2
5	2
6	3
7	3

```
Number of Traffic Class: 4
```

```
Willing Status: Disable
-----
```

```
ETS Admin Port Info
-----
```

TC	Bandwidth	RecomBandwidth
0	30%	30%
1	30%	30%
2	30%	30%
3	10%	10%

```
-----
ETS Remote Port Info
-----
```

```
No Remote Entry is Present
-----
```

```
switch (config) #
```

Related Commands

Note

bind switch-priority

bind switch-priority [<priority_1> [<priority_2> .. <priority_n>]]
no bind switch-priority [<priority>]

Configures binding of switch-priority to traffic class.

The no form of the command:

- When run in the interface configuration mode: Resets to default the binding of all switch-priorities from all traffic classes
- When run in the interface's traffic class: Negates the binding of a specific switch-priority from a specific traffic class

Syntax Description	N/A
Default	Switch priority to traffic class mapping: 0 → 0 1 → 1 2 → 2 3 → 3 4 → 4 5 → 5 6 → 6 7 → 7
Configuration Mode	Config Interface Ethernet Config Interface Ethernet Traffic Class Config Interface Port Channel Config Interface Port Channel Traffic Class Config Interface MLAG Port Channel Config Interface MLAG Port Channel Traffic Class
History	3.6.1002
Role	admin
Example	<pre>switch (config interface ethernet 1/1 traffic-class 0) # bind switch- property 1</pre>
Related Commands	N/A
Notes	<ul style="list-style-type: none"> • Context is egress interface traffic class • This command is only supported on Spectrum™ based switch systems

bandwidth guaranteed

bandwidth guaranteed [<rate>]
no bandwidth guaranteed [<rate>]

Configures the minimum bandwidth for outbound traffic.

Syntax Description	rate	Rate in GbE Range: 0 - max speed supported
Default	0	
Configuration Mode	Config Interface Ethernet Traffic Class Config Interface Port Channel Traffic Class Config Interface MLAG Port Channel Traffic Class	
History	3.6.1002	
Role	admin	
Example	<pre>switch (config interface ethernet 1/1 traffic-class 0) # bandwidth guaranteed 0.4G</pre>	
Related Commands	N/A	
Notes	<ul style="list-style-type: none">• Context is egress interface traffic class• Bandwidth guaranteed rate determines the bandwidth guaranteed by the switch for outbound traffic assigned to this traffic class on this interface• Bandwidth is in granularity of 0.2G• This command is only supported on Spectrum™ based switch systems	

bandwidth shape

bandwidth shape [<rate>]
no bandwidth shape [<rate>]

Configures the bandwidth shaper for outbound traffic.

Syntax Description	rate	Rate in GbE Range: 0 - max speed supported
Default	Maximum port rate (100GbE on Spectrum™ based switches)	
Configuration Mode	Config Interface Ethernet Traffic Class Config Interface Port Channel Traffic Class Config Interface MLAG Port Channel Traffic Class	
History	3.6.1002	
Role	admin	
Example	switch (config interface ethernet 1/1 traffic-class 7) # bandwidth shape 0.4G	
Related Commands	N/A	
Notes	<ul style="list-style-type: none"> • Context is egress interface traffic class and/or port • Bandwidth shape rate determines the bandwidth of the shaper for outbound traffic assigned to this traffic class on this interface • Bandwidth is in granularity of 0.2G • This command is only supported on Spectrum™ based switch systems 	

dcb ets

dcb ets [strict | wrr <weight>]
no dcb ets [strict | wrr <weight>]

Configures ETS mode to strict or WRR.

Syntax Description	weight
---------------------------	--------

Default	Default is WRR with the following default weights. Traffic class to weight mapping: 0 → 12 1 → 13 2 → 12 3 → 13 4 → 12 5 → 13 6 → 12 7 → 13
----------------	--

Configuration Mode	Config Interface Ethernet Traffic Class Config Interface Port Channel Traffic Class Config Interface MLAG Port Channel Traffic Class
---------------------------	--

History	3.6.1002
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config interface ethernet 1/1 traffic-class 1) # dcb ets wrr 50</pre>
----------------	--

Related Commands	N/A
-------------------------	-----

Notes	<ul style="list-style-type: none">• Context is egress interface traffic class• This command is only supported on Spectrum™ based switch systems
--------------	--

mc-unaware tc binding

mc-unaware tc binding
no mc-unaware tc binding

Configures the MC-unaware TC binding.
 The no form of the command disables MC-unaware TC binding.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel
History	3.6.1002
Role	admin
Example	<pre>switch (config interface ethernet 1/1) # mc-unaware tc binding</pre>
Related Commands	N/A
Notes	<ul style="list-style-type: none"> • When the no form is configured, the multicast traffic of a switch-priority that is mapped to TC X is re-mapped to TC X+8 • Context is egress interface • This command is only supported on Spectrum™ based switch systems

show dcb ets (Spectrum)

show dcb ets [interface {ethernet | mlag-port-channel | port-channel} <number>]

Displays ETS information.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Any Command Mode
History	3.6.1002
Role	admin

Example

```
switch (config) # show dcb ets interface ethernet 1/1
Eth1/1
Interface Bandwidth Shape [Mbps]: 100000
Multicast unaware mapping : disabled
```

```
ETS per TC :
TC Scheduling Mode Weight Weight (%)
-----
0 WRR                12    12
1 WRR                13    13
2 WRR                12    12
3 WRR                13    13
4 WRR                12    12
5 WRR                13    13
6 WRR                12    12
7 WRR                13    13
```

```
Bandwidth Shape per TC:
TC Bandwidth Shape [Mbps]
-----
0 100000
1 100000
2 100000
3 100000
4 100000
5 100000
6 100000
7 100000
```

```
Bandwidth Guarantee per TC:
TC Bandwidth Guaranteed [Mbps]
-----
0 0
1 0
2 0
3 0
4 0
5 0
6 0
7 0
```

```
Switch Priority to TC mapping:
Switch Priority TC
-----
0                0
1                1
2                2
3                3
4                4
5                5
6                6
7                7
```

Related Commands N/A

Notes The show command output is from a Spectrum™ based switch systems

5.14.6.4 RED & ECN

traffic-class congestion-control

traffic-class <tc> congestion-control [red | ecn | both] [minimum- absolute <min> maximum-absolute <max> | minimum-relative <min> maximum-relative <max>]

no traffic-class <tc> congestion-control

Enables RED/ECN marking for traffic class queue.
The no form of the command disables RED/ECN marking for traffic class queue.

Syntax Description	tc	Traffic class. Range: 0-7.
	red	Enables random early detection for traffic class queue
	ecn	Enables explicit congestion notification for traffic class queue
	both	Enables both RED and ECN marking for traffic class queue
	minimum-absolute	Set minimum-absolute value (in KBs) for marking traffic-class queue
	maximum-absolute	Set minimum-absolute value (in KBs) for marking traffic-class queue
	minimum-relative	Set minimum-relative value (in percentage) for marking traffic-class queue
	maximum-relative	Set maximum-relative value (in percentage) for marking traffic-class queue
Default	Disabled	
Configuration Mode	Config Interface Ethernet	
History	3.5.1000	
Role	admin	
Example	switch (config interfaces ethernet 1/1)# traffic-class 0 congestion-control both minimum-relative 50 maximum-relative 80	
Related Commands		
Note		

show interfaces ethernet congestion-control

show interfaces ethernet congestion-control

Displays specific interface congestion control information.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.5.1000
Role	admin
Example	<pre> switch (config)# show interfaces ethernet 1/1 congestion-control Interface ethernet: 1/1 ECN marked packets: 0 TC-0 Mode: ECN Threshold mode: absolute Minimum threshold: 0 KB Maximum threshold: 200 KB RED dropped packets: 0 TC-1 Mode: RED Threshold mode: relative Minimum threshold: 0% Maximum threshold: 100% RED dropped packets: 0 TC-2 Mode: none TC-3 Mode: none TC-4 Mode: ECN Threshold mode: relative Minimum threshold: 25% Maximum threshold: 80% RED dropped packets: 0 TC-5 Mode: none TC-6 Mode: both Threshold mode: absolute Minimum threshold: 100 KB Maximum threshold: 200 KB RED dropped packets: 0 TC-7 Mode: none switch (config) # </pre>

Related Commands

Note

5.15 Access Control List

An Access Control List (ACL) is a list of permissions attached to an object, to filter or match switches packets. When the pattern is matched at the hardware lookup engine, a specified action (e.g. permit/deny) is applied. The rule fields represent flow characteristics such as source and destination addresses, protocol and VLAN ID.

ACL support currently allows actions of *permit* or *deny* rules, and supports only ingress direction. ACL search pattern can be taken from either L2 or L3 fields, e.g L2/L3 source and destination addresses, protocol, VLAN ID and priority or TCP port.

5.15.1 Configuring Access Control List

Access Control List (ACL) is configured by the user and is applied to a port once the ACL search engine matches search criteria with a received packet.

➤ **To configure ACL:**

Step 1. Log in as admin.

Step 2. Enter config mode. Run:

```
switch > enable
switch # configure terminal
```

Step 3. Create a MAC / IPv4 ACL (access-list) entity.

```
switch (config) mac access-list mac-acl
switch (config mac access-list mac-acl) #
```

Step 4. Add a MAC / IP rules to the appropriate access-list.

```
switch (config mac access-list mac-acl) seq-number 10 deny 0a:0a:0a:0a:0a:0a mask
ff:ff:ff:ff:ff:ff any vlan 6 cos 2 protocol 80
switch (config mac access-list mac-acl) #
```

Step 5. Bind the created access-list to an interface (slot/port or port-channel).

```
switch (config)
switch (config) # interface ethernet 1/1
switch (config interface ethernet 1/1) # mac port access-group mac-acl
```

5.15.2 ACL Actions

An ACL action is a set of actions can be activated in case the packet hits the ACL rule.

➤ **To modify the VLAN tag of the egress traffic as part of the ACL “permit” rule:**

Step 1. Create access-list action profile:

Step 1a. Create an action access-list profile using the command `access-list action <action-profile-name>`.

Step 1b. Add rule to map a VLAN using the command `vlan-map <vlan-id>` within the action profile configuration mode.

Step 1c. Add action on a rule to strip the VLAN from a packet using the command `vlan-pop` within the action profile configuration mode.

Step 1d. Add action on a rule to append a VLAN to a packet using the command `vlan-push` within the action profile configuration mode.

Step 2. Create an access-list and bind the action rule:

a. Create an access-list profile using the command `ipv4/mac access-list`

b. Add access list rule using the command `deny/permit (action <action profile name>)`

Step 3. Bind the access-list to an interface using the command `ipv4/mac port access-group`.

```
Create an action profile and add vlan mapping action:
switch (config)# access-list action my-action
switch (config access-list action my-action)# vlan-map 20
switch (config access-list action my-action)# exit

Create an access list and bind rules:
switch (config)# mac access-list my-list
switch (config mac access-list my-list)# permit any any action my-action
switch (config mac access-list my-list)# exit

Bind an access-list to a port:
switch (config)# interface ethernet 1/1
switch (config interface ethernet 1/1)# mac access-list my-list
```

5.15.3 Commands

ipv4/mac access-list

{ipv4 | mac} access-list <acl-name>
no {ipv4 | mac} access-list <acl-name>

Creates a MAC or IPv4 ACL and enter the ACL configuration mode.
The no form of the command deletes the ACL.

Syntax Description	ipv4 mac	IPv4 or MAC – access list.
	acl-name	User defined string for the ACL.
Default	No ACL available by default.	
Configuration Mode	Config	
History	3.1.1400	
Role	admin	
Example	switch (config)# mac access-list my-mac-list switch (config mac access-list my-mac-list)#	
Related Commands	ipv4/port access-group	
Note		

ipv4/mac port access-group

```
{ipv4 | mac} port access-list <acl-name>
no {ipv4 | mac} port access-list <acl-name>
```

Binds an ACL to the interface.
The no form of the command unbinds the ACL from the interface.

Syntax Description	ipv4 mac	IPv4 or MAC – access list.
	acl-name	ACL name.
Default	No ACL is bind by default.	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
History	3.1.1400	
	3.3.4500	Added MLAG port-channel configuration mode
Role	admin	
Example	switch (config interface ethernet 1/1) # mac port access-group my-list switch (config interface ethernet 1/1) #	
Related Commands	ipv4/mac access-list	
Note	The access control list should be defined prior to the binding action.	

deny/permit (MAC ACL rule)

```
[seq-number <sequence-number>] {deny|permit} {any | <source-mac> [mask
<mac>]} {any |<destination-mac> [mask <mac>]} [protocol <protocol>] [cos
<cos-value>] [vlan <vlan-id> | vlan-mask <vlan-mask>] [action <action-id>]
no <sequence-number>
```

Creates a rule for MAC ACL.

The no form of the command deletes a rule from the MAC ACL.

Syntax Description	sequence-number	Optional parameter to set a specific sequence number for the rule. The range is:1-65535.
	deny permit	Determines the type of the rule, denies or permits action.
	{ any <source-mac> [mask <mac>]}	Sets source MAC and optionally sets a mask for that MAC. The “any” option will cause the rule not to check the source MAC.
	{ any <destination-mac> [mask <mac>]}	Sets destination MAC and optionally sets a mask for that MAC. The “any” option will cause the rule not to check the destination MAC.
	protocol	Sets the Ethertype field value from the MAC address. Possible range is: 0x0000-0xffff.
	cos-value	Sets the COS (priority bits) field, possible range is: 0-7.
	vlan-id	Sets the VLAN ID field, possible range is 0-4095
	vlan-mask <vlan-mask>	Sets VLAN group. Range: 0x0000-0x0FFF.
	action	Action name (free string)
Default	No rule is added by default to access control list. Default sequence number is in multiple of 10.	
Configuration Mode	Config MAC ACL	
History	3.1.1400	
	3.3.4500	Added vlan-mask parameter
	3.5.1000	Updated seq-number parameter
Role	admin	
Example	<pre>switch (config mac access-list my-list) # seq-number 10 deny 0a:0a:0a:0a:0a:0a mask ff:ff:ff:ff:ff:ff any vlan 6 cos 2 protocol 80 switch (config mac access-list my-list) #</pre>	

Related Commands ipv4/mac access-list
 ipv4/mac port access-group

Note

deny/permit (IPv4 ACL rule)

```
[seq-number <sequence-number>] {permit | deny} ip {<source-ip> [mask <ip>] |  
[any]} {<dest-ip> [mask <ip>] | [any]} [action <action-id>]  
no <sequence-number>
```

Creates a rule for IPv4 ACL.

The no form of the command deletes a rule from the IPv4 ACL.

Syntax Description	sequence-number	Optional parameter to set a specific sequence number for the rule. The range is:1-65535.
	deny permit	Determines the type of the rule, deny or permit action.
	{ any <source-ip> [mask <ip>] }	Sets source IP and optionally sets a mask for that IP address. The “any” option causes the rule to not check the source IP. Valid mask values fall in the range 0-255.
	{ any <destination-ip> [mask <ip>] }	Sets destination IP and optionally sets a mask for that MAC. The “any” option causes the rule to not check the destination MAC.
Default	No rule is added by default to access control list. Default sequence number is in multiple of 10.	
Configuration Mode	Config IPv4 ACL	
History	3.1.1400	First version
	3.3.4302	Updated syntax description of mask <ip> parameter
	3.5.1000	Updated seq-number parameter
Role	admin	
Example	<pre>switch (config ipv4 access-list my-list) # seq-number 51 deny ip 1.1.1.1 mask 123.12.13.53 45.45.45.0 mask 123.132.21.123 switch (config ipv4 access-list my-list) #</pre>	
Related Commands	ipv4/mac access-list ipv4/mac port access-group	
Note		

deny/permit (IPv4 TCP/UDP/ICMP ACL rule)

```
[seq-number <sequence-number>] {permit | deny} {tcp | udp | icmp} {<source-
ip> [mask <ip>] | [any]} {<dest-ip> [mask <ip>] | [any]} [eq-source <port-num-
ber>] [eq-destination <port-number>] [action <action-id>] [eq-code <icmp-
code>] [eq-type <icmp-type>]
no <sequence-number>
```

Creates a rule for IPv4 UDP/TCP/ICMP ACL.

The no form of the command deletes a rule from the ACL.

Syntax Description	sequence-number	Optional parameter to set a specific sequence number for the rule. The range is:1-65535.
	deny permit	Determines the type of the rule, deny or permit action.
	tcp udp icmp	UDP, TCP, or ICMP rule transport type.
	{ any <source-ip> [mask <ip>] }	Sets source IP and optionally sets a mask for that IP address. The “any” option will cause the rule not to check the source IP.
	{ any <destination-ip> [mask <ip>] }	Sets destination IP and optionally sets a mask for that IP. The “any” option will cause the rule not to check the destination IP.
	[eq-source <port-number>]	TCP/UDP/ICMP source port number Range is 0-65535
	[eq-destination <port-number>]	TCP/UDP/ICMP destination port number Range is 0-65535
	eq-code <icmp-code>	Range: 0-255
	eq-type <icmp-type>	Range: 0-255
Default	No rule is added by default to access control list Default sequence number is in multiple of 10	
Configuration Mode	Config IPv4 ACL	
History	3.1.1400	
	3.5.1000	Updated seq-number parameter
	3.6.2002	Added ICMP options and Notes section
Role	admin	
Example	<pre>switch (config ipv4 access-list my-list) # seq-number 10 deny tcp any any eq-source 1200 switch (config ipv4 access-list my-list) #</pre>	

Related Commands	ipv4/mac access-list ipv4/mac port access-group
Notes	<ul style="list-style-type: none">• ICMP Code must be specified in conjunction with an ICMP Type. If ICMP Type is specified but no ICMP code is specified, the rule matches all ICMP packets of the given Type. If no ICMP Type or Code are specified, the rule matches all ICMP packets from the specified source/destination address.• The parameters “eq-source” and “eq-destination” are not applicable with ICMP

access-list action

access-list action <action-profile-name>
no access-list action <action-profile-name>

Creates access-list action profile and entering the action profile configuration mode.

The no form of the command deletes the action profile.

Syntax Description	action-profile-name given name for the profile.
Default	N/A
Configuration Mode	Config
History	3.2.0230
Role	admin
Example	<pre>switch (config)# access-list action my-action switch (config access-list action my-action)# show access-list action my-action Access-list Action my-action Mapped_Vlan_ID Mapped_port Counter_set Policer_ID ===== N/A N/A N/A N/A switch (config access-list action my-action)#</pre>
Related Commands	
Note	

vlan-map

vlan-map <vlan-id>
no vlan-map

Adds action to map a new VLAN to the packet (in the ingress port or VLAN).
The no form of the command removes the action to map a new VLAN.

Syntax Description	vlan-id	0-4095.
Default	N/A	
Configuration Mode	Config ACL Action	
History	3.2.0230	
Role	admin	
Example	<pre>switch (config access-list action my-action)# vlan-map 10 switch (config access-list action my-action)# show access-list action my-action Access-list Action my-action Mapped_Vlan_ID Mapped_port Counter_set Policer_ID ===== 10 N/A N/A N/A switch (config access-list action my-action)#</pre>	
Related Commands		
Note		

vlan-pop**vlan-pop**

Pops VLAN frames from traffic.

Syntax Description	vlan-id	VLAN ID: 0-4095.
Default	N/A	
Configuration Mode	Config ACL Action	
History	3.4.3000	
Role	admin	
Example	<pre>switch (config access-list action my-action)# vlan-pop switch (config access-list action my-action)# show access-list action my-action Access-list Action my-action Popped_Vlan_ID Mapped_port Counter_set Policer_ID ===== N/A N/A N/A N/A switch (config access-list action my-action) #</pre>	
Related Commands		
Note		

vlan-push

vlan-push <vlan-id>

Pushes (or adds) VLAN frames to traffic.

Syntax Description	vlan-id	VLAN ID: 0-4095
---------------------------	---------	-----------------

Default	N/A
----------------	-----

Configuration Mode	Config ACL Action
---------------------------	-------------------

History	3.4.3000
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config access-list action my-action)# vlan-push 10 switch (config access-list action my-action)# show access-list action my-action Access-list Action my-action Mapped_Vlan_ID Mapped_port Counter_set Policer_ID ===== 10 N/A N/A N/A switch (config access-list action my-action)#</pre>
----------------	---

Related Commands	
-------------------------	--

Note	
-------------	--

show access-list action

show access-list action {<action-profile-name> | **summary**}

Displays the access-list action profiles summary.

Syntax Description	action-profile-name	Filter the table according to the action profile name.
	summary	Display summary of the action list.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.2.0230	
Role	admin	
Example	<pre> witch (config)# show access-list action my-action Access-list Action my-action Mapped_Vlan_ID Mapped_port Counter_set Policer_ID ===== 10 N/A N/A N/A switch (config)# </pre>	
Related Commands		
Note		

show mac/ipv4 access-lists

show [mac | ipv4 []] access-lists <access-list-name>

Displays the list of rules for the MAC/IPv4 ACL.

Syntax Description	ipv4 mac	IPv4 or MAC - access list.
	access-list-name	ACL name.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.1400	
History	3.3.4500	Updated output
Role	admin	
Example	<pre>switch (config mac access-list my-list) # show mac access-lists my-list mac access-list my-list seq-number p/d smac dmac protocol cos vlan vlan-mask action ===== 10 deny any any 0800 3 3 0x0FFF none 20 deny any any 80 2 6 0x0000 none 30 deny any any any any any 0x0ACB none 40 deny any any any any any N/A none switch (config mac access-list my-list) #</pre>	
Related Commands	deny/permit (MAC ACL rule) deny/permit (IPv4 ACL rule) deny/permit (IPv4 TCP/UDP ACL rule) ipv4/mac access-list ipv4/mac port access-group	
Note		

show mac/ipv4 access-lists summary

show [mac |ipv4 []] access-lists summary

Displays the summary of number of rules per ACL, and the interfaces attached.


Syntax Description	ipv4 mac access-list-name	IPv4 or MAC - Access list ACL name
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.1400	
Role	admin	
Example	<pre>switch (config) # show mac access-lists summary mac access-list my-list Total ACEs Configured: 2 Configured on interfaces: Ethernet 1/1 Ethernet 1/2 switch (config) #</pre>	
Related Commands	deny/permit (MAC ACL rule) deny/permit (IPv4 ACL rule) deny/permit (IPv4 TCP/UDP ACL rule) ipv4/mac access-list ipv4/mac port access-group	
Note		

5.16 Port Mirroring

Port mirroring enables data plane monitoring functionality which allows the user to send an entire traffic stream for testing. Port mirroring sends a copy of packets of a port's traffic stream, called "mirrored port", into an analyzer port. Port mirroring is used for network monitoring. It can be used for intrusion detection, security breaches, latency analysis, capacity and performance matters, and protocol analysis.

Figure 24 provides an overview of the mirroring functionality.

Figure 24: Overview of Mirroring Functionality

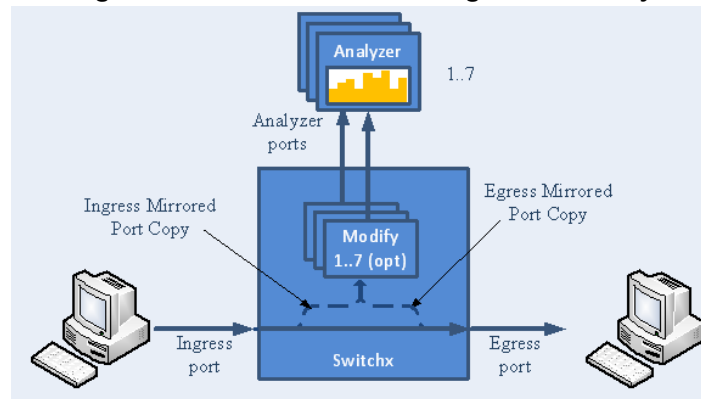


There is no limitation on the number of mirroring sources and more than a single source can be mapped to a single analyzer destination.

5.16.1 Mirroring Sessions

Port mirroring is performed by configuring mirroring sessions. A session is an association of a mirror port (or more) and an analyzer port.

Figure 25: Mirror to Analyzer Mapping

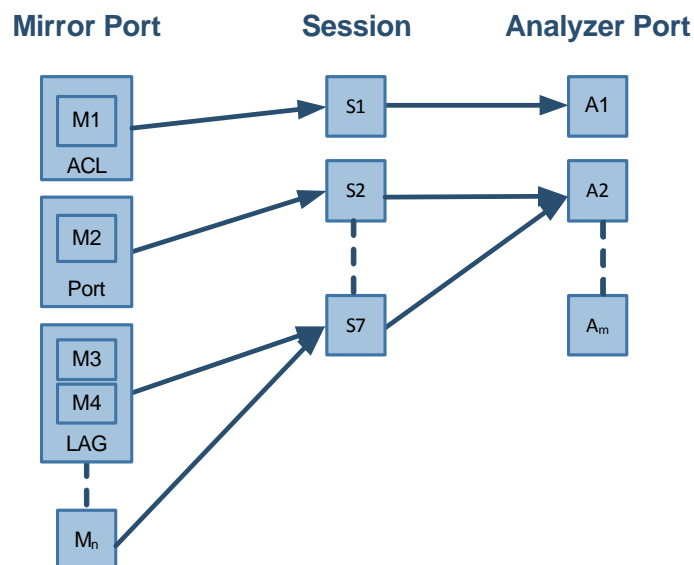

A mirroring session is a monitoring configuration mode that has the following parameters:

Table 57 - Mirroring Parameters

Parameter	Description	Access
Source interface(s)	List of source interfaces to be mirrored.	RW
Destination interface	A single analyzer port through which all mirrored traffic egress.	RW
Header format	The format and encapsulation of the mirrored traffic when sent to analyzer.	RW
Truncation	Enabling truncation segments each mirrored packet to 64 bytes.	RW
Congestion control	Controls the behavior of the source port when destination port is congested.	RW
Admin state	Administrative state of the monitoring session.	RW

5.16.1.1 Source Interface

The source interface (mirror port) refers to the interface from which the traffic is monitored. Port mirroring does not affect the switching of the original traffic. The traffic is simply duplicated and sent to the analyzer port. Traffic in any direction (either ingress, egress or both) can be mirrored.

There is no limitation on the number of the source interfaces mapped to a mirroring session.



Ingress and egress traffic flows of a specific source interface can be mapped to two different sessions.

LAG

The source interface can be a physical interface or a LAG.

Port mirroring can be configured on a LAG interface but not on a LAG member. When a port is added to a mirrored LAG it inherits the LAG's mirror configuration. However, if port mirroring configuration is set on a port, that configuration must be removed prior to adding the port to a LAG interface.

When a port is removed from a LAG, the mirror property is switched off for that port.

Control Protocols

All control protocols captured on the mirror port are forwarded to the analyzer port in addition to their normal treatment. For example LACP, STP, and LLDP are forwarded to the analyzer port in addition to their normal treatment by the CPU.

Exceptions to the behavior above are the packets that are being handled by the MAC layer, such as pause frames.

5.16.1.2 Destination Interface

The destination interface is an analyzer port to which mirrored traffic is directed. The mirrored packets are duplicated, optionally modified, and sent to the analyzer port. SwitchX® platforms support up to 7 analyzer ports, and Spectrum™ platforms support up to 2 only, where any mirror port can be mapped to any analyzer port and more than a single mirror port can be mapped to a single analyzer port.

Packets can be forwarded to any destination using the command `destination interface`.

The analyzer port supports status and statistics as any other port.

LAG

The destination interface cannot be a member of LAG when the header format is local.

Control Protocols

The destination interface may also operate in part as a standard port, receiving and sending out non-mirrored traffic. When the header format is configured as a local port, ingress control protocol packets that are received by the local analyzer port get discarded.

Advanced MTU Considerations

The analyzer port, like its counterparts, is subject to MTU configuration. It does not send packets longer than configured.

When the analyzer port sends encapsulated traffic, the analyzer traffic has additional headers and therefore longer frame. The MTU must be configured to support the additional length, otherwise, the packet is truncated to the configured MTU.

The system on the receiving end of the analyzer port must be set to handle the egress traffic. If it is not, it might discard it and indicate this in its statistics (packet too long).

5.16.1.3 Header Format


Ingress traffic from the source interface can be manipulated in several ways depending on the network layout using the command `header-format`.

If the analyzer system is directly connected to the destination interface, then the only parameters that can be configured on the port are the MTU, speed and port based flow control. Priority flow control is not supported in this case. However, if the analyzer system is indirectly connected to the destination interface, there are two options for switching the mirrored data to the analyzer system:

- A VLAN tag may be added to the Ethernet header of the mirrored traffic
- An Ethernet header can be added with include a new destination address and VLAN tag



It must be taken into account that adding headers increases packet size.

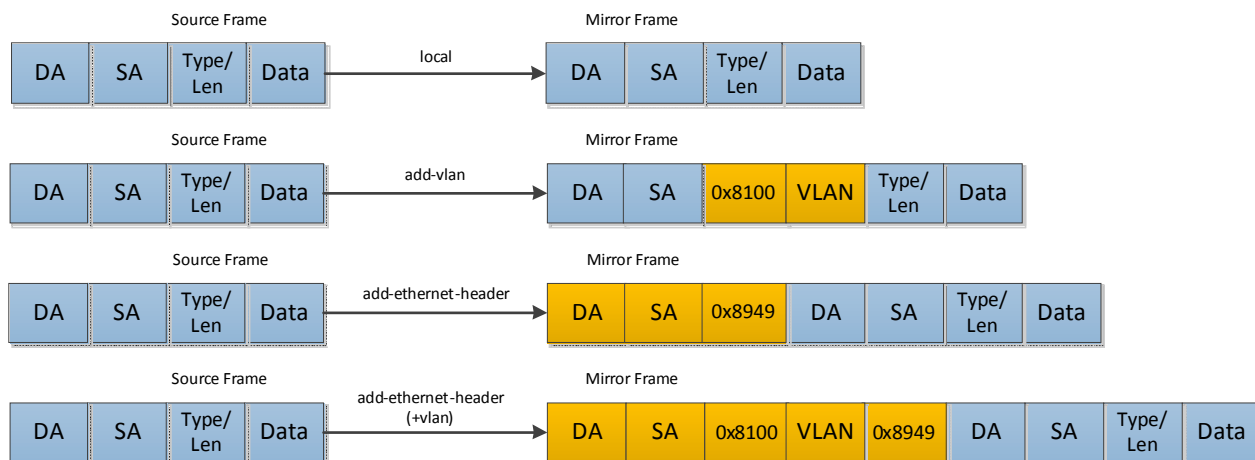Figure 26: Header Format Options

5.16.1.4 Congestion Control

The destination ports might receive pause frames that lead to congestion in the switch port. In addition, too much traffic directed to the analyzer port (for example 40GbE mirror port is directed into 10GbE analyzer port) might also lead to congestion.

In case of congestion:

- When best effort mode is enabled on the analyzer port, SwitchX drops excessive traffic headed to the analyzer port using tail drop mechanism, however, the regular data (mirrored data heading to its original port) does not suffer from a delay or drops due to the analyzer port congestion.
- When the best effort mode on the analyzer port is disabled, the SwitchX does not drop the excessive traffic. This might lead to buffer exhaustion and data path packet loss.

The default behavior in congestion situations is to drop any excessive frames that may clog the system.



ETS, PFC and FC configurations do not apply to the destination port.

5.16.1.5 Truncation


When enabled, the system can truncate the mirrored packets into smaller 64-byte packets (default) which is enough to capture the packets' L2 and L3 headers.

5.16.2 Configuring Mirroring Sessions

Figure 27 presents two network scenarios with direct and remote connectivity to the analyzer equipment. Direct connectivity is when the analyzer is connected to the analyzer port of the switch. In this case there is no need for adding an L2 header to the mirrored traffic. Remote con-

nectivity is when the analyzer is indirectly connected to the analyzer port of the switch. In this situation, adding an L2 header may be necessary depending on the network's setup.

Figure 27: Mirroring Session

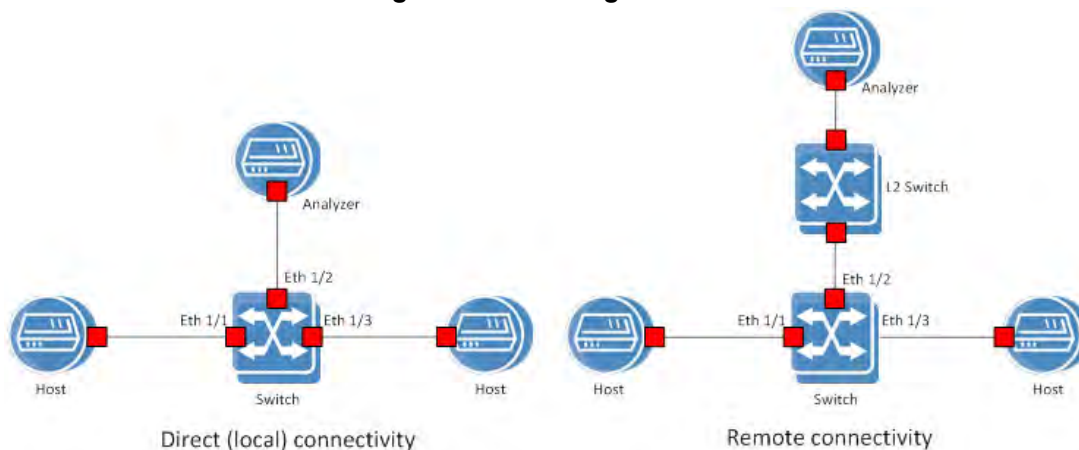

➤ **To configure a mirroring session:**

Step 1. Create a session. Run:

```
switch (config) # monitor session 1
```



This command enters a monitor session configuration mode. Upon first implementation the command also creates the session.

Step 2. Add source interface(s). Run:

```
switch (config monitor session 1) # add source interface ethernet 1/1 direction both
```

Step 3. Add destination interface. Run:

```
switch (config monitor session 1) # destination interface ethernet 1/2
```

Step 4. (Optional) Set header format. Run:

```
switch (config monitor session 1) # header-format add-ethernet-header destination-mac  
00:0d:ec:f1:a9:c8 add-vlan 10 priority 5 traffic-class 2
```



For remote connectivity use the header formats add-vlan or add-ethernet-header. For local connectivity, use local.

Step 5. (Optional) Truncate the mirrored traffic to 64-byte packets. Run:

```
switch (config monitor session 1) # truncate
```

Step 6. (Optional) Set congestion control. Run:

```
switch (config monitor session 1) # congestion pause-excessive-frames
```



The default for this command is to drop excessive frames. The `pause-excessive-frames` option uses flow control to regulate the traffic from the source interfaces.



If the option `pause-excessive-frame` is selected, make sure that flow control is enabled on **all** source interfaces on the ingress direction of the monitoring session using the command `flowcontrol` in the interface configuration mode.

Step 7. Enable the session. Run:

```
switch (config monitor session 1) # no shutdown
```

5.16.3 Verifying Mirroring Sessions

- *To verify the attributes of a specific mirroring session:*

```
switch (config) # show monitor session 1
Admin: Enable
Status: Up
Truncate: Enable
Destination interface: eth1/2
Congestion type: pause-excessive-frames
Header format: add-ethernet-header
                - traffic class 2
                - vlan 10
                - priority 5
                - destination-mac 00:0d:ec:f1:a9:c8

Source interfaces
Interface direction
-----
eth1/1      both
```

- *To verify the attributes of running mirroring sessions:*

```
switch (config) # show monitor session summary
Session Admin      Status  Mode      Destination  Source
1        Enable        Up      add-eth   eth1/2       eth1/1(b)
2        Disable       Down    add-vlan  eth1/2       eth1/8(i), po1(e)
3        Enable        Up      add-eth   eth1/5       eth1/18(e)
7        Disable       Down    local
```

5.16.4 Commands

5.16.4.1 Config

monitor session

monitor session <session-id>
no monitor session <session-id>

Creates session and enters monitor session configuration mode upon using this command for the first time.

The no form of the command deletes the session.

Syntax Description	session-id	The monitor session ID. Range is: <ul style="list-style-type: none">• 1-7 for SwitchX®• 1-2 for Spectrum™
Default	N/A	
Configuration Mode	Config	

History	3.3.3500
Role	admin
Example	switch (config)# monitor session 1 switch (config monitor session 1)#
Related Commands	
Note	

5.16.4.2 Config Monitor Session

destination interface

destination interface <type> <number> [force]
no destination interface

Sets the egress interface number.
The no form of the command deletes the destination interface.

Syntax Description	interface <type> <number> force	Sets the interface type and number (e.g. ethernet 1/2) The user does not need to shutdown the port prior the operation.
Default	no destination interface	
Configuration Mode	Config Monitor Session	
History	3.3.3500 3.3.4100 3.6.4006	First version Added force argument Added note
Role	admin	
Example	<pre>switch (config monitor session 1) # destination interface ethernet 1/2 switch (config monitor session 1)#</pre>	
Related Commands		
Note	Port can't be used as destination port in monitor session when storm-control is configured on port. Force command cannot remove storm-control configuration. Error output: Configuration error, storm control is configured on port	

shutdown

shutdown
no shutdown

Disables the session.
The no form of the command enables the session.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config Monitor Session
History	3.3.3500
Role	admin
Example	<pre>switch (config monitor session 1) # no shutdown switch (config monitor session 1)#</pre>
Related Commands	
Note	

add source interface

add source interface <type> <number> **direction** <d-type>
no source interface <type> <number>

Adds a source interface to the mirrored session.
The no form of the command deletes the source interface.

Syntax Description	interface <type> <number> direction <d-type>	Configures interface as “ethernet” or “port-channel”. Configures the direction of the mirrored traffic. The options are as follows: <ul style="list-style-type: none">• egress – sets the egress traffic to be monitored• ingress – sets the ingress traffic to be monitored• both – sets egress and ingress traffic to be monitored
Default	N/A	
Configuration Mode	Config Monitor Session	
History	3.3.3500 3.5.1000	Updated
Role	admin	
Example	<pre>switch (config monitor session 1) # add source interface ethernet 1/1 direction ingress switch (config monitor session 1)#</pre>	
Related Commands		
Note	<ul style="list-style-type: none">• If mirroring is configured in one direction (e.g. ingress) on an interface and then is configured in the other direction (e.g. egress), then the ultimate setting is “both”• Spectrum™ based switch systems only support mirroring ingress traffic	

header-format

```
header-format {local [traffic-class <tc>] | add-vlan <vlan-id> [priority <prio>]
[traffic-class <tc>] [switch-priority <sp>] | add-ethernet-header destination-mac
<mac-address> [add-vlan <vlan-id> [priority <prio>]] [traffic-class <tc>]}
no header-format
```

Sets the header format of the mirrored traffic.

The no form of the command resets the parameter values back to default.

Syntax Description	local	The mirrored header of the frame is not changed.
	traffic-class <tc>	Changes the egress traffic class of the frame. Range: 0-3.
	switch-priority <sp>	Changes the egress switch priority of the frame. Range: 0-15.
	add-vlan <vlan-id>	An 802.1q VLAN tag is added to the frame.
	priority <prio>	The priority to be added to the Ethernet header. Range: 0-7.
	add-ethernet-header	Adds an Ethernet header to the mirrored frame.
	destination-mac	The destination MAC address of the added Ethernet frame.
Default	no-change vlan 1 priority 0 traffic-class 0	
Configuration Mode	Config Monitor Session	
History	3.3.3500	
	3.5.1000	Added switch-priority parameter
Role	admin	
Example	<pre>switch (config monitor session 1) # header-format add-ethernet-header destination-mac 00:0d:ec:f1:a9:c8 add-vlan 10 priority 5 traffic-class 2 switch (config monitor session 1)#</pre>	

Related Commands

Note

- If add-ethernet-header is used, the source MAC address is the one attached to the switch
 - The parameter traffic-class is only available on SwitchX® based switch systems
 - The parameter switch-priority is only available on Spectrum™ based switch systems
-
-

truncate

truncate
no truncate

Truncates the mirrored frames to 64-byte packets.
 The no form of the command disables truncation.

Syntax Description	N/A
Default	no truncate
Configuration Mode	Config Monitor Session
History	3.3.3500
Role	admin
Example	<pre>switch (config monitor session 1) # truncate switch (config monitor session 1)#</pre>
Related Commands	
Note	This command applies for all sessions on the same analyzer port.

congestion

congestion [**drop-excessive-frames** | **pause-excessive-frames**]
no congestion

Sets the system's behavior when congested
The no form of the command disables truncation.

Syntax Description	drop-excessive-frames	Drops excessive frames.
	pause-excessive-frames	Pauses excessive frames.
Default	drop-excessive-frames	
Configuration Mode	Config Monitor Session	
History	3.3.3500	
	3.3.4000	Added Syntax Description.
Role	admin	
Example	<pre>switch (config monitor session 1) # congestion pause-excessive-frames switch (config monitor session 1)#</pre>	
Related Commands		
Note	This command applies for all sessions on the same analyzer port.	

5.16.4.3 Show

show monitor session**show monitor session <session-id>**

Displays monitor session configuration and status.

Syntax Description	session-id	The monitor session ID. Range is 1-7.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.3500	
	3.5.1000	Updated Note section
Role	admin	
Example	<pre>switch (config) # show monitor session 1 Admin: Enable Status: Up Truncate: Enable Destination interface: eth1/2 Congestion type: pause-excessive-frames Header format: add-ethernet-header - traffic class 2 - vlan 10 - priority 5 - destination-mac 00:0d:ec:f1:a9:c8 Source interfaces Interface direction ----- eth1/1 both switch (config) #</pre>	
Related Commands		
Note	The output provided is from a SwitchX® based switch system.	

show monitor session summary

show monitor session summary

Displays monitor session configuration and status summary.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.3.3500
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config) # show monitor session summary Session Admin Status Mode Destination Source 1 Enable Up add-eth eth1/2 eth1/1(b) 2 Disable Down add-vlan eth1/2 eth1/8(i), pol(e) 3 Enable Up add-eth eth1/5 eth1/18(e) 7 Disable Down local switch (config) #</pre>
----------------	---

Related Commands	
-------------------------	--

Note	
-------------	--


5.17 sFlow

sFlow (ver. 5) is a procedure for statistical monitoring of traffic in networks. MLNX-OS supports an sFlow sampling mechanism (agent), which includes collecting traffic samples and data from counters. The sFlow datagrams are then sent to a central collector.

The sampling mechanism must ensure that any packet going into the system has an equal chance of being sampled, irrespective of the flow to which it belongs. The sampling mechanism provides the collector with periodical information on the amount (and load) of traffic per interface by loading the counter samples into sFlow datagrams.

The sFlow packets are encapsulated and sent in UDP over IP. The UDP port number that is used is the standard 6343 by default.

Figure 28: sFlow Functionality Overview

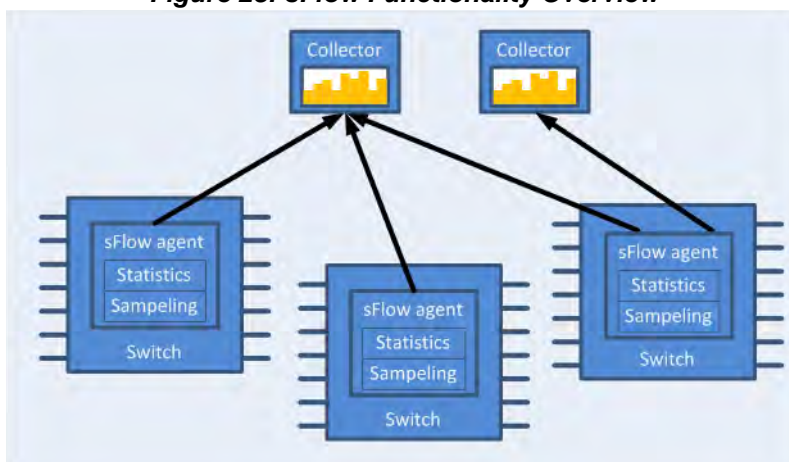

5.17.1 Flow Samples

The sFlow agent samples the data path based on packets.

Truncation and sampling rate are the two parameters that influence the flow samples. In case of congestion the flow samples can be truncated to a predefined size before it is assigned to the CPU. The truncation can be set to any value between 64 to 256 bytes with the default being 128 bytes.

The sampling rate can be adjusted by setting an average rate. The system assures that a random number of packets is sampled, however, the sample rate on average converges to the configured rate. Valid values range between 4000 to 16777215 packets.

5.17.2 Statistical Samples

The sFlow agent samples interface counters time based. Polling interval is configurable to any value between 5-3600 seconds with the default being 20 seconds.

The following statistics are gathered by the CPU:

Table 58 - List of Statistical Counters

Counter	Description
Total packets	The number of packets that pass through sFlow-enabled ports.
Number of flow samples	The number of packets that are captured by the sampling mechanism.
Number of statistic samples	The number of statistical samples.
Number of discarded samples	The number of samples that were discarded.
Number of datagrams	The number of datagrams that were sent to the collector.

5.17.3 sFlow Datagrams

The sFlow datagrams contain flow samples and statistical samples.

The sFlow mechanism uses IP protocol, therefore if the packet length is more than the interface MTU, it becomes fragmented by the IP stack. The MTU may also be set manually to anything in the range of 200-9216 bytes. The default is 1400 bytes.

5.17.4 Sampled Interfaces

sFlow must be enabled on physical or LAG interfaces that require sampling. When adding a port to a LAG, sFlow must be disabled on the port. If a port with enabled sFlow is configured to be added to a LAG, the configuration is rejected. Removing a port from a LAG disables sFlow on the port regardless of the LAG's sFlow status.

5.17.5 Configuring sFlow

➤ *To configure the sFlow agent:*

Step 1. Unlock the sFlow commands. Run:

```
switch (config) # protocol sflow
```

Step 2. Enable sFlow on the system. Run:

```
switch (config) # sflow enable
```

Step 3. Enter sFlow configuration mode. Run:

```
switch (config) # sflow
switch (config sflow) #
```

Step 4. Set the central collector's IP. Run:

```
switch (config sflow) # collector-ip 10.10.10.10
```

Step 5. Set the agent-ip used in the sFlow header. Run:

```
switch (config sflow) # agent-ip 20.20.20.20
```

Step 6. (Optional) Set the sampling rate of the mechanism. Run:

```
switch (config sflow) # sampling-rate 16000
```



This means that one every 16000 packet gets collected for sampling.

Step 7. (Optional) Set the maximum size of the data path sample. Run:

```
switch (config sflow) # max-sample-size 156
```

Step 8. (Optional) Set the frequency in which counters are polled. Run:

```
switch (config sflow) # counter-poll-interval 19
```

Step 9. (Optional) Set the maximum size of the datagrams sent to the central collector. Run:

```
switch (config sflow) # max-datagram-size 1500
```

Step 10. Enable the sFlow agent on the desired interfaces. Run:

```
switch (config interface ethernet 1/1)# sflow enable  
switch (config interface port-channel 1)# sflow enable
```

5.17.6 Verifying sFlow

➤ *To verify the attributes of the sFlow agent:*

```
switch (config)# show sflow

sflow protocol enabled
sflow enabled
sampling-rate 16000
max-sampled-size 156
counter-poll-interval 19
max-datagram-size 1500
collector-ip 10.10.10.10
collector-port 6343
agent-ip 20.20.20.20
ingress ports
Interfaces
Ethernet: eth1/1
Port-channel: po1
Statistics:
Total Samples: 2000
Number of flow samples: 1200
Estimated Number of flow discarded: 0
Number of statistic samples: 800
Number of datagrams: 300
```

5.17.7 Commands

5.17.7.1 Config

protocol sflow

protocol sflow
no protocol sflow

Unhides the sFlow commands.
The no form of the command deletes sFlow configuration and hides the sFlow commands.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config
History	3.3.3500
Role	admin
Example	switch (config) # protocol sflow switch (config) #

Related Commands

Note

sflow enable (global)

sflow enable
no sflow enable

Enables sFlow in the system.
The no form of the command disables sFlow without deleting the configuration.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config
History	3.3.3500
Role	admin
Example	switch (config) # sflow enable switch (config) #
Related Commands	
Note	

sflow

sflow

Enters sFlow configuration mode.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.3.3500
Role	admin
Example	switch (config) # sflow switch (config sflow) #
Related Commands	
Note	

5.17.7.2 Config sFlow

sampling-rate

sampling-rate <rate>
no sampling-rate

Sets sFlow sampling ratio.
The no form of the command resets this parameter to its default value.

Syntax Description	rate	Sets the number of packets passed before selecting one for sampling. The range is 4000-16777215. Zero disables sampling.
Default	16000	
Configuration Mode	Config sFlow	
History	3.3.3500	
Role	admin	
Example	switch (config sflow) # sampling-rate 16111 switch (config sflow) #	
Related Commands		
Note		

max-sample-size

max-sample-size <packet-size>
no max-sample-size

Sets the maximum size of sampled packets by sFlow.
 The no form of the command resets the parameter to its default value.

Syntax Description	packet-size	The sampled packet size. The range is 64-256 bytes.
Default	128 bytes	
Configuration Mode	Config sFlow	
History	3.3.3500	
Role	admin	
Example	<pre>switch (config sflow) # max-sample-size 165 switch (config sflow) #</pre>	
Related Commands		
Note	Sampled payload beyond the configured size is discarded.	

counter-poll-interval

counter-poll-interval <seconds>
no counter-poll-interval

Sets the sFlow statistics polling interval.
The no form of the command resets the parameter to its default value.

Syntax Description	seconds	The sFlow statistics polling interval in seconds. Range is 5-3600 seconds. Zero disables the statistic polling.
Default	20 seconds	
Configuration Mode	Config sFlow	
History	3.3.3500	
Role	admin	
Example	switch (config sflow) # counter-poll-interval 30 switch (config sflow) #	
Related Commands		
Note		

max-datagram-size

max-datagram-size <packet-size>
no max-datagram-size

Sets the maximum sFlow packet size to be sent to the collector.
 The no form of the command resets the parameter to its default value.

Syntax Description	packet-size	The packet size of the packet being sent to the collector. The range is 200-9216 bytes.
Default	1400 bytes	
Configuration Mode	Config sFlow	
History	3.3.3500	
Role	admin	
Example	<pre>switch (config sflow) # max-datagram-size 9216 switch (config sflow) #</pre>	
Related Commands		
Note	This packet contains the data sample as well as the statistical counter data.	

collector-ip

collector-ip <ip-address> [udp-port <udp-port-number>]
no collector-ip [<ip-address> udp-port]

Sets the collector's IP.

The no form of the command resets the parameters to their default values.

Syntax Description	ip-address	The collector IP address.
	udp-port <udp-port-number>	Sets the collector UDP port number.
Default	ip-address: 0.0.0.0 udp-port-number: 6343	
Configuration Mode	Config sFlow	
History	3.3.3500	
Role	admin	
Example	switch (config sflow) # collector-ip 10.10.10.10 switch (config sflow) #	
Related Commands		
Note		

agent-ip

agent-ip {<ip-address> | interface [ethernet <slot/port> | port-channel <channel-group>] | <if-name> | loopback <number> | vlan <id>}
no agent-ip

Sets the IP address associated with this agent.

The no form of the command resets the parameters to their default values.

Syntax Description	interface	Configures a specific ethernet/port-channel interface's agent IP.
	if-name	Interface name (e.g. mgmt0, mgmt1).
	ip-address	The sFlow agent's IP address (i.e. the source IP of the packet).
	loopback <number>	Loopback interface number. Range: 1-32.
	vlan <id>	Interface VLAN. Range: 1-4094.
Default	ip-address: 0.0.0.0	
Configuration Mode	Config sFlow	
History	3.3.3500	
	3.3.5200	Updated "interface" parameters
Role	admin	
Example	<pre>switch (config sflow) # agent-ip 20.20.20.20 switch (config sflow) #</pre>	
Related Commands		
Note	The IP address here is used in the sFlow header.	

clear counters

clear counters

Clears sFlow counters.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config sFlow
History	3.3.3500
Role	admin
Example	<pre>switch (config sflow) # clear counters switch (config sflow) #</pre>
Related Commands	
Note	

sflow enable (interface)

sflow enable
no sflow enable

Enables sFlow on this interface.
 The no form of the command disables sFlow on the interface.

Syntax Description	N/A
Default	disable no view-port-channel member
Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel
History	3.3.3500 3.3.4500 Added MLAG port-channel configuration mode
Role	admin
Example	switch(config interface ethernet 1/1)# sflow enable ... switch(config interface port-channel 1)# sflow enable
Related Commands	
Note	

5.17.7.3 Show

show sflow

show sflow

Displays sFlow configuration and counters.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.3.3500
	3.6.3004 Updated output example

Role	admin
-------------	-------

Example	<pre>switch (config)# show sflow sflow protocol enabled sflow enabled sampling-rate 16000 max-sampled-size 156 counter-poll-interval 19 max-datagram-size 1500 collector-ip 10.10.10.10 collector-port 6343 agent-ip 20.20.20.20 ingress ports Interfaces Ethernet: eth1/1 Port-channel: pol Statistics: Total Samples: 2000 Number of flow samples: 1200 Estimated Number of flow discarded: 0 Number of statistic samples: 800 Number of datagrams: 300</pre>
----------------	---

Related Commands	
-------------------------	--

Note	
-------------	--

5.18 Transport Applications

5.18.1 RDMA over Converged Ethernet (RoCE)


5.18.1.1 RoCE Overview

Remote Direct Memory Access (RDMA) is the remote memory management capability that allows server to server data movement directly between application memory without any CPU involvement. RDMA over Converged Ethernet (RoCE) is a mechanism to provide this efficient data transfer with very low latencies on loss-less Ethernet networks. With advances in data center convergence over reliable Ethernet, ConnectX® EN with RoCE uses the proven and efficient RDMA transport to provide the platform for deploying RDMA technology in mainstream data center application at 10GigE and 40GigE link-speed. ConnectX® EN with its hardware offload support takes advantage of this efficient RDMA transport services over Ethernet to deliver ultra-low latency for performance-critical and transaction intensive applications such as financial, database, storage, and content delivery networks. RoCE encapsulates IB transport and GRH headers in Ethernet packets bearing a dedicated ether type. While the use of GRH is optional within subnets, it is mandatory when using RoCE. Applications written over IB verbs should work seamlessly, but they require provisioning of GRH information when creating address vectors. The library and driver are modified to provide mapping from GID to MAC addresses required by the hardware.

5.18.1.1.1 IP Routable (RoCEv2)

A straightforward extension of the RoCE protocol enables traffic to operate in layer 3 environments. This capability is obtained via a simple modification of the RoCE packet format. Instead of the GRH used in RoCE, routable RoCE packets carry an IP header which allows traversal of IP L3 Routers and a UDP header that serves as a stateless encapsulation layer for the RDMA Transport Protocol Packets over IP.

Figure 29: RoCEv2 and RoCE Frame Format Differences

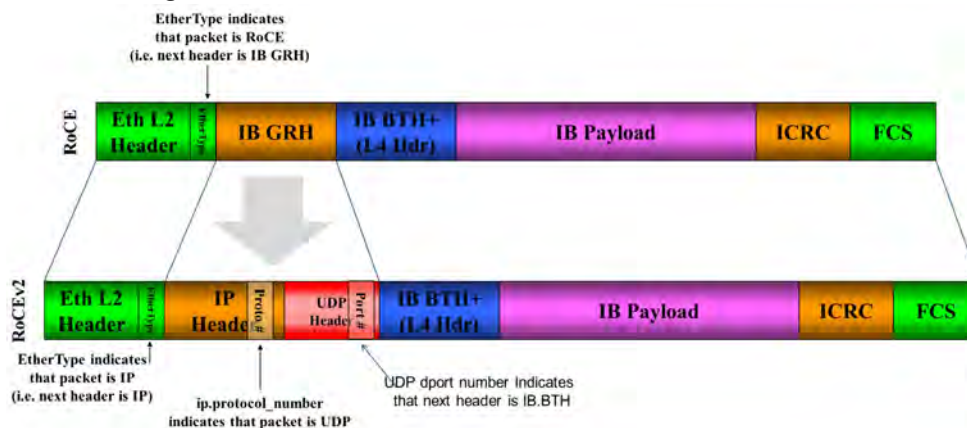


The proposed RoCEv2 packets use a well-known UDP destination port value that unequivocally distinguishes the datagram. Similar to other protocols that use UDP encapsulation, the UDP source port field is used to carry an opaque flow-identifier that allows network devices to imple-

ment packet forwarding optimizations (e.g. ECMP) while staying agnostic to the specifics of the protocol header format.

Furthermore, since this change exclusively affects the packet format on the wire, and due to the fact that with RDMA semantics packets are generated and consumed below the AP applications can seamlessly operate over any form of RDMA service (including the routable version of RoCE as shown in Figure 2), in a completely transparent way¹.

Figure 30: RoCEv2 Protocol Stack

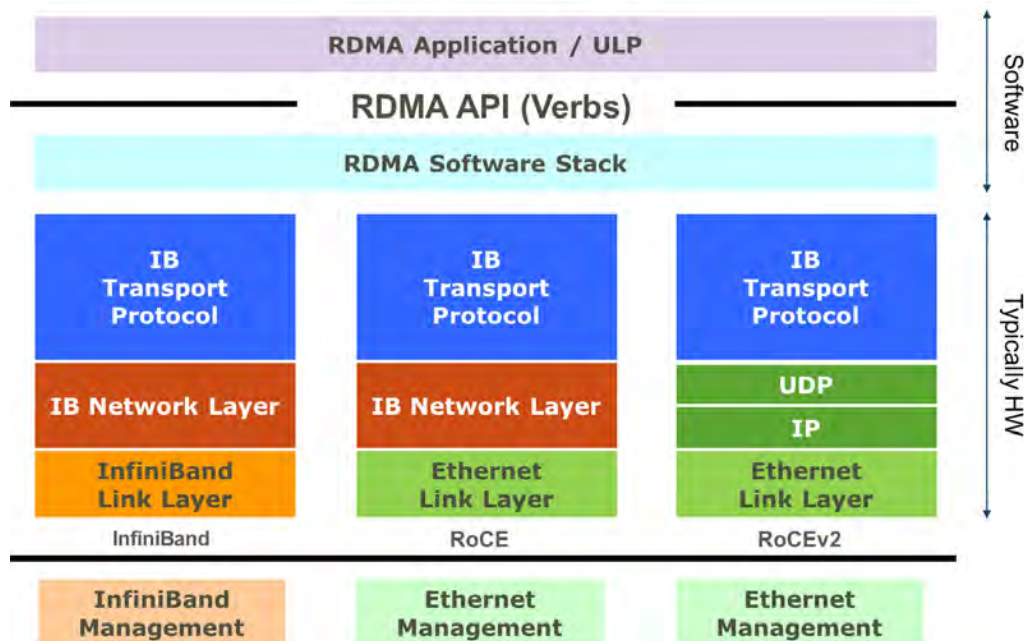

5.18.1.2 RoCE Configuration

In order to function reliably, RoCE requires a form of flow control. While it is possible to use global flow control, this is normally undesirable, for performance reasons.

The normal and optimal way to use RoCE is to use Priority Flow Control (PFC). To use PFC, it must be enabled on all endpoints and switches in the flow path.

In the following section we present instructions to configure PFC on Mellanox ConnectX™ cards. There are multiple configuration steps required, all of which may be performed via PowerShell. Therefore, although we present each step individually, you may ultimately choose to write a PowerShell script to do them all in one step. Note that administrator privileges are required for these steps.

For further information, please refer to the following URL:

<http://blogs.technet.com/b/josebda/archive/2012/07/31/deploying-windows-server-2012-with-smb-direct-smb-over-rdma-and-the-mellanox-connectx-3-using-10gbe-40gbe-roce-step-by-step.aspx>

1. Standard RDMA APIs are IP based already for all existing RDMA technologies

5.18.1.2.1 Prerequisites

The following are the driver's prerequisites in order to set or configure RoCE:

- ConnectX®-3 and ConnectX®-3 Pro firmware version 2.30.3000 or higher
- Set HCA to use Ethernet protocol:
Display the Device Manager and expand "System Devices".

5.18.1.2.2 Configuring Windows Host



Since PFC is responsible for flow controlling at the granularity of traffic priority, it is necessary to assign different priorities to different types of network traffic.

As per RoCE configuration, all ND/NDK traffic is assigned to one or more chosen priorities, where PFC is enabled on those priorities.

Configuring Windows host requires configuring QoS.

5.18.1.2.2.1 Using Global Pause Flow Control (GFC)

- *To use Global Pause Flow Control (GFC) mode, disable QoS and Priority:*

```
PS $ Disable-NetQosFlowControl
PS $ Disable-NetAdapterQos
```

5.18.1.3 Configuring Switch Systems

- *To enable RoCE, the SwitchX should be configured as follows:*
- Ports facing the host should be configured as access ports, and either use global pause or Port Control Protocol (PCP) for priority flow control
- Ports facing the network should be configured as trunk ports, and use Port Control Protocol (PCP) for priority flow control

5.18.1.4 Configuring Router (PFC only)

The router uses L3's DSCP value to mark the egress traffic of L2 PCP. The required mapping, maps the three most significant bits of the DSCP into the PCP. This is the default behavior, and no additional configuration is required.

5.18.1.4.1 Copying Port Control Protocol (PCP) Between Subnets

The captured PCP option from the Ethernet header of the incoming packet can be used to set the PCP bits on the outgoing Ethernet header.

5.18.1.5 Configuring the RoCE Mode

Configuring the RoCE mode requires the following:

- RoCE mode is configured per-driver and is enforced on all the devices in the system



The supported RoCE modes depend on the firmware installed. If the firmware does not support the needed mode, the fallback mode would be the maximum supported RoCE mode of the installed NIC.

RoCE mode can be enabled and disabled via PowerShell.

➤ **To enable RoCE using the PowerShell:**

- Open the PowerShell and run:

```
Set-MlnxDriverCoreSetting -RoceMode 1
```

➤ **To enable RoCEv2 using the PowerShell:**

- Open the PowerShell and run:

```
Set-MlnxDriverCoreSetting -RoceMode 2
```

➤ **To disable any version of RoCE using the PowerShell:**

Open the PowerShell and run:

```
Set-MlnxDriverCoreSetting -RoceMode 0
```

➤ **To check current version of RoCE using the PowerShell:**

Step 1. Open the PowerShell and run:

```
Get-MlnxDriverCoreSetting
```

Step 2. Example output:

```
Caption           : DriverCoreSettingData 'mlx4_bus'
Description      : Mellanox Driver Option Settings
.
.
.
RoceMode         : 0
```

5.19 802.1x Protocol

The 802.1x standard describes a way to authenticate hosts (or supplicants) and to allow connection only to a list of allowed hosts pre-configured on an authentication server. The authentication is performed by the switch (authenticator) which negotiates the authentication with a RADIUS server (authentication server). This allows to block traffic from non-authenticated sources.

The 802.1x protocol defines the following roles:

- Supplicant – the host. It provides the authentication credentials to the authenticator and awaits approval.
- Authenticator – the device that connects the supplicant to the network, and checks the authentication with the authentication server. The authenticator is also in charge of blocking and isolating of new client till authenticated and allowing communication once the client has passed the authentication. HPE M-series Switch acts as an authenticator.
- Authentication server – a RADIUS server which can authenticate the user.



The 802.1x is available only on access physical ports. It is not available on LAG and MLAG ports.



A local analyzer port cannot support 802.1x protocol.



802.1x cannot be activated on router port interfaces.



802.1x cannot run on a port configured to switchport trunk or hybrid.



Management interfaces cannot be configured as 802.1x port access entity (PAE) authenticators.

5.19.1 802.1x Operating Modes

The following operating modes are supported in 802.1x:

- Single host – only one supplicant can communicate through the port.

Once authentication of the supplicant is accepted by the authentication server, the switch allows it access. If the supplicant logs off or the port state is changed, the port becomes unauthenticated. And if a different supplicant tries to access through this port, its bidirectional traffic is discarded (including authentication traffic).



An exception to this is multicast and broadcast traffic which do get transmitted over the interface once authenticated and are exposed to an unauthorized supplicant if it exists.

- Multi-host mode – allows connection of multiple hosts over a single port. Only the first supplicant is authenticated. Subsequent hosts have network access without the need to authenticate.

5.19.2 Configuring 802.1x

➤ *To configure 802.1x on the switch*

Step 1. Enable 802.1x protocol. Run:

```
switch (config) # protocol dot1x
```

Step 2. Enable the system as authenticator. Run:

```
switch (config) # dot1x system-auth-control
```

Step 3. Configure RADIUS server parameters. Run:

```
switch (config) # dot1x radius-server host 10.10.10.10 key my4uth3nt1c4t10nk3y retransmit 2 timeout 3
```

Step 4. Enter the configuration mode of an Ethernet interface. Run:

```
switch (config) # interface ethernet 1/1  
switch (config interface ethernet 1/1) #
```

Step 5. Configure the interface as a port access entity authenticator. Run:

```
switch (config interface ethernet 1/1) # dot1x pae authenticator
```

Step 6. Configure the interface to perform authentication on ingress traffic. Run:

```
switch (config interface ethernet 1/1) # dot1x port-control auto
```


Step 7. Verify 802.1x configuration. Run:

```

switch (config interface ethernet 1/1) # show dot1x interfaces ethernet 1/1

Eth1/1
  PAE Status:                Enabled
  Configured host mode:      Multi-host
  Configured port-control:   Auto
  Authentication status:     Unauthorized
  Re-Authentication:         Disabled
  Re-Authentication period (sec): -
  Tx wait period (sec):     30
  Quiet period (sec):       60
  Max request retry:        2
  Last EAPOL RX source MAC: 00:00:00:00:00:00
switch (config interface ethernet 1/1)#

```

5.19.3 Commands**protocol dot1x**

protocol dot1x
no protocol dot1x

Enables 802.1x EAPOL protocol.
 The no form of the command disables 802.1x EAPOL protocol.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config
History	3.4.2008
Role	admin
Example	switch (config)# protocol dot1x
Related Commands	
Note	

dot1x clear-statistics

dot1x clear-statistics

Resets the 802.1x counters on all or a specific port.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config Config Interface Ethernet
History	3.4.2008
Role	admin
Example	switch (config)# dot1x clear-statistics
Related Commands	
Note	

dot1x pae authenticator

dot1x pae authenticator
no dot1x pae authenticator

Configures the port as a 802.1x port access entity (PAE) authenticator.
 The no form of the command disables the port from being a 802.1x PAE authenticator.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config Interface Ethernet
History	3.4.2008
Role	admin
Example	switch (config interface ethernet 1/2)# dot1x system-auth-control
Related Commands	
Note	

dot1x host-mode

dot1x host-mode [multi-host | single-host]
no dot1x host-mode

Configures the authentication mode to either multi-host or single-host.
The no form of the command resets the parameter to its default.

Syntax Description	multi-host	Sets the interface to operate in a port-based mode
	single-host	Sets the interface to operate in a MAC-based mode with support of a single supplicant per interface
Default	single-host	
Configuration Mode	Config Interface Ethernet	
History	3.4.2008	
	3.4.2300	Added “single-host” option
Role	admin	
Example	switch (config interface ethernet 1/2)# dot1x host-mode single-host	
Related Commands		
Note		

dot1x port-control

dot1x port-control [auto | force-authorized | force-unauthorized]
no dot1x port-control

Configures 802.1x port access entity (PAE) port-control.
 The no form of the command resets the parameter to its default.

Syntax Description	auto	The authenticator uses PAE authentication services to allow or block the port traffic
	force-authorized	Allows traffic on this port regardless of supplicant authorization
	force-unauthorized	Blocks traffic on this port regardless of supplicant authorization
Default	Force-authorized	
Configuration Mode	Config Interface Ethernet	
History	3.4.2008	
Role	admin	
Example	switch (config interface ethernet 1/2)# dot1x port-control auto	
Related Commands		
Note		

dot1x radius-server host

**dot1x radius-server host <IP address> [enable | auth-port <port> | key <password> | prompt-key | retransmit <retries> | timeout <seconds>]
no dot1x radius-server host <IP address> enable**

Configure 802.1x RADIUS server IP address.
The no form of the command disables 802.1x RADIUS server.

Syntax Description	auth-port	Sets 802.1x RADIUS port to use with this server. Range: 1-65535.
	enable	Sets 802.1x RADIUS as administratively enabled
	key	Configures 802.1x global RADIUS shared secret for servers.
	prompt-key	Prompts for key, rather than entering on command line
	retransmit	Configure 802.1x global RADIUS retransmit count for servers. The time configured is in seconds. Range: 0-5.
	timeout	Configures 802.1x global RADIUS timeout value for servers. The time configured is in seconds. Range: 1-60.
Default	auth-port: 1812 key: empty string retransmit: 1 timeout: 3	
Configuration Mode	Config	
History	3.4.2008	
Role	admin	
Example	switch (config)# dot1x radius-server host 10.10.10.10 auth-port 65535 prompt-key enable	
Related Commands		
Note	<ul style="list-style-type: none">• The no form of the various parameters resets them to their default values as indicated in the Default section above• It is possible to configure up to 5 RADIUS servers• It is possible to configure only 1 authentication port per RADIUS server IP	

dot1x reauthenticate

dot1x reauthenticate
no dot1x reauthenticate

Enables supplicant re-authentication according to the configuration of command “dot1x timeout reauthentication”.
 The no form of the command disables supplicant re-authentication.

Syntax Description	N/A
Default	No re-authentication
Configuration Mode	Config Interface Ethernet
History	3.4.2008
Role	admin
Example	switch (config interface ethernet 1/2)# dot1x reauthenticate
Related Commands	
Note	

dot1x system-auth-control

dot1x system-auth-control
no dot1x system-auth-control

Enables the system as authenticator.
The no form of the command disables the system as authenticator.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config
History	3.4.2008
Role	admin
Example	switch (config)# dot1x system-auth-control
Related Commands	
Note	

dot1x timeout reauthentication

dot1x timeout reauthentication <period>
no dot1x timeout reauthentication

Configures the number of seconds between re-authentication attempts.
 The no form of the command resets the parameter to its default.

Syntax Description	period	Time in second. Range: 1-65535 seconds.
Default	3600 seconds	
Configuration Mode	Config Interface Ethernet	
History	3.4.2008	
Role	admin	
Example	switch (config interface ethernet 1/2)# dot1x timeout reauthentication 3600	
Related Commands		
Note		

dot1x timeout quiet-period

dot1x timeout quiet-period <period>
no dot1x timeout quiet-period

Configures the number of seconds that the authenticator remains quiet following a failed authentication exchange with the supplicant.
The no form of the command resets the parameter to its default.

Syntax Description	period	Time in second. Range: 1-65535 seconds.
Default	60 seconds	
Configuration Mode	Config Interface Ethernet	
History	3.4.2008	
Role	admin	
Example	switch (config interface ethernet 1/2)# dot1x timeout quiet-period 60	
Related Commands		
Note		

dot1x timeout tx-period

dot1x timeout tx-period <period>
no dot1x timeout tx-period

Configures the maximum number of seconds that the authenticator waits for supplicant response of EAP-request/identify frame before retransmitting the request.

The no form of the command resets the parameter to its default.

Syntax Description	period	Time in second. Range: 1-65535 seconds.
Default	30 seconds	
Configuration Mode	Config Interface Ethernet	
History	3.4.2008	
Role	admin	
Example	switch (config interface ethernet 1/2)# dot1x timeout quiet-period 30	
Related Commands		
Note		

dot1x max-req

dot1x max-req <retries>
no dot1x max-req

Configures the maximum amount of retries for the authenticator to communicate with the supplicant over EAP.
The no form of the command resets the parameter to its default.

Syntax Description	retries	The number of request retries. Range: 1-10.
Default	2	
Configuration Mode	Config Interface Ethernet	
History	3.4.2008	
Role	admin	
Example	switch (config interface ethernet 1/2)# dot1x max-req 2	
Related Commands		
Note		

show dot1x

show dot1x

Displays 802.1x information on all interfaces.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.4.2008
Role	admin
Example	<pre>switch (config)# show dot1x System authentication is enabled ----- Port Pae Host-mode Port-control Status ----- Eth1/1 Enabled multi-host auto unauthorized Eth1/2 Disabled multi-host force-authorized down Eth1/3 Disabled multi-host force-authorized down Eth1/4 Disabled multi-host force-authorized down Eth1/5 Disabled multi-host force-authorized down Eth1/6 Disabled multi-host force-authorized down Eth1/7 Disabled multi-host force-authorized down Eth1/8 Disabled multi-host force-authorized down Eth1/9 Disabled multi-host force-authorized down ... switch (config)#</pre>
Related Commands	
Note	

show dot1x interfaces ethernet

show dot1x interfaces ethernet <slot>/<port>

Displays 802.1x interface information.

Syntax Description	<slot>/<port>	Ethernet interface
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.4.2008	
Role	admin	
Example	<pre>switch (config)# show dot1x interfaces ethernet 1/2 Eth1/2 PAE Status: Enabled Configured host mode: Multi-host Configured port-control: Auto Authentication status: Unauthorized Re-Authentication: Enabled Re-Authentication period (sec): 3600 Tx wait period (sec): 30 Quiet period (sec): 60 Max request retry: 2 Last EAPOL RX source MAC: 00:00:00:00:00:00 switch (config interface ethernet 1/2)#</pre>	
Related Commands		
Note		

show dot1x interfaces ethernet statistics

show dot1x interfaces ethernet <slot>/<port> statistics

Displays 802.1x interface information.

Syntax Description	<slot>/<port>	Ethernet interface
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.4.2008	
Role	admin	
Example	<pre>switch (config)# show dot1x interfaces ethernet 1/2 statistics Eth1/2 EAPOL frames received: 3 EAPOL frames transmitted: 2 EAPOL Start frames received: 1 EAPOL Logoff frames received: 0 EAP Response-ID frames received: 2 EAP Response frames received: 0 EAP Request-ID frames transmitted: 2 EAP Request frames transmitted: 0 Invalid EAPOL frames received: 0 EAP length error frames received: 0 Last EAPOL frame version: 1 Last EAPOL frame source: 00:1A:A0:02:E9:8E switch (config)#</pre>	

Related Commands

Note

show dot1x radius

show dot1x radius

Displays 802.1x RADIUS settings.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.4.2008
Role	admin
Example	<pre>switch (config)# show dot1x radius 802.1x RADIUS defaults: Key: ***** Timeout: 3 Retransmit: 1 No 802.1x RADIUS servers configured. switch (config)#</pre>
Related Commands	
Note	

5.20 Priority Flow Control

Priority Flow Control (PFC) provides an enhancement to the existing pause mechanism in Ethernet. The current Ethernet pause option stops all traffic on a link. PFC creates eight separate virtual links on the physical link and allows any of these links to be paused and restarted independently, enabling the network to create a no-drop class of service for an individual virtual link.

PFC offers the following features:

- Provides per-priority enabling or disabling of flow control
- Transmits PFC-PAUSE frames when the receive threshold for a particular traffic class is reached
- Provides the management capability for an administrator to configure the flow control properties on each port of the switch
- Keeps flow control disabled for all priorities on all ports by default
- Allows an administrator to enable or disable flow control per port and per priority level
- Supports flow control only on physical ports, not on logical interfaces such as tunnels or interfaces defined by sharing a physical port in multiple virtual switch contexts
- Uses the configured threshold values to set up the queue buffer spaces accordingly in the data-path
- Provides hardware abstraction layer call-outs for the following:
 - Enabling or disabling of flow control on each port for each priority
 - Configuring the queue depth for each priority on each port
- Provides trace logs for execution upon error conditions and for any event notifications from the hardware or data-path. These trace logs are a useful aid in troubleshooting.
- Allows the administrator to configure the minimum and maximum threshold values for flow control. These configurations are applied globally on all ports and priorities.

Priority Based Flow Control (PFC) provides an enhancement to the existing pause flow control mechanism as described in 802.1x.

➤ *To enable PFC globally:*

Step 1. Log in as admin.

Step 2. Enter config mode. Run:

```
switch > enable
switch # configure terminal
```

Step 3. Enable PFC globally on the switch. Run:

```
switch (config) # dcb priority-flow-control enable
This action might cause traffic loss while shutting down a port with priority-flow-control mode on
Type 'yes' to confirm  enable pfc globally: yes
```

➤ **To enable PFC per priority:**

Step 1. Log in as admin.

Step 2. Enter config mode. Run:

```
switch > enable
switch # configure terminal
```

Step 3. Enable PFC globally on the switch. Run:

```
switch (config) # dcb priority-flow-control enable
# dcb priority-flow-control enable
This action might cause traffic loss while shutting down a port with priority-flow-control mode on
Type 'yes' to confirm  enable pfc globally: yes
switch (config) #
```

Step 4. Choose the desirable priority you want to enable using the command `dcb priority-flow-control priority <pri[0..7]> enable`.

```
switch (config) # dcb priority-flow-control priority 5 enable
```

➤ **To enable PFC per interface:**

Step 1. Log in as admin.

Step 2. Change to config mode. Run:

```
switch > enable
switch # configure terminal
```

Step 3. Enable PFC globally on the switch. Run:

```
switch (config) # dcb priority-flow-control enable
```

Step 4. Choose the desirable priority you want to enable using the command `dcb priority-flow-control priority <pri[0..7]> enable`

```
switch (config) # dcb priority-flow-control 5 enable
```

Step 5. Change to Interface mode. Run:

```
switch (config) #
switch (config) # interface ethernet 1/1
switch (config interface ethernet 1/1) #
```

Step 6. Enable PFC for the specific interface:


```
switch (config interface ethernet 1/1) # dcb priority-flow-control mode on
```

When working with lossless traffic, the receiving side sends a pause frame (Xoff) to the transmitting side before the buffer is filled. When the buffer empties, the receiving side sends an un-pause frame (Xon) to the transmitting side.

5.20.1 Flow Control Threshold Configuration for Spectrum

The user has to set the buffer usage Xoff and Xon thresholds. The thresholds depend on network parameters (bandwidth, link latency, MTU) and the allocated size for the region.

Figure 31: Xon/Xoff Configuration

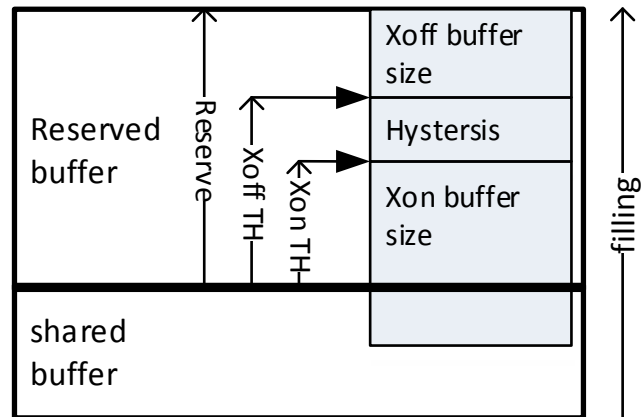

When working with global flow control mode only, a single PG shall be used and Xoff and Xon shall be set on this PG. When working with priority flow control, Xoff and Xon shall be set on each lossless PG.



See Section 5.21, “Shared Buffers,” on page 976 for more information on flow control.

5.20.2 Commands

dcB priority-flow-control enable

dcB priority-flow-control enable [force]
no dcB priority-flow-control enable [force]

Enables PFC globally on the switch.
 The no form of the command globally disables PFC on the switch.

Syntax Description	force	Forces operation
Default	PFC is disabled.	
Configuration Mode	Config	
History	3.1.0000	
	3.3.0000	Updated Example
Role	admin	

Example

```
switch (config)# dcb priority-flow-control enable
This action might cause traffic loss while shutting down a port with
priority-flow-control mode on
Type 'yes' to confirm enable pfc globally: yes
switch (config)# show dcb priority-flow-control

PFC enabled
Priority Enabled List      :
Priority Disabled List    :0 1 2 3 4 5 6 7

TC      Lossless
---      -
0       N
1       Y
2       Y
3       N

Interface      PFC admin      PFC oper
-----
1/1            Disabled       Disabled
1/2            Disabled       Disabled
1/3            Disabled       Disabled
1/4            Disabled       Disabled
...
switch (config) #
```

Related Commands show dcb priority-flow-control**Note** This command asks the user to approve traffic loss because some interfaces with DCB mode activated might get shut down.

dcb priority-flow-control priority

dcb priority-flow-control priority <prio> enable
no dcb priority-flow-control priority <prio> enable

Enables PFC per priority on the switch.

The no form of the command disables PFC per priority on the switch.

Syntax Description	prio	0-7.
Default	PFC is disabled for all priorities.	
Configuration Mode	Config	
History	3.1.0000	
Role	admin	
Example	<pre>switch (config)# dcb priority-flow-control priority 0 enable switch (config)# show dcb priority-flow-control PFC enabled Priority Enabled List : 0 Priority Disabled List : 1 2 3 4 5 6 7 TC Lossless --- - 0 N 1 Y 2 Y 3 N Interface PFC admin PFC oper ----- 1/1 Disabled Disabled 1/2 Disabled Disabled 1/3 Disabled Disabled 1/4 Disabled Disabled ... switch (config) #</pre>	
Related Commands	show dcb priority-flow-control	
Note		

dcb priority-flow-control mode on

dcb priority-flow-control mode on [force]
no dcb priority-flow-control mode

Enables PFC per interface.
The no form of the command disables PFC per interface.

Syntax Description	force	Force command implementation.
---------------------------	-------	-------------------------------

Default	PFC is disabled for all interfaces.	
----------------	-------------------------------------	--

Configuration Mode	Config Interface Ethernet Config Interface Port Channel Config Interface MLAG Port Channel	
---------------------------	--	--

History	3.1.0000	
	3.3.4500	Added MLAG port-channel configuration mode

Role	admin	
-------------	-------	--

Example	<pre>switch (config interface ethernet 1/1) # dcb priority-flow-control mode on switch (config interface ethernet 1/1) # show dcb priority-flow-control PFC enabled Priority Enabled List : 0 Priority Disabled List : 1 2 3 4 5 6 7 TC Lossless --- - 0 N 1 Y 2 Y 3 N Interface PFC admin PFC oper ----- 1/1 On Enabled 1/2 Disabled Disabled 1/3 Disabled Disabled 1/4 Disabled Disabled ... switch (config) #</pre>	
----------------	---	--

Related Commands	show dcb priority-flow-control	
-------------------------	--------------------------------	--

Note		
-------------	--	--

show dcb priority-flow-control

show dcb priority-flow-control [interface <type> <inf>] [detail]

Displays DCB priority flow control configuration and status.

Syntax Description	<table border="0"> <tr> <td>type</td> <td> <ul style="list-style-type: none"> • ethernet • port-channel </td> </tr> <tr> <td>inf</td> <td>The interface number.</td> </tr> <tr> <td>detail</td> <td>Adds details information to the show output.</td> </tr> </table>	type	<ul style="list-style-type: none"> • ethernet • port-channel 	inf	The interface number.	detail	Adds details information to the show output.
type	<ul style="list-style-type: none"> • ethernet • port-channel 						
inf	The interface number.						
detail	Adds details information to the show output.						
Default	N/A						
Configuration Mode	Any Command Mode						
History	3.1.0000						
Role	admin						
Example	<pre>switch (config interface ethernet 1/1) # show dcb priority-flow-control PFC enabled Priority Enabled List : 0 Priority Disabled List : 1 2 3 4 5 6 7 TC Lossless --- - 0 N 1 Y 2 Y 3 N Interface PFC admin PFC oper ----- 1/1 On Enabled 1/2 Disabled Disabled 1/3 Disabled Disabled 1/4 Disabled Disabled ... switch (config) #</pre>						

Related Commands

Note

5.21 Shared Buffers



This section is relevant only for Spectrum™ based switch systems.

All successfully received packets by a switch are stored on internal memory from the time they are received until the time they are transmitted. The packet buffer is fully shared between all physical ports and is hence called a shared buffer. Buffer configuration is applied in order to provide lossless services and to ensure fairness between the ports and priorities.

The buffer mechanism allows defining reserved memory allocation and limiting the usage of memory based on incoming/outgoing ports and priority of the packet. In addition, the buffer can be divided into static pools, each for a specific set of priorities. Buffer configuration mechanism allows fair enforcement from both ingress and egress sides.

5.21.1 Packet Buffering Classification

When a packet arrives to the switch it is classified according to its ingress port, egress port, and layer 2 and layer 3 header fields. The following terms are used to handle packet classification within the switch.

- Port
 - Ingress port (iPort) – the port which the packet is received on
 - Egress port (ePort) – the port on which the packet is going to be transmitted
- Priority
 - Switch priority (SP) – internal identifier of the packet priority which is used as a key for several internal switch functions and decisions, specifically buffering. The SP of the packet is assigned according to a port's trust level configuration and packet QoS identifiers in the header (PCP, DEI, DSCP).
 - Priority group (PG) – PG is combined of a group of SPs. It is used for grouping packets of several switch priorities into a single ingress buffer space.
 - Traffic class (TC) – TC is combined of a group of SPs. It is used for grouping packets of several switch priorities into a single egress queue and buffer space.

Buffers configuration mechanism is providing a way to allocate buffer space for specific traffic types based on the following classification parameters.

- iPort – traffic that arrived on a specific port
- iPort.PG – traffic that arrived on a specific port and mapped to a specific PG
- ePort – traffic that is going to be transmitted on a specific port
- ePort.TC – traffic that is going to be transmitted on a specific port and mapped to a specific TC

By default, multicast packets (including flooding and broadcast) are counted on the egress side. However, multicast packets consume the physical memory space of a single packet and, hence, using native buffering calculations, the multicast packet may negatively affect buffer utilization.

Counting multicast traffic only once is not possible since, unlike unicast traffic where the TC is used as the region indicator of egress traffic, multicast traffic can be transmitted using different TCs on different ports. Therefore, instead of using TC as an egress region indicator, SP is used. Thus, the egress region for multicast traffic is named MC,SP. Hence the following classification parameters for multicast traffic are used.

- MC – traffic to be transmitted as multicast
- MC.SP – traffic to be transmitted as multicast on a specific SP

5.21.2 Buffering Allocation

For the aforementioned classification parameters, a buffering region can be allocated. The buffering region is defined as a set of one of the following: {iPort}, {iPort.pg}, {ePort}, {ePort.TC}, {MC} or {MC.SP}.

For buffer regions, reserved and shared buffering quotas are allocated based on the following configuration parameters.

- Reserved allocation (size) – guaranteed buffering quota for the region which is not shared with other regions
- Shared allocation (shared) – best-effort buffering quota for the region which can be shared with other regions and allocated dynamically. Region usage cannot overflow this quota. Shared allocation can be set using static or dynamic threshold.
- Shared pool – static bound from which the shared space is dynamically allocated (cannot be configured for {iPort}, {ePort}, or {MC})

The iPort.PG buffer can be configured to work in one of two modes:

- Lossy – for lossy traffic
- Lossless – for lossless traffic

In this mode, the user must define the flow control thresholds (Xoff, Xon). When PG buffer occupancy reaches the threshold, the specific flow control packet is sent.

If there is a physical buffer space for an arriving packet, it is temporarily stored for processing. After processing its egress port, TC and ingress PG are defined. Then, it can be evaluated for eligibility for being stored in the buffer space until it is forwarded.

Buffer eligibility is defined based on the following conditions:

- There is available quota within at least one of the four reserved allocation regions
 - For lossy traffic: $iPort.PG.usage < iPort.PG.reserved \parallel iPort.usage < iPort.reserved \parallel ePort.TC.usage < ePort.TC.reserved \parallel ePort.usage < ePort.reserved$
 - For lossless traffic: $ePort.TC.usage < ePort.TC.reserved \parallel ePort.usage < ePort.reserved$

Note: Ingress check is not performed since all the ingress reserved space is allocated for headroom.

- If a packet is below the all aforementioned four shared allocation thresholds:
 $iPort.PG.usage < iPort.PG.shared$ && $iPort.usage < iPort.shared$ && $ePort.TC.usage < ePort.TC.shared$ && $ePort.usage < ePort.shared$

If a packet is not eligible for buffering:

- For lossy traffic: Packet is dropped
- For lossless traffic: Packet stays in headroom

The eligible packet is counted in usage for the egress regions (ePort, ePort,tc or MC, MC,SP). A packet in lossy traffic is counted for usage in the ingress regions (iPort, iPort,PG). An eligible packet in lossless traffic is counted for usage in the ingress iPort region also, but if it is not eligible and stayed in the headroom, it is counted in its ingress region (iPort,PG) causing it to reach closer to the Xoff threshold.

5.21.3 Pools

Shared buffer space can be statically divided among multiple pools. Each region (iPort, ePort, MC, iPort.PG, ePort.TC and MC.SP) is mapped to specific pools. The pools are divided to ingress pools (iPools) and egress pools (ePools).

Each pool has the following parameters:

- Size – the total size which is shared among the regions allocated to that pool. The pool's size binds the amount of cumulative shared usage of the regions that are mapped to the pool.
 - Note:** The pool size does not include the reserved sizes of regions.
- Mode – working mode
 - Static – each region has a static maximum threshold defined in bytes. The user sets the maximum shared quota for this buffer from a specific pool. It is configured in percentage out of the bounded pool size.
 - Dynamic – each region has a dynamic maximal threshold defined as alpha (α) which is the ratio between the current region usage and the pool's free space (equal to the pool usage subtracted from pool size):
 - α accepts the following values 0, 1/128, 1/64, ... 1/2, 1, 2, ..., 64, infinity
 - Buffer acceptance condition is: region usage < α *free pool space

The port region is counted against the pool that the PG/TC region of the packet is mapped to.

5.21.4 Default Configurations

5.21.4.1 Default Lossy Configuration

The default, out-of-box configuration provides the following settings:

- Pool allocation for ingress control and data packets
 - Each port has a reserved quota and in addition shared buffers

- A single buffer (PG) per port for data packets
- A single buffer (PG) per port for control packets – cannot be configured by the user
- Pool allocation for egress control and data packets
 - Each port has a (small) reserved quota and in addition shared buffers
 - 8 TC per port for data packets
 - A single buffer per port for control packets – cannot be configured by the user
- Pool allocation for egress CPU traffic
 - Each TC has a reserved quota and in addition shared buffers
- Only iPort.PG and ePort.TC enforcement is used, not iPort and ePort enforcement

All the switch-priorities are mapped to ingress PG 0. Each switch-priority i is mapped into a corresponding traffic class i .

5.21.4.2 Default Lossless Configuration

One can switch from lossy to lossless defaults by disabling/enabling global flow control.

The lossless buffer allocation is identical to the lossy default allocation with different shared buffer dynamic thresholds and with an addition of flow control thresholds.

The default Xon and Xoff thresholds are both set to 17KB. The reserved buffer is set to 90KB. It allows having a 100 meter lossless link working at 100GbE, supporting 9KB MTU packets.

5.21.5 Configuration Example

The following example exhibits how to divide the buffer among traffic priorities. Assuming that over an out-of-box lossy default configuration is set, the user here configures buffering configuration for lossless traffic classified to switch-priority 3.

The changes on the default configuration are summarized in the following:

- Ingress:
 - Default reserved PG buffer is reduced from 90KB to 20KB, freeing 70KB for lossless traffic
- Egress:
 - TC3 shared α is configured to infinite, as recommended for TCs with lossless traffic.

Example:

```
// Setting PFC on priority 3
switch (config) # dcb priority-flow-control enable force
switch (config) # dcb priority-flow-control priority 3 enable
switch (config) # interface ethernet <id> dcb priority-flow-control mode on force
// Reducing default PG size
switch (config)# interface ethernet <id> ingress-buffer iPort.pg0 map pool ipool0 type
lossy reserved 20K shared alpha 8
```

```
// Setting lossless ingress buffer PG3 and lossless egress TC3
switch (config)# interface ethernet <id> ingress-buffer iPort.pg3 map pool iPool0 type
lossless reserved 70K xoff 17K xon 17K shared alpha 2
switch (config)# interface ethernet <id> egress-buffer ePort.tc3 map pool ePool0
reserved 4K shared alpha inf
// Mapping switch priority 3 to lossless ingress PG buffer
(config)# interface ethernet <id> ingress-buffer iport.pg3 bind switch-priority 3
```

If the user wants to allocate a separate pool for the new lossless traffic. The changes needed are as follows:

- Ingress:
 - Default reserved PG buffer is reduced from 90KB to 20KB, freeing up more than 70KB for lossless traffic
 - Default pool is reduced from 7960K to 3000K. The rest is allocated to the new pool.
- Egress:
 - TC3 shared alpha is configured to infinite as recommended for TCs with lossless traffic. Default pool is reduced from 14232KB to 4888K. The rest is allocated to the new pool.

Example:

```
// Setting PFC on priority 3
switch (config)# dcb priority-flow-control enable force
switch (config)# dcb priority-flow-control priority 3 enable
switch (config)# interface ethernet <id> dcb priority-flow-control mode on force
// Reducing default PG size
switch (config)# interface ethernet <id> ingress-buffer iPort.pg0 map pool ipool0 type
lossy reserved 20K shared alpha 8
// Setting separate pool for lossless traffic
// Reducing data pool
switch (config)# pool iPool0 direction ingress size 3000 type dynamic
switch (config)# pool ePool0 direction egress size 4888 type dynamic
// Defining lossless pool #1
switch (config)# pool iPool1 direction ingress size 7768 type dynamic
switch (config)# pool ePool1 direction egress size 7768 type dynamic
// Setting lossless ingress buffer PG3 and lossless egress TC3
// Setting iPool1 for infinite alpha
switch (config)# interface ethernet <id> ingress-buffer iPort.pg3 map pool ipool1 type
lossless reserved 70K xoff 17K xon 17K shared alpha 2
switch (config)# interface ethernet <id> ingress-buffer iPort pool iPool1 reserved 0K
shared alpha inf
switch (config)# interface ethernet <id> egress-buffer ePort.tc3 map pool epool1
reserved 4K shared alpha inf
// Mapping switch priority 3 to lossless ingress PG buffer
switch (config)# interface ethernet <id> ingress-buffer iport.pg3 bind switch-priority
3
```



When the egress traffic class (TC) region buffer size exceeds the TX α (max) threshold, the non-eligible packet is dropped (does not stay in the headroom) regardless whether it belongs to a lossy or lossless ingress buffer. Therefore, the recommendation is to map lossless traffic to separate TCs than lossy traffic and to configure egress α (max) threshold of these TCs to infinity in order to avoid dropping lossless traffic.

5.21.6 Commands

ingress-buffer

ingress-buffer <buffer-name>
no ingress-buffer <buffer-name>

Creates and enters the ingress buffer context.
 The no form of the command deletes an existing buffer.

Syntax Description	buffer-name	Name of ingress buffer
Default	N/A	
Configuration Mode	Config Interface Ethernet	
History	3.6.1002	
Role	admin	
Example	<pre>switch (config interface ethernet 1/1)# ingress-buffer iPort.pg1 switch (config interface ethernet 1/1 ingress-buffer iPort.pg1)#</pre>	
Related Commands		
Note	iPort.pg9 is reserved for control traffic and hence cannot be edited	

egress-buffer

egress-buffer <buffer-name>
no egress-buffer <buffer-name>

Creates and enters the buffer context.
The no form of the command deletes an existing buffer.

Syntax Description	buffer-name	Name of egress buffer
Default	N/A	
Configuration Mode	Config Interface Ethernet	
History	3.6.1002	
Role	admin	
Example	switch (config interface ethernet 1/1)# egress-buffer ePort.tc4 switch (config interface ethernet 1/1 egress-buffer ePort.tc4)#	
Related Commands		
Note	ePort.tc16 is reserved for control traffic and hence cannot be edited	

pool reserved

**pool <pool-name> reserved <reserved> shared {alpha | max} <shared>
no pool <pool-name>**

Configures the buffer.

The no form of the command resets the values to their default.

Syntax Description	pool-name	Possible values: iPool0, iPool1, iPool2, iPool3
	reserved	Amount of reserved memory for the buffer in bytes
	shared	The amount of shared memory for this buffer <ul style="list-style-type: none"> • When working in alpha mode, alpha can have the values 0, 1/128, 1/64 ... 1, 2, 4, ... 64, inf • When working in max mode, the shared size is defined as a percentage from the pool size
Default	According to system default OOB configuration	
Configuration Mode	Config Interface Ethernet Egress Buffer Config Interface Ethernet Ingress Buffer	
History	3.6.1002	
Role	admin	
Example	switch (config interface ethernet 1/1 ingress-buffer iPort)# pool iPool0 reserved 90K shared alpha 1/8	
Related Commands		
Note		

map pool

map pool <pool-name> type <type> reserved <reserved> [xoff <xoff> xon [<xon>]
shared {alpha | max} <shared>

Configures the buffer.

The no form of the command resets the values to their default.

Syntax Description	pool-name	Possible values: iPool0, iPool1, iPool2, iPool3
	reserved	Amount of reserved memory for the buffer in bytes
	xoff	Relevant only on lossless type, Xoff threshold in bytes
	xon	Relevant only on lossless type, Xon threshold in bytes
	shared	The amount of shared memory for this buffer <ul style="list-style-type: none">• When working in alpha mode, alpha can have the values 0, 1/128, 1/64 ... 1, 2, 4, ... 64, inf• When working in max mode, the shared size is defined as a percentage from the pool size
Default	According to system default OOB configuration	
Configuration Mode	Config Interface Ethernet Egress Buffer Config Interface Ethernet Ingress Buffer	
History	3.6.1002	
Role	admin	
Example	<pre>switch (config interface ethernet 1/1 ingress-buffer iPort.pg0)# map pool iPool0 type lossless reserved 90K xoff 17K xon 17K shared alpha 1/8</pre>	
Related Commands		
Note		

bind switch-priority

bind switch-priority <list-of-switch-priorities>

Bind a switch priority (SP) to an ingress buffer.
The no form of the command resets the values to their default.

Syntax Description	list-of-switch-priorities Possible values: 0-7
Default	According to system default OOB configuration
Configuration Mode	Config Interface Ethernet Egress Buffer Config Interface Ethernet Ingress Buffer
History	3.6.1002
Role	admin
Example	switch (config interface ethernet 1/1 ingress-buffer iPort.pg1)# bind switch-priority 0 1
Related Commands	
Note	

description

description <description>

Configures buffer description.

The no form of the command resets the values to their default.

Syntax Description	description	Text string
Default	""	
Configuration Mode	Config Interface Ethernet Egress Buffer Config Interface Ethernet Ingress Buffer	
History	3.6.1002	
Role	admin	
Example	switch (config interface ethernet 1/1 ingress-buffer iPort.pg1)# description example	
Related Commands		
Note		

pool direction

pool <pool-name> direction <direction> size <size> type <type>

Configures pool.

The no form of the command resets the values to their default.

Syntax Description	pool	Possible values: iPool0, iPool1, iPool2, iPool3
	direction	Ingress or egress traffic
	size	Size of pool in bytes
	type	Static or dynamic
Default	N/A	
Configuration Mode	Config Interface Ethernet Egress Buffer Config Interface Ethernet Ingress Buffer	
History	3.6.1002	
Role	admin	
Example	switch (config interface ethernet 1/1 ingress-buffer iPort.pg1)# pool iPool1 direction ingress size 1M type dynamic	
Related Commands		
Note		

pool mc-buffer

```
pool <pool-name> mc-buffer <buffer> reserved <reserved> shared {alpha | max}
<shared>
no pool <pool-name>
```

Configures pool.

The no form of the command resets the values to their default.

Syntax Description	mc-buffer	Buffer can have the values mc.sp0, mc.sp1...mc.sp14
	reserved	The amount of shared memory for this buffer
	shared	The amount of shared memory for this buffer <ul style="list-style-type: none">• When working in alpha mode, alpha can have the values 0, 1/128, 1/64 ... 1, 2, 4, ... 64, inf• When working in max mode, the shared size is defined as a percentage from the pool size
Default	N/A	
Configuration Mode	Config Interface Ethernet Egress Buffer	
History	3.6.1002	
Role	admin	
Example	switch (config interface ethernet 1/1 egress-buffer ePort.tc4)# pool iPool1 mc-buffer mx.sp0 reserved 90K shared alpha 1/8	
Related Commands		
Note		

pool description

pool <pool-name> **description** <description>
no pool <pool-name>

Configures the buffer description of a specific pool-name.
 The no form of the command resets the values to their default.

Syntax Description	description	String text
Default	""	
Configuration Mode	Config Interface Ethernet Egress Buffer Config Interface Ethernet Ingress Buffer	
History	3.6.1002	
Role	admin	
Example	switch (config interface ethernet 1/1 ingress-buffer iPort.pg1)# pool iPool1 description myDescription	
Related Commands		
Note		

show buffers status

show buffers status interfaces ethernet <slot>/<port>

Displays buffer status

Syntax Description	<slot>/<port>	Ethernet interface
Default	N/A	
Configuration Mode	Config	
History	3.6.1002	
Role	admin	

Example

```
switch (config)# show buffers status 1/25
  Interface  Buffer      Resv      Shared  Usage  MaxUsage
             [Byte]    [%/a]    [Byte]  [Byte]
  -----
Eth1/25     iPort      192       1/128   0       0
            iPort      0         0       0       0
            iPort      0         0       0       0
            iPort      0         0       0       0
            iPort.pg0  0         0       0       0
            iPort.pg1  0         0       0       0
            iPort.pg2  0         0       0       0
            iPort.pg3  0         0       0       0
            iPort.pg4  0         0       0       0
            iPort.pg5  0         0       0       0
            iPort.pg6  0         0       0       0
            iPort.pg7  0         0       0       0
            iPort.pg9  19.5K    inf      0       0
            ePort      0         inf     0       0
            ePort      0         inf     0       0
            ePort      0         inf     0       0
            ePort      0         inf     0       0
            ePort.tc0  1.5K     2        0       0
            ePort.tc1  1.5K     2        0       0
            ePort.tc2  1.5K     2        0       0
            ePort.tc3  1.5K     2        0       0
            ePort.tc4  1.5K     2        0       0
            ePort.tc5  1.5K     2        0       0
            ePort.tc6  1.5K     2        0       0
            ePort.tc7  1.5K     2        0       0
            ePort.tc8  0         0        0       0
            ePort.tc9  0         0        0       0
            ePort.tc10 0         0        0       0
            ePort.tc11 0         0        0       0
            ePort.tc12 0         0        0       0
            ePort.tc13 0         0        0       0
            ePort.tc14 0         0        0       0
            ePort.tc15 0         0        0       0
            ePort.tc16 96        inf     0       0
```

Related Commands

Note

show buffers details

show buffers details interfaces ethernet <slot>/<port>

Displays buffer status in details.

Syntax Description	<slot>/<port>	Ethernet interface
Default	N/A	
Configuration Mode	Config	
History	3.6.1002	
Role	admin	

Example

```
switch (config)# show buffers details interfaces ethernet 1/25
Flags: Y - Lossy, L - Lossless
      S - Static, D - Dynamic
Shared size is in Bytes for static pool and in alphas for dynamic pool.
```

```
Interface: Eth1/25
```

Buffer	Resv [Byte]	Xoff [Byte]	Xon [Byte]	Shared [%/a]	Pool	Description
-----	-----	-----	-----	-----	-----	-----
iPort(Y)	192	-	-	1/128	iPool0(D)	
iPort(Y)	0	-	-	0	iPool1(D)	
iPort(Y)	0	-	-	0	iPool2(D)	
iPort(Y)	0	-	-	0	iPool3(D)	
iPort.pg0(Y)	0	-	-	0	iPool0(D)	Data
iPort.pg1(Y)	0	-	-	0	iPool0(D)	
iPort.pg2(Y)	0	-	-	0	iPool0(D)	
...						
iPort.pg7(Y)	0	-	-	0	iPool0(D)	
iPort.pg9(Y)	19.5K	-	-	inf	iPool0(D)	Control
ePort	0	-	-	inf	ePool0(D)	
ePort	0	-	-	inf	ePool1(D)	
ePort	0	-	-	inf	ePool2(D)	
ePort	0	-	-	inf	ePool3(D)	
ePort.tc0	1.5K	-	-	2	ePool0(D)	
ePort.tc1	1.5K	-	-	2	ePool0(D)	
ePort.tc2	1.5K	-	-	2	ePool0(D)	
...						
ePort.tc6	1.5K	-	-	2	ePool0(D)	
ePort.tc7	1.5K	-	-	2	ePool0(D)	
ePort.tc8	0	-	-	0	ePool0(D)	
ePort.tc9	0	-	-	0	ePool0(D)	
...						
ePort.tc15	0	-	-	0	ePool0(D)	
ePort.tc16	96	-	-	inf	ePool0(D)	Control

Switch-priority	Buffer
-----	-----
0	iPort.pg0
1	iPort.pg0
2	iPort.pg0
3	iPort.pg0
4	iPort.pg0
...	
10	iPort.pg0
11	iPort.pg0
12	iPort.pg0
13	iPort.pg0
14	iPort.pg0

Related Commands

Note

5.22 Storm Control



This section is relevant only for Spectrum™ systems.

5.22.1 General

Storm Control is a feature which can be enabled on L2 Ethernet ports and port-channels to monitor inbound traffic to prevent disruptions caused by a broadcast, multicast, or unicast traffic storm on the physical interfaces.

Storm Control utilizes a bandwidth-based method to measure traffic where packets exceeding the percentage level specified by the user are dropped.

Users are able to monitor broadcast, unknown unicast, and unregistered multicast traffic while supporting differing thresholds for each type or monitor a summary of all the previously mentioned traffic with one threshold.

5.22.2 Commands

storm-control level

```
[no] storm-control {broadcast|unreg-multicast|unknown-unicast|all} level <level>
[force]
```

The command enables Storm Control on selected interface.

The no form of the command disables Storm Control on selected interface.

Syntax Description	{ broadcast unreg-multicast unknown-unicast all }	<ul style="list-style-type: none"> Each port can support broadcast, unregistered-multicast, unknown-unicast or all configurations All means one threshold level for all traffic types. It is not identical to configuring broadcast, unregistered-multicast and unknown-unicast together
	<level>	Configuring packet types separately will give individual Storm Control levels per packet type.
	[force]	TBD
Default	no storm control	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel	
History	3.6.4006	
	3.6.4110	Updated command syntax, default and configuration mode

Role	admin
Example	switch (config)# interface ethernet storm-control broadcast level 3 force
Related Commands	
Note	<ul style="list-style-type: none">• "all" and other configurations are mutually exclusive.• User can use "force" form of command to resolve collisions and apply new configuration.• Storm Control can be configured on LAG but cannot be configured on LAG members.• Storm Control cannot be configured on router ports.• Storm Control cannot be configured on a port which takes part in monitoring sessions as destination port.

show storm-control

show storm-control

The command displays the configuration levels and dropped packets for each traffic type.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config
History	3.6.4006
History	3.6.4110
Role	admin
Example	<pre>switch (config)# show storm-control interface eth 1/1 Broadcast level: 10% Broadcast packets dropped: 0 Multicast level: 100% Multicast packets dropped: 0 Unicast level: 100% Unicast packets dropped: 0 All traffic types level: 100% All traffic types packets dropped: 0 ...</pre>
Related Commands	
Note	

Updated example output.

5.23 Store-and-Forward



This section is relevant only for Spectrum™ systems.

5.23.1 General

Store-and-Forward is used to describe a functionality where a switch receives a complete packet, stores it, and only then forwards it.

since the switch make forwarding decisions based on the destination address which is at the header of the packet, the switch can make the forwarding decision before receiving the complete packet, this process is called cut-through, the switch forwards part of the packet before receiving the complete packet.

Cut-through allows lower latency and saves buffer space, but if an error occurred in the packet while utilizing cut-through, the packet will be forwarded with an error, alternatively, utilizing store-and-forward allows the switch to drop erroneous packets.

The standard implementation of forwarding mode is for the entire switch; either all ports on a switch are in store-and-forward mode or all ports on a switch are in cut-through mode.

HPE implements forwarding mode per egress port, which is a more flexible method and vital in cases where a switch is connected to both a storage device and a compute server among other set-ups.

5.23.2 Commands

switchmode store-and-forward

[no | disable] switchmode store-and-forward

Enables global Store-and-Forward configuration on the switch.
 The no form of the command removes Store-and-Forward configuration from the switch and reverts it back to the switch's global configuration.
 The disable form of the command sets the forwarding mode to Cut-Through

Syntax Description	N/A
Default	N/A
Configuration Mode	Config Config Interface Ethernet Config Interface Port Channel
History	3.6.3640 Added 3.6.4000 Updated command description. 3.6.4110 Updated command description.
Role	admin
Example	switch (config) # switchmode store-and-forward
Related Commands	
Note	

show switchmode

show switchmode

Displays forwarding mode

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Config
---------------------------	--------

History	3.6.3640	
	3.6.4000	Updated command description.
	3.6.4110	Updated configuration mode.

Role	admin
-------------	-------

Example	switch (config) # show switchmode		
	Interface	Mode	Configuration

	Eth1/1	store-and-forward	configured
	Eth1/2	cut-through	configured
	Eth1/3	cut-through	inherited
	Eth1/4	cut-through	inherited

Related Commands

Note

6 IP Routing

6.1 General

6.1.1 IP Interfaces

MLNX-OS supports the following 3 types of IP interfaces:

- VLAN interface
- Loopback interface
- Router port interface



Router port interfaces are not supported on SX10xx-xxxR and SX60xx-xxxR systems.

VLAN interface is a logical IPv4 interface created per subnet over a specific 802.1Q VLAN ID. If two hosts from two different subnets need to communicate (via the IP layer), the network administrator needs to configure two interface VLANs, one for each of the subnets. The user may configure up to 64 VLAN interfaces.

Each interface VLAN has the following attributes:

- Admin state
- Operational state
- MAC address
- IP address and mask
- MTU
- Description
- Set of counters

Loopback interface is a logical software entity where traffic transmitted to this interface is immediately received on the sending end.

Router port interface is a regular switch port configured to operate as an L3 interface. Router port interfaces are assigned an IP address and all L3 commands become applicable to them.

Once configured, router port interfaces no longer partake in the bridging activities of the switch and VLANs configured on them are separate from the pool allocated for the switch ports.

6.1.1.1 Configuring a VLAN Interface

➤ *To configure a VLAN interface:*

Step 1. Create a VLAN. Run:

```
switch (config)# vlan 10
switch (config vlan 10)# exit
```

Step 2. Assign a physical interface to this VLAN. Run:

```
switch (config)# interface ethernet 1/1
switch (config interface ethernet 1/1)# switchport mode access
switch (config interface ethernet 1/1)# exit
```

Step 3. There must be at least one interface in the operational state “UP”.

```
switch (config)# show interface ethernet 1/1 status
Port                Operational state      Speed                Negotiation
----                -
Eth1/1              Up                     40 Gbps              No-Negotiation
```

Step 4. Create a VLAN interface that matches the VLAN. Run:

```
switch (config)# interface vlan 10
switch (config interface vlan 10)#
```

Step 5. Configure an IP address and a network mask to the interface. Run:

```
switch (config interface vlan 10)# ip address 10.10.10.10 /24
```

Step 6. Verify VLAN interface configuration. Run:

```
switch (config interface vlan 10)# show interface vlan 10

Vlan 10
  Admin state: Enabled
  Operational state: UP
  Mac Address: 00:02:c9:5d:e0:f0
  Internet Address: 10.10.10.10/24
  Broadcast address: 10.10.10.255
  MTU: 1500 bytes
  Description: my-ip-interface
  Counters: disabled
```

6.1.1.2 Configuring a Loopback Interface

➤ *To configure a loopback interface:*

Step 1. Create a loopback interface. Run:

```
switch (config)# interface loopback 2
switch (config interface loopback 2)#
```

Step 2. Configure an IP address on the loopback interface. Run:

```
switch (config interface loopback 2)# ip address 20.20.20.20 /32
```


Step 3. Verify loopback interface configuration. Run:

```
switch (config interface loopback 2)# show interfaces loopback 2

Loopback 2
  Internet Address: 20.20.20.20/32
  Broadcast address: 20.20.20.20
  MTU: 1500 bytes
  Description: my-loopback
switch (config) #
```

6.1.1.3 Configuring a Router Port Interface

Step 1. Enter an Ethernet interface's configuration context. Run:

```
switch (config)# interface ethernet 1/10
switch (config interface ethernet 1/10)#
```

Step 2. Configure the Ethernet interface to become a router port interface. Run:

```
switch (config interface ethernet 1/10)# no switchport force
```

Step 3. Configure an IP address on the router port interface. Run:

```
switch (config interface ethernet 1/10)# ip address 100.100.100.100 /24
```

Step 4. Verify router port interface configuration. Run:

```
switch (config interface ethernet 1/10)# show interfaces ethernet 1/10

Eth1/10
  Admin state: Enabled
  Operational state: Down
  Description: N\A
  Mac address: 00:02:c9:96:c6:d8
  MTU: 1500 bytes(Maximum packet size 1522 bytes)
  Flow-control: receive off send off
  Actual speed: 40 Gbps
  Width reduction mode: disabled
  DHCP client: Disabled
  IP Address: 100.100.100.100 /24
  Broadcast address: 100.100.100.255
  Arp timeout: 1500 seconds
  VRF: default
  MAC learning mode: Enabled
  Last clearing of "show interface" counters : 00:00:01
  60 seconds ingress rate: 0 bits/sec, 0 bytes/sec, 0 packets/sec
  60 seconds egress rate: 0 bits/sec, 0 bytes/sec, 0 packets/sec
```


Rx		
0	packets	
0	unicast packets	
0	multicast packets	
0	broadcast packets	
0	bytes	
0	error packets	
0	discard packets	
Tx		
0	packets	
0	unicast packets	
0	multicast packets	
0	broadcast packets	
0	bytes	
0	discard packets	

6.1.2 Equal Cost Multi-Path Routing (ECMP)

Equal-cost multi-path routing (ECMP) is a routing strategy where next-hop packet forwarding to a single destination can occur over multiple paths.

In Figure 32, routers R1 and R2 can both access each of their router peer networks. Router R1 routing table for 10.0.40/24 will contain the following routes:

- 10.0.10.2
- 10.0.20.2
- 10.0.30.2

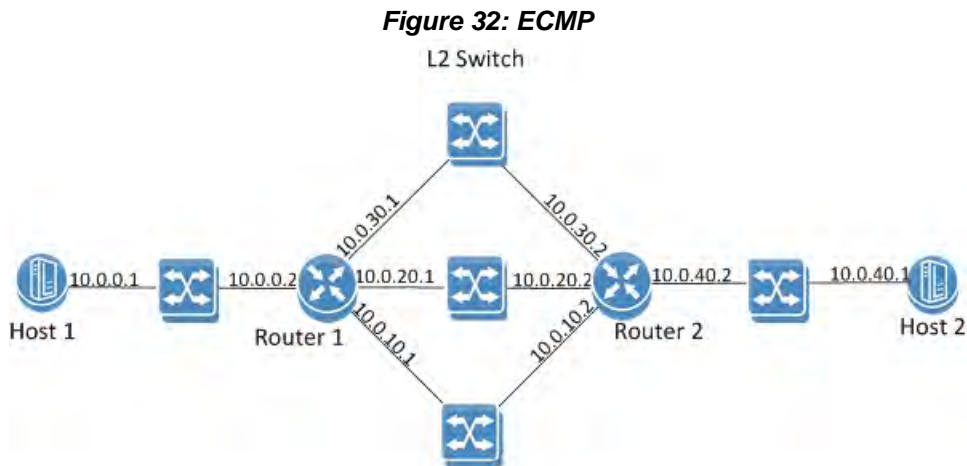

The load balancing function of the ECMP is configured globally on the system.

Hash algorithm can be symmetric or asymmetric. In symmetric hash functions bidirectional flows between routes will follow the same path, while in asymmetric hash functions, bidirectional traffic can follow different paths in both directions.


The following load balancing types are supported:

- Source IP & Port – source IP (SIP) and source UDP/TCP port: If the packet is not UDP/TCP, only SIP is used for the hash calculation. This is an asymmetric hash function.
- Destination IP & Port – destination IP (DIP) and destination UDP/TCP port: If the packet is not UDP/TCP, only DIP is used for the hash calculation. This is an asymmetric hash function.
- Source and Destination IP & Port – destination and source IP, as well as destination and source UDP/TCP port: If the packet is not UDP/TCP, only SIP/DIP are used for the hash calculation. This is a symmetric hash function.
- Traffic Class: Load balance based on the traffic class assigned to the packet. This is an asymmetric hash function.
- All (default): all above fields are part of the hash calculations. This is a symmetric hash function.

6.1.2.1 Hash Functions

It is advised that LAG and ECMP hash function configuration over more than one hop is different. If the same hash function is used over two hops, all the traffic sorted from one hop to following one will arrive already having the same characteristics, which will render the next hash function useless. For example, configure load-balancing on the first hop based on source IP while on the next hop based on destination IP.

Figure 33: Multiple Hash Functions

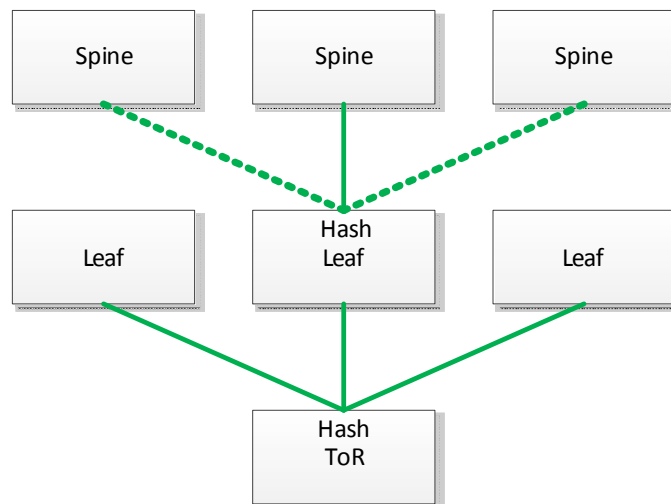

6.1.3 Virtual Routing and Forwarding



Only static IPv4 and ECMP are supported with VRF.

Virtual routing and forwarding (VRF) allows multiple routing table instances to coexist within the same router simultaneously. Since the routing instances are independent, IP addresses on each routing table may overlap without conflicting with each other.

VRF can be used for the following purposes:

- Ensure customer privacy and security
- Separate between management and user data
- Support customers with the same address space
- Support VPN

Multiple routing instances defined in the router can have different purposes and can be configured in different manners:

- Different IP interfaces can be attached to different VRFs (only one IP interface can be in a single VRF)
- Routing in VRF can be enabled or disabled
- Each VRF component can run its own routing protocol independently from other instances
- Differently configured IPv4 and IPv6 services

The first VRF in the system is created automatically and it is called “default” VRF. It cannot be deleted or configured.

6.1.4 Commands

6.1.4.1 General

ip l3

ip l3 [force]
no ip l3 [force]

Enables IP routing capabilities.
 The no form of the command disables IP routing and removes its configuration.

Syntax Description	N/A
Default	If operating with Ethernet system profile: L3
Configuration Mode	Config
History	3.4.1802
Role	admin
Example	switch (config) # ip l3 force switch (config) #
Related Commands	N/A
Note	

vrf definition

vrf definition <vrf-name>

Creates the VRF.

Syntax Description	vrf-name	VRF session name
Default	N/A	
Configuration Mode	Config	
History	3.4.2008	
Role	admin	
Example	switch (config) # vrf definition my-vrf switch (config vrf definition my-vrf) #	
Related Commands	N/A	
Notes	Only 1 VRF is supported aside from the default VRF	

routing-context vrf

routing-context vrf <vrf-name>

Enters the active-context of the specified session.

Syntax Description	vrf-name	VRF session name
Default	N/A	
Configuration Mode	Config	
History	3.4.2008	
Role	admin	
Example	<pre>switch (config) # routing-context vrf my-vrf switch (config) #</pre>	
Related Commands	N/A	
Notes	<ul style="list-style-type: none"> • If a routing-context is configured, the user does not have to explicitly specify the VRF name parameter in this or any other VRF command • If no routing-context is configured and the user does not specify the VRF name, default VRF is used 	

ip routing

ip routing [vrf <vrf-name>]

Enables L3 forwarding between high speed interfaces.

Syntax Description	vrf-name	VRF session name
Default	N/A	
Configuration Mode	Config	
History	3.4.1802	
	3.4.2008	Added VRF parameter
Role	admin	
Example	switch (config) # ip routing vrf my-vrf switch (config) #	
Related Commands	N/A	
Notes	<ul style="list-style-type: none">• RD must be configured to enable IP routing on the VRF• If no routing-context is specified, the “routing-context” VRF is automatically configured.	

description

description <description>
no description force

Creates the VRF.

Syntax Description	description	Text string
	force	Forces deletion (no confirmation needed if configuration exists inside the VRF)
Default	N/A	
Configuration Mode	Config VRF Definition	
History	3.4.2008	
Role	admin	
Example	<pre>switch (config vrf definition my-vrf) # description vrf-description switch (config vrf definition my-vrf) #</pre>	
Related Commands	N/A	
Notes		

rd

rd [<ip addr>:<0-65,535> | <AS Number>:<0-4,294,967,295> | <AS Number>:<ip addr>]

Adds a route distinguisher (RD) to the VRF configuration mode.

Syntax Description	ip-addr	IPv4 address
	AS Number	Asynchronous machine number
Default	N/A	
Configuration Mode	Config VRF Definition	
History	3.4.2008	
Role	admin	
Example	<pre>switch (config vrf definition my-vrf) # rd 10.10.10.10:2 switch (config vrf definition my-vrf) #</pre>	
Related Commands	N/A	
Notes	<ul style="list-style-type: none">• RDs internally identify routes belonging to a VRF to distinguish overlapping or duplicate IP address ranges. This allows the creation of distinct routes to the same IP address for different VPNs. The RD is a 64-bit number made up of an AS number or IPv4 address followed by a user-selected ID number. Once an RD has been assigned to a VRF it cannot be changed. To change the RD, remove the VRF then create it again. VRF is not active until an RD is defined.• An RD must be defined to enable IP routing on the VRF	

vrf forwarding**vrf forwarding <vrf-name>**

Maps an interface to VRF.

Syntax Description	vrf-name	VRF session name
Default	N/A	
Configuration Mode	Config Interface Ethernet set as router port interface Config Interface VLAN Config Interface Loopback	
History	3.4.2008	
Role	admin	
Example	switch (config interface ethernet 1/2) # vrf forwarding my-vrf switch (config interface ethernet 1/2) #	
Related Commands	N/A	
Notes		

show ip routing

show ip routing [vrf <vrf-name> | all]

Displays IP routing information per VRF.

Syntax Description	vrf	Displays information for specific VRF
	all	Displays information on all VRFs
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.2.0230	
	3.4.2008	Added VRF parameter
Role	admin	
Example	<pre>switch (config) # show ip routing vrf all VRF Name: my-vrf ----- IP routing: disabled VRF Name: default ----- IP routing: enabled switch (config) #</pre>	
Related Commands	N/A	
Notes	If no routing-context is specified, the “routing-context” VRF is automatically displayed.	

show routing-context vrf

show routing-context vrf

Displays VRF active context.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.4.2008
Role	admin
Example	<pre>switch (config) # show routing-context vrf VRF active context: my-vrf switch (config) #</pre>
Related Commands	N/A
Notes	

show vrf

show vrf [<vrf-name> | **all**]

Displays VRF information.

Syntax Description	all	Displays information for all VRF instances
	vrf-name	Name of VRF instance
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.4.2008	
Role	admin	
Example	<pre>switch (config) # show vrf my-vrf VRF Info Name: my-vrf RD: 10.10.10.10:2 Description: Test VRF IP routing state: Enabled Protocols: IPv4 Interfaces: Eth1/2 switch (config) #</pre>	
Related Commands	N/A	
Notes	If no routing-context is specified, the “routing-context” VRF is automatically displayed.	

6.1.4.2 IP Interfaces

switchport

switchport [force]
no switchport [force]

Configures the Ethernet interface as a regular switchport.
 The no form of the command configures the Ethernet interface as router port interface.

Syntax Description	force	Forces configuration even if the interface's admin state is enabled.
Default	N/A	
Configuration Mode	Config Interface Ethernet Config Interface Port Channel	
History	3.3.5200	
	3.6.4006	Added storm-control support
Role	admin	
Example	<pre>switch (config interface ethernet 1/10)# no switchport force error message is case storm-control is configured on port: % interface * has storm control configuration. Please remove it first</pre>	
Related Commands		
Note	When storm-control is configured on port, an err-msg will appear. Force command deletes all storm-control configuration from port.	

encapsulation dot1q vlan

encapsulation dot1q vlan <vlan-id> [force]
no encapsulation dot1q vlan [force]

Enables L2 802.1Q encapsulation of traffic on a specified router port interface in a VLAN.

The no form of the command disables L2 802.1Q encapsulation of traffic on a specified router port interface in a VLAN.

Syntax Description	vlan-id	Enables L2 802.1Q encapsulation of traffic on a router port interface in a VLAN
	force	Forces admin state down
Default	N/A	
Configuration Mode	Config Interface Ethernet	
History	3.3.5200	
Role	admin	
Example	switch (config interface ethernet 1/10)# encapsulation dot1q vlan 10	
Related Commands		
Note		

6.1.4.3 Interface VLAN

interface vlan

interface vlan <vlan-id>
no interface vlan <vlan-id>

Creates a VLAN interface and enters the interface VLAN configuration mode.

The no form of the command deletes the VLAN interface.

Syntax Description	vlan-id	A numeric range of 1-4094
Default	N/A	
Configuration Mode	Config	
History	3.2.0230	
Role	admin	
Example	<pre>switch (config) # interface vlan 10 switch (config interface vlan 10) #</pre>	
Related Commands	<pre>ip routing vlan <vlan-id> switchport mode switchport access show interfaces vlan</pre>	
Note	<ul style="list-style-type: none"> • Make sure the VLAN was created, using the command “vlan <vlan-id>” in the global configuration mode • The VLAN must be assigned to one of the L2 interfaces. To do so, run the command “switchport ...” • At least one interface belong to that VLAN must be in UP state 	

interface vlan <id> no-autostate

[no] interface vlan <id> no-autostate

Disables the VLAN interface autostate such that its operational state remains up as long as its admin state is up, even if no port in the relevant VLAN egress-list is operationally up.

Syntax Description	vlan-id	A numeric range of 1-4094 or a range of VLANs.
Default	N/A	
Configuration Mode	Config	
History	3.6.4006	
Role	admin	
Example	switch (config) # interface vlan 10 no-autostate switch (config) # interface vlan 10-13 no-autostate	
Related Commands	show ip interface vlan <id>	
Note		

ip address

ip address <ip-address> <mask>
no ip address <ip-address> <mask>

Enters user-defined description for the interface.

Syntax Description	ip-address	IPv4 address
	mask	There are two possible ways to the mask: <ul style="list-style-type: none"> • /length (i.e. /24) • Network address (i.e. 255.255.255.0)
Default	0.0.0.0/0	
Configuration Mode	Config Interface VLAN	
History	3.2.0230	
Role	admin	
Example	<pre>switch (config interface vlan 10) # ip address 10.10.10.10 /24 switch (config interface vlan 10) #</pre>	
Related Commands	<pre>interface vlan show interfaces vlan</pre>	
Note		

ip address dhcp

ip address dhcp
no ip address dhcp

Enables DHCP on this VLAN interface.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config Interface VLAN
History	3.4.2008
Role	admin
Example	<pre>switch (config interface vlan 10) # ip address dhcp switch (config interface vlan 10) #</pre>
Related Commands	<pre>interface vlan show interfaces vlan</pre>
Note	

counters

counters
no counters

Enables counters on the IP interface.
 The no form of the command disables counters gathering on the IP interface.

Syntax Description	N/A
Default	counters are disabled.
Configuration Mode	Config Interface VLAN
History	3.2.0230
Role	admin
Example	<pre>switch (config interface vlan 10) # counters switch (config interface vlan 10) #</pre>
Related Commands	<pre>counters interface vlan show interfaces vlan</pre>
Note	<ul style="list-style-type: none"> • Enabling counters for the router interface adds delay to the traffic stream • There are maximum of 16 counter sets

description

description <string>
no description

Enters a description for the interface.
The no form of the command sets the description to default.

Syntax Description	string	User defined string
Default	""	
Configuration Mode	Config Interface VLAN	
History	3.2.0230	
Role	admin	
Example	switch (config interface vlan 10) # description my-ip-interface switch (config interface vlan 10) #	
Related Commands	interface vlan show interfaces vlan	
Note		

mtu**mtu <size> [force]****no mtu**

Sets the MTU for the interface.

The no form of the command sets the MTU to default.

Syntax Description	size	1500-9216.
	force	Forces command implementation.
Default	1522	
Configuration Mode	Config Interface VLAN	
History	3.2.0230	
Role	admin	
Example	switch (config interface vlan 10)# mtu 9216 switch (config interface vlan 10 #	
Related Commands	interface vlan show interfaces vlan	
Note		

shutdown

shutdown
no shutdown

Disables the interface.
The no form of the command enables the interface.

Syntax Description	N/A
Default	The interface is enabled.
Configuration Mode	Config Interface VLAN
History	3.1.0000
Role	admin
Example	<pre>switch (config interface vlan 20) # shutdown switch (config interface vlan 20) #</pre>
Related Commands	interface vlan
Note	

clear counters

clear counters

Clears the interface counters.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config Interface VLAN
History	3.2.0230
Role	admin
Example	<pre>switch (config interface vlan 10) # clear counters switch (config interface vlan 10) #</pre>
Related Commands	<pre>interface vlan counters</pre>
Note	

ip icmp redirect

ip icmp redirect
no ip icmp redirect

Enables ICMP redirect.
The no form of the command disables ICMP redirect.

Syntax Description	N/A
Default	Enabled
Configuration Mode	Config Interface VLAN
History	3.4.0010
Role	admin
Example	<pre>switch (config interface vlan 10) # no ip icmp redirect</pre>
Related Commands	<pre>interface vlan counters</pre>
Note	<ul style="list-style-type: none">• ICMP redirect transmits messages to hosts alerting them about the existence of more efficient routes to a specific destination

show ip interface

show ip interface [vrf <vrf-name> | all] [brief]

Displays IP interfaces information per VRF.

Syntax Description	all	Displays information on all VRFs				
	brief	Displays IP interfaces information in a shortened form				
Default	N/A					
Configuration Mode	Any Command Mode					
History	3.4.2008					
Role	admin					
Example	<pre>switch (config) # show ip interface vrf all brief Interface Address/Mask Admin-state Oper-state MTU VRF mgmt0 10.224.22.27/24 Enabled Up 1500 default mgmt1 0.0.0.0/0 Enabled Down 1500 default Vlan 20 20.20.20.1/24 Enabled Down 1500 my-vrf Eth1/1 1.1.1.1/24 Enabled Down 1500 my-vrf Loopback 10 10.10.10.1/32 Enabled Up 1500 my-vrf Vlan 30 30.30.30.1/24 Enabled Down 1500 default Eth1/2 2.2.2.2/24 Enabled Down 1500 default Loopback 11 11.11.11.1/32 Enabled Up 1500 default switch (config) # show ip interface vrf my-vrf brief Interface Address/Mask Admin-state Oper-state MTU VRF Vlan 20 20.20.20.1/24 Enabled Down 1500 my-vrf Eth1/1 1.1.1.1/24 Enabled Down 1500 my-vrf Loopback 10 10.10.10.1/32 Enabled Up 1500 my-vrf switch (config) # show ip interface vrf default brief Interface Address/Mask Admin-state Oper-state MTU VRF mgmt0 10.224.22.27/24 Enabled Up 1500 default mgmt1 0.0.0.0/0 Enabled Down 1500 default Vlan 30 30.30.30.1/24 Enabled Down 1500 default Eth1/2 2.2.2.2/24 Enabled Down 1500 default Loopback 11 11.11.11.1/32 Enabled Up 1500 default switch (config) #</pre>					
Related Commands	N/A					
Notes	If no routing-context is specified, the “routing-context” VRF is automatically displayed.					

6.1.4.4 Loopback Interface

interface loopback

interface loopback <id>
no interface loopback <id>

Creates a loopback interface and enters the interface configuration mode.
The no form of the command deletes the interface.

Syntax Description	id	A numeric range of 0-31
Default	N/A	
Configuration Mode	Config	
History	3.2.3000	
Role	admin	
Example	switch (config) # interface loopback 10 switch (config interface loopback 10) #	
Related Commands		
Note	<ul style="list-style-type: none">• Up to 32 loopback interfaces can be configured• Within the loopback configuration mode, you can configure description and ip-address• MTU cannot be configured on the loopback interface	

ip address

ip address <ip-address> <mask>
no ip address <ip-address> <mask>

Enters user-defined description for the interface.

Syntax Description	ip-address	IPv4 address.
	mask	There are two possible ways to the mask: <ul style="list-style-type: none"> • /length – only /32 is possible • Network address (i.e. 255.255.255.0)
Default	0.0.0.0/0	
Configuration Mode	Config Interface Loopback	
History	3.3.5006	
Role	admin	
Example	switch (config interface loopback 10) # ip address 10.10.10.10 /32	
Related Commands	interface loopback	
Note		

description

description <string>
no description

Enters a description for the interface.
The no form of the command sets the description to default.

Syntax Description	string	User defined string.
Default	“”	
Configuration Mode	Config Interface Loopback	
History	3.3.5006	
Role	admin	
Example	switch (config interface loopback 10) # description my-ip-interface	
Related Commands	interface loopback	
Note		

show interfaces loopback

show interface loopback <id>

Shows the attribute of the interface loopback.

Syntax Description	id	A numeric range of 1-32
Default	N/A	
Configuration Mode	Config	
History	3.2.3000	
Role	admin	
Example	<pre>switch (config) # show interfaces loopback 2 Loopback 2 Internet Address: 2.2.2.2/32 Broadcast address: 2.2.2.2 MTU: 1500 bytes Description: my-loopback switch (config) #</pre>	

Related Commands

Note

6.1.4.5 Routing and ECMP

ip route

ip route [vrf <vrf-name>] <IP prefix> <netmask> <next hop IP address>
no ip route [vrf <vrf-name>] <IP prefix> <netmask> <next hop IP address>

Configures a static route inside VRF.
The no form of the command removes the static route configured.

Syntax Description	vrf-name	VRF session name
	ip prefix	IP address
	netmask	There are two possible ways to the mask: <ul style="list-style-type: none">• /length (i.e. /24)• Network address (i.e. 255.255.255.0)
	next hop IP address	IP address of the next hop.
Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
	3.4.2008	Added VRF parameter
Role	admin	
Example	switch (config) # ip route vrf my-vrf 80.80.80.0 /24 20.20.20.2	
Related Commands	N/A	
Notes	If no routing-context is specified, the “routing-context” VRF is automatically configured.	

ip load-sharing

ip load-sharing <type>
no ip load-sharing

This command sets the ECMP load sharing mode.
 The no form of the command sets the load-sharing to default.

Syntax Description	type	<ul style="list-style-type: none"> • source-ip-port – source ip and TCP/UDP port • destination-ip-port – destination ip and TCP/UDP port • source-destination-ip-port – source & destination ip and TCP/UDP port • traffic-class – traffic class • flow-label – flow label • all – all options
Default	all	
Configuration Mode	Config	
History	3.2.0230	
	3.5.1000	Added flow-label parameter and updated Note section
Role	admin	
Example	<pre>switch (config) # ip load-sharing all switch (config) # show ip load-sharing Load sharing: all switch (config)</pre>	
Related Commands	ip route	
Note	The parameter “traffic-class” is available on SwitchX® based systems only	

show ip route

show ip route [vrf [<vrf-name> | all]] [-a | static | summary]

Displays routing table of VRF instance.

Syntax Description	all	Displays routing tables for all VRF instances
	-a	Displays static routes currently inactive due to the interface being down
	static	Displays static route
	summary	Displays route summary
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.1.0000	First version
	3.3.3500	Added Distance/Metric column
	3.4.0000	Added -a parameter
	3.4.2008	Added VRF parameter
	3.4.3000	Updated Notes section
	3.6.4070	Added support for BFD and updated notes
Role	admin	

Example

```

switch (config) # show ip route vrf my-vrf

VRF Name:          my-vrf
-----
Destination      Mask           Gateway        Interface      Source      Distance/Metric
10.10.10.1       255.255.255.255  0.0.0.0        loopback10     direct      0/0
20.20.20.0       255.255.255.0   0.0.0.0        vlan20         direct      0/0
80.80.80.0       255.255.255.0   20.20.20.2     vlan20         static      1/0

switch (config) # show ip route vrf my-vrf static

VRF Name:          my-vrf
-----
Destination      Mask           Gateway        Interface      Source      Distance/Metric
80.80.80.0       255.255.255.0   20.20.20.2     vlan20         static      1/0

switch (config) # show ip route vrf my-vrf summary
VRF Name:          my-vrf
-----
Route Source    Routes
direct          2
static          1
ospf            0
bgp             0
DHCP            0
Total          3

switch (config) # show ip route vrf my-vrf -a

VRF Name:          my-vrf
-----
Destination      Mask           Gateway        Interface      Source      Distance/Metric
90.90.90.0       255.255.255.0   1.1.1.2        NA             static      1/0

switch (config) #

```

Related Commands**ip route****Notes**

- If no routing-context is specified, the “routing-context” VRF is automatically displayed
- If no default route exists, then the message “Route not found” is printed
- route next hop is BFD controlled, status is viewable when <all> is inserted in the command, and it will be shown as follows:
 - If route is removed from routing decision it will be marked as “Active”
 - Protected next hops are marked with “B”
 - BFD protected failed/non active neighbors are marked with “BF”

show ip load-sharing

show ip load-sharing

Displays ECMP hash attribute.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.2.0230
Role	admin
Example	<pre>switch (config) # show ip load-sharing Load sharing: all switch (config) #</pre>
Related Commands	ip load-sharing
Note	

6.1.4.6 Network to Media Resolution (ARP)

ip arp

```
ip arp [vrf <vrf-name>] <ip-address> <mac-address>
no ip arp <ip-address>
```

Configures IP ARP properties of VRF
The no form of the command deletes the static ARP configuration.

Syntax Description	vrf-name	VRF session name
	IP address	IPv4 address
	mac-address	MAC address (format XX:XX:XX:XX:XX:XX)
Default	N/A	
Configuration Mode	Config	
History	3.4.2008	
Role	admin	
Example	switch (config) # ip arp vrf my-vrf 20.20.20.2 aa:bb:cc:dd:ee:ff	
Related Commands	N/A	
Notes	If no routing-context is specified, the “routing-context” VRF is automatically configured.	

ip arp timeout

ip arp timeout <timeout-value>
no ip arp timeout

Sets the dynamic ARP cache timeout.
The no form of the command sets the timeout to default.

Syntax Description	timeout-value	Time (in seconds) that an entry remains in the ARP cache. Range: 240-28800.
Default	1500 seconds	
Configuration Mode	Config Interface Ethernet Config Interface VLAN Config Interface Port Channel	
History	3.2.0230 3.5.1000	Updated Note section
Role	admin	
Example	<pre>switch (config) # ip arp timeout 2000 switch (config) # show ip arp ARP Timeout: 2000 Total number of entries: 55 IP Address MAC Address Interface 1.0.0.2 00:02:c9:5c:30:40 Vlan11 1.0.0.3 00:11:22:33:44:55 Vlan11 2.0.0.2 00:02:c9:5c:30:40 Vlan12 3.0.0.2 00:02:c9:5c:30:40 Vlan13 4.0.0.2 00:02:c9:5c:30:40 Vlan14 switch (config) #</pre>	
Related Commands	ip arp show ip arp	
Note	<ul style="list-style-type: none">• This configuration may take up to 5 minutes to take effect• The time interval after which each ARP entry becomes stale may actually vary from 50-150% of the configured value	

clear ip arp

clear ip arp [vrf <vrf-name>] [interface <type> | <IP-address>]

Clears the dynamic ARP cache for the specific VRF session.

Syntax Description	vrf-name	VRF session name
	interface	Clears dynamic ARP entries for a interface
	ip-address	Clears dynamic ARP entries for a specific IP address
Default	N/A	
Configuration Mode	Config	
History	3.2.0230	
History	3.4.2008	Added VRF parameter
Role	admin	
Example	<pre>switch (config) # clear ip arp vrf my-vrf switch (config) #</pre>	
Related Commands	<pre>ip arp show ip arp</pre>	
Notes	If no routing-context is specified, the “routing-context” VRF is automatically configured.	

show ip arp

show ip arp [vrf [<vrf-name> | all]] [interface <type> | count]

Displays all ARP information for VRF instance.

Syntax Description	all	Displays all ARP information for all VRF
	interface	Displays all ARP information for specific interface
	count	Displays number of ARPs for specific VRF
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.3000	
	3.4.2008	Added VRF parameter
Role	admin	
Example	<pre>switch (config) # show ip arp vrf my-vrf VRF Name: my-vrf ----- Total number of entries: 2 Address Type Hardware Address Interface ----- 20.20.20.2 Static ETH AA:AA:AA:BB:BB:BB vlan 20 1.1.1.2 Static ETH 00:11:22:33:44:55 eth 1/1 switch (config) # show ip arp vrf my-vrf interface ethernet 1/1 VRF Name: my-vrf ----- Total number of entries: 1 Address Type Hardware Address Interface ----- 1.1.1.2 Static ETH 00:11:22:33:44:55 eth 1/1 switch (config) # show ip arp vrf my-vrf interface vlan 20 VRF Name: mmm ----- Total number of entries: 1 Address Type Hardware Address Interface ----- 20.20.20.2 Static ETH AA:AA:AA:BB:BB:BB vlan 20 switch (config) #</pre>	

Related Commands ip arp

Notes If no routing-context is specified, the “routing-context” VRF is automatically displayed.

6.1.4.7 IP Diagnostic Tools

ping

ping [vrf <vrf-name>] [-LRUbdnqrvVaA] [-c count] [-i interval] [-w deadline] [-p pattern] [-s packetsize] [-t ttl] [-I interface or address] [-M mtu discovery hint] [-S sndbuf] [-T timestamp option] [-Q tos] [hop1 ...] destination

Sends ICMP echo requests to a specified host.

Syntax Description	Linux Ping options
	vrf Specifies VRF instance name
Default	N/A
Configuration Mode	Config
History	3.1.0000 3.4.2008 Added VRF parameter
Role	admin
Example	<pre>switch (config) # ping 172.30.2.2 PING 172.30.2.2 (172.30.2.2) 56(84) bytes of data. 64 bytes from 172.30.2.2: icmp_seq=1 ttl=64 time=0.703 ms 64 bytes from 172.30.2.2: icmp_seq=2 ttl=64 time=0.187 ms 64 bytes from 172.30.2.2: icmp_seq=3 ttl=64 time=0.166 ms 64 bytes from 172.30.2.2: icmp_seq=4 ttl=64 time=0.161 ms 64 bytes from 172.30.2.2: icmp_seq=5 ttl=64 time=0.153 ms 64 bytes from 172.30.2.2: icmp_seq=6 ttl=64 time=0.144 ms ^C --- 172.30.2.2 ping statistics --- 6 packets transmitted, 6 received, 0% packet loss, time 5004ms rtt min/avg/max/mdev = 0.144/0.252/0.703/0.202 ms switch (config) #</pre>
Related Commands	traceroute
Note	When using -I option use the interface name + interface number, for example “ping -I vlan10”

traceroute

```
traceroute [vrf <vrf-name>] [-46dFITUnrAV] [-f first_ttl] [-g gate,...] [-i device]
[-m max_ttl] [-N squeries] [-p port] [-t tos] [-l flow_label] [-w waittime] [-q nque-
ries] [-s src_addr] [-z sendwait] host [packetlen]
```

Traces the route packets take to a destination.

Syntax	Description
vrf	Specifies VRF instance name
-4	Uses IPv4.
-6	Uses IPv6
-d	Enables socket level debugging.
-F	Sets DF (“do not fragment” bit) on.
-I	Uses ICMP ECHO for tracerouting.
-T	Uses TCP SYN for tracerouting.
-U	Uses UDP datagram (default) for tracerouting.
-n	Does not resolve IP addresses to their domain names.
-r	Bypasses the normal routing and send directly to a host on an attached network.
-A	Performs AS path lookups in routing registries and print results directly after the corresponding addresses.
-V	Prints version info and exit.
-f	Starts from the first_ttl hop (instead from 1).
-g	Routes packets throw the specified gateway (maximum 8 for IPv4 and 127 for IPv6).
-i	Specifies a network interface to operate with.
-m	Sets the max number of hops (max TTL to be reached). Default is 30.
-N	Sets the number of probes to be tried simultaneously (default is 16).

-p	Uses destination port. It is an initial value for the UDP destination port (incremented by each probe, default is 33434), for the ICMP seq number (incremented as well, default from 1), and the constant destination port for TCP tries (default is 80).
-t	Sets the TOS (IPv4 type of service) or TC (IPv6 traffic class) value for outgoing packets.
-l	Uses specified flow_label for IPv6 packets.
-w	Sets the number of seconds to wait for response to a probe (default is 5.0). Non-integer (float point) values allowed too.
-q	Sets the number of probes per each hop. Default is 3.
-s	Uses source src_addr for outgoing packets.
-z	Sets minimal time interval between probes (default is 0). If the value is more than 10, then it specifies a number in milliseconds, else it is a number of seconds (float point values allowed too).

Default	N/A	
Configuration Mode	Config	
History	3.1.0000	
	3.4.2008	Added VRF parameter
Role	admin	
Example	<pre>switch (config) # traceroute 192.168.10.70 traceroute to 192.168.10.70 (192.168.10.70), 30 hops max, 40 byte packets 1 172.30.0.1 (172.30.0.1) 3.632 ms 2.849 ms 3.544 ms 2 10.222.128.46 (10.222.128.46) 3.176 ms 3.289 ms 3.656 ms 3 10.158.128.30 (10.158.128.30) 15.331 ms 15.819 ms 16.388 ms 4 10.158.128.65 (10.158.128.65) 20.468 ms 7.893 ms 12.27 ms 5 10.7.34.115 (10.7.34.115) 16.405 ms 11.985 ms 12.264 ms 6 192.168.10.70 (192.168.10.70) 16.377 ms 16.091 ms 20.475 ms switch (config) #</pre>	
Related Commands		
Note	<ul style="list-style-type: none"> • The following flags are not supported: -6, -l, -A • When using -i option use the interface name + interface number, for example “traceroute -i vlan10” 	

tcpdump

```
tcpdump [vrf <vrf-name>] [-aAdeflLnNOpqRStuUvxX] [-c count] [-C file_size ]
        [-E algo:secret ] [-F file ] [-i interface ] [-M secret ]
        [-r file ] [-s snaplen ] [-T type ] [-w file ]
        [-W filecount ] [-y datalinktype ] [-Z user ]
        [ expression ]
```

Invokes standard binary, passing command line parameters straight through.
Runs in foreground, printing packets as they arrive, until the user hits Ctrl+C.

Syntax Description	vrf	Specifies VRF instance name
Default	N/A	
Configuration Mode	Config	
History	3.1.0000 3.4.2008	Added VRF parameter
Role	admin	
Example	<pre>switch (config) # tcpdump 09:37:38.678812 IP 192.168.10.7.ssh > 192.168.10.1.54155: P 1494624:1494800(176) ack 625 win 90 <nop,nop,timestamp 5842763 858672398> 09:37:38.678860 IP 192.168.10.7.ssh > 192.168.10.1.54155: P 1494800:1495104(304) ack 625 win 90 <nop,nop,timestamp 5842763 858672398> ... 9141 packets captured 9142 packets received by filter 0 packets dropped by kernel switch (config) #</pre>	
Related Commands	N/A	
Note	<ul style="list-style-type: none"> When using -i option use the interface name + interface number, for example “tcpdump -i vlan10” For all flag options of this command refer to the linux ‘man page’ of tcp dump. 	

6.1.4.8 QoS

qos map dscp-to-pcp preserve-pcp

qos map dscp-to-pcp preserve-pcp
no qos map dscp-to-pcp preserve-pcp

Configures the router to copy PCP bits when transferring data from one subnet to another.
The no form of the command disables this ability.

Syntax Description	N/A
Default	Disabled.
Configuration Mode	Config
History	3.3.4000
Role	admin
Example	switch (config) # qos map dscp-to-pcp preserve-pcp switch (config) #
Related Commands	
Note	

6.2 IPv6

IP version 6 (IPv6) is a routing protocol which succeeds IPv4. With the expansion of the Internet and data bases IPv6 addresses consist of 128 bits whose purpose is to allow networks to include a significantly higher number of nodes by increasing the pool of available unique IP addresses. IPv6 packets alleviate overhead and allow for future customizability.

Textual representations of IPv6 addresses consist of 128 bits made up from eight 16-bit hexadecimal numbers separated by colons. IPv6 addresses may be abbreviated as follows:

- You may omit leading zeros in each 16-bit sequence
- You may replace an entire sequence with a double colon if it equals zero

For example, these addresses represent the same IPv6 address:

- af23:0000:0000:0000:1284:037d:35ce:2401
- af23:0:0:0:1284:37d:35ce:2401
- af23::1284:37d:35ce:2401

IPv6 addresses typically denote a 64-bit network prefix and a 64-bit host address.



Only static IPv6 and ECMP are supported.



The number of static IPv6 addresses supported is 64.

6.2.1 Neighbor Discovery Protocol

Neighbor Discovery (ND) decides relationships between neighbors and replaces ARP, ICMP, and ICMP redirect in IPv4.


Five kinds of ICMPv6 packets are defined by ND:

- Neighbor advertisement
- Router advertisement
- Neighbor solicitation
- Router solicitation
- Redirect

ND checks whether a neighboring node's address has changed, whether the neighbor is still reachable, and also resolves the address of the neighbor which a packet is being forwarded to. ND is also useful for network nodes for discovering other nodes and performing basic link-layer configuration.

6.2.2 Configuring IPv6

Figure 34: IPv6 Network

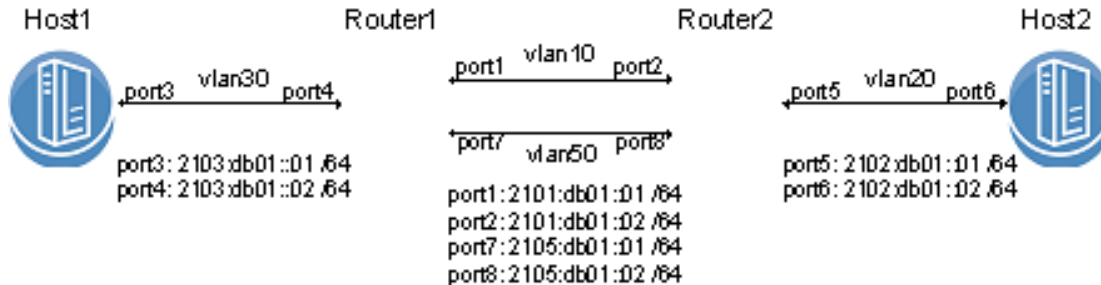

➤ **To configure Router1:**

Step 1. Enable IP routing. Run:

```
switch (config)# ip routing
```

Step 2. Enable forwarding IPv6 unicast packets. Run:

```
switch (config)# ipv6 routing
```

Step 3. Configure the VLAN interfaces. Run:

```
switch (config)# interface vlan 10  
switch (config interface vlan 10) # exit  
switch (config)# interface vlan 30  
switch (config interface vlan 30) # exit  
switch (config)# interface vlan 50  
switch (config interface vlan 50) # exit
```

Step 4. Enable IPv6 on the VLAN interfaces. Run:

```
switch (config)# interface vlan 10 ipv6 enable  
switch (config)# interface vlan 30 ipv6 enable  
switch (config)# interface vlan 50 ipv6 enable
```

Step 5. Configure IPv6 addresses for each one of the VLAN interfaces. Run:

```
switch (config)# interface vlan 10 ipv6 address 2101:db01::1 /64  
switch (config)# interface vlan 30 ipv6 address 2103:db01::2 /64  
switch (config)# interface vlan 50 ipv6 address 2105:db01::1 /64
```

Step 6. Configure IPv6 unicast. Run:

```
switch (config)# ipv6 route 2002:db01:: /64 2101:db01::2
```

Step 7. Configure IPv6 unicast. Run:

```
switch (config)# ipv6 route 2002:db01:: /64 2105:db01::2
```

➤ **To configure Router2:**

Step 1. Disable prefix mode on the CLI. Run:

```
switch (config)# no cli default prefix-mode enable
```


Step 2. Enable the VLANs on the system. Run:

```
switch (config)# vlan 10
switch (config vlan 10) # exit
switch (config)# vlan 20
switch (config vlan 20) # exit
switch (config)# vlan 50
switch (config vlan 50) # exit
```

Step 3. Configure the switch ports to accept the VLANs of which they are part only. Run:

```
switch (config)# interface ethernet 1/1 switchport access vlan 10 // port2
switch (config)# interface ethernet 1/2 switchport access vlan 50 // port8
switch (config)# interface ethernet 1/36 switchport access vlan 20 // port5
```

Step 4. Disable spanning tree. Run:

```
switch (config)# no spanning-tree
```

Step 5. Enable forwarding IPv6 unicast packets. Run:

```
switch (config)# ipv6 routing
```

Step 6. Configure the VLAN interfaces. Run:

```
switch (config)# interface vlan 10
switch (config interface vlan 10) # exit
switch (config)# interface vlan 20
switch (config interface vlan 20) # exit
switch (config)# interface vlan 50
switch (config interface vlan 50) # exit
```

Step 7. Configure IPv6 addresses for each one of the VLAN interfaces. Run:

```
switch (config)# interface vlan 10 ipv6 address 2101:db01::2 /64
switch (config)# interface vlan 20 ipv6 address 2102:db01::1 /64
switch (config)# interface vlan 50 ipv6 address 2105:db01::2 /64
```

Step 8. Configure IPv6 unicast. Run:

```
switch (config)# ipv6 route 2103:db01:: /64 2101:db01::1
```

Step 9. Configure IPv6 unicast. Run:

```
switch (config)# ipv6 route 2103:db01:: /64 2105:db01::1
```

➤ **Ping neighbor to verify IPv6 configuration:**

```
switch (config)# ping6 2101:db01::2
PING 2101:db01::2(2101:db01::2) 56 data bytes
64 bytes from 2101:db01::2: icmp_seq=1 ttl=64 time=0.371 ms
64 bytes from 2101:db01::2: icmp_seq=2 ttl=64 time=0.620 ms
64 bytes from 2101:db01::2: icmp_seq=3 ttl=64 time=0.192 ms
64 bytes from 2101:db01::2: icmp_seq=4 ttl=64 time=0.277 ms
64 bytes from 2101:db01::2: icmp_seq=5 ttl=64 time=0.231 ms
```

6.2.3 Commands

ipv6 enable

ipv6 enable
no ipv6 enable

Assigns automatic link-local IPv6 address to the interface.
The no form of the command deassigns that automatic local address and disables IPv6 if no static IPv6 address has been assigned to the interface.

Syntax Description	N/A
Default	Unassigned
Configuration Mode	Config Interface VLAN Config Interface Loopback Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface
History	3.4.1100 3.6.4110 Updated notes and command description.
Role	admin
Example	switch (config vlan 10) # ipv6 enable
Related Commands	
Note	<ul style="list-style-type: none">Assigning an IPv6 address to an interface also enables IPv6 processing on the interface.

ipv6 address

ipv6 address <ipv6-address> /<length>
no ipv6 address [<ipv6-address> [/<length>]]

Enables IPv6 processing and assigns an IPv6 address to the interface.
 The no form of the command removes the specified IPv6 address.

Syntax Description	ipv6-address	IPv6 address.
	length	Mask length for the associated address space. Range: 1-128.
Default	N/A	
Configuration Mode	Config Interface VLAN Config Interface Loopback Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.4.1100	
	3.6.4110	Updated syntax description and example output.
Role	admin	
Example	switch (config vlan 10) # ipv6 address 2001::1 /120 switch (config vlan 10) # ipv6 address 2001::1/120	
Related Commands		
Note	<ul style="list-style-type: none"> • An interface can have up to 16 IPv6 address assignments • If the no command does not include a specific address, all address assignments are removed from the interface • The mask length may be configured without a space (i.e. <ipv6-address>/<length>) 	

ipv6 nd managed-config-flag

ipv6 nd managed-config-flag
no ipv6 nd managed-config-flag

Sets the managed address configuration flag in IPv6 router advertisements.
The no form of the command restores the default setting.

Syntax Description	N/A
Default	Managed address configuration flag is not set
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface
History	3.4.1100 3.6.4110 Updated configuration mode.
Role	admin
Example	switch (config vlan 10) # ipv6 nd managed-config-flag
Related Commands	
Note	

ipv6 nd ns-interval

ipv6 nd ns-interval <period>
no ipv6 nd ns-interval

Configures the interval between IPv6 neighbor solicitation (NS) transmissions.

The no form of the command restores the default value.

Syntax Description	period	In milliseconds. Range: 1000-4294967295.
Default	1000 milliseconds	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.4.1100	
	3.6.4110	Updated configuration mode.
Role	admin	
Example	switch (config vlan 10) # ipv6 nd ns-interval 1500	
Related Commands		
Note		

ipv6 nd other-config-flag

ipv6 nd other-config-flag
no ipv6 nd other-config-flag

Indicates that other configuration information is available via DHCPv6.
The no form of the command removes the other configuration flag.

Syntax Description	N/A
Default	Not set
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface
History	3.4.1100 3.6.4110 Updated configuration mode.
Role	admin
Example	switch (config vlan 10) # ipv6 nd other-config-flag
Related Commands	
Note	

ipv6 nd prefix

```

ipv6 nd prefix <ipv6-address> /<length> [no-autoconfig] [no-onlink] [valid-time
{<time> | infinite}] [preferred-time {<time> | infinite}]
ipv6 nd prefix <prefix> no-advertise
no ipv6 nd prefix <prefix>

```

Configures inclusion for router advertisements (RAs) for neighbor.
The no form of the command removes the corresponding IPv6 nd prefix.

Syntax Description	ipv6-address	IPv6 address.
	length	Prefix length for the associated address space. Range: 1-128.
	no-advertise	Prevents advertising of the specified default prefix.
	valid-time	Time in seconds. Range: 0-4294967295.
	preferred-time	Time in seconds. Range: 0-4294967295.
	no-autoconfig	Indicates that the prefix cannot be used for stateless address configuration.
	no-onlink	Indicates that the prefix cannot be used for on-link determination
Default	valid-time: 2592000 seconds preferred-time: 604800 seconds no-autoconfig: Reset, autoconfig enabled no-onlink: Reset, on-link determination is enabled	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.4.1100	
	3.6.4110	Updated syntax description, configuration mode and default values.
Role	admin	
Example	switch (config vlan 10) # ipv6 nd prefix 2001::1 /120	
Related Commands		
Note	<ul style="list-style-type: none"> Valid time must be larger than preferred time By default, the router advertises all configured subnets on the interface 	

ipv6 nd ra dns-servers lifetime

ipv6 nd ra dns-servers lifetime {<time> | infinite}
no ipv6 nd ra dns-servers lifetime

Advertises a lifetime of a Recursive DNS Server (RDNSS).

Using RDNSS and DNSSL options, an IPv6 host can perform IPv6 address network configuration and DNS information simultaneously, without using DHCPv6 for the DNS configuration.

The no form of the command resets the lifetime value to default.

Syntax Description	time	Possible values: <ul style="list-style-type: none">• 0 - RDNSS address can no longer be used• 1-4294967295 (sec)
	infinite	A value of all one bits (0xffffffff) and "infinite" represents infinity.
Default	If no lifetime period is configured on the interface, the default value is 1.5 times the Router Advertisement (RA) interval set by the command "ipv6 nd ra interval".	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.4.1100	
	3.6.4110	Updated command and syntax description, configuration mode and default values.
Role	admin	
Example	switch (config vlan 10) # ipv6 nd ra dns-servers lifetime infinite	
Related Commands		
Note	<ul style="list-style-type: none">• A lifetime value set for an individual RDNSS overrides this value.• The lifetime value is the maximum amount of time after a route advertisement packet is sent that the RDNSS referenced in the packet may be used for name resolution.	

ipv6 nd ra dns-server

ipv6 nd ra dns-server <ipv6 address> [lifetime [<time> | infinite]]
no ipv6 nd ra dns-server [<ipv6 address>]

Configures the IPv6 address of a Recursive DNS Server (RDNSS) to include in the neighbor-discovery router advertisements (RAs).
 The no form of the command removes the RDNSS from the configuration.

Syntax Description	ipv6 address	IPv6 address of RDNSS
	lifetime	Maximum lifetime value for the specified RDNSS entry. Possible values: <ul style="list-style-type: none"> • 0 - RDNSS address can no longer be used • 1-4294967295 in seconds
	infinite	A value of all one bits (0xffffffff) and "infinite" represents infinity.
Default	If no lifetime period is configured on the interface, the default value is 1.5 times the Router Advertisement (RA) interval set by the command "ipv6 nd ra interval".	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.4.1100	
	3.6.4110	Updated command, example and syntax description, configuration mode and default values.
Role	admin	
Example	<pre>switch (config vlan 10) # ipv6 nd ra dns-server 2001::1 lifetime infinite</pre>	
Related Commands		
Note	<ul style="list-style-type: none"> • Including RDNSS information in RAs provides DNS server configuration for connected IPv6 hosts without requiring DHCPv6 • Multiple servers can be configured on the interface by using the command repeatedly • A lifetime value for the RDNSS can optionally be specified with this command, and overrides any default value configured for the interface using the ipv6 nd ra dns-servers lifetime command 	

ipv6 nd ra dns-suffixes lifetime

ipv6 nd ra dns-suffixes lifetime {<time> | infinite}
no ipv6 nd ra dns-suffixes lifetime

Advertises a lifetime of a DNS Search List (DNSSL).

Using RDNSS and DNSSL options, an IPv6 host can perform IPv6 address network configuration and DNS information simultaneously, without using DHCPv6 for the DNS configuration.

The no form of the command resets the lifetime value to its default.

Syntax Description	time	Possible values: <ul style="list-style-type: none">• 0 – RDNSS address can no longer be used• 1-4294967295 – in seconds
	infinite	A value of all one bits (0xffffffff) and "infinite" represents infinity.
Default	If no lifetime period is configured on the interface, the default value is 1.5 times the Router Advertisement (RA) interval set by the command “ipv6 nd ra interval”.	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.4.1100	
	3.6.4110	Updated command, example and syntax description, configuration mode and default values.
Role	admin	
Example	<pre>switch (config vlan 10) # ipv6 nd ra dns-suffix mellanox.com lifetime infinite</pre>	
Related Commands		
Note	<ul style="list-style-type: none">• The DNSSL contains the domain names of DNS suffixes for IPv6 hosts to append to short, unqualified domain names for DNS queries	

ipv6 nd ra dns-suffix

```
ipv6 nd ra dns-suffix <domain-name> [lifetime {<time> | infinite}]
no ipv6 nd ra dns-suffix [<domain-name>]
```

Creates a DNS search list (DNSSL) to include in the neighbor-discovery Router Advertisements (RAs).

The no form of the command removes the DNSSL from the configuration.

Syntax Description	domain-name	Domain suffix for IPv6 hosts to append to short unqualified domain names for DNS queries. The suffix must contain only alphanumeric characters, “.” (periods), “-” (hyphens), and must begin and end with an alphanumeric character.
	lifetime	Maximum lifetime value for the specified DNSSL entry.
	time	Possible values: <ul style="list-style-type: none"> • 0 – DNSSL must not be used for name resolution • 1-4294967295 – in seconds
	infinite	A value of all one bits (0xffffffff) and “infinite” represents infinity.
Default	If no lifetime period is configured on the interface, the default value is 1.5 times the Router Advertisement (RA) interval set by the command “ipv6 nd ra interval”.	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.4.1100	
	3.6.4110	Updated command, example and syntax description, configuration mode and default values.
Role	admin	
Example	<pre>switch (config vlan 10) # ipv6 nd ra dns-suffix mellanox.com lifetime infinite</pre>	

Related Commands

Note

- The DNSSL contains the domain names of DNS suffixes for IPv6 hosts to append to short, unqualified domain names for DNS queries
 - Multiple DNS domain names can be added to the DNSSL by reusing the command
 - A lifetime value for the DNSSL can optionally be specified with this command which overrides any default value configured for the interface using the command “`ipv6 nd ra dns-suffixes lifetime`”
-
-

ipv6 nd ra hop-limit

ipv6 nd ra hop-limit <limit>
no ipv6 nd ra hop-limit

Sets a suggested hop-limit value to be included in route advertisement (RA) packets.

The no form of the command resets the parameter to its default value.

Syntax Description	limit	The hop-limit value to be included by attached hosts in outgoing packets. <ul style="list-style-type: none"> • 0 – unspecified (by this router) • 1-255 – number of hops
Default	Limit value is 64	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.4.1100	
	3.6.4110	Updated configuration modes.
Role	admin	
Example	switch (config vlan 10) # ipv6 nd ra hop-limit 70	
Related Commands		
Note		

ipv6 nd ra interval max-period

ipv6 nd ra interval max-period <time> [min-period <time>]
no ipv6 nd ra interval

Configures the interval between IPv6 router advertisement (RA) transmissions.

The no form of the command resets the parameter to its default value.

Syntax Description	time	Maximum interval between successive IPv6 router advertisement transmissions. Range: 4-1800 seconds.
	min-period	minimum interval between successive IPv6 router advertisement transmissions. <ul style="list-style-type: none">• No parameter: Default is used• 4-1800
Default	max-period: 600 seconds min-period: See Note	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.4.1100 3.6.4110	Updated syntax description, configuration modes and notes.
Role	admin	
Example	switch (config vlan 10) # ipv6 nd ra interval max-period 600	
Related Commands		
Note	<ul style="list-style-type: none">• The min-period must be $0.33 * \text{<max-period>}$ if <max-period> is ≥ 9 seconds; otherwise, the default is Router Advertisement Interval• The parameter min-period must be no less than 3 seconds and no greater than $0.75 * \text{max-period}$	

ipv6 nd ra lifetime

ipv6 nd ra lifetime <time>
no ipv6 nd ra lifetime

Router lifetime is associated with a router's usefulness as default route, it does not apply to information contained in other message fields or options. Options that need time limits for their information include their own lifetime fields.

The no form of the command resets the parameter to its default value.

Syntax Description	time	The router lifetime specifies the period that the router can be considered as a default router by RA recipients in seconds. <ul style="list-style-type: none"> • 0 – the router should not be considered a default router on this interface • 1-9000 – lifetime period advertised in RAs should not be less than the max router advertisement interval
Default	3*<router advertisement interval>	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.4.1100	
	3.6.4110	Added support for IPv6
Role	admin	
Example	switch (config vlan 10) # ipv6 nd ra lifetime 300	
Related Commands		
Note		

ipv6 nd ra mtu suppress

ipv6 nd ra mtu suppress
no ipv6 nd ra mtu suppress

Suppresses advertisement (RA) MTU option sent to router.
MTU option ensures all nodes on a link use the same MTU value.
The no form of the command restores the MTU option to enabled.

Syntax Description	N/A
Default	Suppressed
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface
History	3.4.1100 3.6.4110 Updated command Syntax and configuration mode.
Role	admin
Example	switch (config vlan 10) # ipv6 nd ra mtu suppress
Related Commands	
Note	If not suppressed, MTU of the interface is advertised.

ipv6 nd ra suppress

ipv6 nd ra suppress [all]
no ipv6 nd ra suppress

Suppresses periodic and solicited IPv6 router advertisement (RA) transmissions.

The no form of the command restores the transmission of RAs.

Syntax Description	all	Configures the switch to suppress all RAs, including those responding to a router solicitation.
Default	Only unsolicited RAs transmitted periodically are suppressed	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.4.1100	
	3.6.4110	Updated command syntax and configuration mode.
Role	admin	
Example	switch (config vlan 10) # ipv6 nd ra suppress all	
Related Commands		
Note		

ipv6 nd reachable-time

ipv6 nd reachable-time <time>
no ipv6 nd reachable-time

Sets the time period the switch includes in the reachable time field of outgoing advertisements (RAs).
The no form of the command resets the parameter to its default value.

Syntax Description	time	In milliseconds; the reachable time defines the period that a node assumes a neighbor is reachable after having received a reachability confirmation. Values: <ul style="list-style-type: none">• 0 - unspecified by router• 1 - 3600000 the period that a node assumes a neighbor is reachable.
Default	0 (unspecified)	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.4.1100	
	3.6.4110	Updated command syntax, configuration mode and notes.
Role	admin	
Example	switch (config vlan 10) # ipv6 nd reachable-time 30000	
Related Commands		
Note	<ul style="list-style-type: none">• RAs that advertise zero seconds indicate that the router does not specify a reachable time	

ipv6 nd router-preference

ipv6 nd router-preference {high | medium | low}
no ipv6 nd router-preference

Sets the value the switch enters in the default router preference (DRP) field of router advertisements (RAs) it sends.

The no form of the command resets the parameter to its default value.

Syntax Description	N/A
Default	Medium
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface
History	3.4.1100 3.6.4110 Updated configuration modes.
Role	admin
Example	switch (config vlan 10) # ipv6 nd router-preference high
Related Commands	
Note	<ul style="list-style-type: none"> IPv6 hosts maintain a default router list from which to select a router for traffic to offlink destinations. The router's address is then saved in the destination cache. The neighbor discovery protocol (NDP) prefers routers that are reachable or probably reachable over routers whose reachability is unknown or suspect. For reachable or probably reachable routers, NDP can either select the same router every time or cycle through the router list. DRP values specify a host's preferred router. If router lifetime is zero, preference value must be medium

ipv6 nd retrans-timer

ipv6 nd retrans-timer <time>
no ipv6 nd retrans-timer

Advertises the time between consecutive neighbor solicitation (NS) messages.

The no form of the command resets the parameter to its default value.

Syntax Description	time	In milliseconds; the time between retransmitted neighbor solicitation messages. Possible values: <ul style="list-style-type: none">• 0 – unspecified• Range – 1000-4294967295
Default	0 (unspecified)	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.4.1100	
	3.6.4110	Updated command syntax, configuration mode and example output.
Role	admin	
Example	switch (config vlan 10) # ipv6 nd retrans-timer 1000	
Related Commands		
Note		

ipv6 nd redirects

ipv6 nd redirects
no ipv6 nd redirects

Enables sending ICMPv6 redirect messages.
 The no form of the command disables sending ICMPv6 redirect messages.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config Interface VLAN Config Interface Loopback Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface
History	3.4.1100
Role	admin
Example	switch (config) # ipv6 nd redirects
Related Commands	
Note	

ipv6 nd dad attempts

ipv6 nd dad attempts <number>
no ipv6 nd dad attempts

Sets the number of consecutive neighbor solicitation messages sent for duplicate address detection (DAD) validation.
The no form of the command resets the value to its default.

Syntax Description	number	Number of attempts: <ul style="list-style-type: none">• 0 – DAD is not performed• Valid range: 1-1000
Default	1	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.4.1100	
	3.6.4110	Updated configuration mode.
Role	admin	
Example	switch (config vlan 10) # ipv6 nd dad attempts 10	
Related Commands		
Note		

ipv6 neighbor

```

ipv6 neighbor [vrf <name>] <ipv6-address> <mac-address>
ipv6 neighbor <ipv6-address> interface {ethernet <port> | vlan <vlan-id> |
port-channel <port-channel>} <mac-address>
no interface {ethernet <port> | vlan <vlan-id> | port-channel} ipv6 neighbor
<ipv6-address> <mac-address>
no ipv6 neighbor [vrf <name>] <ipv6-address>

```

Creates an IPv6 neighbor discovery cache static entry.

The no form of the command removes the specified static entry from the IPv6 neighbor discovery cache.

Syntax Description	ipv6-address	IPv6 address
	ethernet <port>	Ethernet port. Format <slot>/<port>.
	vlan <vlan-id>	VLAN ID
Default	N/A	
Configuration Mode	Config	
History	3.4.1100	
	3.6.4110	Updated command syntax.
Role	admin	
Example	switch (config vlan 10) # ipv6 neighbor 2001:db01::1 vlan 10 4:4:4:4:4:4	
Related Commands		
Note	This command do not affect any dynamic entries in the cache.	

clear ipv6 neighbors

clear ipv6 neighbors {**ethernet** <slot> /<port> | **port-channel** <port-channel> | **vlan** <vlan-id>} [<ipv6-addr>]

Removes the specified dynamic IPv6 neighbor discovery cache entries.

Syntax Description	ethernet	Ethernet port. Format: <slot>/<port>.
	vlan	VLAN interface
	ipv6-addr	IPv6 address
Default	N/A	
Configuration Mode	Config	
History	3.4.1100	
	3.6.4110	Updated command
Role	admin	
Example	switch (config) # clear ipv6 neighbors ethernet 1/4	
Related Commands		
Note	<ul style="list-style-type: none">• Commands that do not specify an IPv6 address remove all dynamic entries for the listed interface• Commands that do not specify an interface remove all dynamic entries	

ipv6 route

- General route:
`ipv6 route [vrf <vrf-name>] {<ipv6-prefix> | <ipv6-address> /<length>} <next-hop-ipv6-address> [<distance>]`
- Local route:
`ipv6 route [vrf <vrf-name>] {<ipv6-prefix> | <ipv6-address> /<length>} {<ethernet <port> | vlan <id>| portchannel <id>} [<distance>]`
- Drop route:
`ipv6 route [vrf <vrf-name>] {<ipv6-prefix> | <ipv6-address> /<length>} null0 [<distance>]`
- Delete route(s):
`no ipv6 route [vrf <vrf-name>] {<ipv6-prefix> | <ipv6-address> /<length>} [<next-hop-ipv6-address>]`

Creates an IPv6 static route.

The no form of the command deletes static routes.

Syntax Description	ipv6-address	IPv6 address.
	ipv6-prefix	IPv6 address + mask length without space, e.g. a1:a2::33/64.
	length	Prefix length for the associated address space. Range: 1-128.
	next-hop-ipv6-address	IPv6 address of the next-hop
	distance	Administrative distance assigned to route. Options include: <ul style="list-style-type: none"> • No parameter – route is assigned a default administrative distance of 1 • 1-255 – the administrative distance assigned to route
	null0	Creates a black hole route with action DROP
Default	No distance parameter indicated: Administrative distance of 1	
Configuration Mode	Config	
History	3.4.1100	
	3.6.4110	Updated command
Role	admin	
Example	<pre>switch (config) # ipv6 route 3003:db01:: /64 2001:db01::1 switch (config) #</pre>	

Related Commands

Note

- Static routes have a default administrative distance of 1
 - Assigning a higher administrative distance to a static route configures it to be overridden by dynamic routing data.
 - Multiple routes which are configured to the same destination with the same administrative distance comprise an Equal Cost Multi-Path (ECMP) route
 - A no command not including a source deletes all statements to the destination
 - Route with distance value 255 is not inserted to the forwarding table
-
-

ipv6 routing

ipv6 routing
no ipv6 routing

Enables forwarding IPv6 unicast packets.
 The no form of the command disables IPv6 unicast routing.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config
History	3.4.1100
Role	admin
Example	switch (config) # ipv6 routing
Related Commands	
Note	<ul style="list-style-type: none"> When routing is enabled, the switch attempts to deliver inbound packets to destination addresses by forwarding them to interfaces or next hop addresses specified by the IPv6 routing table

show ipv6 interface

show ipv6 interface [[[ethernet <port> | port-channel <port-channel> | vlan <vlan-id>]]] **brief**

Displays the status of specified routed interfaces that are configured for IPv6.

Syntax Description	ethernet <port>	Displays output pertaining to the specified Ethernet interface
	port-channel <port-channel>	Displays output pertaining to the specified LAG interface
	vlan <vlan-id>	Displays output pertaining to the specified VLAN interface
	brief	Shows basic IPv6 information regarding all IPv6 interfaces

Default	N/A
Configuration Mode	Any Command Mode
History	3.4.1100 3.6.4110 Added support for IPv6
Role	admin

Example

```
switch (config) # show ipv6 interface

Vlan10 is Enabled , line protocol is UP
  IPv6 : Enabled
  Link-local address : fe80::f652:14ff:fe2d:9808
  Global Unicast Addresses :
  2001:db01::2 /64
  Joined Group Addresses :
  ff02::1
  ff02::2
  ff02::1:ff2d:9808
  MTU : 1500 bytes
  ICMP error messages limited to every milliseconds : 100
  ICMP redirects : enabled
  ND DAD : enabled
  Number of DAD attempts : 1
  ND reachable time (milliseconds) : 30000
  ND advertised retransmit interval (milliseconds) : 0
  ND router advertisements maximum interval (seconds) : 600
  ND router advertisements minimum interval (seconds) : 198
  ND router advertisements managed configuration flag : unset
  ND router advertisements other configuration flag : unset
  ND solicited router advertisement : suppressed
  ND router advertisements lifetime (seconds) : 1800
  ND advertised default router preference : medium
  ND router advertisements hop-limit : 64

switch (config) #
```

Related Commands

Note

show ipv6 neighbors

```
show ipv6 neighbors [{ethernet <port> | port-channel <port-channel> | vlan <vlan-id>} | <ipv6 address> | summary]
```

Displays IPv6 neighbor discovery (ND) cache information.

Syntax Description	ethernet <port>	Shows output pertaining to the specified Ethernet interface.
	vlan <vlan-id>	Shows output pertaining to the specified VLAN interface.
	ipv6 address	IPv6 address of individual neighbor
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.4.1100	
	3.6.4110	Updated command syntax and example output.
Role	admin	
Example	<pre>switch (config) # show ipv6 neighbors IPv6 Address MAC Address State Interf ----- 2001:db01::1 f4:52:14:2d:98:88 Reachable vlan10 switch (config) #</pre>	
Related Commands		
Note		

show ipv6 route

```
show ipv6 route [vrf <vrf-name>] {[<ipv6-address> <ipv6-address>/<length>
[longer-prefixes]][connected | bgp | static] }
```

Displays IPv6 neighbor discovery (ND) cache information.

Syntax Description	ipv6-addr	Filters routes by IPv6 address or prefix
	longer-prefixes	Displays output for longer prefix entries
	connected	Displays entries for routes to networks directly connected to the switch
	static	Displays entries added through CLI commands
	summary	Displays the current contents of the IPv6 routing table in summary format
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.4.1100	
	3.6.4110	Update command
Role	admin	
Example	<pre>switch (config) # show ipv6 route Destination Mask Gateway Interface Source Distance/Metric fe80:: 64 :: mgmt0 Connected 256/1 fe80:: 64 :: mgmt1 Connected 256/1 2001:db01:: 64 :: vlan10 Connected 1/1 3003:db01:: 64 2001:db01::1 vlan10 Static 1/20 switch (config) #</pre>	
Related Commands		
Note		

show interfaces null0

show interfaces null0 [vrf <vrf-name>]

Displays blackhole route byte and packet counters.

Syntax Description	N/A	N/A
---------------------------	-----	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.6.4110
----------------	----------

Role	admin
-------------	-------

Example	switch (config) # show interfaces null0 10 packets 740 bytes switch (config) #
----------------	---

Related Commands	
-------------------------	--

Note	
-------------	--

6.3 OSPF

Open Shortest Path First (OSPF) is a link-state routing protocol for IP networks. It uses a link state routing algorithm and falls into the group of interior routing protocols, operating within a single autonomous system (AS).

OSPF-speaking routers send Hello packets to all OSPF-enabled IP interfaces. If two routers sharing a common data link agree on certain parameters specified in their respective Hello packets, they become neighbors.

Adjacencies, which can be thought of as virtual point-to-point links, are formed between some neighbors. OSPF defines several network types and several router types. The establishment of an adjacency is determined by the types of routers exchanging Hellos and the type of network over which the Hello packets are exchanged.

Each router sends link-state advertisements (LSAs) over all adjacencies. The LSAs describe all of the router's links, or interfaces, the router's neighbors, and the state of the links. These links might be to stub networks (those without another router attached), to other OSPF routers, to networks in other areas, or to external networks (those learned from another routing process). Because of the varying types of link-state information, OSPF defines multiple LSA types.

Each router receiving an LSA from a neighbor records the LSA in its link-state database and sends a copy of the LSA to all of its other neighbors. By flooding LSAs throughout an area, all routers will build identical link-state databases.

When the databases are complete, each router uses the SPF algorithm to calculate a loop-free graph describing the shortest (lowest cost) path to every known destination, with itself as the root.

When all link-state information has been flooded to all routers in an area, and neighbors have verified that their databases are identical, it means the link-state databases have been synchronized and the route tables have been built. Hello packets are exchanged between neighbors as keepalives, and LSAs are retransmitted. If the network topology is stable, no other activity should occur.

For OSPF network design over Mellanox L2 VMS, please refer to [Mellanox Virtual Modular Switch Reference Guide](#).

6.3.1 Router ID

The router ID is a 32-bit number assigned to the router running the OSPF protocol. This number uniquely identifies the router within an Autonomous System.

Router ID can be configured statically, however, if it is not configured, then the default election is as follows:

- If a loopback interface already exists, the router ID takes the loopback IP address;
- Otherwise, the lowest IP address is elected as router ID

6.3.2 ECMP

Equal-cost multi-path (ECMP) routing is a routing strategy where next-hop packet forwarding to a single destination can occur over multiple paths. The OSPF link-state routing algorithm can


find multiple routes to the same destination, all multiple routes are added to the routing table only if those routes are equal-cost routes.

In case there are several routes with different cost, only the route with the lowest cost is selected. In case there are multiple routes with the same lowest cost, all of them are used (up to maximum of 64 ECMP routes).

ECMP is not configurable but is enabled by default for OSPF.

6.3.3 Configuring OSPF

Figure 35: OSPF Basic Topology

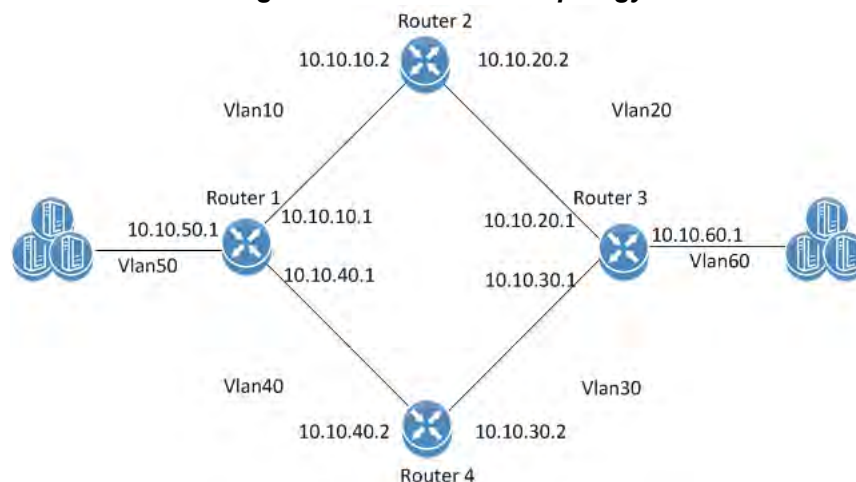

Precondition steps:



The following configuration example refers to Router 2 in [Figure 35](#). The remainder of the routers in the figure are configured similarly.



It is recommended to disable STP before enabling OSPF. Use the command `no spanning-tree`.

Step 1. Make sure an L3 license is installed. For a list of the available licenses see [Section 2.4, “Licenses,” on page 20](#).

Step 2. Enable IP routing functionality. Run:

```
switch (config)# ip routing
```

Step 3. Enable the desired VLAN. Run:

```
switch (config)# vlan 10
switch (config)# vlan 20
```

Step 4. Add this VLAN to the desired interface. Run:

```
switch (config)# interface ethernet 1/1
switch (config ethernet 1/1)# switchport access vlan 10
switch (config ethernet 1/1)# exit
switch (config)# interface ethernet 1/2
switch (config ethernet 1/2)# switchport access vlan 20
```

Step 5. Create a VLAN interface. Run:

```
switch (config)# interface vlan 10
```

Step 6. Apply IP address to the VLAN interface. Run:

```
switch (config interface vlan 10)# ip address 10.10.10.2 /16
```

Step 7. Enable the interface. Run:

```
switch (config interface vlan 10)# no shutdown
```

Step 8. Create a second VLAN interface. Run:

```
switch (config)# interface vlan 20
```

Step 9. Apply IP address to the second VLAN interface. Run:

```
switch (config interface vlan 20)# ip address 10.10.20.2 /16
```

Step 10. Enable the second interface. Run:

```
switch (config interface vlan 20)# no shutdown
```

Basic OSPF Configuration:

Step 1. To enable OSPF configuration run:

```
switch (config)# protocol ospf
```

Step 2. To create a router OSPF instance run:

```
switch (config)# router ospf
```



Only one instance of OSPF is supported.

Step 3. Associate the VLAN interfaces to the OSPF area. Area 0 is the backbone area, run:

```
switch (config interface vlan 10)# ip ospf area 0
switch (config interface vlan 10)# exit
switch (config)# interface vlan 20
switch (config interface vlan 20)# ip ospf area 0
```

6.3.4 Verifying OSPF

➤ *To verify OSPF configuration and status:*

Step 1. Verify OSPF configuration and status. Run:

```
switch (config) # show ip ospf
```

```

Routing Process 1 with ID 10.10.10.10 vrf-default

Stateful High Availability disabled
Graceful-restart is not supported
Supports only single TOS (TOS 0) route
Opaque LSA not supported
OSPF Admin State is enabled
Redistributing External Routes: Disabled
Administrative distance 110
Reference Bandwidth is 40Gb
Initial SPF schedule delay 1 msec
SPF Hold time 10 msec
Maximum paths to destination 64
Router is not originating router LSA with maximum metric
Condition: Always
Number of external LSAs 0, checksum sum 0
Number of opaque AS LSAs 0,checksum sum 0
Number of areas is 1, 1 normal, 0 stub, 0 nssa
Number of active areas is 1, 1 normal, 0 stub, 0 nssa

Area (0.0.0.0) (Active)
Interfaces in this area: 2 Active Interfaces: 2
Passive Interfaces: 0
SPF Calculation has run 5 times
This area is Normal area
Number of LSAs: 1, checksum sum 7700

switch (config) #

```

- Step 2.** Verify the OSPF neighbors status. Make sure that each neighbor reaches FULL state with its peer to enable it take part in all dynamic routing changes in the network. Run:

```

switch (config) # show ip ospf neighbors

Neighbor 10.10.10.1, interface address 10.10.10.2
In the area 0.0.0.0 via interface Vlan 10
Neighbor priority is 1, State is FULL
BDR is 10.10.10.1
Options 0
Dead timer due in 35

Neighbor 10.10.20.1, interface address 10.10.20.2

```

```
In the area 0.0.0.0 via interface Vlan 20
Neighbor priority is 1, State is FULL
BDR is 10.10.20.1
Options 0
Dead timer due in 35

switch (config) #
```

Step 3. Verify the OSPF Interface configuration and status run:

```
switch (config) # show ip ospf interface

Interface Vlan is 10 Enabled, line protocol is Down
IP address 10.10.10.2, Mask 255.255.0.0
Process ID 1 VRF Default, Area 0.0.0.0
OSPF Interface Admin State is enabled
State DOWN, Network Type BROADCAST, Cost 1
Transmit delay 1 sec, Router Priority 1
No designated router on this network
No backup designated router on this network
Timer intervals (sec's): Hello 10, Dead 40, Wait 40, Retransmit 5
No authentication
Number of opaque link LSAs: 0, checksum sum 0

Interface Vlan is 20 Enabled, line protocol is Up
IP address 10.10.20.2, Mask 255.255.0.0
Process ID 1 VRF Default, Area 0.0.0.0
OSPF Interface Admin State is enabled
State DESIGNATED ROUTER, Network Type BROADCAST, Cost 1
Transmit delay 1 sec, Router Priority 1
No designated router on this network
No backup designated router on this network
Timer intervals (sec's): Hello 10, Dead 40, Wait 40, Retransmit 5
No authentication
Number of opaque link LSAs: 0, checksum sum 0

switch (config) #
```

6.3.5 Commands

6.3.5.1 Config

protocol ospf

protocol ospf
no protocol ospf

Enables Open Shortest Path First Protocol (OSPF), and unhides the related OSPF commands.

The no form of the command deletes the OSPF configuration and hides the OSPF related commands.

Syntax Description	N/A
Default	OSPF feature is disabled.
Configuration Mode	Config
History	3.3.3500
Role	admin
Example	switch (config)# protocol ospf
Related Commands	ip routing
Note	

router ospf

router ospf [<process-id> [vrf <vrf-name>]]
no router ospf [<process-id> [vrf <vrf-name>]]

Enters router OSPF configuration mode, and creates default OSPF instance on specific VRF with specific Process ID if one does not exist. The no form of the command deletes the OSPF instance.

Syntax Description	process-id	OSPF instance ID
	vrf	VRF name (e.g. default)
Default	Process ID: 1 VRF: Active VRF routing-context	
Configuration Mode	Config	
History	3.3.3500	
	3.6.1002	Added VRF and process ID parameters and updated Example
Role	admin	
Example	switch (config)# router ospf 2 vrf myvrf switch (config) router ospf 2)#	
Related Commands	N/A	
Note	Only one OSPF instance is supported	

6.3.5.2 Config Router

router-id

router-id <ip-address>
no router-id

Sets Router ID for the OSPF instance.
The no form of the command causes automatic election of router ID by the router.

Syntax Description	ip-address	The Router id in IP address format.
Default	The router ID is a 32-bit number assigned to the router running the OSPF protocol. This number uniquely identifies the router within an Autonomous System. Router ID can be configured statically, however, if it is not configured, then the default election is as follows: <ul style="list-style-type: none">• If a loopback interface already exists, the router ID takes the loopback IP address;• Otherwise, the lowest IP address is elected as router ID.	
Configuration Mode	Config OSPF Router	
History	3.3.3500	
Role	admin	
Example	switch (config router ospf)# router-id 10.10.10.10	
Related Commands	N/A	
Note		

shutdown

shutdown
no shutdown

Disables the OSPF instance.
The no form of the command enables the OSPF instance.

Syntax Description	N/A
Default	Enable (no shutdown)
Configuration Mode	Config OSPF Router
History	3.3.3500
Role	admin
Example	switch (config router ospf)# shutdown
Related Commands	N/A
Note	

auto-cost reference-bandwidth

auto-cost reference-bandwidth <ref-bw> [Gbps | Mbps]
no auto-cost reference-bandwidth

Configures reference-bandwidth in Gb/s (Default) or Mb/s.
The no form of the command resets this parameter to its default value.

Syntax Description	ref-bw	Range: 1-4294
	Gbps	Value in Gbps (default if not specified)
	Mbps	Value in Mbps
Default	40 Gbps	
Configuration Mode	Config OSPF Router	
History	3.3.3500	
Role	admin	
Example	switch (config router ospf)# auto-cost reference-bandwidth 10 Gbps	
Related Commands	N/A	
Note		

distance

distance <value>
no distance

Configures the OSPF route administrative distance.
 The no form of the command resets this parameter to default.

Syntax Description	value	OSPF administrative distance. Range is 1-255.
Default	110	
Configuration Mode	Config OSPF Router	
History	3.3.3500	
Role	admin	
Example	switch (config router ospf)# distance 100	
Related Commands	N/A	
Note		

redistribute

redistribute {bgp | direct | static | ebgp | ibgp}
no redistribute {bgp | direct | static}

Enables importing routes from other routing protocols as well as any statically configured routers into OSPF.

The no form of the command disables the importing of the routes.

Syntax Description	direct	Redistribute directly connected routes.
	bgp	Redistribute routes from BGP protocol.
	ibgp	Redistribute IBGP routes
	ebgp	Redistribute EBGp routes
	static	Redistribute static configured routes.
Default	Disable (no redistribution)	
Configuration Mode	Config OSPF Router	
History	3.6.3506 3.2.1000	
Role	admin	
Example	switch (config router ospf)# redistribute direct	
Related Commands	N/A	
Note	Routes from multiple protocols can be imported in parallel.	

timers throttle spf

timers throttle spf <spf-delay> <spf-hold>
no timers throttle spf

Sets the OSPF throttle SPF timers.
 The no form of the command resets the timers to default.

Syntax Description	spf-delay	The interval by which SPF calculations delayed after a topology change reception. Range is 0-100 milliseconds.
	spf-hold	The minimum delay between two consecutive delay calculations. Range is 0-1000 milliseconds.
Default	spf-delay: 1 millisecond spf-hold: 10 millisecond	
Configuration Mode	Config OSPF Router	
History	3.3.3500	
Role	admin	
Example	switch (config router ospf)# timers throttle spf 100 1000	
Related Commands	N/A	
Note		

area default-cost

area <area-id> default-cost <cost>
no area <area-id> default-cost

Specifies cost for the default summary route sent into an OSPF stub or not-so-stubby area (NSSA).

The no form of the command sets the cost to the default value.

Syntax Description	area-id	OSPF area-id. Range is 0-4294967295.
	cost	The cost for the default summary route. Range is 1-16777215.
Default	The summary route cost is based on the area border router that generated the summary route.	
Configuration Mode	Config OSPF Router	
History	3.3.3500	
Role	admin	
Example	switch (config router ospf)# area 0 default-cost 100	
Related Commands	N/A	
Note	Base cost for all calculation is 56GbE.	

area range

area <area-id> range <ip-address> <prefix> [not-advertise]
no area <area-id> range <ip-address> <prefix> [not-advertise]

Consolidates and summarizes routes at an OSPF area boundary.
 The no form of the command removes the ip-prefix range from summarization.

Syntax Description	area-id	OSPF area-ID. Range is 0-4294967295.
	ip-address	IP Address.
	not-advertise	Suppresses routes that match the specified IP address.
	prefix	Network prefix (in the format of /24, or 255.255.255.0 for example).
Default	Disabled	
Configuration Mode	Config OSPF Router	
History	3.3.3500	
Role	admin	
Example	switch (config router ospf)# area 0 range 10.10.10.10 /24	
Related Commands	N/A	
Note		

area stub

area <area-id> stub [no-summary]
no area <area-id> stub [no-summary]

Configures an area as an OSPF stub area (an area is created if non-existent). The no form of the command removes the stub area configuration and changes the area to normal, or deletes the area (if stub is not used).

Syntax Description	area-id	OSPF area-ID. Range is 0-4294967295.
	no-summary	Summary route will not be advertised into the stub area.
Default	Summary route will be advertised.	
Configuration Mode	Config OSPF Router	
History	3.3.3500	
Role	admin	
Example	switch (config router ospf)# area 0 stub	
Related Commands	N/A	
Note		

area nssa

area <area-id> nssa [default-information-originate [metric <m-value>] [metric-type <m-type>]] [nosummary] [translate type7 always]
no area <area-id> nssa [default-information-originate] [no-summary] [translate type7 always]

Configures an area as an OSPF not-so-stubby (NSSA) area.
 The no form of the command removes the NSSA area configuration and changes the area to default.

Syntax Description	area-id	OSPF area ID. Range is 0-4294967295.
	default-information-originate	A default type7 LSA (Link State Advertisements) is generated into the NSSA area.
	m-type	Metric type for OSPF. Range is 1-2.
	m-value	Metric value for OSPF. Range is 1-65535.
	no-summary	Summary route will not be advertised into the NSSA area.
	translate type7 always	Type7 LSAs is translated to type5 LSAs (Link State Advertisements).
Default	Default m-type:2 Default m-value:10	
Configuration Mode	Config OSPF Router	
History	3.3.3500	
Role	admin	
Example	switch (config router ospf)# area 0 nssa	
Related Commands	N/A	
Note	An area can be either stub, NSSA or normal.	

no area

no area <area-id>

Deletes OSPF area and its related configuration.

Syntax Description	area-id	OSPF area ID Range is 0-4294967295
Default	N/A	
Configuration Mode	Config OSPF Router	
History	3.3.3500	
Role	admin	
Example	switch (config router ospf)# no area 1	
Related Commands	N/A	
Note	The command fails if the area is attached to active interfaces.	

summary-address

summary-address <ip-address> <prefix> [not-advertise]
no summary-address <ip-address> <prefix> [not-advertise]

Creates aggregate addresses for the OSPF protocol.
 The no form of the command disables the aggregation of the ip-address.

Syntax Description	ip-address	The summary IP address.
	not-advertise	Suppresses routes that match the specified ip-address.
	prefix	Network prefix (in the format of /24 or 255.255.255.0, for example).
Default	N/A	
Configuration Mode	Config OSPF Router	
History	3.3.3500	
Role	admin	
Example	switch (config router ospf)# summary-address 10.10.10.10 /24	
Related Commands	N/A	
Note	Maximum of 1500 summarized IP addresses can be configured.	

6.3.5.3 Interface

ip ospf cost

ip ospf cost <cost>
no ip ospf cost

Sets OSPF cost of sending packet of this interface.
The no form of the command resets this parameter to default.

Syntax Description	cost	The Interface cost used by the OSPF. Range is 1-65535.
Default	1	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.3500	
Role	admin	
Example	switch (config interface vlan 10)# ip ospf cost 100	
Related Commands	N/A	
Note		

ip ospf dead-interval

ip ospf dead-interval <seconds>
no ip ospf dead-interval

Configures the interval during which at least one Hello packet must be received from a neighbor before the router declares that neighbor as down. The no form of the command resets this parameter to its default.

Syntax Description	seconds	The dead-interval timer, in seconds. Range is 1-65535.
Default	40	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.3500	
Role	admin	
Example	switch (config interface vlan 10)# ip ospf dean-interval 10	
Related Commands	N/A	
Note	The value must be the same for all nodes on the network.	

ip ospf hello-interval

ip ospf hello-interval <seconds>
no ip ospf hello-interval

Configures the interval between Hello packets that OSPF sends on the interface.

The no form of the command resets this parameter to default.

Syntax Description	seconds	The Hello interval timer, in seconds. Range is 1-65535.
Default	10	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.3500	
Role	admin	
Example	switch (config interface vlan 10)# ip ospf hello-interval 20	
Related Commands	N/A	
Note	The value must be the same for all nodes on the network.	

ip ospf priority

ip ospf priority <number>
no ip ospf priority

Configures the priority for this OSPF interface.
 The no form of the command resets this parameter to default.

Syntax Description	number	The Interface priority used by the OSPF protocol. Range is 0-255
Default	1	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.3500	
Role	admin	
Example	switch (config interface vlan 10)# ip ospf priority 100	
Related Commands	N/A	
Note	<ul style="list-style-type: none"> • Use the “ip ospf priority” command to set the router priority, which determines the designated router for this network. When two routers are attached to a network, both attempt to become the designated router. • The router with the higher router priority takes precedence. If there is a tie, the router with the higher router ID takes precedence. A router with a router priority set to zero cannot become the designated router or backup designated router. 	

ip ospf network

ip ospf network <type>
no ip ospf network

Sets the OSPF interface network type.
The no form of the command resets the interface network type to its default.

Syntax Description	type	The network type on this interface. The options are 'broadcast' or 'point-to-point'.
Default	broadcast	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.3500	
Role	admin	
Example	switch (config interface vlan 10)# ip ospf network point-to-point	
Related Commands	N/A	
Note	<ul style="list-style-type: none">• The network type influences the behavior of the OSPF interface. An OSPF network type is usually broadcast, which uses OSPF multicasting capabilities. Under this network type, a designated router and backup designated router are elected. For point-to-point networks, there are only two neighbors and multicast is not required.• All routers on the same network should have the same network type.	

ip ospf retransmit-interval

ip ospf retransmit-interval <seconds>
no ip ospf retransmit-interval

Configures the time between OSPF link-state advertisement (LSA) retransmissions for adjacencies that belongs to the interface.
 The no form of the command resets this parameter to its default.

Syntax Description	seconds	The retransmit interval in seconds. Range is 0-3600.
Default	5	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.3500	
Role	admin	
Example	switch (config interface vlan 10)# ip ospf retransmit-interval 10	
Related Commands	N/A	
Note		

ip ospf passive-interface

ip ospf passive-interface
no ip ospf passive-interface

Suppresses flooding of OSPF routing updates on an interface.
The no form of the command reverts the status to active OSPF interface.

Syntax Description	N/A
Default	Active interface (no ip ospf passive-interface)
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface
History	3.3.3500
Role	admin
Example	switch (config interface vlan 10)# ip ospf passive-interface
Related Commands	N/A
Note	

ip ospf transmit-delay

ip ospf transmit-delay <seconds>
no ip ospf transmit-delay

Sets the estimated time required to send an OSPF link-state update packet.
 The no form of the command resets this parameter to its default.

Syntax Description	seconds	The transmit-delay interval in seconds. Range is 0-3600.
Default	1	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.3500	
Role	admin	
Example	switch (config interface vlan 10)# ip ospf transmit-delay 2	
Related Commands	N/A	
Note		

ip ospf shutdown

ip ospf shutdown
no ip ospf shutdown

Disables the OSPF instance on the interface.
The no form of the command enables the OSPF on this interface.

Syntax Description	N/A
Default	Enabled (no shutdown)
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface
History	3.3.3500
Role	admin
Example	switch (config interface vlan 10)# ip ospf shutdown
Related Commands	N/A
Note	

ip ospf authentication

ip ospf authentication [message-digest]
no ip ospf authentication

Specifies the authentication type for OSPF.
 The no form of the command disables the authentication.

Syntax Description	message-digest	Specifies that message-digest authentication (MD5) is used.
Default	Disabled (no)	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.3500	
Role	admin	
Example	switch (config interface vlan 10)# ip ospf authentication	
Related Commands	N/A	
Note	<ul style="list-style-type: none"> • Without message-digest option, a simple password authentication will be used. • Message-digest authentication can be enabled only if a key is configured. 	

ip ospf authentication-key

ip ospf authentication-key [<auth-type>] <password>
no ip ospf authentication-key

To assign a password for simple password authentication for the OSPF.
The no form of the command deletes the simple password authentication key.

Syntax Description	auth-type	The authentication type: 0 – unencrypted password 7 – MD5 key
	password	Authentication password (up to 8 alphanumeric string)
Default	Unencrypted password	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.3500	
Role	admin	
Example	switch (config interface vlan 10)# ip ospf authentication-key 0 mycleartextpassword	
Related Commands	N/A	
Note	<ul style="list-style-type: none">• When selecting an encrypted password “7”, the user must input a password encrypted with an MD5 key.• When selecting an unencrypted password “0”, the user must input a clear-text password. Then when examining the running-config, it exhibits the encrypted password.	

ip ospf message-digest-key

ip ospf message-digest-key <key-id> md5 [auth-type] <key>
no ip ospf message-digest-key <key-id>

Sets the message digest key for MD5 authentication.
 The no form of the command deletes the key for MD5 authentication.

Syntax Description	auth-type	The authentication type: 0 - Unencrypted password 7 - MD5 key
	key	Authentication password, up to 8 alphanumeric string.
	key-id	Alphanumeric password of up to 16 bytes.
Default	Unencrypted (no)	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.3500	
Role	admin	
Example	switch (config interface vlan 10)# ip ospf message-digest-key mykeyid md5 7 mykey	
Related Commands	N/A	
Note	The user cannot delete the last key until authentication is disabled.	

ip ospf area

ip ospf area <area-id>
no ip ospf area

Sets OSPF area of this interface (and creates the area if non-existent).
The no form of the command removes the interface from the area.

Syntax Description	area-id	OSPF area ID Range is 0-4294967295
Default	N/A	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface Config Interface Loopback	
History	3.3.3500	
Role	admin	
Example	switch (config interface vlan 10)# ip ospf area 0	
Related Commands	N/A	
Note		

6.3.5.4 Show

show ip ospf**show ip ospf [<process-id> [vrf <vrf-name>]]**

Displays general OSPF configuration on specific VRF and status.

Syntax Description	process-id	OSPF instance ID
	vrf	VRF instance
Default	Process ID: 1 VRF: Active VRF routing-context	
Configuration Mode	Any Command Mode	
History	3.3.3500	
	3.6.1002	Added VRF and process ID parameters and updated Example
Role	admin	
Example	<pre>switch (config)# show ip ospf 2 vrf myvrf Routing Process 2 with ID 2.2.2.2 myvrf Stateful High Availability is not supported Graceful-restart is not supported Supports only single TOS (TOS 0) route Opaque LSA not supported OSPF Admin State is enabled Redistributing External Routes: Disabled Administrative distance 110 Reference Bandwidth is 40 Gbps Initial SPF schedule delay 1 msec SPF Hold time 5000 msec Maximum paths to destination 64 Router LSA with maximum metric is not supported Condition: Always Number of external LSAs 0, checksum sum 0 Number of opaque AS LSAs 0, checksum sum 0 Number of areas is 1, 1 normal, 0 stub, 0 nssa Number of active areas is 1, 1 normal, 0 stub, 0 nssa Area (0.0.0.0) (Active) Interfaces in this area: 2 Active Interfaces: 2 Passive Interfaces: 0 SPF Calculation has run 6 times This area is Normal area Number of LSAs: 3, checksum sum 161346</pre>	
Related Commands	N/A	
Note		

show ip ospf border-routers

show ip ospf border-routers [vrf <vrf-name>]

Displays routing table entries to an Area Border Routers.

Syntax Description	vrf	OSPF routing table entries to an Area Border Routers on specific VRF.
---------------------------	-----	---

Default	VRF: Active VRF routing-context	
----------------	---------------------------------	--

Configuration Mode	Any Command Mode	
---------------------------	------------------	--

History	3.3.3500	
	3.6.1002	Added VRF parameter and updated Example

Role	admin	
-------------	-------	--

Example	<pre>switch (config)# show ip ospf border-routers vrf myvrf OSPF Process ID 2, vrf myvrf Internal Routing Table Codes: i - Intra-area route, I - Inter-area route i 1.1.1.1 [0] ABR Area: 0.0.0.0, Next Hop: 21.21.21.1</pre>	
----------------	--	--

Related Commands	N/A	
-------------------------	-----	--

Note		
-------------	--	--

show ip ospf database

```
show ip ospf database [summary] [<process-id> <area-id> [<link-state-id>]]
[adv-router <ip-address> | self-originated] [vrf <vrf-name>]
```

Displays the OSPF database.

Syntax Description	adv-router <ip-address>	Filters per advertise router
	area-id	Filters the command per OSPF Area ID. Range is 0-4294967295.
	link-state-id	The link state ID
	self-originated	Self Originate
	summary	Summarizes the output of the OSPF database.
	process-id	Displays OSPF database on specific instance ID
	vrf	Displays OSPF database on specific VRF
Default	Process ID: 1 VRF: Active VRF routing-context	
Configuration Mode	Any Command Mode	
History	3.3.3500	
	3.6.1002	Added VRF and process ID parameters and updated Example
Role	admin	
Example	<pre>switch (config)# show ip ospf database 2 vrf myvrf OSPF Router with ID (2.2.2.2) (Process ID 2 VRF myvrf) Router Link States (Area 0.0.0.0) ----- Link ID ADV Router Age Seq Checksum LinkCount ----- 2.2.2.2 2.2.2.2 1150 0x80000006 0xbd2a 3 1.1.1.1 1.1.1.1 1152 0x80000006 0xf7f5 3 Network Link States (Area 0.0.0.0) ----- Link ID ADV Router Age Seq Checksum ----- 21.21.21.2 2.2.2.2 1150 0x80000003 0xbb26</pre>	

Related Commands N/A

Note

show ip ospf interface

show ip ospf interface [<process-id>] [vlan <vlan-id> | Ethernet <slot/port | port-channel <number>] [brief]

Displays the OSPF related interface configuration.

Syntax Description	brief	Gives a brief summary of the output
	process-id	Displays OSPF interface configuration on specific instance ID
	vlan <vlan-id>	Displays OSPF interface configuration and status per VLAN interface
	vrf	Displays OSPF interface configuration on specific VRF
Default	Process ID: 1 VRF: Active VRF routing-context	
Configuration Mode	Any Command Mode	
History	3.3.3500	
	3.6.1002	Added VRF and process ID parameters and updated Example
	3.6.4070	Added Ethernet variable
Role	admin	
Example	<pre>switch (config) # show ip ospf interface 2 vrf myvrf Interface Vlan is 21 Enabled, line protocol is Up IP address 21.21.21.2, Mask 255.255.255.0 Process ID 2 VRF myvrf, Area 0.0.0.0 OSPF Interface Admin State is enabled State DESIGNATED ROUTER, Network Type BROADCAST, Cost 10 Transmit delay 1 sec, Router Priority 1 DR is 2.2.2.2 Backup Designated Router is 1.1.1.1 Timer intervals (secs): Hello 10, Dead 40, Wait 40, Retransmit 5 No authentication Number of opaque link LSAs: 0, checksum sum 0 switch (config) # show ip ospf interface 2 vrf myvrf brief OSPF Process ID 2 VRF myvrf Total number of interface: 2 Interface Id Area Cost State Neighbors Status Vlan21 0.0.0.0 10 Enabled 1 Up Ethernet1/22 0.0.0.0 1 Enabled 1 Up</pre>	

Related Commands N/A

Note

show ip ospf neighbors

```
show ip ospf [vrf <vrf-name>] neighbors [vlan <vlan-id> | interface <name>]
[<neighbor ip address>]
```

Displays the OSPF related interface neighbor configuration.

Syntax Description	vlan-id	Displays OSPF interface configuration and status per VLAN interface
	neighbor ip address	Filers the output per a specific OSPF neighbor
	vrf	Displays OSPF interface neighbor configuration on specific VRF
Default	VRF: Active VRF routing-context	
Configuration Mode	Any Command Mode	
History	3.3.3500	
	3.6.1002	Added VRF parameter and updated Example
	3.6.4070	Added support for BFD
Role	admin	
Example	<pre>switch (config) # show ip ospf neighbors vrf myvrf Neighbor 1.1.1.1, interface address 21.21.21.1 In the area 0.0.0.0 via Interface Vlan 21 Neighbor priority is 1, State is FULL DR is 2.2.2.2 Backup Designated Router is 1.1.1.1 Options 2 Dead timer due in 36 Neighbor 1.1.1.1, interface address 22.22.22.1 In the area 0.0.0.0 via Interface Ethernet 1/22 Neighbor priority is 1, State is FULL No designated router on this network No backup designated router on this network Options 2 Dead timer due in 36 switch (config) # show ip ospf neighbors interface ethernet 1/22 vrf myvrf Neighbor 1.1.1.1, interface address 22.22.22.1 In the area 0.0.0.0 via interface Ethernet 1/22 Neighbor priority is 1, State is FULL No designated router on this network No backup designated router on this network Options 2 Dead timer due in 29</pre>	

Related Commands	N/A
Note	BFD session state will be displayed as - established, failed or not established. When BFD is not defined in the command, it will not be displayed in the output.

show ip ospf request-list

show ip ospf request-list <neighbor-id> {vlan <vlan-id> | ethernet <slot/port> | port-channel <id>} [vrf <vrf-name>]

Displays the OSPF list of all link-state advertisements (LSAs) requested by a router.

Syntax Description	neighbor-id	Filers the output per a specific OSPF neighbor.
	vlan-id	Filers the output per a specific VLAN ID.
	vrf <vrf-name>	Displays OSPF request-list on specific VRF
Default	vrf: active VRF routing-context	
Configuration Mode	Any Command Mode	
History	3.6.3506 3.3.3500	
Role	admin	
Example	<pre>switch (config) # show ip ospf request-list 4.4.4.4 vlan 7 OSPF Router with ID (7.7.7.1) (Process ID 1) Neighbor 4.4.4.4, Interface vlan 7, Address 7.7.7.2 42 LSAs on request-list Type LS-ID ADV-RTR Seq No Age Checksum 1 10.10.10.23 10.10.10.23 0x8000012f 37 0xa7b9 1 10.10.10.24 10.10.10.24 0x8000012f 38 0xbd61</pre>	
Related Commands	N/A	
Note		

show ip ospf retransmission-list

```
show ip ospf retransmission-list <neighbor-id> {vlan <vlan-id> | ethernet <slot/
port> | port-channel <id>} [vrf <vrf-name>]
```

Displays the OSPF list of all link-state advertisements (LSAs) waiting to be resent to neighbors.

Syntax Description	neighbor-id	Filters the output per a specific OSPF neighbor.
	vrf <vrf-name>	Displays OSPF retransmission-list on specific VRF.
	vlan-id	Filters the output per a specific VLAN ID.
Default	vrf: Active VRF routing-context	
Configuration Mode	Any Command Mode	
History	3.6.3506 3.3.3500	
Role	admin	
Example	<pre>switch (config) # show ip ospf retransmission-list 4.4.4.4 vlan 6 OSPF Router with ID (7.7.7.1) (Process ID 1) Neighbor 4.4.4.4, Interface vlan 6, Address 6.6.6.2 Link state retransmission due in 3780 msec, Queue length 207 Type LS-ID ADV-RTR Seq No Age Checksum 3 22.22.22.22 7.7.7.1 0x80000045 0 0xaaaf4 3 192.168.23.2 7.7.7.1 0x80000001 353 0x6752</pre>	
Related Commands	N/A	
Note		

show ip ospf summary-address

show ip ospf summary-address [vrf <vrf-name>]

Displays a list of all summary address redistribution information configured on the OSPF.

Syntax Description	vrf <vrf-name>	Display summary address and area range information on specific VRF.
Default	vrf : Active VRF routing-context	
Configuration Mode	Any Command Mode	
History	3.6.3506 3.3.3500	
Role	admin	
Example	<pre>switch (config)# show ip ospf summary-address OSPF Process ID 1 VRF default Network Mask Area Advertise LSA type Metric Tag ----- - 66.66.66.0 255.255.255.0 0.0.0.1 Advertise Type 3 Auto N/A 66.66.66.0 255.255.255.0 0.0.0.1 Advertise Type 7 Auto N/A 55.55.55.0 255.255.255.0 0.0.0.5 Advertise Type 3 Auto N/A 33.33.0.0 255.255.0.0 N/A Advertise Type 5 Auto N/A 44.44.0.0 255.255.0.0 N/A Advertise Type 5 Auto N/A arc-switch111 [standalone: master] (config) #</pre>	
Related Commands	N/A	
Note		

6.4 BGP

Border Gateway Protocol (BGP) is an exterior gateway protocol which is designed to transfer routing information between routers. It maintains and propagates a table of routes which designates network reachability among autonomous systems (ASs).

BGP neighbors, or peers, are routers configured manually to converse using the BGP protocol on top of a TCP session on port 179. A BGP speaker periodically sends keep-alive messages to maintain the connection. Network reachability includes such information as forwarding destinations (IPv4 or IPv6) together with a list of ASs that this information traverses and other attributes, so it becomes possible to construct a graph of AS connectivity without routing loops. BGP makes possible to apply policy rules to enforce connectivity graph.

BGP routers communicate through TCP connection on port 179. Connection between BGP neighbors is configured manually or can be established dynamically by configuring dynamic listen groups. When BGP runs between two peers in the same AS, it is referred to as Internal BGP (iBGP, or Interior Border Gateway Protocol). When it runs between separate ASs, it is called External BGP (eBGP, or Exterior Border Gateway Protocol). Both sides can initiate a connection, after the initial connectivity is created, BGP state machine drives both sides to enter into ESTABLISHED state where they can exchange UPDATE messages with reachability information.

6.4.1 State Machine

In order to make decisions in its operations with peers, a BGP peer uses a simple finite state machine (FSM) that consists of six states: Idle; Connect; Active; OpenSent; OpenConfirm; and Established. For each peer-to-peer session, a BGP implementation maintains a state variable that tracks which of these six states the session is in. The BGP protocol defines the messages that each peer should exchange in order to change the session from one state to another.

The first state is the “Idle” state. In “Idle” state, BGP initializes all resources, refuses all inbound BGP connection attempts and initiates a TCP connection to the peer. The second state is “Connect”. In the “Connect” state, the router awaits the TCP connection to complete and transitions to the “OpenSent” state if successful. If unsuccessful, it initializes the ConnectRetry timer and transitions to the “Active” state upon expiration. In the “Active” state, the router resets the ConnectRetry timer to zero and returns to the “Connect” state. In the “OpenSent” state, the router sends an Open message and waits for one in return in order to transition to the “OpenConfirm” state. KeepAlive messages are exchanged and, upon successful receipt, the router is placed into the “Established” state. In the “Established” state, the router can send/receive: KeepAlive; Update; and Notification messages to/from its peer.

6.4.2 Default Address Family

Default Address Family defines which address family is activated when peer or peer-group becomes active.

When the default address family configuration is modified - it will cause a renegotiation of capabilities for all neighbors that do not have explicit configuration of active address families.

The default address family in BGP IPv6 is IPv4.

6.4.3 Default Route Originate

Default Route Originate initial value is set to “false”.

6.4.4 Peer Groups and Update Groups


Any BGP peer can be defined as part of a peer group and it will inherit peer group configuration or have its own configuration.

A system will automatically generate an update group from peer groups members.

Peer that has a different outbound policy from peer-group will not become a part of update group.

6.4.5 Configuring BGP

Figure 36: Basic BGP Configuration

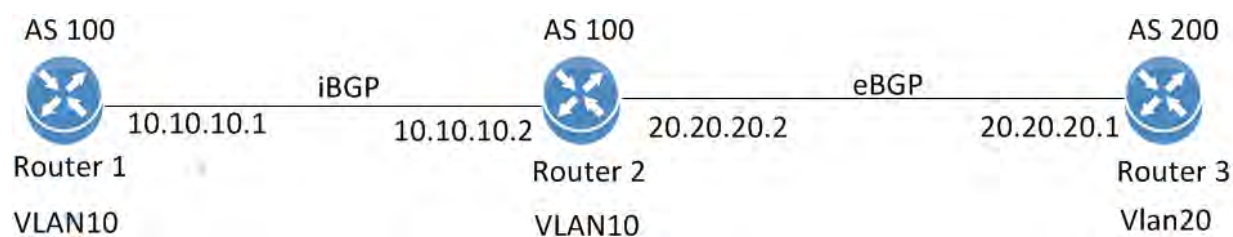

Follow these steps for basic BGP configuration on two switches (Router 1 and Router 2):

Preconditions:

Step 1. Make sure the license installed supports L3.

Step 2. Enable IP routing functionality. Run:

```
switch (config)# ip routing
```

Step 3. Enable the desired VLAN. Run:

```
switch (config)# vlan 10
```



The same VLAN must be configured on both switches.

Step 4. Add this VLAN to the desired interface. Run:

```
switch (config)# interface ethernet 1/1
switch (config ethernet 1/1)# switchport access vlan 10
```

Step 5. Create a VLAN interface. Run:

```
switch (config)# interface vlan 10
```

Step 6. Apply IP address to the VLAN interface on Router 1. Run:

```
switch (config interface vlan 10)# ip address 10.10.10.1 /24
```

Step 7. Apply IP address to the VLAN interface on Router 2. Run:

```
switch (config interface vlan 10)# ip address 10.10.10.2 /24
```

Step 8. Enable the interface. Run:

```
switch (config interface vlan 10)# no shutdown
```

Configure BGP:

Step 1. Enable BGP. Run:

```
switch (config)# protocol bgp
```

Step 2. Configure an AS number that identifies the BGP router. Run:

```
switch (config)# router bgp 100
```



To run iBGP, the AS number of all remote neighbors should be similar to the local AS number of the configured router.

Step 3. Configure BGP Router 1 neighbor. Run:

```
switch (config router bgp 100)# neighbor 10.10.10.2 remote-as 100
```

Step 4. Configure BGP Router 2 neighbor. Run:

```
switch (config router bgp 100)# neighbor 10.10.10.1 remote-as 100
```

6.4.6 Verifying BGP

Step 1. Check the general status of BGP. Run:

```
switch (config)# show ip bgp summary
BGP router identifier 10.10.10.1, local AS number 100
BGP table version is 100, main routing table version 100
0 network entries using 0 bytes of memory
0 path entries using 0 bytes of memory
0 BGP AS-PATH entries using 0 bytes of memory
0 BGP community entries using 0 bytes of memory
0 BGP extended community entries using 0 bytes of memory
Neighbor      V      AS MsgRcvd MsgSent  TblVer  InQ  OutQ  Up/Down    State/PfxRcd
10.10.10.2    0      100    100    76      3    0    0 00:0:10:19 ESTABLISHED
switch (config)#
BGP summary information for VRF default, address family IPv4
```

- Verify that the state of each BGP neighbor reached to ESTABLISHED state.
- In case the neighbor is disabled (shutdown). The state of the neighbor will be IDLE.
- BGP incoming and outgoing messages should be incremented.
- The AS number of each neighbor is the correct one.

Step 2. Check the status of the neighbors. Run:

```
switch (config)# show ip bgp neighbors
BGP neighbor is 10.10.10.2, remote AS 100, external link
  BGP version 0, remote router ID 0.0.0.0
  BGP State = ESTABLISHED
  Last read 0:00:00:00, last write 0:00:00:00, hold time is 180, keepalive
  interval is 60 seconds
  Configured hold time is 180, keepalive interval is 60 seconds
  Minimum holdtime from neighbor is 0 seconds
switch (config)#
```

You should be able to see running BGP counters and ESTABLISHED state per active neighbor.

6.4.7 Commands

6.4.7.1 Config

protocol bgp

protocol bgp
no protocol bgp

Enables BGPv4, and unhides BGP related commands.
The no form of the command deletes all BGP configuration and hides BGP related commands.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config
History	3.3.5006
Role	admin
Example	switch (config)# protocol bgp switch (config)#
Related Commands	ip routing
Note	

clear ip bgp

clear ip bgp [{<ipv4_addr | ipv6_addr> | all} [soft] [in]]

Clears BGP learned routes from the BGP table and resets the connection to the neighbor.

Syntax Description	ip-address	A BGP peer IP address. Only the specified neighbor is reset.
	all	All BGP peers. All BGP neighbors are reset.
	soft	Clears BGP learned routes from the BGP table without resetting the connection to the neighbor
	in	Inbound routes are reset
Default	N/A	
Configuration Mode	Config	
History	3.3.5006	First release
	3.3.5200	Updated description
	3.6.3004	Removed “out” parameter
	3.6.4070	Added support for IPv4 and IPv6
Role	admin	
Example	<pre>switch (config)# clear ip bgp all switch (config)#</pre>	
Related Commands	N/A	
Note	This command removes BGP IPv4 learned routes from the routing table, reads all routes from designated peers, and sends routes to those peers as required.	

router bgp

router bgp <as-number>
no router bgp <as-number>

Creates and enters a BGP instance with the specified AS number.
The no form of the command deletes all router BGP instance configuration.

Syntax Description	as-number	Autonomous system number: A unique number to be used to identify the AS. The AS is a number which identifies the BGP router to other routers and tags the routing information passed along. Range: 1-65535.
Default	N/A	
Configuration Mode	Config	
History	3.3.5006	First version
	3.3.5200	Updated syntax description
Role	admin	
Example	switch (config)# router bgp 100 switch (config router bgp 100)#	
Related Commands	ip routing	
Note		

6.4.7.2 Config Router

shutdown

shutdown
no shutdown

Gracefully disables BGP protocol without removing existing configuration.
 The no form of the command enables BGP.

Syntax Description	N/A
Default	Enabled
Configuration Mode	Config Router BGP
History	3.3.5006
Role	admin
Example	switch (config router bgp 100)# no shutdown
Related Commands	
Note	

aggregate-address

aggregate-address <ipv4_prefix length | ipv6_prefix length> [summary-only]
[as-set] [attribute-map]
no aggregate-address <ipv4_prefix length | ipv6_prefix length> [summary-only]
[as-set] [attribute-map]

Creates an aggregate route in the BGP database.
The no form of the command disables ECMP across AS paths.

Syntax Description	ipv4_prefix, ipv6_pre- fix	Destination to aggregate
	summary-only	Contributor routes are not advertised.
	as-set	Includes AS_PATH information from contributor routes as AS_SET attributes
	attribute-map	Assigns attribute values in set commands of the map's permit clauses. Deny clauses and match commands in permit clauses are ignored.
Default	Disabled	
Configuration Mode	Config Router BGP	
History	3.4.0000	
	3.6.4070	Added support for IPv4 and IPv6
Role	admin	
Example	<pre>switch-e07c04 [standalone: master] (config router bgp 4) # aggregate- address 3.5.3.7 /32</pre>	
Related Commands		
Note	<ul style="list-style-type: none">Aggregate routes combine the characteristics of multiple routes into a single route that the switch advertisesAggregation can reduce the amount of information that a BGP speaker is required to store and transmit when advertising routes to other BGP speakersAggregate routes are advertised only after they are redistributed	

bestpath as-path multipath-relax

bestpath as-path multipath-relax [force]
no bestpath as-path multipath-relax [force]

Enables ECMP across AS paths.
 The no form of the command disables ECMP across AS paths.

Syntax Description	force	Applies configuration while BGP is admin-up
Default	Disabled	
Configuration Mode	Config Router BGP	
History	3.3.5006	
	3.3.5200	Updated description and notes
	3.6.3004	Added “force” parameter
Role	admin	
Example	switch (config router bgp 100)# bestpath as-path multipath-relax	
Related Commands	maximum-paths	
Note	<ul style="list-style-type: none"> • With this option disabled, only routes with exactly the same AS path as the best route to a destination are considered for ECMP • With this option enabled, all routes with similar length AS path as the best route are considered for ECMP 	

bgp fast-external-fallover

bgp fast-external-fallover
no bgp fast-external-fallover

Terminates eBGP sessions of any directly adjacent peer without waiting for the hold-down timer to expire if the link used to reach the peer goes down. The no form of the command waits for hold-down timer to expire before terminating eBGP sessions.

Syntax Description	N/A
Default	no bgp fast-external-fallover
Configuration Mode	Config Router BGP
History	3.4.0000
Role	admin
Example	switch (config router bgp 100)# bgp fast-external-fallover
Related Commands	maximum-paths
Note	Although this feature improves BGP convergence time, it may cause instability in your BGP table due to a flapping interface.

bgp listen limit

bgp listen limit <maximum>
no bgp listen limit

Limits the number of dynamic BGP peers allowed on the switch.
 The no form of the command resets to the default value.

Syntax Description	maximum	The maximum number of dynamic BGP peers to be allowed on the switch. Range: 1-128.
Default	100	
Configuration Mode	Config Router BGP	
History	3.4.0000	
Role	admin	
Example	switch (config router bgp 100)# bgp listen limit 101	
Related Commands		
Note		

bgp listen range peer-group

bgp listen range <ipv4_prefix length | ipv6_prefix length> peer-group <peer-group-name> remote-as <as-number>
no bgp listen range <ipv4_prefix length | ipv6_prefix length> <length>

Identifies a range of IP addresses from which the switch will accept incoming dynamic BGP peering requests.

After applying the no form of the command, the switch will no longer accept dynamic peering requests on the range.

Syntax Description	ipv4_prefix, ipv6_prefix	IP address
	length	Mask length (e.g. /24 or 255.255.255.254)
	peer-group-name	Peer group name
	remote-as <as-number>	Remote peer's number
Default	100	
Configuration Mode	Config Router BGP	
History	3.4.0000	
	3.6.3004	Added note
	3.6.4070	Added support for IPv4 and IPv6
Role	admin	
Example	switch (config router bgp 100)# bgp listen range 10.10.10.10 /24 peer-group my-group remote-as 13	
Related Commands		
Note	<ul style="list-style-type: none">• To create a static peer group, use the command <code>neighbor peer-group</code>• Neighbors in a dynamic peer group are configured as a group and cannot be configured individually• The no form of the command may take up to a few seconds to take effect if there are many dynamic peers and/or a lot of routes. While the clean-up process is running, creation of a new listen range that overlaps the deleted one will fail.• If dynamic peer range is defined with an overlap to another defined range, the longest remote address prefix take affect	

cluster-id

cluster-id <ip-address> [force]
no cluster-id <ip-address> [force]

Configures the cluster ID in a cluster with multiple route reflectors.
 The no form of the command resets the cluster ID for route reflector.

Syntax Description	ip-address	The route reflector cluster ID <ul style="list-style-type: none"> • 0.0.0.1 to 255.255.255.255 Valid cluster ID number • 0.0.0.0 removes the cluster-ID from the switch (similar to “no cluster-id”)
	force	Applies configuration while BGP is admin-up
Default	Cluster ID is the same as Router ID	
Configuration Mode	Config Router BGP	
History	3.2.1000	First version
	3.4.0000	Updated syntax description
	3.6.3004	Added “force” parameter
Role	admin	
Example	switch (config router bgp 100)# cluster-id 10.10.10.10	
Related Commands	N/A	
Note		

client-to-client reflection

client-to-client reflection
no client-to-client reflection

The switch will be configured as a route reflector.
The no form of the command stops the switch from being a route reflector

Syntax Description	N/A
Default	client-to-client reflection is enabled
Configuration Mode	Config Router BGP
History	3.2.1000
Role	admin
Example	switch (config router bgp 100)# client-to-client reflection
Related Commands	N/A
Note	

distance

distance <external> <internal> <local>
no distance

Sets the administrative distance of the routes learned through BGP.
 The no form of the command resets the administrative distance its default.

Syntax Description	external	Administrative distance for external BGP routes. Range: 1-255.
	internal	Administrative distance for internal BGP routes. Range: 1-255.
	local	Administrative distance for local BGP routes. Range: 1-255.
Default	external: 200 internal: 200 local: 200	
Configuration Mode	Config Router BGP	
History	3.3.5006	
Role	admin	
Example	switch (config router bgp 100)# distance 10 20 30	
Related Commands	N/A	
Note	<ul style="list-style-type: none"> • Routers use administrative distances to decide on a route when two protocols provide routing information to the same destination. • Lower distance values correspond to higher reliability. • Routes are external when learned from an external autonomous system. • Routes are internal when learned from a peer in the local autonomous system. • Local routes are those networks listed with a network router configuration command, often as back doors, for the router or for the networks being redistributed from another process. • BGP routing tables do not include routes with a distance of 255. 	

graceful-restart stalepath-time

graceful-restart stalepath-time <interval>
no graceful-restart stalepath-time

Configures the maximum time that stale routes from a restarting BGP neighbor are retained after a BGP session is reestablished with that peer. The no form of the command resets to the default value.

Syntax Description	interval	Time in seconds. Range: 1-3600.
Default	300 seconds	
Configuration Mode	Config Router BGP	
History	3.4.0000	
Role	admin	
Example	switch (config router bgp 100)# graceful-restart stalepath-time 350	
Related Commands	N/A	
Note		

maximum-paths

maximum-paths [ibgp] <maximum-path>

Configures the maximum number of parallel eBGP/iBGP routes that the switch installs in the routing table.

Syntax Description	ibgp	Sets the configuration on the internal BGP.
	maximum-path	The number of routes to install to the routing table. Range: 1-32
Default	1	
Configuration Mode	Config Router BGP	
History	3.3.5006	
	3.3.5200	Updated description and notes
	3.6.4070	Updated maximum-path range.
Role	admin	
Example	<pre>switch (config router bgp 100)# maximum-paths ibgp 10 switch (config router bgp 100)#</pre>	
Related Commands	N/A	
Note	<ul style="list-style-type: none"> • This command provides an ECMP parameter that controls the number of equal-cost paths that the switch installs in the routing table for each destination. • The action is effective after BGP restart. • If the parameter “ibgp” is not used, the setting is applied on routes learned from peers from other ASs; if “ibgp” is used, the setting is applied to routes learned from peers of the same AS. 	

neighbor advertisement-interval

```
neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} advertisement-interval <delay>  
no neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} advertisement-interval
```

Sets the minimum route advertisement interval (MRAI) between the sending of BGP routing updates.

The no form of the command disables this function.

Syntax Description	ipv4_addr, ipv6_addr	A BGP peer IP address
	peer-group-name	Peer group name
	delay	Time (in seconds) is specified by an integer Range: 0-600 where “0” disables this function and prevents the system from inheriting this parameter’s group configuration
Default	30 seconds	
Configuration Mode	Config Router BGP	
History	3.4.0000	First version
	3.6.3004	Updated description of “delay” parameter
	3.6.4070	Added support for IPv6 and IPv4
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.10 advertisement-interval 90	
Related Commands		
Note		

neighbor allowas-in

neighbor {<ipv4_addr | ipv6_addr > | <peer-group-name>} **allowas-in** [number]
no neighbor {<ipv4_addr | ipv6_addr > | <peer-group-name>} **allowas-in**

Configures the switch to permit the advertisement of prefixes containing duplicate autonomous switch numbers (ASNs).
 The no form of the command disables this function.

Syntax Description	ipv4_addr, ipv6_addr	A BGP peer IP address
	peer-group-name	Peer group name
	number	Number of switch's (ASN) allowed in path Range: 0-10 where "0" disables this function and prevents the system from inheriting this parameter's group configuration
Default	N/A	
Configuration Mode	Config Router BGP	
History	3.4.0000	First version
	3.6.3004	Updated description of "number" parameter
	3.6.4070	Added support for IPv6 and IPv4
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.10 allowas-in 2	
Related Commands	ip routing router bgp <as-number>	
Note	Neighbors from the same AS as the router are considered as iBGP peers, and neighbors from other ASs are considered eBGP peers.	

neighbor description

neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} **description** <string>
no neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} **description**

Associates descriptive text with the specified peer or peer group.
The no form of the command removes the description from the peer.

Syntax Description	ipv4_addr, ipv6_addr	IP address of the neighbor
	peer-group-name	Peer group name
	string	Free string, up to 80 characters in length
Default	No description	
Configuration Mode	Config Router BGP	
History	3.3.5006	First version
	3.3.5200	Updated example
	3.6.4070	Added support for IPv6 and IPv4
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.10 description The next door neighbor	
Related Commands	N/A	
Note	The peer description only appears in the show commands.	

neighbor ebgp-multihop

neighbor {<ipv4_addr | ipv6_addr > | <peer-group-name>} **ebgp-multihop** [**<ttl>**]

no neighbor {<ipv4_addr | ipv6_addr > | <peer-group-name>} **ebgp-multihop**

Enables BGP to connect to external peers that are not directly connected to the switch.

The no form of the command disables connecting to external peers.

Syntax Description	ipv4_addr, ipv6_addr	IP address of the BGP-speaking neighbor
	peer-group-name	Peer group name
	ttl	Time-to-live Range: 1-255 hops where “1” disables connecting to external peers and prevents the system from inheriting this parameter’s group configuration
Default	ttl: 1	
Configuration Mode	Config Router BGP	
History	3.3.5006	First version
	3.3.5200	Updated default
	3.6.3004	Updated description of “ttl” parameter
	3.6.4070	Added support for IPv6 and IPv4
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.10 ebgp-multihop 5	
Related Commands	ip routing neighbor <ip-address> remote-as <as-number>	
Note	The command does not establish the multi-hop if the only route to the peer is the default route (0.0.0.0).	

neighbor export-localpref

neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} **export-localpref** <value>

no neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} **export-localpref**

Configures the local preference value sent to the specified peer or peer group. The no form of the command resets the local preference to its default value.

Syntax Description	ipv4_addr, ipv6_addr	IP address of the BGP-speaking neighbor
	peer-group-name	Peer group name
	value	Preference value Range: 0-2147483647 where “100” configures the default, and prevents the system from inheriting this parameter’s group configuration
Default	100	
Configuration Mode	Config Router BGP	
History	3.4.0000	First version
	3.6.3004	Updated description of “value” parameter
	3.6.4070	Added support for IPv6 and IPv4
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.10 export-localpref 100	
Related Commands		
Note		

neighbor import-localpref

[no] neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} import-localpref <value>

Configures the local preference value assigned to routes received from the specified peer or peer group.
The no form of the command resets the local preference to its default value.

Syntax Description	ipv4_addr, ipv6_addr	IP address of the BGP-speaking neighbor
	peer-group-name	Peer group name
	value	Preference value Range: 0-2147483647 where “100” configures the default, and prevents the system from inheriting this parameter’s group configuration
Default	100	
Configuration Mode	Config Router BGP	
History	3.4.0000	First version
	3.6.3004	Updated description of “value” parameter
	3.6.4070	Added support for IPv6 and IPv4
Role	admin	
Example	<pre>switch (config router bgp 100)# neighbor 10.10.10.10 import-localpref 100</pre>	
Related Commands		
Note		

neighbor local-as

neighbor {<ipv4-address> | <ipv6-address> | <peer-group-name>} **local-as** <asn-id> [**no-prepend** | **replace-as**]
no neighbor {<ipv4-address> | <ipv6-address> | <peer-group-name>} **local-as**

Enables the modification of the AS path attribute for routes received from an eBGP neighbor.

The no form of the command disables AS path modification for the specified peer or peer group.

Syntax Description	ipv4-address ipv6-address	IP address of the BGP-speaking neighbor
	peer-group-name	Peer group name
	asn-id	AS number that is sent instead of the actual AS of the switch. Range: 0-4294967295
	no-prepend	local-as number is not pre-pended to the routes received from external neighbors
	replace-as	Prepends only the local autonomous system number (as configured with the IP address argument) to the AS path attribute
Default	N/A	
Configuration Mode	Config Router BGP	
History	3.4.0000	First version
	3.6.3004	Updated description of “as-id” parameter
	3.6.4070	Added support for IPv6 and IPv4
	3.6.4110	Updated command.
Role	admin	
Example	switch-e07c04 [standalone: master] (config router bgp 4) # neighbor 100.100.100.100 local-as 123	
Related Commands	ip routing neighbor <ip-address> remote-as <as-number>	
Note	<ul style="list-style-type: none">• This function allows the switch to appear as a member of a different autonomous system (AS) to external peers.• To disable peering with the neighbor run the command <code>clear ip bgp</code>	

neighbor local-v6-addr

neighbor {<ipv4-address > | <peer-group-name>} **local-v6-addr** <ipv6_local>
no neighbor {<ipv6-address > | <peer-group-name>} **local-v6-addr**

Specifies the switch's next-hop value sent using IPv6 NLRI in IPv4 transport session.

The no form of the command removes next-hop value.

Syntax Description	ipv4-address, ipv6-address	IP address of the BGP-speaking neighbor
	peer-group-name	Peer group name
	ipv6_local	IPv6 next hop address.
Default	N/A	
Configuration Mode	Config Router BGP	
History	3.6.4070	Initial release
	3.6.4110	Updated command.
Role	admin	
Example	switch (config router bgp 4) # neighbor 10.10.10.1 local-v6-addr 2001::2	
Related Commands		
Note		

neighbor maximum-prefix

```
neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} maximum-prefix  
<maximum> [warning-only]  
no neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} maximum-prefix
```

Configures the number of BGP routes the switch accepts from a specified neighbor and defines an action when the limit is exceeded.
The no form of the command removes the limitation

Syntax Description	ipv4_addr, ipv6_addr	IP address of the BGP-speaking neighbor
	peer-group-name	Peer group name
	maximum	Number of BGP routes the switch accepts from a specified neighbor Range: 1-2147483647 where “12000” configures the default, and prevents the system from inheriting this parameter’s group configuration
	warning-only	Only generates a warning rather than disconnecting the neighbor
Default	12000	
Configuration Mode	Config Router BGP	
History	3.4.0000	First version
	3.6.3004	Updated description of “maximum” parameter
	3.6.4070	Added support for IPv6 and IPv4
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.10 maximum-prefix 12000 warning-only	
Related Commands	ip routing neighbor <ip-address> remote-as <as-number>	
Note		

neighbor next-hop-peer

neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} **next-hop-peer** [**disable**]

no neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} **next-hop-peer**

Configures the switch to list the peer address as the next hop in routes that it receives from the specified peer BGP-speaking neighbor or members of the specified peer group.

The no form of the command disables this function.

Syntax Description	ipv4_addr, ipv6_addr	IP address of the neighbor
	peer-group-name	Peer group name
	disable	Disables this function and prevents the system from inheriting this parameter's group configuration
Default	no next-hop-peer	
Configuration Mode	Config Router BGP	
History	3.3.5006	
	3.6.3004	Added "disable" parameter
	3.6.4070	Added support for IPv6 and IPv4
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.10 next-hop-peer	
Related Commands		
Note	This command overrides the next hop for all routes received from this neighbor or peer group	

neighbor next-hop-self

neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} **next-hop-self** [**dis-**
able]

no neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} **next-hop-self**

Configures the IP address of the router as the next hop address in routes
advertises to the specific neighbor.

The no form of the command resets this parameter to its default.

Syntax Description	ipv4_addr, ipv6_addr	IP address of the neighbor
	peer-group-name	Peer group name
	disable	Disables this function and prevents the system from inheriting this parameter's group configuration
Default	no next-hop-self	
Configuration Mode	Config Router BGP	
History	3.3.5006	Initial release
	3.6.4070	Added support for IPv6 and IPv4
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.10 next-hop-self	
Related Commands	neighbor <ip-address> remote-as <as-number>	
Note	<ul style="list-style-type: none">• This function is used in networks where BGP neighbors do not directly access all other neighbors on the same subnet.• In the default state, the next hop is generated based on the IP address and the present next hop in the route information.	

neighbor password

neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} password [<encryption>] <string>

no neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} password

Enables authentication on a TCP connection with a BGP peer.
The no form of the command resets the value to its default.

Syntax Description	ipv4_addr, ipv6_addr	IP address of the neighbor
	peer-group-name	Peer group name
	encryption	Possible values: <ul style="list-style-type: none"> • no parameter – clear text • 0 – clear text • 7 – obfuscated
	string	Up to 8 bytes in length
Default	no neighbor password	
Configuration Mode	Config Router BGP	
History	3.4.0000	First version
	3.6.4070	Added support for IPv6 and IPv4
Role	admin	
Example	<pre>switch (config router bgp 100)# neighbor 10.10.10.10 password 7 admin123</pre>	
Related Commands		
Note	<ul style="list-style-type: none"> • Peers must use the same password to ensure communication. • neighbor <ip-address> password 7 <password>' can only accept data that was created using 'show config'. • 'show config' will never show the clear-text password, it will always be obfuscated (and thus displayed using the 'password 7' syntax). • Router BGP neighbor password cannot be set when enabling secure mode • Router BGP peer-group password cannot be set when enabling with secure mode 	

neighbor no-password

neighbor {<ip-address> | <peer-group-name>} no-password

Disables authentication for peer without inheritance.

Syntax Description	ip-address	IP address of the neighbor
	peer-group-name	Peer group name
Default	N/A	
Configuration Mode	Config Router BGP	
History	3.6.3004	First version
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.10 no-password	
Related Commands	neighbor password	
Note		

neighbor peer-group

1. **neighbor** {<ipv4_addr | ipv6_addr >} **peer-group** <peer-group-name>
2. **neighbor** {<peer-group-name>} **peer-group**
3. **no neighbor** {<ipv4_addr | ipv6_addr >} **peer-group** <peer-group-name>
4. **no neighbor** {<peer-group-name>} **peer-group**

1. Assigns BGP neighbors to an existing peer group
2. Creates a peer-group
3. Unassigns a BGP neighbor from a peer-group
4. Deletes the peer-group

Syntax Description	ipv4_addr, ipv6_addr	IP address of the neighbor
	peer-group-name	Peer group name
Default	N/A	
Configuration Mode	Config Router BGP	
History	3.4.0000	First version
	3.6.3004	Added notes
	3.6.4070	Added support for IPv6 and IPv4
Role	admin	
Example	<pre>switch (config router bgp 100)# neighbor groupA peer-group switch (config router bgp 100)# neighbor 1.2.3.4 peer-group groupA</pre>	

Related Commands

Note

- Once a peer group is created, the group name can be used as a parameter in neighbor configuration commands, and the configuration will be applied to all members of the group.
 - Settings applied to an individual neighbor in the peer group override group settings.
 - A neighbor can only belong to one peer group, so issuing this command for a neighbor that is already a member of another group removes it from that group.
 - When a neighbor is removed from a peer group, the neighbor retains the configuration inherited from the peer group.
 - Router BGP peer-group password cannot be set when enabling with secure mode
 - A BGP group must be used by either a single listen range, or by a set of neighbors sharing the same type (iBGP or eBGP)
 - A group must already exist before a node is configured to use it
 - Any configuration change on a group affects each of the peers inheriting this specific parameter from the group only after undergoing admin state toggle
-
-

neighbor remote-as

neighbor {<ipv4_addr | ipv6_addr>} remote-as <as-number>
no neighbor {<ipv4_addr | ipv6_addr>} remote-as <as-number>

Configures a neighbor.
 The no form of the command removes the neighbor, dropping the connection and all routes if already connected.

Syntax Description	ipv4_addr, ipv6_addr	IP address of the neighbor
	peer-group-name	Peer group name
	as-number	The BGP peer as-number. Range: 1-65535.
Default	N/A	
Configuration Mode	Config Router BGP	
History	3.3.5006	First version
	3.3.5200	Updated description and note
	3.6.4070	Added support for IPv6 and IPv4
Role	admin	
Example	<pre>switch (config router bgp 100)# neighbor 10.10.10.10 remote-as 200 switch (config router bgp 100)#</pre>	
Related Commands	<pre>ip routing router bgp <as-number></pre>	
Note	Neighbors from the same AS as the router are considered as iBGP peers, and neighbors from other ASs are considered eBGP peers.	

neighbor remove-private-as

```
neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} remove-private-as  
[disable]  
no neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} remove-private-as
```

Removes private autonomous system numbers from outbound routing updates for external BGP (eBGP) neighbors. The no form of the command preserves private AS numbers for the specified peer.

Syntax Description	ipv4_addr, ipv6_addr	A BGP peer IP address
	peer-group-name	Peer group name
	disable	Preserves private AS numbers for the specified peer and prevents the system from inheriting this parameter's group configuration
Default	N/A	
Configuration Mode	Config Router BGP	
History	3.4.0000	First version
	3.6.4070	Added support for IPv6 and IPv4
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.10 remove-private-as switch (config router bgp 100)#	
Related Commands	ip routing router bgp <as-number>	
Note	<ul style="list-style-type: none">• This can only be used with external BGP (eBGP) peers.• If the update has only private AS numbers in the AS path, BGP removes these numbers.• If the AS path includes both private and public AS numbers, BGP does not remove the private AS numbers. This situation is considered a configuration error.• If the AS path contains the AS number of the eBGP neighbor, BGP does not remove the private AS number.• If the AS path contains confederations, BGP removes the private AS numbers only if they come after the confederation portion of the AS path.	

neighbor route-map

```
neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} route-map <route-
map-name> [in | out]
no neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} route-map <route-
map-name> [in | out]
```

Configures a route map to inbound BGP routes.
The no form of the command undoes the configuration.

Syntax Description	ipv4_addr, ipv6_addr	IP address of the neighbor
	peer-group-name	Peer group name
	route-map-name	String. The name of the route-map
	in	Applies route map to inbound routes
	out	Applies route map to out-bound routes
Default	N/A	
Configuration Mode	Config Router BGP	
History	3.3.5006	First version
	3.3.5200	Updated notes and default
	3.4.1100	Added “out” parameter
	3.6.3004	Added note
	3.6.4070	Added support for IPv6 and IPv4
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.10 route-map MyRoute-Map in	
Related Commands	neighbor <ip-address> remote-as <as-number> route-map <map-name> [deny permit] [sequence-number] clear ip bgp {<ip-address> all}	
Note	<ul style="list-style-type: none"> • Only one inbound route-map can be applied to a given neighbor • If a new route-map is applied to a neighbor, it replaces the previous route map • Changing a route-map only takes effect on routes received or sent after the change • A route-map must already exist before a node is configured to use it 	

neighbor no-route-map

neighbor {<ip-address> | <peer-group-name>} no-route-map

Unsets route-map for neighbor and prevents the system from inheriting this parameter's group configuration.

Syntax Description	ip-address	IP address of the neighbor
	peer-group-name	Peer group name
Default	N/A	
Configuration Mode	Config Router BGP	
History	3.6.3004	
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.10 no-route-map	
Related Commands	neighbor <ip-address> remote-as <as-number> route-map <map-name> [deny permit] [sequence-number]	
Note		

neighbor route-reflector-client

neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} **route-reflector-client** [**disable**]

no neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} **route-reflector-client**

Sets the neighbor as a client but does not set up the reflection itself.
The no form of the command disables route reflection for the specific peer.

Syntax Description	ipv4_addr, ipv6_addr	IP address of the neighbor.
	peer-group-name	Peer group name
	disable	Unsets neighbor as route reflector client and prevents the system from inheriting this parameter's group configuration
Default	N/A	
Configuration Mode	Config Router BGP	
History	3.3.5006	First version
	3.3.5200	Updated notes and default
	3.6.3004	Added "disable" parameter
	3.6.4070	Added support for IPv6 and IPv4
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.10 route-reflector-client	
Related Commands		
Note		

neighbor send-community

```
neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} send-community  
[extended] [disable]  
no neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} send-community  
[extended]
```

Configures the switch to send community attributes to the specified BGP neighbor.
The no form of the command disables sending community attributes for the specified peer.

Syntax Description	ipv4_addr, ipv6_addr	IP address of the neighbor
	peer-group-name	Peer group name
	extended	Sends extended community attributes to neighbor
	disable	Disables sending community attributes for the specified peer and prevents the system from inheriting this parameter's group configuration
Default	Enabled	
Configuration Mode	Config Router BGP	
History	3.4.0000	First version
	3.6.3004	Added "disable" parameter
	3.6.4070	Added support for IPv6 and IPv4
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.10 send-community	
Related Commands	N/A	
Note		

neighbor shutdown

```
neighbor {<ipv4_addr | ipv6_addr> | < ipv4_addr | ipv6_addr > | <peer-group-name>} shutdown [disable]
no neighbor {<ipv4_addr | ipv6_addr> | < ipv4_addr | ipv6_addr > | <peer-group-name>} shutdown
```

Disables BGP neighbor gracefully.
The no form of the command enables BGP neighbor.

Syntax Description	ipv4_addr, ipv6_addr	IP address of the neighbor
	peer-group-name	Peer group name
	disable	Enables BGP neighbor and prevents the system from inheriting this parameter's group configuration
Default	Enabled	
Configuration Mode	Config Router BGP	
History	3.3.5006	First version
	3.3.5200	Updated note
	3.6.4070	Added IPv6 and IPv4 support
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.10 shutdown	
Related Commands	N/A	
Note	<ul style="list-style-type: none"> Disabling a neighbor terminates all its active sessions and removes associated routing information A group's shutdown immediately impacts every peer in this group, making them inherit this parameter 	

neighbor fall-over bfd

**[no] neighbor {<ip-address> | < ipv4_addr | ipv6_addr > | <peer-group-name>}
fall-over bfd**

Disables BFD as a mechanism to detect failure.
The no form of the command enables BFD neighbor.

Syntax Description	peer-group-name	Peer group name
	ipv4_addr	IPv4 address of the neighbor
	ipv6_addr	IPv6 address of the neighbor
Default	Enabled	
Configuration Mode	Config Router BGP	
History	3.6.4070	Initial release
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.10 bfd	
Related Commands		
Note	The command "no neighbor <ip_address> fall-over bfd" affects traffic, BGP will restore the connection based on Hello protocol.	

neighbor soft-reconfiguration

neighbor {< ipv4_addr | ipv6_addr > | <peer-group-name>} **soft-reconfiguration inbound**

no neighbor {< ipv4_addr | ipv6_addr > | <peer-group-name>} **soft-reconfiguration**

Enables neighbor soft reconfiguration.

The no form of the command disables neighbor soft reconfiguration.

Syntax Description	peer-group-name	Peer group name
	ipv4_addr	IPv4 address of the neighbor
	ipv6_addr	IPv6 address of the neighbor
Default	Enabled	
Configuration Mode	Config Router BGP	
History	3.6.4070	Initial release
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.1 soft-reconfiguration inbound	
Related Commands		
Note		

neighbor timers

neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} **timers** <keep-alive> <hold-time>

no neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} **timers**

Configures the keepalive and hold times for a specified peer.

The no form of the command resets the parameters to their default values.

Syntax Description	ipv4_addr, ipv6_addr	IP address of the neighbor.
	peer-group-name	Peer group name
	keep-alive	The period between the transmission of consecutive keep-alive messages <ul style="list-style-type: none">• Range: 1-3600 seconds• “0” means that keepalive is not sent and the connection does not expire• Explicitly configuring the default, “60”, prevents the system from inheriting this parameter’s group configuration
	hold-time	The period the switch waits for a keepalive or update message before it disables peering <ul style="list-style-type: none">• Range: 3-7200 seconds• “0” means that keepalive is not sent and the connection does not expire• Explicitly configuring the default, “180”, prevents the system from inheriting this parameter’s group configuration
Default	keep-alive: 60 seconds hold-time: 180 seconds	
Configuration Mode	Config Router BGP	
History	3.3.5006	First version
	3.3.5200	Updated description
	3.6.3004	Updated “hold-time” and “keep-alive” parameter’s syntax description
	3.6.4070	Added IPv6 and IPv4 support
Role	admin	

Example	<code>switch (config router bgp 100)# neighbor 10.10.10.10 timers 65 195</code>
Related Commands	<code>neighbor <ip-address> remote-as <as-number></code>
Note	Hold time must be at least 3 seconds and should be three times longer than the keep-alive setting.

neighbor transport connection-mode passive

```
neighbor {<ipv4_addr | ipv6_addr > | <peer-group-name>} transport connection-mode
passive [disable]
no neighbor {<ipv4_addr | ipv6_addr > | <peer-group-name>} transport connection-mode passive
```

Sets the TCP connection for the specified BGP neighbor or peer group to passive mode.

The no form of the command sets the specified BGP neighbor or peer group to active connection mode.

Syntax Description	ipv4_addr, ipv6_addr	IP address of the neighbor
	peer-group-name	Peer group name
	disable	Sets the specified BGP neighbor or peer group to active connection mode and prevents the system from inheriting this parameter's group configuration
Default	TCP sessions initiated	
Configuration Mode	Config Router BGP	
History	3.4.0000	First version
	3.6.3004	Added "disable" parameter
	3.6.4070	Added IPv6 and IPv4 support
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.10 transport connection-mode passive	
Related Commands		
Note	<ul style="list-style-type: none">• When the peer's transport connection mode is set to passive, it accepts TCP connections for BGP, but does not initiate them• BGP peers in active mode can both accept and initiate TCP connections for BGP	

neighbor update-source

neighbor <ipv4_addr | ipv6_addr> update-source {ethernet <slot/port> | loopback <number> | port-channel <number> | vlan <vlan-id>}
no neighbor <ipv4_addr | ipv6_addr> update-source

Configures the source-address for routing updates and to establish TCP connections with peers.

The no form of the command disables configured source-address for routing updates and for TCP connection establishment with a peer.

Syntax Description	ipv4_addr, ipv6_addr	IP address of the neighbor.
	ethernet <slot/port>	Ethernet interface.
	loopback <number>	Loopback interface number.
	vlan <vlan-id>	VLAN interface. Range: 1-4094.
	port-channel <number>	LAG interface. Range is 1-4094.
Default	BGP uses best local address	
Configuration Mode	Config Router BGP	
History	3.3.5006	First version
	3.3.5200	Updated example
	3.6.4070	Added IPv6 and IPv4 support
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.2 update-source vlan 10	
Related Commands	N/A	
Note		

neighbor no-update-source

neighbor <ip-address> no-update-source

Disables configured source-address for routing updates and for TCP connection establishment with a peer and prevents the system from inheriting this parameter's group configuration.

Syntax Description	N/A
Default	BGP uses best local address
Configuration Mode	Config Router BGP
History	3.6.3004 First version
Role	admin
Example	switch (config router bgp 100)# neighbor 10.10.10.2 no-update-source
Related Commands	N/A
Note	

neighbor weight

neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} **weight** <value>
no neighbor {<ipv4_addr | ipv6_addr> | <peer-group-name>} **weight**

Assigns a weight attribute to paths from the specified neighbor.
 The no form of the command resets to default values.

Syntax Description	ipv4_addr, ipv6_addr	IP address of the neighbor
	peer-group-name	Peer group name
	value	Weight value <ul style="list-style-type: none"> • Range: 1-65535 • Explicitly configuring a default value prevents the system from inheriting this parameter's group configuration
Default	Value is 32768 for router-originated paths and 0 for routes received through BGP	
Configuration Mode	Config Router BGP	
History	3.4.0000	First version
	3.6.4070	Added IPv6 and IPv4 support
Role	admin	
Example	switch (config router bgp 100)# neighbor 10.10.10.10 weight 100	
Related Commands	N/A	
Note	<ul style="list-style-type: none"> • Weight values set through route map commands have precedence over neighbor weight command values. • Other attributes are used only when all paths to the prefix have the same weight. • A path's BGP weight is also configurable through route maps. • When multiple paths to a destination prefix exist, the best-path selection algorithm prefers the path with the highest weight. • Weight is the first parameter that the BGP best-path selection algorithm considers. 	

network

network <ipv4_prefix length | ipv6_prefix length> [<route-map-name>]
no network <ipv4_prefix length | ipv6_prefix length> [<route-map-name>]

Configures a route for advertisement to BGP peers.
The no form of the command removes the route from the BGP routes table, preventing its advertisement. The route is only advertised if the router has a gateway to the destination.

Syntax Description	ipv4_prefix, ipv6_prefix	A string that specific route map is assigned to the network.
	length	/24 or 255.255.255.0 format.
	route-map-name	The name of a route-map which is used to set the route's attributes when it is advertised.
Default	N/A	
Configuration Mode	Config Router BGP	
History	3.3.5006	First version
	3.3.5200	Updated description, syntax description and notes
	3.6.4070	Added IPv6 and IPv4 support
Role	admin	
Example	switch (config router bgp 100)# network 10.10.10.0 /24 routemap	
Related Commands		
Note	<ul style="list-style-type: none">• The parameters "ip-prefix" and "length" specify the route destination• The configuration zeros the host portion of the specified network address (e.g. 192.0.2.4/24 is stored as 192.0.2.0/24)• This command cannot be used with route-maps	

redistribute

redistribute {connected | static | ospf | ospf-internal | ospf-external} [<route-map>]

no redistribute {connected | static | ospf}

Enables redistribution of specified routes to the BGP domain.
The no form of the command disables route redistribution from the specified source.

Syntax Description	connected	Redistributes the direct routes
	static	Redistributes the user-defined (static) route
	ospf	Redistributes all routes learned by OSPF protocol
	ospf-internal	Redistributes all OSPF-learned routes which are marked as internal
	ospf-external	Redistributes all OSPF-learned routes which are marked as external
Default	No redistribution	
Configuration Mode	Config Router BGP	
History	3.2.1000	
Role	admin	
Example	switch (config router bgp 100)# redistribute ospf	
Related Commands	N/A	
Note	<ul style="list-style-type: none"> • Multiple redistribution options can be applied • This command cannot be used with route-maps 	

router-id

router-id <ip-address> [force]
no router-id [force]

Configures a fixed router ID for BGP.
The no form of the command removes the fixed router ID and restores the system default.

Syntax Description	ip-address	IP Address identified the router ID
	force	Applies configuration while BGP is admin-up
Default	The Router ID is dynamically elected (no router-id). <ul style="list-style-type: none">• If a loopback interface is configured, the router ID is set to the IP address of the loopback interface.• If multiple loopback interfaces are configured, the router ID is set to the IP address of the loopback interface with the highest IP address.• If no loopback interface is configured, the router ID is set to the highest IP address on a physical interface.	
Configuration Mode	Config Router BGP	
History	3.3.5006	
	3.6.3004	Added “force” parameter
Role	admin	
Example	switch (config router bgp 100)# router-id 10.10.10.10	
Related Commands		
Note	The IP address configured identifies the BGP speaker. The command triggers an automatic notification and session reset for the BGP neighbors.	

address-family

address-family <ipv4-unicast | ipv6-unicast>

Enables selected address family configuration mode.

Syntax Description	ipv4	IPv4 address family configuration mode
	ipv6	IPv6 address family configuration mode
Default	IPv4	
Configuration Mode	Config Router BGP	
History	3.6.4070	
Role	admin	
Example	<pre>switch (config router bgp)# address-family ipv4 switch (config router bgp)#</pre>	
Related Commands		
Note		

neighbor activate

[no | disable] neighbor <ipv4_addr | ipv6_addr | peer_group> activate

Enables advertisement of ipv4 or ipv6 capability and related network advertisements to specified neighbor or peer group.

The “no” form of the command disables advertisement of ipv4 or ipv6 capability and related network advertisements.

Syntax Description	ipv4_addr	Neighbor IPv4 address
	ipv6_addr	Neighbor IPv6 address
	peer_group	peer_group name
Default	N/A	
Configuration Mode	Config Router BGP	
History	3.6.4070	
	3.6.4110	Added “disable” option to the command
Role	admin	
Example	switch (config router bgp)# no neighbor 10.10.10.1 activate switch (config router bgp)#	
Related Commands		
Note		

neighbor default-originate

[no | disable] neighbor <ipv4_addr | ipv6_addr | peer_group> default-originate [route_map_name]

Enables advertisement of the default route to a specified neighbor or peer group.
The “no” form of the command disables advertisement of the default route.

Syntax Description	ipv4_addr	Neighbor IPv4 address
	ipv6_addr	Neighbor IPv6 address
	peer_group	Peer group's name
	route_map_name	route map name that modifies default route attributes
Default	N/A	
Configuration Mode	Config Router BGP	
History	3.6.4070	
	3.6.4110	Added “disable” option to the command
Role	admin	
Example	<pre>switch (config router bgp)# neighbor 10.10.10.1 default-originate default-attr switch (config router bgp)#</pre>	
Related Commands		
Note		

neighbor route-map

**[no] neighbor <ipv4_addr | ipv6_addr | peer_group> route-map
<route_map_name> [{in | out}]**

Specifies a route map that will be applied to given neighbor in the given direction for specific address family.

The “no” form of the command removes the specified route map.

Syntax Description	ipv4_addr	Neighbor IPv4 address
	ipv6_addr	Neighbor IPv6 address
	route_map_name	Route map name that modifies default route attributes
	in/out	Specifies in which direction the route map is applied. If nothing is given - route map is applied in both directions
Default	N/A	
Configuration Mode	Config Router BGP	
History	3.6.4070	
Role	admin	
Example	switch (config router bgp)# neighbor 10.10.10.1 route-map default in switch (config router bgp)#	
Related Commands		
Note		

network

[no] network <ipv4_prefix length | ipv6_prefix length> [<route_map_name>]

Adds the given prefix to advertisements that are sent with the specified address family.

The “no” form of the command removes the given prefix from advertisements that are sent with the specified address family.

Syntax Description	ipv4_prefix	IPv4 subnet
	ipv6_prefix	IPv6 subnet
	route_map_name	Route map name that modifies default route attributes
	length	Allowed prefix length is 24 for IPv4 and IPv6 or 255.255.0.0 for IPv4
Default	N/A	
Configuration Mode	Config Router BGP	
History	3.6.4070	
Role	admin	
Example	<pre>switch (config router bgp)# network 10.10.10.0 /24 default switch (config router bgp)#</pre>	
Related Commands		
Note	Address family is identified by the network address itself and not by the configuration command context	

redistribute

[no] [neighbor <peer_group>] redistribute {connected | static}

Enables redistribution of routes to BGP in the specified address family or a peer-group in the address family.

The “no” form of the command disables the redistribution of routes to BGP.

Syntax Description	connected	Redistributes direct routes
	static	Redistributes static routes
	peer_group	Route map name that modifies default route attributes
Default	N/A	
Configuration Mode	Config Router BGP	
History	3.6.4070	
Role	admin	
Example	switch (config router bgp)# redistribute connected switch (config router bgp)#	
Related Commands		
Note		

exit

exit

Exits address family configuration mode and returns to config router BGP mode.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config Router BGP
History	3.6.4070
Role	admin
Example	switch (config router bgp)# exit switch (config router bgp)#
Related Commands	
Note	

route-map

[no] [neighbor <peer_group>] route-map <route_map_name> [{in | out}]

Specifies a route map that will be applied in the given direction for specific address family.

Syntax Description	route_map_name	Name of a route map to apply.
	in/out	Specifies in which direction the route map is applied. If nothing is given - route map is applied in both directions
	peer_group	Peer group name
Default	N/A	
Configuration Mode	Config Router BGP	
History	3.6.4070	
Role	admin	
Example	switch (config router bgp)# route-map default in switch (config router bgp)#	
Related Commands		
Note		

bgp default

[no] bgp default { ipv4-unicast | ipv6-unicast }

Enables to set address families as default for peer or peer-group activation.

Syntax Description	ipv4-unicast	IPv4 unicast address family, enabled by default.
	ipv6-unicast	IPv6 unicast address family, disabled by default.
Default	N/A	
Configuration Mode	Config Router BGP	
History	3.6.4070	
	3.6.4110	Added support for IPv6
Role	admin	
Example	<pre>switch (config router bgp)# bgp default ipv4-unicast switch (config router bgp)#</pre>	
Related Commands		
Note	This command can be used multiple times and each address family can be configured separately.	

6.4.7.3 Show

show ip bgp

```
show ip bgp [vrf <vrf-name>] [<ipv4-prefix> <length> [detail | longer-prefixes  
[detail]]]
```

```
show ipv6 bgp [vrf <vrf-name>] [<ipv6_prefix> <length> [detail | longer-pre-  
fixes [detail]]]
```

Displays information about the BGP routes table (RIB).

Syntax Description	ipv4_prefix, ipv6_pre- fix	IPv4 and IPv6 subnet
	length	Netmask (e.g. /24 or 255.255.255.0).
	detail	Displays detailed information about a subset of the bgp learned routes.
	longer-prefixes	Displays the routes to the specified destination and any routes to a more specific destination. Example: If “10.20.30.0 /24 longer-prefixes” is run, all routes starting with 10.20.30 regardless of the prefix length (10.20.30.X /24, 10.20.30.X /25, etc.) are displayed – providing there are any such routes received/sent from/to that neighbor.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.5200	
History	3.6.4070	Added support for IPv4 and IPv6
Role	admin	

Example

```
switch (config) # show ip bgp
BGP table version is 100/200, local router ID is 16.0.1.1
Status codes: * valid, > best, i - internal, m multipath
Origin codes: i - IGP, e - EGP, ? - incomplete
Network          NextHop    Metric  LocPrf  Weight  Path
20.20.20.0/24    2.2.2.2   0        2        20      e
100.100.100.0/24 2.2.2.2   0        2        50     100 e
100.100.100.0/24 2.2.2.12  0        12       50     100 e

(config) # show ip bgp 50.50.0.0 /24 detail
BGP routing table entry for 50.50.0.0/24
Paths: (2, best #1)
  [5 13 22]
    2001::1 from 2003::10 (2003::9)
      Origin IGP, metric 0, localpref 0, weight 32768, valid, best
      Communities: 1:2 1:3
      Originator-ID: 9.8.7.6
      Cluster-List: 0.0.0.1 0.0.0.2 0.0.0.3
    2001::1 from 2003::10 (2003::9)
      Origin IGP, metric 0, localpref 100, valid
      Communities: 5:200 10:255 no-export

switch (config) #
```

Related Commands N/A

Note

show ip bgp community

show ip bgp [vrf <vrf-name>] community <comm₁> <comm₂> ... <comm_n>
[exact] [detail]

Displays information about the BGP routes (RIB) filtered according to communities.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.4.0000 3.6.4070 Added support for IPv6
Role	admin
Example	<pre>switch (config) # show ip bgp community 100:1 BGP table version is 8, local router ID is 3.5.7.4 Status codes: s suppressed, d damped, h history, * valid, > best, i - internal r RIB-failure, S Stale, m multipath, b backup-path, x best- external Origin codes: i - IGP, e - EGP, ? - incomplete Network Next Hop Metric LocPrf Weight Path *> 3.4.3.11/32 0.0.0.0 0 0 32768 i *> 3.5.7.88/32 0.0.0.0 0 0 32768 i *> 3.5.7.99/32 0.0.0.0 0 0 32768 i switch (config) # show ip bgp community 100:1 exact BGP table version is 8, local router ID is 3.5.7.4 Status codes: s suppressed, d damped, h history, * valid, > best, i - internal r RIB-failure, S Stale, m multipath, b backup-path, x best- external Origin codes: i - IGP, e - EGP, ? - incomplete Network Next Hop Metric LocPrf Weight Path *> 3.4.3.11/32 0.0.0.0 0 0 32768 i *> 3.5.7.99/32 0.0.0.0 0 0 32768 i switch (config) # show ip bgp community 100:1 BGP table version is 8/20, local router ID is 3.5.7.4 Status codes: * valid, > best, i - internal, m multipath Origin codes: i - IGP, e - EGP, ? - incomplete Network Next Hop Metric LocPrf Weight Path *> 2001::0/64 2001:1::1 0 0 32768 i</pre>

Related Commands N/A

Note

show ip bgp neighbors

```
show {< ip >} bgp neighbors [vrf <vrf-name>] [<ipv6_addr | ipv4_addr>]
show {< ip >} bgp neighbors [vrf <vrf-name>] <ipv6_addr | ipv4_addr> received
[<ipv4_prefix | ipv6_prefix> [<mask | length>] [longer-prefixes]]
```

Displays summaries information about all BGP neighbors.

Syntax Description	ipv4_prefix, ipv6_pre- fix	Destination to aggregate
	length	Mask length (e.g. /24 or 255.255.255.254)
	ip[v6]_addr	neighbor address
	longer-prefixes	Displays information about routes with longer pre- fixes than given
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.5200	
	3.6.4070	Added support for IPv4 and IPv6
Role	admin	

Example

```
switch (config) # show ip bgp neighbors
BGP neighbor is 9.9.9.150, remote AS 44, external link
  BGP version 4, remote router ID 170.148.0.9
  BGP State = ESTABLISHED
  Last read 0:00:00:29, last write 0:00:00:29, hold time is 90, keep-
alive interval is 30 seconds
  Configured hold time is 180, keepalive interval is 60 seconds
  Minimum holdtime from neighbor is 90 seconds
```

```
switch# show ip bgp neighbors 9.9.9.150
BGP neighbor is 9.9.9.150, remote AS 44, external link
  BGP version 4, remote router ID 170.148.0.9
  BGP State = ESTABLISHED
  Last read 0:00:00:43, last write 0:00:00:43, hold time is 90, keep-
alive interval is 30 seconds
```

```
Neighbor capabilities:
  Route refresh: advertise and received
  Graceful Restart Capability: advertise
  Address family IPv4 Unicast: advertise and received
  Address family IPv6 Unicast: advertise and received
```

Message statistics:

```
InQ depth is 0
OutQ depth is 0
```

	Sent	Rcvd
Opens:	1	1
Notifications:	0	0
Updates:	4	1
Keepalives:	2	3
Route Refresh:	0	0
Total:	7	5

Default minimum time between advertisement runs is 30 seconds

For address family: IPv6 Unicast

```
BGP table version 5
Output queue size : 0
```

	Sent	Rcvd
Prefix activity:	----	----
Prefixes Current:	18	1
Prefixes Total:	18	1
Implicit Withdraw:	0	0
Explicit Withdraw:	0	0
Used as bestpath:	n/a	1
Used as multipath:	n/a	n/a

	Outbound	Inbound
Local Policy Denied Prefixes:	-----	-----
Total:	2	0

Connections established 1; dropped 0

Last reset 0:00:00:45, due to 0 (0)

Connection state is ESTABLISHED

Local host: 1.2.3.4, Local port: 179

Foreign host: 9.9.9.150, Foreign port: 54933

```
switch (config) # show ipv6 bgp neighbors 2001::1 received
BGP table version is 100/10, local router ID is 16.0.1.1
Status codes: * valid, > best, i - internal, m multipath
Origin codes: i - IGP, e - EGP, ? - incomplete
Network      Next      Hop Metric LocPrf Weight Path
*> 100.0.20.0/24 3.5.7.5 10 100 0 5 i
```

Related Commands N/A

Note

show ip bgp neighbors <ip> received

show ip bgp neighbors <ip-address> received [**<ip-address>** [**<mask>**] [**longer-prefixes**]]

Displays BGP summary information.

Syntax Description	ip-address	Neighbor IP address
	longer-prefixes	Displays the routes to the specified destination and any routes to a more specific destination. (Only available if both IP and mask are specified.)
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.5200	
Role	admin	
Example		
Related Commands	N/A	
Note		

show ip bgp paths

show ip bgp paths [vrf <vrf-name>] [ipv4 | ipv6]

Displays summary of all AS paths and for prefixes for specific address family.

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.3.5200
	3.6.4070 Added support for IPv4 and IPv6

Role	admin
-------------	-------

Example	<pre>switch (config) # show ip bgp paths Refcount Metric Path 1 0 4 50 100 1 0 2 50 100 1 0 4 40 1 0 12 50 100 1 0 2 1 0 2 20 switch (config) #</pre>
----------------	---

Related Commands	N/A
-------------------------	-----

Note	
-------------	--

show ip bgp peer-group

```
show ip bgp peer-group [vrf <vrf-name>] [peer-group-name] [address-family
<ipv4 | ipv6>]
```

Displays information about peer groups and configuration, filtered per address family.

Syntax Description	peer-group-name	Displays information about a specific peer-group.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.4.0000	
	3.6.4070	Added support for IPv4 and IPv6
Role	admin	

Example

```
switch (config) # show ip bgp peer-group
BGP Peer-group [grpA]:
Hold time: 1, Keep-alive: 60
Allow as-in: 0
Weight: 32768
Max prefix: 12000
Export local preferences: 100, Import local preferences: 100
Soft reconfiguration: set
Neighbor          V          AS MsgRcvd MsgSent  TblVer  InQ OutQ Up/Down
State/PfxRcd
3.5.7.5            0           5      0      0        0   0   0 0:00:00:42
CONNECT
100.100.100.100   0          100     0      0        0   0   0 Never
IDLE

BGP Peer-group [grpB]:
Hold time: 1, Keep-alive: 60
Allow as-in: 0
Weight: 32768
Max prefix: 12000
Export local preferences: 100, Import local preferences: 100
Soft reconfiguration: set
Neighbor          V          AS MsgRcvd MsgSent  TblVer  InQ OutQ Up/Down
State/PfxRcd
3.4.3.7            0           7      0      0        0   0   0 0:00:00:17
ACTIVE

BGP Peer-group [tomor_group]:
Hold time: 1, Keep-alive: 60
Allow as-in: 0
Weight: 32768
Max prefix: 12000
Export local preferences: 100, Import local preferences: 100
Soft reconfiguration: set

Peer-groups count: 3
switch-e07c04 [standalone: master] (config) #
```

Related Commands N/A

Note

show ip bgp summary**show ipv6 bgp summary [vrf <vrf-name>]**

Displays BGP summary for IPv6 addresses.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.3.5200 3.6.4070 Added support for IPv6
Role	admin
Example	<pre>switch (config) # show ip bgp summary BGP router identifier 3.5.7.4, local AS number 4 BGP table version is 70/120, main routing table version 70/96 BGP using 26308 total bytes of memory BGP activity 37/8 IPv4 prefixes, 37/8 IPv6 prefixes, 37/4 paths Neighbor V AS MsgRcvd MsgSent InQ OutQ Up/Down State/PfxRcd 2001::1 4 7 3 9 0 0 0:00:00:48 ESTABLISHED/total num- ber of prefixes</pre>
Related Commands	N/A
Note	

show ip bgp address-family

```
show ip bgp address-family [vrf <vrf-name>] <ipv4-unicast | ipv6-unicast>
[active]
```

Displays address-family configuration.

Syntax Description	active	Displays active neighbors in that address family (configured, active or dynamic)
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.4070	Initial release
Role	admin	
Example	<pre>switch (config) # show ip bgp address-family ipv4 <detail> Address family: IPv4 Networks: <list of advertised networks> 1.2.3.4 /24 route-map default 2.3.4.5 /28 route-map security in advertisement interval - 10 route-map top_security out send-community - off maximum-path 20 redistribute - static ...<all address family current configuration> Total neighbors: 50 <not brief - list of neighbors> Total peer-groups: 2 <not brief - list of peer-groups> Peer group: groupA Peer group: groupB Total dynamic ranges: 4 <not brief - list of ranges> Listen peer group: groupC</pre>	
Related Commands	N/A	
Note		

show ip bgp update-group

show ip bgp update-group [<neighbor ip address>]

Displays update-group information for all neighbors.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.6.4070 Initial release
Role	admin
Example	<pre>switch (config) # show ip bgp update-group BGP version 4 Address Family: IPv4 Unicast BGP Update version : 0, messages 0/0 Update messages formatted 0, replicated 0 Number of NLRIs in the update sent: max 0, min 0 Minimum time between advertisement runs is 5 seconds Has 1 member: 10.4.9.21 switch># switch (config)# show ip bgp update-group 2001::1 Update-group for neighbor 2001::1: ----- BGP router identifier 10.4.9.4, local AS number 101 BGP table version is 1, main routing table version 1 Neighbor V AS MsgRcvd MsgSent InQ OutQ Up/Down State/PfxRcd 2001::1 4 7 3 9 0 0 0:00:00:48 ESTABLISHED</pre>
Related Commands	N/A
Note	

6.4.8 IP AS-Path Access-List

6.4.8.1 Commands

ip as-path access-list

```
ip as-path access-list <list-name> {permit | deny} <reg-exp> [any | egp | igp | incomplete]
no ip as-path access-list <list-name>
```

Creates an access list to filter BGP route updates.
The no ip as-path access-list command deletes the named access list.

Syntax Description	list-name	The name for the access list
	permit	Permits access for a matching condition
	deny	Denies access for a matching condition
	reg-exp	Regular expression that is used to specify a pattern to match against an input string.
	any	Any route type
	egp	External BGP routes
	igp	Internal BGP routes
	incomplete	Routes marked as “Incomplete”
Default	N/A	
Configuration Mode	Config	
History	3.4.0000	
Role	admin	
Example	switch (config)# ip as-path access-list mylist permit switch (config)#	
Related Commands	N/A	
Note	If access list_name does not exist, this command creates it. If it already exists, this command appends statements to the list.	

show ip as-path access-list

show ip as-path access-list [list-name]

Presents defined as-path access lists

Syntax Description	list-name	Displays a specific prefix-list.
Default	N/A	
Configuration Mode	Config	
History	3.4.0000	
Role	admin	
Example	switch (config)# show ip as-path access-list mylist	
Related Commands	N/A	
Note		

6.4.9 IP Community-List

6.4.9.1 Commands

ip community-list standard

ip community-list standard <list-name> {deny | permit} <list-of-communities>
no ip community-list standard <list-name>

Adds a standard entry to a community-list.
The no form of the command deletes the specified community list.

Syntax Description	list-name	The name for the community list
	permit	Permits access for a matching condition.
	deny	Denies access for a matching condition.
	list-of-communities	List of standard communities: <ul style="list-style-type: none">• <aa:nn>• <number>• internet• local-AS• no-advertise• no-export
Default	N/A	
Configuration Mode	Config	
History	3.4.0000	
Role	admin	
Example	switch (config)# ip community-list standard mycommunity permit 1:2 3:4	
Related Commands	N/A	
Note	A BGP community access list filters route maps that are configured as BGP communities. The command uses regular expressions to name the communities specified by the list.	

ip community-list expanded

ip community-list expanded <list-name> {deny | permit} <reg-exp>
no ip community-list expanded <list-name>

Adds a regular expression entry to a community-list
 The no form of the command deletes the specified community list.

Syntax Description	list-name	Configures a named standard community list.
	permit	Permits access for a matching condition.
	deny	Denies access for a matching condition.
	reg-exp	Regular expression that is used to specify a pattern to match against an input string.
Default	N/A	
Configuration Mode	Config	
History	3.4.0000	
Role	admin	
Example	<pre>switch (config)# ip community-list expanded mycommunity permit 1:[0-9]+</pre>	
Related Commands	N/A	
Note	A BGP community access list filters route maps that are configured as BGP communities. The command uses regular expressions to name the communities specified by the list.	

show ip community-list

show ip community-list [community-list-name]

Displays the defined community lists

Syntax Description	community-list-name	An optional parameter to display only the specified list
---------------------------	---------------------	--

Default	N/A	
Configuration Mode	Config	
History	3.4.0000	
Role	admin	
Example	switch (config)# show ip community-list mycommunity	
Related Commands	N/A	
Note	A BGP community access list filters route maps that are configured as BGP communities. The command uses regular expressions to name the communities specified by the list.	

6.5 BFD Infrastructure

Many protocols use slow Hello mechanisms and failure is detected usually seconds after the problem occurs. The BFD goal is to provide low overhead short duration detection of failures between adjacent nodes and single mechanism that can be used for liveness detection over any media.

BFD session is established by the application that uses it. There is no discovery mechanism. E.g. in OSPF BFD session is established to all neighbors that were discovered by OSPF hello protocol.

BFD supports multiple modes: one of them is Asynchronous.

In Asynchronous mode a system periodically sends BFD packets to verify connectivity. If a number of packets in a row are not received - the session is declared down.

A system can be passive or active. Active system initiates BFD sessions. Both systems can be active. (We support only active mode).

6.5.1 Session Establishment

A session begins with exchange of control packets. When bidirectional communication is achieved - a session becomes Up.

After session becomes up - control packet rate can be incremented.

Each side informs the neighbor in what intervals it is going to send BFD packets and what minimum interval it can receive BFD packets is.

Detection time is different in both directions and depends on negotiated parameters.

In Asynchronous mode - agreed transmit interval of remote system - max between local minimum rx time and last received min transmit time.

Detection time is equal to agreed transmit interval of remote system multiplied to multiplier received from remote system.

6.5.2 Interaction with Protocols

BFD session can be single-hop or multi-hop:

- Single hop session traverse between two adjacent IP neighbors. BFD control packet should be encapsulated in UDP with DPORT = 3784. SPORT should be in range 49152 to 65535. Same SPORT must be used for all control BFD packets for given session and is unique between different sessions. TTL value is 255.
- Multi-hop sessions traverse between to remote ip neighbors. Control packets are encapsulated in UDP with DPORT = 4784.

If different protocols want to establish a BFD session with the same remote system for same data plane - they should share BFD session.

IPv4 and IPv6 data protocols have different BFD sessions.

In OSPF Protocol neighbor discovery protocol establishes single hop BFD sessions. For OSPF when session fails - it tears down OSPF neighbor.

BFD session is established to BGP neighbor (single hop or multiple hop).
Single hop BFD session can be established for static route next hop.

6.5.3 Config Commands

protocol bfd

[no] protocol bfd

Enables bfd on a system level
The no form of the command removes bfd configuration.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config Router BGP
History	3.6.4070 Initial release
Role	admin
Example	switch (config router bgp)# bfd shutdown switch (config router bgp)#
Related Commands	
Note	The command will return an error if BFD is enabled in clients already running on the system (static routes or BGP of OSPF).

bfd shutdown

[no] bfd shutdown [vrf <vrf-name>]

Disables bfd sessions but doesn't remove the configuration if VRF is not given the command will be executed in active VRF.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config Router BGP
History	3.6.4070 Initial release
Role	admin
Example	<pre>switch (config router bgp)# bfd shutdown switch (config router bgp)#</pre>
Related Commands	
Note	"no ip bfd shutdown" or BFD interval parameters modification are affect traffic for all protocols; OSPF, BGP, static routes. The dynamic protocols (OSPF and BGP) will restore the connection based on Hello protocol. For static routes, please execute "no ip route static bfd <ip address>"

6.5.4 Interface Commands

bfd interval

[no] bfd interval [vrf <vrf-name>] [transmit_rate] [min_rx] [multiplier]

Sets the interval rates between BFD messages.
The no form of the command removes bfd interval rates.

Syntax Description	transmit_rate	Transfer time between two consecutive BFD messages, the actual time is negotiated between two systems. Range: 50-60000 (msec) Default: 300 (msec)
	min_rx	Minimum time between neighbor messages, the actual time is negotiated between two systems. Range: 50-60000 (msec) Default: 150 (msec)
	multiplier	Defines a time period to detect BFD failure. Range: 3-50 Default: 3
Default	N/A	
Configuration Mode	Config	
History	3.6.4070	Initial release
Role	admin	
Example	switch (config router bgp)# bfd shutdown switch (config router bgp)#	
Related Commands		
Note	The command is executed in Active VRF when VRF is not specified.	

ip ospf bfd

[no] ip ospf bfd

Enables BFD on the given interface for all OSPF neighbors on a number of active sessions.

The no form of the command disables BFD on all OSPF neighbors.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config Interface Ethernet
History	3.6.4070 Initial release 3.6.4110 Added “no” form of the command.
Role	admin
Example	switch (config interface ethernet)# ip ospf bfd
Related Commands	N/A
Note	"ip ospf bfd" affects traffic, OSPF will restore the connection based on Hello protocol.

ip route static bfd

```
ip route [vrf <vrf-name>] static bfd <gateway IP address>
no ip route [vrf <vrf-name>] static bfd <gateway IP address>
```

Configures a static bfd route inside VRF.
The no form of the command removes the static bfd route configured.

Syntax Description	vrf-name	VRF session name
	gateway IP address	IP address of the gateway.
Default	N/A	
Configuration Mode	Config	
History	3.6.4070	Initial release
Role	admin	
Example	switch (config) # ip route static bfd	
Related Commands	N/A	
Notes	When a session fails, all static routes pointing to the specified gateway are removed from routing decision.	

show ip static route bfd

show ip static route bfd [vrf [<vrf-name> | all]]

Displays bfd static routing table of VRF instance.

Syntax Description	all	Displays routing tables for all VRF instances
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.4070	Initial release
Role	admin	
Example	switch (config) # show ip static route bfd	
Related Commands	ip route	
Notes	<ul style="list-style-type: none">• If no routing-context is specified, the “routing-context” VRF is automatically displayed• If no default route exists, then the message “Route not found” is printed	

show ip bfd neighbors

```
show ip bfd [vrf <name>|all] neighbors [brief|<ip>]
```

Displays bfd table of neighbor VRF instances.

Syntax Description	all	Displays tables for all VRF instances
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.6.4110	Initial release
Role	admin	

Example

```
switch (config) # show ip bgp neighbors 1000::1040
BGP neighbor: 1000::1040, remote AS: 100, link: external
  BGP version: 4, remote router ID: 2.1.1.1
  BGP State: ESTABLISHED
  Last read: 0:00:09:28, last write: 0:00:09:28, hold time is: 180, keepalive interval in seconds: 60
  BFD State: Up
  Configured hold time in seconds: 180, keepalive interval in seconds: 60
  Minimum holdtime from neighbor in seconds: 180

  Neighbor capabilities:
  Route refresh: advertise and received
  Graceful Restart Capability: advertise and received
  Address family IPv4 Unicast: advertise and received
  Address family IPv6 Unicast: n/a

  Message statistics:
  InQ depth is: 0
  OutQ depth is: 0

          Sent   Rcvd
          ----   ----
Opens:           1     1
Notifications:   0     0
Updates:         4     4
Keepalives:    1587  1593
Route Refresh:   0     0
Total:          1592  1598
  Default minimum time between advertisement runs in seconds: 30

  For address family: IPv4 Unicast
  BGP table version: 7
  Output queue size : 0

          Sent   Rcvd
          ----   ----
Prefix activity:
Prefixes Current:  4     2
Prefixes Total:   4     2
Implicit Withdraw: 0     0
Explicit Withdraw: 0     0
Used as bestpath: n/a    2
Used as multipath: n/a   n/a

          OutboundInbound
          -----
Local Policy Denied Prefixes:-----
Total:                0     0

Connections established: 1; dropped: 1
Last reset: 0:23:01:17, due to: 0 (0)
External BGP neighbor possible distance in hops: 1
Connection state is: ESTABLISHED
Local host: 1.1.1.1, Local port: 49616
Foreign host: 1000::1040, Foreign port: 179
```

Related Commands

Notes

6.6 Policy Rules

6.6.1 Route Map

Route maps define conditions for redistributing routes between routing protocols. A route map clause is identified by a name, filter type (permit or deny) and a sequence number. Clauses with the same name are components of a single route map; the sequence number determines the order in which the clauses are compared to a route.



Route maps can be used only for the BGP protocol.



Route maps cannot be used for the commands “network” on page 1172 or “redistribute” on page 1173.

6.6.1.1 Commands

route-map

route-map <map-name> [deny | permit] [sequence-number]
no route-map <map-tag> {deny | permit} [<sequence-number>]

Creates a route map that can be used for importing, exporting routes and applying local policies.

Syntax Description	name	Name of the route-map
	deny permit	Configures the rule to be used
	sequence-number	Sequence number for a route-map specific record
Default	N/A	
Configuration Mode	Config	
History	3.3.5006	
	3.3.5200	Updated notes
Role	admin	
Example	<pre>switch (config) # route-map mymap permit 1200 switch (config route-map mymap permit 1200)#</pre>	
Related Commands	N/A	
Note	<ul style="list-style-type: none">• All changes in a the route map configuration mode become pending until the end of the route-map session.• If not configured, deny permit is configured as permit.• If not configured, sequence-number default value is 10.	

continue <sequence-number>

continue <sequence-number>
no continue

Enables additional route map evaluation of routes whose parameters meet the clause's matching criteria.

The no form of the command removes this configuration from the route map clause.

Syntax Description	sequence-number	
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5006	First version
	3.3.5200	Updated example
Role	admin	
Example	<pre>switch (config route-map mymap permit 10)# match as-number 40 switch (config route-map mymap permit 10)# set weight 7 switch (config route-map mymap permit 10)# continue 1200 switch (config route-map mymap permit 10)# exit switch (config)# show route-map test route-map test, permit, sequence 10 Match clauses: as-number 40 Set clauses: weight 7 continue 1200 switch (config route-map mymap permit 10)# route-map test permit 10 no continue switch (config route-map mymap permit 10)# show route-map test route-map test, permit, sequence 10 Match clauses: as-number 40 Set clauses: weight 7 switch (config route-map mymap permit 10)#</pre>	

Related Commands

route-map <map-name> [deny | permit] [sequence-number]

Note

- A clause typically contains a match (route-map) and a set (route-map) statement. The evaluation of routes whose settings are the same as match statement parameters normally end and the clause's set statement are applied to the route. Routes that match a clause containing a continue statement are evaluated against the clause specified by the continue statement.
 - When a route matches multiple route-map clauses, the filter action (deny or permit) is determined by the last clause that the route matches. The set statements in all clauses matching the route are applied to the route after the route map evaluation is complete. Multiple set statements are applied in the same order by which the route was evaluated against the clauses containing them.
 - Continue cannot be set to go back to a previous clause; <sequence-number> of the continue must always be higher than the current clause's sequence number.
-
-

abort**abort**

Discards pending changes and returns to global configuration mode.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config Route Map
History	3.3.5006 First version 3.3.5200 Updated example
Role	admin
Example	<pre> switch (config)# route-map mymap permit 10 match as-number 40 switch (config)# route-map mymap permit 10 set weight 7 switch (config)# show route-map test route-map test, permit, sequence 10 Match clauses: as-number 40 Set clauses: weight 7 switch (config)# route-map mymap permit 1200 switch (config route-map mymap permit 1200)# set weight 11 switch (config route-map mymap permit 1200)# abort switch (config)# show route-map mymap route-map mymap, permit, sequence 10 Match clauses: as-number 40 Set clauses: weight 7 switch (config)# </pre>
Related Commands	N/A
Note	

exit

exit

Saves pending route map clause changes to running-config and returns to global configuration mode.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config Route Map
History	3.3.5006
Role	admin
Example	<pre>switch (config)# route-map mymap permit 10 match as-number 40 switch (config)# route-map mymap permit 10 set weight 7 switch (config)# show route-map test route-map test, permit, sequence 10 Match clauses: as-number 40 Set clauses: weight 7 switch (config)# route-map mymap permit 1200 switch (config route-map mymap permit 1200)# set weight 11 switch (config route-map mymap permit 1200)# exit switch (config)# show route-map test route-map mymap, permit, sequence 10 Match clauses: as-number 40 Set clauses: weight 7 route-map mymap, permit, sequence 1200 Set clauses: weight 11 switch (config)#</pre>
Related Commands	N/A
Note	

match as-number

match as-number <number>
no match as-number

Filters according to one of the AS numbers in the AS path of the route. The no form of the command removes this configuration from the route map clause.

Syntax Description	number	Autonomous system number to check.
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5006	
Role	admin	
Example	<pre>switch (config route-map mymap permit 10)# match as-number 40 switch (config route-map mymap permit 10)#</pre>	
Related Commands	N/A	
Note	<ul style="list-style-type: none"> • When a clause contains multiple match commands, the permit or deny filter applies to a route only if its properties are equal to corresponding parameters in each match statement. • When a route's properties do not equal the statement parameters, the route is evaluated against the next clause in the route map, as determined by sequence number. • If all clauses fail to permit or deny the route, the route is denied. 	

match as-path

match as-path <as-path-list name>
no match as-path

Creates a route map clause entry that matches the route's AS path using an as-path access-list.

The no form of the command removes the match statement from the configuration mode route map clause.

Syntax Description	number	Autonomous system number to check.
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5006	
	3.6.3004	Added note
Role	admin	
Example	switch (config route-map mymap permit 10)# match as-path my-list	
Related Commands	N/A	
Note	<ul style="list-style-type: none">• When a clause contains multiple match commands, the permit or deny filter applies to a route only if its properties are equal to corresponding parameters in each match statement• When a route's properties do not equal the statement parameters, the route is evaluated against the next clause in the route map, as determined by sequence number• If all clauses fail to permit or deny the route, the route is denied• An as-path-list must already exist before a node is configured to use it	

match community

match community <list-of-communities> [exact-match]
no match community <list-of-communities>

Creates a route map clause entry that matches a route if it contains at least the specified communities.

The no form of the command removes the match clause.

Syntax Description	list of communities	List of standard communities: <ul style="list-style-type: none"> • <aa:nn> • <number> • internet • local-AS • no-advertise • no-export
	exact-match	Creates a route map clause entry that matches the route's communities exactly.
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5006	
Role	admin	
Example	switch (config route-map mymap permit 10)# match community 1:100 3:52	
Related Commands	N/A	
Note	<ul style="list-style-type: none"> • When a clause contains multiple match commands, the permit or deny filter applies to a route only if its properties are equal to corresponding parameters in each match statement. • When a route's properties do not equal the statement parameters, the route is evaluated against the next clause in the route map, as determined by sequence number. • If all clauses fail to permit or deny the route, the route is denied. • Route-map's match on a list of communities is performed with the command "match community-list" and not this command. 	

match community-list

match community <communities-list-name> exact-match
no match community <communities-list-name> exact-match

Creates a route map clause entry that specifies one route filtering condition
The no form of the command removes the match clause.

Syntax Description	communities-list-name A name of an IP community list
Default	N/A
Configuration Mode	Config Route Map
History	3.3.5006
Role	admin
Example	<pre>switch (config route-map mymap permit 10)# match community-list COM_LIST exact-match</pre>
Related Commands	N/A
Note	<ul style="list-style-type: none">• When a clause contains multiple match commands, the permit or deny filter applies to a route only if its properties are equal to corresponding parameters in each match statement.• When a route's properties do not equal the statement parameters, the route is evaluated against the next clause in the route map, as determined by sequence number.• If all clauses fail to permit or deny the route, the route is denied.

match interface

match interface <interface-type> <number>
no match interface

Matches the route's interface
 The no form of the command removes the match clause.

Syntax Description	prefix-list-name	Prefix-list name.
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5006	
Role	admin	
Example	switch (config route-map mymap permit 10)# match interface ethernet 1/1	
Related Commands	N/A	
Note	<ul style="list-style-type: none"> • When a clause contains multiple match commands, the permit or deny filter applies to a route only if its properties are equal to corresponding parameters in each match statement. • When a route's properties do not equal the statement parameters, the route is evaluated against the next clause in the route map, as determined by sequence number. • If all clauses fail to permit or deny the route, the route is denied. 	

match ip address

match ip address <prefix-list-name>
no match ip address

Filters according to IPv4 prefix list.
The no form of the command removes this configuration from the route map clause.

Syntax Description	prefix-list-name	Prefix-list name.
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5006	
Role	admin	
Example	switch (config route-map mymap permit 10)# match ip address listSmallRoutes	
Related Commands	N/A	
Note	<ul style="list-style-type: none">• When a clause contains multiple match commands, the permit or deny filter applies to a route only if its properties are equal to corresponding parameters in each match statement.• When a route's properties do not equal the statement parameters, the route is evaluated against the next clause in the route map, as determined by sequence number.• If all clauses fail to permit or deny the route, the route is denied.• The prefix-list-name should point to an existing IP prefix-list. If it is not found, no route is considered as a match for this clause.	

match ip next-hop

match ip next-hop <ipv4/ipv6>
no match ip next-hop

Configures a route's entry next-hop match.
 The no form of the command removes a route-map's entry next-hop match.

Syntax Description	ipv4/ipv6	Next hop IP address: A.B.C.D (e.g. 10.0.13.86).
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5200	
	3.6.4070	Added support for IPv4 and IPv6
Role	admin	
Example	<pre>switch (config route-map mymap permit 10)# match ip next-hop 10.10.10.10</pre>	
Related Commands	N/A	
Note	<ul style="list-style-type: none"> • When a clause contains multiple match commands, the permit or deny filter applies to a route only if its properties are equal to corresponding parameters in each match statement. • When a route's properties do not equal the statement parameters, the route is evaluated against the next clause in the route map, as determined by sequence number. • If all clauses fail to permit or deny the route, the route is denied. 	

match local-preference

match local-preference <value>
no match local-preference

Configures a route's entry local-preference match.
The no form of the command removes a route-map's entry local-preference match.

Syntax Description	value	Range: 1-2147483647.
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5200	First version
	3.4.0000	Updated value range
Role	admin	
Example	switch (config route-map mymap permit 10)# match local-preference 10	
Related Commands	N/A	
Note	<ul style="list-style-type: none">• When a clause contains multiple match commands, the permit or deny filter applies to a route only if its properties are equal to corresponding parameters in each match statement.• When a route's properties do not equal the statement parameters, the route is evaluated against the next clause in the route map, as determined by sequence number.• If all clauses fail to permit or deny the route, the route is denied.	

match metric

match metric <value>
no match metric

Configures a route's entry metric match.
 The no form of the command removes a route-map's entry metric match.

Syntax Description	value	Range: 1-2147483647.
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5200	First version
	3.4.0000	Updated value range
Role	admin	
Example	switch (config route-map mymap permit 10)# match metric 10	
Related Commands	N/A	
Note	<ul style="list-style-type: none"> • When a clause contains multiple match commands, the permit or deny filter applies to a route only if its properties are equal to corresponding parameters in each match statement. • When a route's properties do not equal the statement parameters, the route is evaluated against the next clause in the route map, as determined by sequence number. • If all clauses fail to permit or deny the route, the route is denied. 	

set as-path prepend

set as-path prepend <value₁> <value₂> ... <value_n>
no set as-path prepend

Modifies as-path on affected routes
The no form of the command removes the set statement from the route map.

Syntax Description	value	BGP AS number that is prepended to as-path. Range: 1-4294967295.
Default	N/A	
Configuration Mode	Config Route Map	
History	3.4.0000	
Role	admin	
Example	switch (config route-map mymap permit 10)# set as-path prepend 5 10	
Related Commands	N/A	
Note		

set as-path tag

set as-path tag <value>

no set as-path tag

Configures a route's entry AS-path tag parameter.
The no form of the command removes a route-map's entry AS path tag setting.

Syntax Description	value	Range: 1-2147483648.
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5200	
Role	admin	
Example	switch (config route-map mymap permit 10)# set as-path tag 1	
Related Commands	N/A	
Note		

set community

set community {<list of communities> | none}
no set community {<list of communities> | none}

Sets the community attribute of a distributed route
The no form of the command removes the set statement from the clause.

Syntax Description	list of communities	List of standard communities: <ul style="list-style-type: none">• <aa:nn>• <number>• internet• local-AS• no-advertise• no-export
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5200	
Role	admin	
Example	switch (config route-map mymap permit 10)# set community 1:2 3:4	
Related Commands	N/A	
Note		

set community additive

set community <list-of-communities> additive
no set community <list-of-communities> additive

Adds the matching communities
 The no form of the command removes the set statement from the clause.

Syntax Description	list-of-communities	List of standard communities: <ul style="list-style-type: none"> • <aa:nn> • <number> • internet • local-AS • no-advertise • no-export
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5200	
Role	admin	
Example	switch (config route-map mymap permit 10)# set community none	
Related Commands	N/A	
Note		

set community none

set community none
no set community none

Sets the community attribute of a distributed route to be empty
The no form of the command removes the set statement from the clause.

Default	N/A
Configuration Mode	Config Route Map
History	3.3.5200
Role	admin
Example	switch (config route-map mymap permit 10)# set community none
Related Commands	N/A
Note	

set community delete

set community <list of communities> delete
no set community <list of communities> delete

Deletes matching communities.
 The no form of the command removes the set statement from the clause.

Syntax Description	list of communities	List of standard communities: <ul style="list-style-type: none"> • <aa:nn> • <number> • internet • local-AS • no-advertise • no-export
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5200	
Role	admin	
Example	<pre>switch-e07c04 [standalone: master] (config) # route-map test_route_map switch-e07c04 [standalone: master] (config route-map test_route_map permit 10) # set community 400:1 delete</pre>	
Related Commands	N/A	
Note		

set community-list

set community-list <community-list-name>
no set community <list of communities>

Configures a named standard community list.
The no form of the command removes the set statement from the clause.

Syntax Description	<community-list-name>	Name of community list
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5200	
	3.6.3004	Added note
Role	admin	
Example	switch (config route-map mymap permit 10)# set community internet 1:3 additive	
Related Commands	N/A	
Note	A community-list must already exist before a node is configured to use it	

set community-list additive

set community-list <community-list-name> additive
no set community <list of communities> additive

Adds to existing communities using the communities found in the community list.

The no form of the command removes the set statement from the clause.

Syntax Description	<community-list-name> Name of community list
Default	N/A
Configuration Mode	Config Route Map
History	3.3.5200
Role	admin
Example	switch (config route-map mymap permit 10)# set community-list mycommunity additive
Related Commands	N/A
Note	

set community-list delete

```
set community-list <community-list-name> delete  
no set community-list
```

Deletes the matching community list permit entries from the route community list
The no form of the command removes the set statement from the clause.

Syntax Description	community-list-name	Name of community list
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5200	
Role	admin	
Example	switch (config route-map mymap permit 10)# set community-list mycommunity delete	
Related Commands	N/A	
Note		

set ip next-hop

set ip next-hop <ipv4/ipv6>
no set ip next-hop

Configures a route's entry next-hop parameter.
 The no form of the command removes a route-map's entry next-hop setting.

Syntax Description	ipv4/ipv6	Route next-hop IP: A.B.C.D (e.g. 10.0.13.86).
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5200	
	3.6.4070	Added support for IPv4 and IPv6
Role	admin	
Example	switch (config route-map mymap permit 10)# set ip next-hop 10.10.10.10	
Related Commands	N/A	
Note		

set local-preference

set local-preference <value>
no set local-preference

Configures a route's entry local-preference parameter.
The no form of the command removes a route-map's entry local-pref setting.

Syntax Description	value	Route local-pref: 1-2147483648.
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5200	
Role	admin	
Example	switch (config route-map mymap permit 10)# set local-preference 10	
Related Commands	N/A	
Note		

set metric

set metric <value>
no set metric

Configures a route's entry metric parameter.
 The no form of the command removes a route-map's entry metric setting.

Syntax Description	value	Route metric: 1-2147483647.
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5200	
Role	admin	
Example	switch (config route-map mymap permit 10)# set metric 10	
Related Commands	N/A	
Note		

set origin

set origin {egp | igp | incomplete}
no set origin

Configures a route's entry origin parameter.
The no form of the command removes a route-map's entry origin setting.

Syntax Description	egp	Set a route's entry origin parameter to external.
	igp	Set a route's entry origin parameter to internal.
	incomplete	Set a route's entry origin parameter to incomplete.
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5200	
Role	admin	
Example	switch (config route-map mymap permit 10)# set origin egp	
Related Commands	N/A	
Note		

set tag

set tag <value>
no set tag

Configures a route's entry tag parameter.
 The no form of the command removes a route-map's entry tag setting.

Syntax Description	value	Range: 1-2147483647.
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5200	
	3.4.0000	Updated parameter range
Role	admin	
Example	switch (config route-map mymap permit 10)# set tag 10	
Related Commands	N/A	
Note		

set weight

set weight <number>
no set weight

Configures modifications to redistributed routes.
The no form of the command removes this configuration from the route map clause.

Syntax Description	number	Value of the weight to set. Range: 1-65535.
Default	N/A	
Configuration Mode	Config Route Map	
History	3.3.5006	First version
	3.4.0000	Updated parameter range
Role	admin	
Example	switch (config route-map mymap permit 10)# set weight 7	
Related Commands	route-map <map-name> [deny permit] [sequence-number]	
Note		

show route-map

show route-map [<name>]

Displays route map configuration.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.3.5006
Role	admin
Example	<pre>switch (config)# show route-map mymap route-map mymap, permit, sequence 1200 Set clauses: continue 1800 switch (config)#</pre>
Related Commands	N/A
Note	

6.6.2 IP Prefix-List

Prefix-list is a list of entries, each of which can match one or more IP prefixes. A prefix-list is usually used to match a specific IP prefix, mostly in relation to IP route destinations.

The prefix is considered to match the list if one of the entries match the prefix; the entry itself can be marked as a “permit” entry or a “deny” entry, which can be used by the matching code to decide if the route is to be accepted or not.

The prefix is matched to the prefix-list entries in the order of the sequence number of the entries in the list.

6.6.2.1 Commands

ip prefix-list

```

ipv6 prefix-list <list-name> [seq <number>] {permit | deny} <ipv6> <length> [eq
<length> | le <length> | ge <length> [le <length>]]]
no ipv6 prefix-list <list-name> [seq <number>]

```

The command creates or updates IPv6 prefix-list.

The no form of the command deletes the prefix-list or a prefix-list entry

Syntax Description	list-name	String
	seq <number>	Sequence number assigned to entry. Range: 0-65535.
	permit	Permits access for a matching condition.
	deny	Denies access for a matching condition.
	ipv6	IPv6 address
	length	Prefix length
	eq ge le <mask>	<ul style="list-style-type: none"> • eq: Equal to a specified prefix length • ge: Greater than or equal to a specified prefix length • le: Less than or equal to a specified prefix length
Default	Sequence value = 10	
Configuration Mode	Config	
History	3.3.5200	
	3.6.4070	Added support for IPv6
Role	admin	
Example	<pre> switch (config)# ipv6 prefix-list a-list permit 2001::0 /64 eq 32 switch (config)# </pre>	
Related Commands	N/A	
Note		

show ipv6 prefix-list

show ipv6 prefix-list [<name>]

Displays IPv6 prefix-lists.

Syntax Description	name	Displays a specific prefix-list.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.5200	
	3.6.4070	Added support for IPv6
Role	admin	
Example	switch (config)# show ipv6 prefix-list prefix-list: a-list count: 1, range entries: 1, sequences: 10 - 10 seq 10 permit 2001::0 /64 ge eq 32 (hit count: 0, refcount: 0) switch (config)#	
Related Commands	N/A	
Note		

6.7 Multicast (IGMP and PIM)

Protocol independent multicast (PIM) is a collection of protocols that deal with efficient delivery of IP multicast (MC) data. Those protocols are published in the series of RFCs and define different ways and aspects of multicast data distribution. PIM protocol family includes PIM dense mode (PIM-DM), PIM sparse mode (PIM-SM, which is not supported on Mellanox platforms), Bidirectional PIM (PIM-BIDIR) and Bootstrap router (BSR) protocol.

PIM builds and maintains multicast routing tables based on the unicast routing information provided by unicast routing tables that can be maintained statically or dynamically by IP routing protocols like OSPF and BGP.

6.7.1 Basic PIM-SM

PIM relies on the underlying topology gathering protocols that collect unicast routing information and build multicast routing information base (MRIB). The primary role of MRIB is to determine the next hop for PIM messages. MC data flows along with the reverse path of the PIM control.

MC tree construction contains three phases:

1. Construction of a shared distribution tree. This tree is built around a special designated router (DR) called the rendezvous point (RP).
2. Establishing a native forwarding path from MC sources to the RP
3. Building an optimized MC distribution tree from each MC source to all MC targets bypassing the RP

The first stage of the multicast tree establishment starts when the MC receiver expresses desire to start receiving MC data. It can happen as a result of using one of the L2 protocols like MLD or IGMP, or by static configuration. When such request is received by the last hop router (a designated router) this router starts to build a distribution path from the RP. It starts to send periodic “Join” messages to the nearest PIM neighbor router towards the RP. The next router continues to do the same. Eventually the process converges when Join messages reach RP or a router that has already created that distribution tree. Usually that tree is called a shared tree because it is created for any source for specific MC group G and is noted as (*,G).

At that stage, MC senders can start sending MC data. The DR next to the MC source extracts the packets from the data flow and tunnels them to the RP. The RP decapsulates the packets and distributes them to all MC receivers along with the share tree.

On the second stage the RP switches from tunneling of multicast packets from MC sources to forwarding native traffic. When the RP identifies that a new MC source started to send packets, it initiates an establishment of a native forwarding path from the DR of that source to itself. For this purpose it starts to send Join messages towards MC source to nearest neighbor to that source according the MRIB. This is a source specific Join and is noted as (S,G). When data path is established up to the DR, the DR switches from tunneling MC packets to their native forwarding, so the RP does not need to decapsulate MC packets anymore, but still continue to distribute the packets along with shared tree.

On the third phase multicast receivers will try to switch from shared tree to source specific tree by creating a direct distribution path from a multicast source. When last hop router of the multicast receiver identifies multicast traffic coming from any multicast source it will start to send

Join messages towards the source with purpose to create a direct source specific path to that source. Once such path will be established and Designated router that is attached to the source L2 network will start to distribute the multicast traffic directly bypassing shared tree, the last hop router will detach its receivers from shared tree for that data and will switch to the shortest path tree distribution.

6.7.2 Source-Specific Multicast (SSM)

Source-Specific Multicast (SSM) is a method of delivering multicast packets in which the only packets that are delivered to a receiver are those originating from a specific source address requested by the receiver. By so limiting the source, SSM reduces demands on the network and improves security.

SSM requires that the receiver specify the source address and explicitly excludes the use of the (*,G) join for all multicast groups in RFC 3376, which is possible only in IPv4's IGMPv3 and IPv6's MLDv2.

Source-specific multicast is best understood in contrast to any-source multicast (ASM). In the ASM service model a receiver expresses interest in traffic to a multicast address. The multicast network must discover all multicast sources sending to that address, and route data from all sources to all interested receivers.

This behavior is particularly well suited for groupware applications where all participants in the group want to be aware of all other participants, and the list of participants is not known in advance.

The source discovery burden on the network can become significant when the number of sources is large.

In the SSM service model, in addition to the receiver expressing interest in traffic to a multicast address, the receiver expresses interest in receiving traffic from only one specific source sending to that multicast address. This relieves the network of discovering many multicast sources and reduces the amount of multicast routing information that the network must maintain.

SSM requires support in last-hop routers and in the receiver's operating system. SSM support is not required in other network components, including routers and even the sending host. Interest in multicast traffic from a specific source is conveyed from hosts to routers using IGMPv3 as specified in RFC 4607.

SSM destination addresses must be in the ranges 232.0.0.0/8 for IPv4 or FF3x::/96 for IPv6.

Source-specific multicast delivery semantics are provided for a datagram sent to an SSM address. That is, a datagram with source IP address S and SSM destination address G is delivered to each upper-layer "socket" that has specifically requested the reception of datagrams sent to address G by source S, and only to those sockets.

6.7.3 Bootstrap Router

For correct operation each PIM router requires a capability to map a multicast group that it needs to serve to a Rendezvous point for that group. This mapping can be done manually or the mapping can be distributed dynamically in the network. BSR protocol serves for this purpose.

This protocol introduces new role in the multicast network – Bootstrap router. That router is responsible to flood multicast group to RP mapping through the multicast routing domain. Boot-

bootstrap router is elected dynamically among bootstrap router candidates (C-BSR) and once elected will collect from Rendezvous point candidate (C-RP) mapping information and distribute it in the domain.

Bootstrap activity contains 4 steps. First each C-BSR configured in the network originates floods into the network bootstrap messages that express the router desire to become BSR and also its BSR priority. Any C-BSR that receives that information and has lower priority will suspend itself, so eventually only one router will send BSR messages and become BSR.

When BSR is elected all RP candidates start to advertise to BSR a list of groups that this RP can serve. On the next step, after BSR learns the group mapping proposals, it forms a final group to RP mapping in the domain and starts to distribute it among PIM routers in the multicast routing domain. When PIM router receives BSR message with the group to RP mapping, it installs that mapping in the router local cache and uses that information to create multicast distribution trees.

6.7.4 Configuring Multicast

Precondition steps:

Step 1. Enable IP routing functionality. Run:

```
switch (config)# ip routing
```

Step 2. Enable the desired VLAN. Run:

```
switch (config)# vlan 10
```

Step 3. Add this VLAN to the desired interface. Run:

```
switch (config)# interface ethernet 1/1
switch (config ethernet 1/1)#switchport access vlan 10
```

Step 4. Create a VLAN interface. Run:

```
switch (config)# interface vlan 10
```

Step 5. Apply IP address to the VLAN interface. Run:

```
switch (config interface vlan 10)# ip address 10.10.10.10 /24
```

Step 6. Enable the interface. Run:

```
switch (config interface vlan 10)# no shutdown
```

6.7.4.1 Configuring IGMP

IGMP is enabled when IP multicast is enabled and static multicast or PIM is enabled on the interface.

6.7.4.2 Verifying IGMP

Step 1. Display a brief IGMP interface status. Run:

```
switch (config)# show ip igmp interface brief
IGMP Interfaces for VRF "default", Count: 1
Interface      IP Address      IGMP Querier    Membership      Version
VLAN10         10.10.10.1      10.10.10.1      5               v2
```

Step 2. Display detailed IGMP interface status. Run:

```
switch (config)#show ip igmp interface vlan 10
IGMP Interfaces for VRF "default"

VLAN10
Interface status: protocol-up/admin-up/link-up
IP address: 10.10.10.1, IP Subnet: 10.10.10.0/24
Active Querier: 10.10.10.1
Membership count: 5
Route-queue depth: 0
IGMP Version: 2
IGMP query interval: 125 secs, configured value: 125 secs
IGMP max response time: 10 secs, configured value: 10 secs
IGMP startup query interval: 125 secs, configured value: 125 secs
IGMP startup query count: 2
IGMP group timeout: 260 secs, configured value: 260 secs
IGMP querier timeout: 260 secs configured value: 260 secs
IGMP last member mrt: 25 secs configured value: 25
IGMP robustness variable: 2
IGMP interface immediate leave: Disabled
IGMP interface statistics:
General (sent/received):
v1/v2-reports: 0/10
v2-queries: 271/0,v2-leaves: 0/0
v3-queries: 0/0,
v3-reports: 0/0
switch (config)#
```

Step 3. Display the list of IGMP groups and their status. Run:

```
switch (config)#show ip igmp groups
IGMP Connected Group Membership for VRF "default", - 2 total entries
Type: S - Static, D - Dynamic, L - Local, T - SSM Translated
Group Address Type Interface Uptime Expires Last
Reporter
226.0.1.0 D vlan10 [0d 00:00:07.46] [0d 00:04:05.08] 10.10.10.2
226.0.1.1 D vlan10 [0d 00:00:07.47] [0d 00:04:05.08]
10.10.10.2
switch (config)#
```

6.7.4.3 Configuring PIM

Prerequisites:

Step 1. If not enabled, enable IP routing. Run:

```
switch (config)# ip routing
```

Step 2. Globally enable multicast routing. Run:

```
switch (config)# ip multicast-routing
```

➤ **To configure PIM:**

Step 1. Enable PIM. Run:

```
switch (config)# protocol pim
```

Step 2. Globally enable Bidirectional PIM (BIDIR mode). Run:

```
switch (config)# no ip pim bidir shutdown
```

6.7.5 Commands

6.7.5.1 PIM

protocol pim

protocol pim
no protocol pim

Enables protocol independent multicast (PIM).
The no form of the command hides all PIM commands and deletes all PIM configurations.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config
History	3.3.5006
Role	admin
Example	switch (config) # protocol pim
Related Commands	N/A
Note	

ip pim bidir shutdown

ip pim bidir shutdown
no ip pim bidir shutdown

Disables PIM bidir.
The no form of the command enables PIM bidir.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config
History	3.3.5006
Role	admin
Example	switch (config) # no ip pim bidir shutdown
Related Commands	N/A
Note	

ip pim rp-address

```
ip pim rp-address <rp-address> [group-list <ip-address> <prefix>] [override]
bidir
no ip pim rp-address <rp-address> [group-list <ip-address> <prefix>]
```

Configures a static IP address of a rendezvous point for a multicast group range or adds new multicast range to existing RP.
The no form of the command removes the rendezvous point for a multicast group range or removes all configuration of the RP.

Syntax Description	rp-address	The static IP address of rendezvous point.
	ip-address	IP address of the group-range (coupled with the prefix parameter).
	prefix	Network prefix (in the format of /24, or 255.255.255.0 for example) of group range.
	override	Specifies that this configuration overrides dynamic configuration learned by BSR.
	bidir	Specifies that the group range uses a bidirectional PIM.
Default	N/A	
Configuration Mode	Config	
History	3.3.5006	
Role	admin	
Example	switch (config) # ip pim rp-address 10.10.10.10 bidir	
Related Commands	N/A	
Note		

ip pim bsr-candidate

```
ip pim bsr-candidate {vlan <vlan-id> | loopback <number> | ethernet <port>}
[hash-len <hash-length>] [priority <priority>] [interval <interval>]
no ip pim bsr-candidate {vlan <vlan-id> | loopback <number> | ethernet <port>}
[hash-len <hash-length>] [priority <priority>] [interval <interval>]
```

Configures the switch as a candidate BSR router (C-BSR).
The no form of the command removes BSR-candidate configuration or restores default parameters values.

Syntax Description	vlan <vlan-id>	The VLAN ID. Range is 1-4094.
	loopback <number>	Loopback interface number.
	ethernet <port>	Ethernet interface.
	hash-len	Specifies the hash mask length used in BSR messages. Range: 0-32.
	priority	BSR priority rating. Larger numbers denote higher priority. Range: 0-255.
	interval	Period between the transmission of BSMs (seconds). Range:10-536870906.
Default	The interface is not BSR candidate by default. priority: 64 interval: 60 hash-len: 30	
Configuration Mode	Config Config Interface Ethernet configured as a router port interface Config Interface Loopback Config Interface Port Channel configured as a router port interface Config Interface VLAN	
History	3.3.5006	
Role	admin	
Example	switch (config) # ip pim bsr-candidate vlan 10 priority 100	

Related Commands ip pim sparse-mode

Note

- IP PIM sparse-mode must be enabled on the interface.
 - A BSR is a PIM router within the PIM domain through which dynamic RP selection is implemented. The BSR selects RPs from a list of candidate RPs and exchanges bootstrap messages (BSM) with all routers in the domain. The BSR is elected from one of the C-BSRs through an exchange of BSMs. A subset of PIM routers within the domain are configured as candidate Bootstrap routers (C-BSRs). Through the exchange of Bootstrap messages (BSMs), the C-BSRs elect the BSR, which then uses BSMs to inform all domain routers of its status.
 - Command parameters specify the switch's BSR address, the interval between BSM transmissions, hash length used for RP calculations and the priority assigned to the switch when electing a BSR.
 - Entering an ip pim bsr-candidate command replaces any previously configured bsr-candidate command. If the new command does not specify a priority or interval, the previously configured values persist in running-config.
-
-

ip pim bsr-holdtime

ip pim bsr-holdtime <period>
no ip pim bsr-holdtime

Configures the timeout period an elected BSR remains valid after receiving a BSM.

The no form of the command resets the parameters to their default.

Syntax Description	period	In seconds. Range: 12-1073741823 (1.073 billion).
Default	period = 2*(BSR candidate interval) + 10	
Configuration Mode	Config	
History	3.3.5006	
Role	admin	
Example	switch (config) # ip pim bsr-holdtime 30	
Related Commands		
Note		

ip pim rp-candidate

ip pim rp-candidate {vlan <vlan-id> | loopback <number> | ethernet <slot/port>} group-list <ip-address> <prefix> [bidir] [priority <priority>] [interval <interval>]

no ip pim rp-candidate {vlan <vlan-id> | loopback <number> | ethernet <slot/port>} group-list <ip-address> <prefix> [bidir] [priority <priority>] [interval <interval>]

Configures the switch as a candidate rendezvous point (C-RP).
The no form of the command removes the ip pim rp-candidate from running-config command for the specified multicast group.

Syntax Description	ethernet <slot/port>	Ethernet interface.
	port-channel <number>	LAG interface.
	vlan <vlan-id>	VLAN ID. Range: 1-4094.
	loopback <number>	Loopback interface number.
	ip-address	The group IP address.
	prefix	Network prefix (for example /24, or 255.255.255.0).
	priority	RP priority rating. Range: 0-255, where smaller numbers mean higher priority.
	interval	RP-advertisements message transmission interval. Range: 0-16383.
Default	The RP priority is 192. The BSR message interval is 60 seconds.	
Configuration Mode	Config Config Interface Ethernet configured as a router port interface Config Interface Loopback Config Interface Port Channel configured as a router port interface Config Interface VLAN	
History	3.3.5006	
Role	admin	
Example	switch (config) # ip pim rp-candidate vlan 19 group-list 225.6.5.0 /25 priority 20 interval 30 bidir	

Related Commands	N/A
Note	<ul style="list-style-type: none">• The BSR selects a multicast group's dynamic RP set from the list of C-RPs in the PIM domain. The command specifies the interface (used to derive the RP address), C-RP advertisement interval, and priority rating. The BSR selects the RP set by comparing C-RP priority ratings. The C-RP advertisement interval specifies the period between successive C-RP advertisement message transmissions to the BSR.• Running-config supports multiple multicast groups through multiple ip pim rp-candidate statements:• All commands must specify the same interface. Issuing a command with an interface that differs from existing commands removes all existing commands from running-config.• Running-config stores the interval and priority setting in a separate statement that applies to all rp-candidate statements. When a command specifies an interval that differs from the previously configured value, the new value replaces the old value and applies to all configured rp-candidate statements. The default interval value is 60 seconds.• When the no commands do not specify a multicast group, all rp-candidate statements are removed from running-config. The no ip pim rp-candidate interval commands restore the interval setting to the default value of 60 seconds.• When setting a priority, all previous rp-candidates within all interfaces and groups are configured to this priority.

ip pim sparse-mode

ip pim sparse-mode
no ip pim sparse-mode

Sets PIM sparse mode on this interface.
The no form of the command disables the sparse-mode on the interface and deletes all interfaces configuration.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface
History	3.3.5006
Role	admin
Example	<code>switch (config interface vlan 10) # ip pim sparse-mode</code>
Related Commands	N/A
Note	

ip pim dr-priority

ip pim dr-priority <priority>
no ip pim dr-priority

Configures the designated router (DR) priority of PIM Hello messages.
 The no form of the command resets this parameter to its default.

Syntax Description	priority	The designated router priority of the PIM Hello messages. Range is 1-4294967295.
Default	1	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.5006	
Role	admin	
Example	switch (config interface vlan 10) # ip pim dr-priority 5	
Related Commands	ip pim sparse-mode	
Note	The command “ip pim sparse-mode” must be run prior to using this command.	

ip pim hello-interval

ip pim hello-interval <interval>
no ip pim hello-interval

Configures PIM Hello interval in milliseconds.
The no form of the command resets this parameter to its default.

Syntax Description	interval	PIM Hello interval in seconds . Range:1-18000.
Default	30 seconds	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.5006	
	3.6.4006	Updated range
Role	admin	
Example	switch (config interface vlan 10) # ip pim hello-interval 70000	
Related Commands	ip pim sparse-mode	
Note	The command “ip pim sparse-mode” must be run prior to using this command.	

ip pim join-prune-interval

ip pim join-prune-interval <period>
no ip pim join-prune-interval

Configures the period between Join/Prune messages that the configuration mode interface originates and sends to the upstream RPF neighbor. The no form of the command resets this parameter to its default.

Syntax Description	period	Range: 1-18000 seconds.
Default	60 seconds	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.5200	
	3.6.4006	Updated range
Role	admin	
Example	switch (config interface vlan 10) # ip pim join-prune-interval 60	
Related Commands		
Note		

ip pim ssm range

```
ip pim ssm range {standard | group-list {<group-range>|<address> <prefix>}}  
no ip pim ssm range {standard | group-list {<group-range>|<address> <pre-  
fix>}}
```

Enables one or more ranges for SSM operation.

The no form of the command disables range for SSM operation.

Syntax Description	standard	set the SSM operation to standard SSM range 232.0.0.0/8
	<group-range>	user-defined multicast range for SSM operation. Example 233.0.0.0/8
	<ip-address>	group range ip-address. Example: 233.0.0.0
	<prefix>	group range prefix. Example /8 or 255.0.0.0
Default	Void	
Configuration Mode	Config	
History	3.6.4006	
Role	admin	
Example	switch (config) # ip pim ssm range group-list 234.0.0.0/8	
Related Commands		
Note	Standard and group-list configurations are mutually exclusive: It is necessary to delete standard SSM configuration in order to add group-list and it is necessary to delete all existing group-list configuration in order to configure standard SSM configuration.	

ip pim border

ip pim border
no ip pim border

Configures an interface on an IPv4 PIM border.
 The no form of the command removes the interface from being a PIM border.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface
History	3.3.5006
Role	admin
Example	<code>switch (config interface vlan 10) # ip pim border</code>
Related Commands	
Note	PIM border blocks PIM control traffic, but sends and receives all multicast traffic.

ip pim bsr-border

ip pim bsr-border
no ip pim bsr-border

Prevents the switch from sending bootstrap router messages (BSMs) over the configuration mode interface.

The no form of the command resets the parameter to its default value.

Syntax Description	N/A
Default	no pim bsr-border
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface
History	3.3.5200
Role	admin
Example	switch (config interface vlan 10) # ip pim bsr-border
Related Commands	
Note	

ip pim multipath rp

ip pim multipath rp
no ip pim multipath rp

Enables PIM load-sharing for Rendezvous Points (RPs).
The no form of the command disables PIM load-sharing for RPs.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config
History	3.4.2008
Role	admin
Example	switch (config) # ip pim multipath rp
Related Commands	N/A
Note	

show ip pim protocol

show ip pim protocol

Displays PIM protocol information (counters).

Syntax Description	N/A
---------------------------	-----

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.3.5200
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config) # show ip pim protocol PIM Control Counters </pre> <table><thead><tr><th></th><th>Received</th><th>Sent</th><th>Invalid</th></tr></thead><tbody><tr><td>Assert</td><td>0</td><td>0</td><td>0</td></tr><tr><td>Bootstrap Router</td><td>0</td><td>0</td><td>0</td></tr><tr><td>CRP Advertisement</td><td>0</td><td>0</td><td>0</td></tr><tr><td>Graft</td><td>0</td><td>0</td><td>0</td></tr><tr><td>Grapt Ack</td><td>0</td><td>0</td><td>0</td></tr><tr><td>Hello</td><td>0</td><td>0</td><td>0</td></tr><tr><td>J/P</td><td>0</td><td>0</td><td>0</td></tr><tr><td>Register</td><td>0</td><td>0</td><td>0</td></tr><tr><td>Register Stop</td><td>0</td><td>0</td><td>0</td></tr><tr><td>State Refresh</td><td>0</td><td>0</td><td>0</td></tr></tbody></table> <pre>switch (config) #</pre>		Received	Sent	Invalid	Assert	0	0	0	Bootstrap Router	0	0	0	CRP Advertisement	0	0	0	Graft	0	0	0	Grapt Ack	0	0	0	Hello	0	0	0	J/P	0	0	0	Register	0	0	0	Register Stop	0	0	0	State Refresh	0	0	0
	Received	Sent	Invalid																																										
Assert	0	0	0																																										
Bootstrap Router	0	0	0																																										
CRP Advertisement	0	0	0																																										
Graft	0	0	0																																										
Grapt Ack	0	0	0																																										
Hello	0	0	0																																										
J/P	0	0	0																																										
Register	0	0	0																																										
Register Stop	0	0	0																																										
State Refresh	0	0	0																																										

Related Commands	
-------------------------	--

Note	
-------------	--

show ip pim bsr

show ip pim bsr

Displays PIM BSR information.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.3.5006
Role	admin
Example	<pre>arc-switch14 [standalone: master] (config) # show ip pim bsr PIMv2 Bootstrap information BSR address: 4.4.4.14 Uptime: 00:00:30, BSR Priority: 0, Hash mask length: 30 Expires: 00:00:57 This system is a candidate BSR Candidate BSR address: 4.4.4.14, priority: 0, hash mask length: 30 interval: 60, holdtime: 130</pre>
Related Commands	
Note	

show ip pim neighbor

show ip pim neighbor [vlan <vlan-id> | <other interfaces> | <ip-addr>]

Displays information about IPv4 PIM neighbors.

Syntax Description	vlan <vlan-id>	Filters the output per specific VLAN ID.
	neighbor-addr	Filters the output per specific neighbor IP address.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.5006	
Role	admin	
Example	<pre>switch (config) # show ip pim neighbor PIM Neighbor Status for VRF "default" Neighbor Interface Uptime Expires Ver DR Prio Mode 5.5.5.1 VLAN5 10:36:45 00:01:43 1 9.9.9.1 VLAN9 10:36:42 00:01:43 1 switch (config) #</pre>	
Related Commands		
Note		

show ip pim rp**show ip pim rp <rp-address>**

Displays information about the rendezvous points (RPs) for PIM.

Syntax Description	rp-address	A rendezvous points address.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.5006	
Role	admin	
Example	<pre>switch(config)# show ip pim rp PIM RP Status Information for VRF "default" BSR: 10.10.10.10, expires: 00:01:16, priority: 255, hash-length: 0 RP: 11.11.11.11, expires: 00:01:36 priority: 0, RP-source: 10.10.10.10, group ranges: 225.10.0.0/24 RP: 8.8.8.2, expires: 00:01:36 priority: 0, RP-source: 10.10.10.10, group ranges: 225.12.0.0/24 switch(config)#</pre>	
Related Commands		
Note		

show ip pim rp-hash

show ip pim rp-hash <group>

Displays the hashed value of the group (RP address according the group address).

Syntax Description	group	Filters the output per a specific IP Multicast group address.
---------------------------	-------	---

Default	N/A
----------------	-----

Configuration Mode	Any Command Mode
---------------------------	------------------

History	3.3.5006
----------------	----------

Role	admin
-------------	-------

Example	<pre>switch (config) # show ip pim rp-hash 225.7.6.2 RP 20.20.20.49, v2 Info Source: 20.20.20.49, via bootstrap, priority 60, holdtime 57 Expires: 00:00:53 PIMv2 Hash Value (mask 255.255.255.252) switch (config)#</pre>
----------------	--

Related Commands	
-------------------------	--

Note	
-------------	--

show ip pim rp-candidate

show ip pim rp-candidate

Displays information about RP candidate status.

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.3.5006
Role	admin
Example	<pre>switch (config)# show ip pim rp-candidate Next Candidate-RP-Advertisement in 00:11:22/00:60:00 RP: 10.10.10.10 group prefixes priority 224.0.0.0/4 190 225.0.0.0/4 191 switch (config)#</pre>
Related Commands	
Note	

show ip pim interface

show ip pim interface {[vlan <vlan id> | ethernet <port>] [df] | brief}

Displays information about the enabled interfaces for PIM.

Syntax Description	vlan <vlan-id>	Filters the output for specific interface.
	ethernet <port>	Ethernet interface.
	df	Displays information about elected designated forwarders.
	brief	Displays a summary of information for all interfaces.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.5006	
Role	admin	

Example

```
# arc-switch55 [standalone: master] (config) # show ip pim interface
vlan 2919
Interface Vlan2919 address is 70.28.23.80
PIM: enabled
PIM version: 2, mode: sparse
PIM DR: 70.28.23.80 (this system)
PIM DR Priority: 1
PIM configured DR priority:
PIM neighbor count: 1
PIM neighbor holdtime: 105 secs
PIM Hello Interval: 30 seconds, next hello sent in: 00:00:28
PIM Hello Generation ID: 61345
PIM Join-Prune Interval: 60 seconds
PIM domain border: no
PIM Interface Statistics:
  General (sent/received):
    Hellos: 36/37, JPs: 0/0, Asserts: 0/0
    Grafts: 0/0, Graft-Acks: 0/0
    DF-Offers: 0/0, DF-Winners: 0/0, DF-Backoffs: 0/0, DF-
Passes: 0/0
  Errors:
    Checksum errors: 0, Invalid packet types/DF subtypes: 0/0
    Authentication failed: 0
    Packets from non-neighbors: 1
    JPs received on RPF-interface: 0
    (*,G) Joins received with no/wrong RP: 0/0
    (*,G)/(S,G) JPs received for SSM/Bidir groups: 0/0
```

Related Commands

Note

show ip pim upstream joins

show ip pim upstream joins

Displays information about any PIM joins/prunes which are currently being sent to upstream PIM routers

Syntax Description	N/A
Default	N/A
Configuration Mode	Any Command Mode
History	3.3.5006
Role	admin
Example	<pre>switch (config) # show ip pim upstream joins Neighbor address: 159.135.45.26 via interface: 159.135.45.34 next message in 43 seconds Group: 224.0.10.0 Joins: 22.74.49.25 Prunes: No prunes included switch (config) #</pre>
Related Commands	
Note	Should contain the following information: neighbor address, interface address, group range, Joins, Prunes.

6.7.5.2 Multicast

ip multicast-routing

ip multicast-routing
no ip multicast-routing

Allows the switch to forward multicast packets.
The no form of the command disables multicast routing.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config
History	3.3.5006
Role	admin
Example	switch (config)# ip multicast-routing
Related Commands	N/A
Note	

ip mroute

ip mroute {<ip-addr> <ip-mask> <next-hop>} [pref]
no ip mroute {<ip-addr> <ip-mask>}

Configure multicast reverse path forwarding (RPF) static routes.
The no form of the command deletes the static multicast route.

Syntax Description	ip-addr	Unicast IP address.
	ip-mask	Network mask in a dotted format (e.g. 255.255.255.0) or /24 format.
	next-hop	Next hop IP address.
	preference	Route preference. Range: 1-255.
Default	Preference is 1	
Configuration Mode	Config	
History	3.3.5006	
Role	admin	
Example	arc-switch14 [standalone: master] (config) # ip mroute 16.16.0.0 /16 3.3.3.1	
Related Commands	N/A	
Note		

ip multicast ttl-threshold

ip multicast ttl-threshold <ttl-value>
no ip multicast ttl-threshold

Configures the time-to-live (TTL) threshold of packets being forwarded out of an interface.
 The no form of the command removes RPF static routes.

Syntax Description	ttl-value	Range: 0-225.
Default	0 – all packets are forwarded	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.5006	
Role	admin	
Example	switch (config interface vlan 10)# ip multicast ttl-threshold 10	
Related Commands	N/A	
Note		

show ip mroute

show ip mroute [**summary** | <group> [<prefix> [<source>]]]

Displays information about IPv4 multicast routes.

Syntax Description	source	Source IP address.
	group	IP address of multicast group.
	prefix	Network prefix of multicast group (in the format of /24, or 255.255.255.0 for example).
	summary	Displays a summary of the multicast routes.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.2.1000	
	3.5.1000	Added new F flag and updated Example
Role	admin	
Example	<pre>switch (config) # show ip mroute IP Multicast Routing Table Flags: B - Bidir Group, L - Local, P - Pruned, R - RP-bit set, T - SPT-bit set J - Join SPT, F - Failed to install in H/W Timers: Uptime/Expires Interface state: Interface, State/Mode (*, 234.10.0.0/16), 00D 01:06:04, RP 10.10.10.10, flags: BR Bidir-Upstream: Eth1/10 Outgoing interface list: Eth1/10, Forwarding/Sparse, 00D 01:06:04/00D 00:00:00 F(*, 234.8.0.0/16), 00D 01:06:03, RP 10.10.10.10, flags: BR Bidir-Upstream: Eth1/10 Outgoing interface list: Eth1/10, Forwarding/Sparse, 00D 01:06:04/00D 00:00:00</pre>	
Related Commands	N/A	
Note		

6.7.5.3 IGMP

ip igmp immediate-leave

ip igmp immediate-leave
no ip igmp immediate-leave

Enables the device to remove the group entry from the multicast routing table immediately upon receiving a leave message for the group.
 The no form of the command disables immediate-leave.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface
History	3.3.5006
Role	admin
Example	switch (config interface vlan 10)# ip igmp immediate-leave
Related Commands	N/A
Note	

ip igmp last-member-query-count

ip igmp last-member-query-count <count>
no ip igmp last-member-query-count

Configures the number of query messages the switch sends in response to a group-specific or group-source-specific leave message.
The no form of the command resets this parameter to its default.

Syntax Description	Count	Range:1-7.
Default	2	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.5006	
Role	admin	
Example	switch (config interface vlan 10)# ip igmp last-member-query-count 7	
Related Commands	N/A	
Note	This parameter reflects expected packet loss on a congested network.	

ip igmp last-member-query-response-time

ip igmp last-member-query-response-time <interval>
no ip igmp last-member-query-response-time

Configures the IGMP last member query response time in seconds.
 The no ip igmp last-member-query-response-time command resets this parameter to its default.

Syntax Description	interval	IGMP last member query response time. Range:1-25 seconds.
Default	1	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.5006	
Role	admin	
Example	switch (config interface vlan 10)# ip igmp last-member-query-response-time 10	
Related Commands	N/A	
Note		

ip igmp startup-query-count

ip igmp startup-query-count <count>
no ip startup-query-count

Configures the number of query messages an interface sends during startup.
The no ip startup-query-count command resets this parameter to its default.

Syntax Description	count	Range: 1-65535.
Default	2	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.5006	
Role	admin	
Example	switch (config interface vlan 10)# ip igmp startup-query-count 10	
Related Commands	N/A	
Note		

ip igmp startup-query-interval

ip igmp startup-query-interval <interval>
no ip startup-query-interval

Configures the IGMP startup query interval in seconds.
 The no form of the command resets this parameter to its default.

Syntax Description	interval	Range: 1-1800 seconds.
Default	30	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.5006	
Role	admin	
Example	switch (config interface vlan 10)# ip igmp startup-query-interval 10	
Related Commands	N/A	
Note		

ip igmp query-interval

ip igmp query-interval <interval>
no ip igmp query-interval

Configures the IGMP query interval in seconds.
The no form of the command resets this parameter to its default.

Syntax Description	interval	The IGMP query interval. Range: 1-1800 seconds.
Default	125	
Configuration Mode	Config Interface VLAN	
History	3.3.5006	
Role	admin	
Example	switch (config interface vlan 10)# ip igmp query-interval 60	
Related Commands	N/A	
Note		

ip igmp query-max-response-time

ip igmp query-max-response-time <time>
no ip igmp query-max-response-time

Configures the IGMP max response time in seconds.
 The no form of the command resets this parameter to its default.

Syntax Description	time	The IGMP max response time. Range: 1-25 seconds.
Default	10	
Configuration Mode	Config Interface VLAN	
History	3.3.5006	
Role	admin	
Example	switch (config interface vlan 10)# ip igmp query-max-response-time 20	
Related Commands	N/A	
Note		

ip igmp robustness-variable

ip igmp robustness-variable <count>
no ip igmp robustness-variable

Configures the IGMP robustness variable.
The no form of the command resets this parameter to its default.

Syntax Description	count	IGMP robustness variable. Range: 1-7.
Default	2	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.5006	
Role	admin	
Example	switch (config interface vlan 10)# ip igmp robustness-variable 4	
Related Commands	N/A	
Note	<ul style="list-style-type: none">• The robustness variable can be increased to increase the number of times that packets are resent.• This parameter reflects expected packet loss on a congested network.	

ip igmp static-oif

ip igmp static-oif <group>
no ip igmp static-oif

Statically binds an IP interface to a multicast group.
 The no form of the command deletes the static multicast address from the interface.

Syntax Description	group	Multicast IP address.
Default	no ip igmp static-oif	
Configuration Mode	Config Interface VLAN Config Interface Ethernet configured as a router port interface Config Interface Port Channel configured as a router port interface	
History	3.3.5006	
Role	admin	
Example	switch (config interface vlan 10)# ip igmp static-oif 10.10.10.5	
Related Commands	N/A	
Note	PIM must be enabled in order to configure the route in the hardware.	

clear ip igmp groups

```
clear ip igmp groups {all | <group-address> <mask>}
```

Clears IGMP group information.

Syntax Description	all	Clears all IGMP groups.
	group-address	Clears a specific group.
Default	no ip igmp static-oif	
Configuration Mode	Config	
History	3.3.5200	
Role	admin	
Example	switch (config)# clear ip igmp groups all switch (config)#	
Related Commands	N/A	
Note		

debug ethernet ip igmp-l3

debug ethernet ip igmp-l3 {all | control-plane | data-path | fail-all | init-shut | management | memory | packet-dump | resources}
no debug ethernet ip igmp-l3 {all | control-plane | data-path | fail-all | init-shut | management | memory | packet-dump | resources}

Configures the trace level for IGMP.
 The no form of the command removes the trace level for IGMP.

Syntax Description	all	Enable track traces.
	control-plane	Control plane traces.
	data-path	IP packet dump trace.
	fail-all	All failures including Packet Validation Trace.
	init-shut	Init and shutdown messages.
	management	Management messages.
	memory	Memory related messages.
	packet-dump	Packet dump messages.
	resources	OS Resource trace.
Default	N/A	
Configuration Mode	Config	
History	3.3.5200	
Role	admin	
Example	switch (config)# debug ethernet ip igmp-l3 all	
Related Commands		
Note		

show ip igmp groups

show ip igmp groups [<group>] [vlan <vlan-id>]

Displays information about IGMP-attached group membership.

Syntax Description	group	Filters the output to a specific IP multicast group address.
	vlan <vlan-id>	Filters the output to a specific VLAN ID.
Default	N/A	
Configuration Mode	Any Command Mode	
History		
Role	admin	
Example	<pre>switch (config)# show ip igmp groups IGMP Connected Group Membership for VRF "default" Type: S - Static, D - Dynamic, L - Local, T - SSM Translated Group Address Type Interface Uptime Expires Last Reporter 225.7.6.0 S vlan19 [0d 00:12:12.14] [0d 00:00:00.00] 0.0.0.0 225.7.10.1 D vlan19 [0d 00:00:01.18] [0d 00:04:08.81] 19.19.19.1 225.7.7.7 S vlan19 [0d 00:12:12.15] [0d 00:00:00.00] 0.0.0.0 225.7.7.7 S vlan21 [0d 00:12:12.15] [0d 00:00:00.00] 0.0.0.0</pre>	
Related Commands	N/A	
Note		

show ip igmp interface

show ip igmp interface [vlan <vlan-id> | brief]

Displays IGMP brief configuration and status.

Syntax Description	brief	Displays brief output information.
	vlan <vlan-id>	Filters the output to a specific VLAN ID.
Default	N/A	
Configuration Mode	Any Command Mode	
History		
Role	admin	

Example

```
switch(config)#show ip igmp interface
IGMP Interfaces for VRF "default"

VLAN5
Interface status: protocol-down/admin-up/link-down
IP address: 5.5.5.49, IP Subnet: 5.5.5.0/24
Active Querier: 5.5.5.48
Membership count: 0
Route-queue depth: 0
IGMP Version: 2
IGMP query interval: 125 secs, configured value: 125 secs
IGMP max response time: 100 secs, configured value: 100 secs
IGMP startup query interval: 125 secs, configured value: 125 secs
IGMP startup query count: 2
IGMP group timeout: 350 secs, configured value: 350 secs
IGMP querier timeout: 350 secs configured value: 350 secs
IGMP last member mrt: 10 secs configured value: 10
IGMP robustness variable: 2
IGMP interface immediate leave: Disabled
IGMP interface statistics:
General (sent/received):
v1/v2-reports: 0/0
v2-queries: 3/1,v2-leaves: 0/0
v3-queries: 0/0,
v3-reports: 0/0

VLAN19
Interface status: protocol-up/admin-up/link-up
IP address: 19.19.19.49, IP Subnet: 19.19.19.0/24
Active Querier: 19.19.19.49
Membership count: 3
Route-queue depth: 0
IGMP Version: 2
IGMP query interval: 125 secs, configured value: 125 secs
IGMP max response time: 10 secs, configured value: 10 secs
IGMP startup query interval: 125 secs, configured value: 125 secs
IGMP startup query count: 2
IGMP group timeout: 260 secs, configured value: 260 secs
IGMP querier timeout: 260 secs configured value: 260 secs
IGMP last member mrt: 1 secs configured value: 1
IGMP robustness variable: 2
IGMP interface immediate leave: Disabled
IGMP interface statistics:
General (sent/received):
v1/v2-reports: 0/5
v2-queries: 14/0,v2-leaves: 0/1
v3-queries: 0/0,
v3-reports: 0/0
```

Related Commands N/A

Note

6.8 VRRP

The Virtual Router Redundancy Protocol (VRRP) is a computer networking protocol that provides for automatic assignment of available IP routers to participating hosts. This increases the availability and reliability of routing paths via automatic default gateway selections on an IP sub-network.

The protocol achieves this by creating virtual routers, which are an abstract representation of multiple routers (that is, a master and backup routers, acting as a group). The default gateway of a participating host is assigned to the virtual router instead of a physical router. If the physical router that is routing packets on behalf of the virtual router fails, another physical router is selected to automatically replace it. The physical router that is forwarding packets at any given time is called the master router.


VRRP provides information on the state of a router, not the routes processed and exchanged by that router. Each VRRP instance is limited, in scope, to a single subnet. It does not advertise IP routes beyond that subnet or affect the routing table in any way.

Routers have a priority of between 1-255 and the router with the highest priority becomes the master. The configurable priority value ranges from 1-254, the router which owns the interface IP address as one of its associated IP addresses has the priority value 255. When a planned withdrawal of a master router is to take place, its priority can be lowered, which means a backup router will preempt the master router status rather than having to wait for the hold time to expire.

6.8.1 Load Balancing

To create load balancing between routers participating in the same VR, it is recommended to create 2 (or more) VRs. Each router will be a master in one of the VRs, and a backup to the other VR(s). A group of hosts should be configured with Router 1's virtual address as the default gateway, while the second group should be configured with Router 2's virtual address.

Figure 37: Common VRRP Configuration with Load Balancing

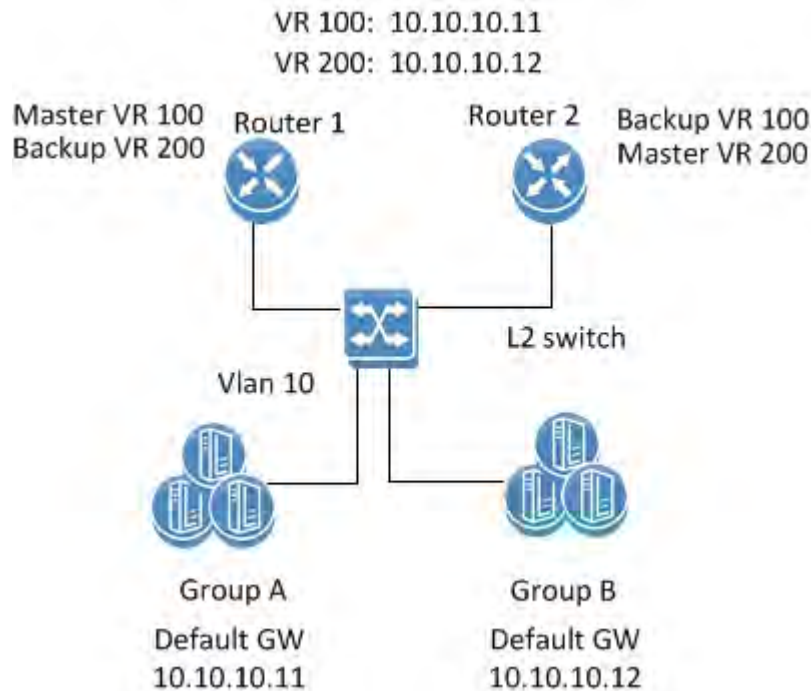

6.8.2 Configuring VRRP

➤ *To configure VRRP:*

Precondition steps:

Step 1. Enable IP routing functionality. Run:

```
switch (config)# ip routing
```

Step 2. Enable the desired VLAN. Run:

```
switch (config)# vlan 20
```



The VLAN cannot be the same one configured for the MLAG IPL, if MLAG is used.

Step 3. Add this VLAN to the desired interface. Run:

```
switch (config)# interface ethernet 1/1
switch (config ethernet 1/1)# switchport access vlan 20
```

Step 4. Create a VLAN interface. Run:

```
switch (config)# interface vlan 20
```

Step 5. Apply IP address to the VLAN interface.

On one of the switches, run:

```
switch (config interface vlan 20)# ip address 20.20.20.20 /24
```


On the other switch, run:

```
switch (config interface vlan 20)# ip address 20.20.20.30 /24
```

Step 6. Enable the interface. Run:

```
switch (config interface vlan 20)# no shutdown
```

Configure VRRP:

This is the same configuration on both switches

Step 1. Enable VRRP protocol globally. Run:

```
switch (config)# protocol vrrp
```

Step 2. Create a virtual router group for an IP interface. Up to 255 VRRP IDs are supported. Run:

```
switch (config interface vlan 20)# vrrp 100
```

Step 3. Set the VIP address. Run:

```
switch (config interface vlan 20 vrrp 100)# address 20.20.20.40
```

Step 4. Influence the election of the master in the VR cluster make sure that the priority of the desired master is the highest. Note that the higher IP address is selected in case the priority of the routers in the VR are the same. Select the priority. Run:

```
switch (config interface vlan 20 vrrp 100)# priority 200
```

Step 5. The advertisement interval should be the same for all the routers within the VR. Modify the interval. Run:

```
switch (config interface vlan 20 vrrp 100)# advertisement-interval 2
```

Step 6. The authentication text should be the same for all the routers within the VR. Configure the authentication text. Run:

```
switch (config interface vlan 20 vrrp 100)# authentication text my-password
```

Step 7. Use the preempt command to enable a high-priority backup virtual router to preempt the low-priority master virtual router. Run:

```
switch (config interface vlan 20 vrrp 100)# preempt
```

Step 8. Disable VRRP. Run:

```
switch (config interface vlan 20 vrrp 100)# shutdown
```



The configuration will not be deleted, only the VRRP state machine will be stopped.

6.8.3 Verifying VRRP

Step 1. Display VRRP brief status. Run:

```
switch(config)# show vrrp
Interface  VR  Pri  Time  Pre  State VR  IP addr
-----
Vlan20    1   200  2s    Y    Init  20.20.20.20
...
switch(config)#
```

Step 2. Display VRRP detailed status. Run:

```
switch (config)# show vrrp detail

VRRP Admin State : Enabled

Vlan20 - Group 1 (IPV4)

Instance Admin State : Enabled
State : Backup
Virtual IP Address : 20.20.20.40
Priority : 200
Advertisement interval (sec) : 2
Preemption : Enabled
Virtual MAC address : AA:BB:CC:DD:EE:FF
switch (config)#
```

Step 3. Display VRRP statistic counters. Run:

```
switch (config)# show vrrp statistics
Ethernet1/5 - Group 1 (IPV4)
Invalid packets:          0
Too short:                0
Transitions to Master    6
Total received:          155
Bad TTL:                  0
Failed authentication:   0
Unknown authentication:  0
Conflicting authentication: 0
Conflicting Advertise time: 0
Conflicting Addresses:   0
Received with zero priority: 3
Sent with zero priority: 3
switch (config)#
```

6.8.4 Commands

protocol vrrp

protocol vrrp
no protocol vrrp

Enables VRRP globally and unhides VRRP related commands.
 The no form of the command deletes all the VRRP configuration and hides VRRP related commands.

Syntax Description	N/A
Default	no feature vrrp
Configuration Mode	Config
History	3.3.4500
Role	admin
Example	switch (config)# protocol vrrp
Related Commands	
Note	

vrrp

vrrp <number>
no vrrp <number>

Creates a virtual router group on this interface and enters a new configuration mode.

The no form of the command deletes the VRRP instance and the related configuration.

Syntax Description	number	A VRRP instance number. Range is 1-255.
Default	N/A	
Configuration Mode	Config Interface VLAN	
History	3.3.4500	
Role	admin	
Example	switch (config interface vlan 10)# switch (config interface vlan 10 vrrp 10)#	
Related Commands		
Note	A maximum total of 255 VRRP instances are supported per switch system.	

address

address <ip-address> [secondary]
no address [<ip-address> [secondary]]

Sets virtual router IP address (primary and secondary).
 The no form of the command deletes the IP address from the VRRP interface.

Syntax Description	ip-address	The virtual IP address.
	secondary	A secondary IP address for the virtual router.
Default	N/A	
Configuration Mode	Config VRRP Interface	
History	3.3.4500	
Role	admin	
Example	<pre>switch (config vrrp 100)# address 10.10.10.10 switch (config vrrp 100)# address 10.10.10.11 secondary switch (config vrrp 100)# address 10.10.10.12 secondary</pre>	

Related Commands

Note

- This command is the enabler of the protocol. Therefore, set all the protocol parameters initially and only then set the ip-address.
- There are up to 10 IP addresses associated with the VRRP instance. One primary and up to 10 secondary ip-addresses.
- If the configured IP address is the same as the interface IP address, this switch automatically owns the IP address (priority 255).

shutdown

shutdown
no shutdown

Disables the virtual router.
The no form of the command enables the virtual router (stops the VRRP state machine).

Syntax Description	N/A
Default	Enabled (no shutdown)
Configuration Mode	Config VRRP Interface
History	3.3.4500
Role	admin
Example	switch (config vrrp 100)# shutdown
Related Commands	
Note	

priority

priority <level>
no priority

Sets the priority of the virtual router.
 The no form of the command resets the priority to its default.

Syntax Description	level	The virtual router priority level. Range is 1-254.
Default	100	
Configuration Mode	Config VRRP Interface	
History	3.3.4500	
Role	admin	
Example	switch (config vrrp 100)# priority 200	
Related Commands		
Note	<ul style="list-style-type: none"> • The higher IP address will be selected as master, in case the priority of the routers in the VR are the same. • To influence the election of the master in the VR cluster make sure that the priority of the desired master is the higher. 	

preempt

preempt
no preempt

Sets virtual router preemption mode.
The no form of the command disables the virtual router preemption.

Syntax Description	N/A
Default	Enabled (preempt)
Configuration Mode	Config VRRP Interface
History	3.3.4500
Role	admin
Example	switch (config vrrp 100)# preempt
Related Commands	
Note	To set this router as backup for the current virtual router master, preempt must be enabled.

authentication text

authentication text <password>
no authentication text

Sets virtual router authentication password and enables authentication.
 The no form of the command disables the authentication mechanism.

Syntax Description	password	The virtual router authentication password. The password string must be up to 8 alphanumeric characters.
Default	Disabled	
Configuration Mode	Config VRRP Interface	
History	3.3.4500	
Role	admin	
Example	switch (config vrrp 100)# authentication text mypassword	
Related Commands		
Note		

advertisement-interval

advertisement-interval <seconds>
no advertisement-interval

Sets the virtual router advertisement-interval.
The no form of the command resets the parameter to its default.

Syntax Description	seconds	The virtual router advertisement-interval in seconds. Range: 1-255.
Default	1	
Configuration Mode	Config VRRP Interface	
History	3.3.4500	
Role	admin	
Example	switch (config vrrp 100)# advertisement-interval 10	
Related Commands		
Note		

show vrrp

show vrrp [interface <type> <number>] [vr <id>]

Displays VRRP brief configuration and status.

Syntax Description	interface <type> <number> vr <id>	Filters the output to a specific interface type and number. Filters the output to a specific virtual router. Range: 1-10.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.4500	
Role	admin	
Example	<pre>switch(config)# show vrrp Interface VR Pri Time Pre State VR IP addr ----- Eth1/5 1 200 2s Y Init 192.0.1.10 ... switch(config)#</pre>	
Related Commands		
Note		

show vrrp detail

show vrrp detail [interface <type> <number>] [vr <id>]

Displays detailed VRRP configuration and status.

Syntax Description	interface <type> <number> vr <id>	Filters the output to a specific interface type and number. Filters the output to a specific virtual router. Range: 1-255.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.4500	
Role	admin	
Example	<pre>switch (config)# show vrrp detail VRRP Admin State : Enabled Vlan20 - Group 1 (IPV4) Instance Admin State : Enabled State : Backup Virtual IP Address : 20.20.20.40 Priority : 200 Advertisement interval (sec) : 2 Preemption : Enabled Virtual MAC address : AA:BB:CC:DD:EE:FF switch (config)#</pre>	
Related Commands		
Note		

show vrrp statistics

show vrrp statistics [interface <type <number>] [vr <id>]

Displays VRRP counters.

Syntax Description	interface <type> <number>	Filters the output to a specific interface type and number.
	vr <id>	Filters the output to a specific virtual router. Range: 1-255.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.4500	
Role	admin	
Example	<pre>switch (config)# show vrrp statistics Ethernet1/5 - Group 1 (IPV4) Invalid packets: 0 Too short: 0 Transitions to Master 6 Total received: 155 Bad TTL: 0 Failed authentication: 0 Unknown authentication: 0 Conflicting authentication: 0 Conflicting Advertise time: 0 Conflicting Addresses: 0 Received with zero priority: 3 Sent with zero priority: 3 switch (config)#</pre>	
Related Commands		
Note		

6.9 MAGP

Multi-active gateway protocol (MAGP) is aimed to solve the default gateway problem when a host is connected to a set of switch routers (SRs) via MLAG.

The network functionality in that case requires that each SR is an active default gateway router to the host, thus reducing hops between the SRs and directly forwarding IP traffic to the L3 cloud regardless which SR traffic comes through.



Designated traffic, such as ping to the MAGP interface is not supported. One of the two switches will be able to ping, so a ping from one switch can be done.

6.9.1 Configuring MAGP

Prerequisite steps:

Step 1. Enable IP routing functionality. Run:

```
switch (config)# ip routing
```

Step 2. Enable the desired VLAN. Run:

```
switch (config)# vlan 20
switch (config vlan 20)#
```



The VLAN cannot be the same one configured for the MLAG IPL, if MLAG is used.

Step 3. Add this VLAN to the desired interface. Run:

```
switch (config)# interface ethernet 1/1
switch (config interface ethernet 1/1)# switchport access vlan 20
```

Step 4. Create a VLAN interface. Run:

```
switch (config)# interface vlan 20
switch (config interface vlan 20)#
```

Step 5. Set an IP address to the VLAN interface. Run:

```
switch (config interface vlan 20)# ip address 11.11.11.11 /8
```

Step 6. Enable the interface. Run:

```
switch (config interface vlan 20)# no shutdown
```

➤ **To configure MAGP:**

Step 1. Enable MAGP protocol globally. Run:

```
switch (config)# protocol magp
```

Step 2. Create a virtual router group for an IP interface. Run:

```
switch (config interface vlan 20)# magp 100
```



Up to 255 MAGP IDs are supported.

Step 3. Set a virtual router primary IP address. Run:

```
switch (config interface vlan 20 magp 100)# ip virtual-router address 11.11.11.254
```



The IP address must be in the same subnet of the VLAN interface. This IP address is the default gateway for this MAGP instance. This should become the default gateway configured on the hosts connected to the relevant MLAG.

Step 4. Set a virtual router primary MAC address. Run:

```
switch (config interface vlan 20 magp 100)# ip virtual-router mac-address
AA:BB:CC:DD:EE:FF
```



To obtain the virtual router's MAC address, please run the command "show vrrp detail".

➤ **To verify the MAGP configuration, run:**

```
switch (config)# show magp 100
MAGP 100
  Interface vlan:20
  MAGP state: Master
  MAGP virtual IP: 11.11.11.254
  MAGP virtual MAC: AA:BB:CC:DD:EE:FF
switch (config)#
```



This output is to be expected in both MAGP switches.



For more advanced configuration options, please refer to the following Mellanox Community post: <https://community.mellanox.com/docs/DOC-1476>.

6.9.2 Commands

protocol magp

protocol magp
no protocol magp

Enables MAGP globally and unhides MAGP commands.
The no form of the command deletes all the MAGP configuration and hides MAGP commands.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config
History	3.3.4500
Role	admin
Example	<pre>switch (config)# protocol magp switch (config)#</pre>
Related Commands	
Note	IP routing must be enabled to enable MAGP.

magp

magp <instance>
no magp <instance>

Creates an MAGP instance on this interface and enters a new configuration mode.

The no form of the command deletes the MAGP instance.

Syntax Description	instance	MAGP instance number. Range: 1-255.
Default	Disabled	
Configuration Mode	Config Interface VLAN	
History	3.3.4500	
Role	admin	
Example	<pre>switch (config interface vlan 20)# magp 100 switch (config interface vlan 20 magp 100)#</pre>	
Related Commands		
Note	<ul style="list-style-type: none"> • Only one MAGP instance can be created on an interface • Different interfaces cannot share an MAGP instance • MAGP and VRRP are mutually exclusive 	

shutdown

shutdown
no shutdown

Enables MAGP instance.
The no form of the command disables the MAGP instance.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config Interface VLAN MAGP
History	3.3.4500
Role	admin
Example	switch (config interface vlan 10 magp 1)# shutdown
Related Commands	
Note	

ip virtual-router address

ip virtual-router address <ip-address>
no ip virtual-router address

Sets MAGP virtual IP address.
 The no form of the command resets this parameter to its default.

Syntax Description	ip-address	The virtual router IP address.
Default	N/A	
Configuration Mode	Config Interface VLAN MAGP	
History	3.3.4500	
Role	admin	
Example	<pre>switch (config interface vlan 10 magp 1)# ip virtual-router address 10.10.10.10 switch (config interface vlan 10 magp 1)#</pre>	
Related Commands		
Note	The MAGP virtual IP address must be different from the interface IP address	

ip virtual-router mac-address

ip virtual-router mac-address <mac-address>
no ip virtual-router mac-address

Sets MAGP virtual MAC address.
The no form of the command resets the MAC address to its default.

Syntax Description	mac-address	MAC address. Format: AA:BB:CC:DD:EE:FF.
Default	00:00:5E:00:01-<magp instance>	
Configuration Mode	Config Interface VLAN MAGP	
History	3.3.4500	
Role	admin	
Example	switch (config interface vlan 10 magp 1)# ip virtual-router mac-address AA:BB:CC:DD:EE:FF switch (config interface vlan 10 magp 1)#	
Related Commands		
Note		

show magp

show magp [<instance> | interface vlan <id>]

Displays the configuration of a specific MAGP instance.

Syntax Description	instance	MAGP instance number. Range: 1-255.
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.4500	
Role	admin	
Example	<pre>switch (config)# show magp 3 Magp instance id: 3 Interface : vlan 10 Magp state: Active Magp virtual ip :192.168.1.1 Magp virtual MAC : 00:11:22:22:44:55 switch (config)#</pre>	
Related Commands		
Note		

6.10 DHCP Relay



DHCP Relay (DHCP-R) is not supported on SX10xx-xxxR and SX60xx-xxxR systems.

Since Dynamic Host Configuration Protocol must work correctly even before DHCP clients have been configured, the DHCP server and DHCP client need to be connected to the same network.

In larger networks, this is not always practical because each network link contains one or more DHCP relay agents. These DHCP-R agents receive messages from DHCP clients and forward them to DHCP servers thus extending the reach of the DHCP beyond the local network.

6.10.1 DHCP-R Virtual Routing and Forwarding (VRF) Auto-Helper

In some cases it is desired that DHCP-R functionality is automatically enabled to all IP interfaces in the system. For this purpose a vrf-auto-helper may be configured on a DHCP-R instance which would provide DHCP-R services automatically for each newly created interface on a VRF.

Only one instance in each VRF can have vrf-auto-helper capability. Whenever a new instance is created in a VRF, it automatically becomes a vrf-auto-helper.

It is possible to manually disable auto-helper capability for the instance. See command “[vrf-auto-helper](#)” on page 1325 for more information.

6.10.2 Commands

ip dhcp relay

ip dhcp relay [instance <instance-id>]
no ip dhcp relay [instance <instance-id>]

Enters DHCP relay instance configuration mode, and creates DHCP instance in active VRF context.

The no form of the command deletes the instance and DHCP relay process corresponding to it.

Syntax Description	instance-id	Range: 1-8
Default	N/A	
Configuration Mode	Config	
History	3.6.3004	
Role	admin	
Example	switch (config)# ip dhcp relay instance 1 switch (config ip dhcp relay instance 1)#	
Related Commands	N/A	
Note	If an instance is not specified then instance 1 is used (if nonexistent, then it is created).	

address

address <ip-address>
no address <ip-address>

Configures the DHCP server IP address on a particular instance.
The no form of the command deletes the DHCP server IP address.

Syntax Description	ip-address	Valid IP unicast address of DHCP server.
Default	N/A	
Configuration Mode	Config IP DHCP Relay	
History	3.3.4150	
	3.6.1002	Added VRF parameter
	3.6.3004	Enhanced command for DHCP-R multi-instance
Role	admin	
Example	switch (config ip dhcp relay instance 1)# address 1.2.3.4	
Related Commands	ip dhcp relay	
Note	<ul style="list-style-type: none">• Up to 16 IP addresses may be configured• To enable DHCP relay instance, at least one IP address should be configured, or always-on parameter should be turned on using the command “ip dhcp relay always-on”• The following option for running this command is also possible: ip dhcp relay instance 1 address <ip-address>. However, if an instance is not specified then instance 1 is used (if nonexistent, then it is created).	

always-on

always-on
no always-on

Enables broadcast mode on a particular instance.
 The no form of the command disables the broadcast mode from instance.

Syntax Description	vrf	VRF name
Default	Disabled	
Configuration Mode	Config IP DHCP Relay	
History	3.3.4150	
	3.6.1002	Added VRF parameter
	3.6.3004	Enhanced command for DHCP-R multi-instance
Role	admin	
Example	switch (config ip dhcp relay instance 1)# always-on	
Related Commands	ip dhcp relay	
Note	<ul style="list-style-type: none"> • Broadcasts DHCP requests to all interfaces with the DHCP relay agent for given VRF • In order to enable DHCP relay, at least one IP address should be configured, or always-on parameter should be turned on using this command • When DHCP servers are configured, requests are forwarded only to configured servers • The following option for running this command is also possible: ip dhcp relay instance 1 always-on. However, if an instance is not specified then instance 1 is used (if nonexistent, then it is created). 	

information option

information option
no information option

Enables DHCP relay agents to insert option 82 on the packets of a particular instance.
The no form of the command removes option 82 from the packets.

Syntax Description	N/A
Default	Disabled
Configuration Mode	Config IP DHCP Relay
History	3.3.4150 3.6.3004 Enhanced command for DHCP-R multi-instance
Role	admin
Example	switch (config ip dhcp relay instance 1)# information option
Related Commands	ip dhcp relay
Note	The following option for running this command is also possible: ip dhcp relay instance 1 information option. However, if an instance is not specified then instance 1 is used (if nonexistent, then it is created).

vrf

vrf <vrf-name>
no vrf <vrf-name>

Configures mention instance in the given VRF.
 The no form of the command moves the instance back to default VRF.

Syntax Description	N/A
Default	N/A
Configuration Mode	Config IP DHCP Relay
History	3.6.3004
Role	admin
Example	switch (config ip dhcp relay instance 1)# vrf 2
Related Commands	N/A
Note	<ul style="list-style-type: none"> • If no VRF is specified, then the DHCP-R instance is created in the active VRF • If the VRF is changed, then the configuration of the DHCP-R instance is automatically deleted • The following option for running this command is also possible: ip dhcp relay instance 1 vrf <vrf-name>. However, if an instance is not specified then instance 1 is used (if nonexistent, then it is created).

port

port <udp-port>
no port <udp-port>

Changes the UDP port for the given instance.
The no form of the command sets the UDP port to default value.

Syntax Description	udp-port	UDP port Range: 1-65534
Default	67	
Configuration Mode	Config IP DHCP Relay	
History	3.6.3004	
Role	admin	
Example	switch (config ip dhcp relay instance 1)# port 65534	
Related Commands	N/A	
Note	<ul style="list-style-type: none">• The system allocated 2 ports: One is the server port (udp-port), and another is client port (udp-port+1)• The following option for running this command is also possible: ip dhcp relay instance 1 port <udp-port>. However, if an instance is not specified then instance 1 is used (if nonexistent, then it is created).	

vrf-auto-helper

vrf-auto-helper
no vrf-auto-helper

Makes all L3 interfaces (existing/newly created) to be part of the given instance.

The no form of the command resets this parameter to its default

Syntax Description	N/A
Default	N/A
Configuration Mode	Config IP DHCP Relay
History	3.6.3004
Role	admin
Example	switch (config ip dhcp relay instance 1)# vrf-auto-helper
Related Commands	N/A
Note	<ul style="list-style-type: none"> • Every new DHCP-R instance created in a VRF automatically becomes the VRF auto-helper if no other DHCP-R instance has been configured VRF auto-helper previously in that VRF • The following option for running this command is also possible: ip dhcp relay instance 1 vrf-auto-helper. However, if an instance is not specified then instance 1 is used (if nonexistent, then it is created).

ip dhcp relay instance

ip dhcp relay [instance <instance-id>]
no ip dhcp relay [instance <instance-id>]

Enables the given interface to listen for DHCP packets coming from specified instance (i.e. binds interface to that instance).
The no form of the command removes the interface mapping from that instance.

Syntax Description	instance-id	DHCP instance ID Range: 1-8
Default	N/A	
Configuration Mode	Config Interface VLAN Config Interface Port Channel Config Interface Ethernet set as router port interface	
History	3.6.3004	
Role	admin	
Example	switch (config interface vlan 10)# ip dhcp relay instance 7	
Related Commands	N/A	
Note	<ul style="list-style-type: none">• In order to enable DHCP relay, at least one IP address should be configured, or always-on parameter should be turned on using the command “ip dhcp relay always-on”• When DHCP servers are configured, requests are forwarded only to configured servers• Only an existent DHCP-R may be specified	

clear ip dhcp relay counters

clear ip dhcp relay counters [**vrf** <vrf-name> | **instance** <instance-id>]

Clears all DHCP relay counters (all interfaces) in a given VRF or instance.

Syntax Description	vrf-name	VRF name
	instance-id	DHCP instance ID Range: 1-8
Default	N/A	
Configuration Mode	Config	
History	3.3.4150	
	3.6.1002	Added VRF parameter
	3.6.3004	Enhanced command for DHCP-R multi-instance
Role	admin	
Example	switch (config)# clear ip dhcp relay counters	
Related Commands	N/A	
Note	<ul style="list-style-type: none"> • If no DHCP-R instance is specified, then the counters of all DHCP-R instances are cleared • If a VRF is specified, then the counters of all instances on that VRF are cleared • The command “clear counters all” may also be used to clear all DHCP-R counters 	

6.10.2.1 Interface Commands

ip dhcp relay information option circuit-id

ip dhcp relay information option circuit-id <label>
no ip dhcp relay information option circuit-id

Specifies the content of the circuit ID sub-option attached to the client DHCP packet when it is forwarded a DHCP server.
The no form of the command removes the label assigned.

Syntax Description	label	Specifies the label attached to packets. The string may be up to 15 characters.
Default	The label is taken from the IP interface name (e.g. "vlan1")	
Configuration Mode	Config Interface VLAN Config Interface Ethernet set as router port interface Config Interface Port Channel set as router port interface	
History	3.3.4150	
	3.6.1002	Added VRF parameter
Role	admin	
Example	switch (config interface vlan 10)# ip dhcp relay information options circuit-id my-label	
Related Commands	N/A	
Note	The circuit ID sub-option is an IP interface attribute which is shared across all DHCP-R instances.	

6.10.2.2 Show Commands

show ip dhcp relay**show ip dhcp relay [instance <instance-id>]**

Displays general DHCP configuration.

Syntax Description	instance-id	If instance ID is specified, then a particular instance configuration is displayed
Default	N/A	
Configuration Mode	Any Command Mode	
History	3.3.4150	
	3.6.1002	Added VRF and all parameters
	3.6.3004	Updated output and parameters
Role	admin	
Example	<pre>switch (config)# show ip dhcp relay instance 7 Instance ID: 7 VRF Name : default DHCP Servers: 1.1.2.1 DHCP relay agent options: always-on : Disabled Information Option : Disabled UDP port : 90 Auto-helper : Enabled Interface Label ----- vlan40 N/A vlan50 my-instance</pre>	
Related Commands	N/A	
Note	If no DHCP-R instance is given, then all DHCP-R instances are displayed	

show ip dhcp relay counters

show ip dhcp relay counters [vrf <vrf-name> | all]

Displays the DHCP relay counters in a given VRF.

Syntax Description	vrf	VRF name			
	all	All VRF instances			
Default	N/A				
Configuration Mode	Any Command Mode				
History	3.3.4150				
	3.6.1002	Added VRF and all parameters			
Role	admin				
Example	switch (config) # VRF Name: user				
	Interface	Received	Forwarded	Dropped	
	-----	-----	-----	-----	
	All Req	2	2	0	
	All Resp	2	2	0	
	Interface	Received	Forwarded	Dropped	Last Cleared
	-----	-----	-----	-----	-----
	Vlan10	2	2		0
	Vlan20	2	2		0
	VRF Name: default				
	Interface	Received	Forwarded	Dropped	
	-----	-----	-----	-----	
	All Req	3	2	1	
	All Resp	3	3	0	
	Interface	Received	Forwarded	Dropped	Last Cleared
	-----	-----	-----	-----	-----
	Vlan30	3	2		1
	Vlan40	3	3		0
Related Commands	N/A				
Note					

6.10.3 DHCPv6 Relay

This section is currently under development.

6.10.3.1 Config Commands

ipv6 dhcp relay instance

[no] ipv6 dhcp relay instance <instance-id> [vrf-auto-helper]

Enables DHCP relay instance configuration mode, and creates DHCP instance in active vrf context.

Instance without assigned addresses will send to All_DHCP_servers address. The “no” form of the command deletes the DHCP relay instance.

Syntax Description	instance-id	DHCP instance ID. Range: 1-8.
		Instance becomes vrf auto helper.
Default	instance-id	No
	vrf-auto-helper	No
Configuration Mode	Config Router BGP	
History	3.6.4070	Initial release
Role	admin	
Example	switch (config router bgp)# ipv6 dhcp relay instance 1 switch (config router bgp)#	
Related Commands		
Note		

ipv6 dhcp relay instance

[no] ipv6 dhcp relay instance <instance-id> address <ipv6-address or list of addresses>

Configure the server address on a particular instance.
Instance without assigned addresses will send to All_DHCP_servers address.
The no form of the command will delete the server address from instance.

Syntax Description	instance-id	DHCP instance ID. Range: 1-8.
	ipv6-address	Valid global unicast IPv6 server address. Up to 16 addresses can be assigned per instance.
Default	instance-id	No
Configuration Mode	Config	
History	3.6.4070	Initial release
Role	admin	
Example	switch (config router bgp)# ipv6 dhcp relay instance 1 address 2001::1 switch (config router bgp)#	
Related Commands		
Note		

ipv6 dhcp relay instance address

[no] ipv6 dhcp relay instance <instance-id> address <link local address>

Configure the server address on a particular instance on specific interface.
Only link local address is supported
The no form of the command will delete the server address from instance.

Syntax Description	instance-id	DHCP instance ID. Range: 1-8.
	ipv6-address	Valid global unicast IPv6 server address. Up to 16 addresses can be assigned per instance.
Default	instance-id	No
Configuration Mode	Config	
History	3.6.4070	Initial release
Role	admin	
Example	switch (config router bgp)# ipv6 dhcp relay instance 1 address fe80::1 switch (config router bgp)#	
Related Commands		
Note		

ipv6 dhcp relay instance interface-id option

[no] ipv6 dhcp relay instance <instance-id> interface-id option

Enables the instance to insert interface-id option. Default interface-id is an interface name e.g. vlan1, eth1/1

The no form of the command will disables this option.

Syntax Description	instance-id	DHCP instance ID. Range: 1-8.
Default	instance-id	No
Configuration Mode	Config	
History	3.6.4070	Initial release
Role	admin	
Example	switch (config router bgp)# ipv6 dhcp relay instance 1 interface-id option switch (config router bgp)#	
Related Commands		
Note		

ipv6 dhcp relay instance vrf

[no] ipv6 dhcp relay instance <instance-id> vrf <vrf-name>

Configures instance in the given VRF.

The no form of the command will move the instance back to default VRF.

Syntax Description	instance-id	DHCP instance ID. Range: 1-8.
	vrf-name	Name of VRF.
Default	instance-id	No
Configuration Mode	Config	
History	3.6.4070	Initial release
Role	admin	
Example	switch (config router bgp)# ipv6 dhcp relay 1 vrf blue switch (config router bgp)#	
Related Commands		
Note	When an instance is moved from one VRF to another - it loses all its current configuration.	

ipv6 dhcp relay instance port

[no] ipv6 dhcp relay instance <instance-id> port <udp-port>

Modifies the UDP port for the given instance.
The no form of the command will set the UDP port to default value.

Syntax Description	instance-id	DHCP instance ID. Range: 1-8.
	vrf-name	UDP Port ID. Range: 1-65534. Default: 547.
Default	instance-id	No
Configuration Mode	Config	
History	3.6.4070	Initial release
Role	admin	
Example	switch (config router bgp)# ipv6 dhcp relay 1 port 555 switch (config router bgp)#	
Related Commands		
Note		

ipv6 dhcp relay instance

ipv6 dhcp relay instance <instance-id> [upstream | downstream]

Modifies the UDP port for the given instance.
The no form of the command will set the UDP port to default value.

Syntax Description	instance-id	DHCP instance ID. Range: 1-8.
	upstream	The interface on which queries will be received from clients or from other relay agents.
	downswream	The interface to which queries from clients and other relay agents should be forwarded.
Default	N/A	
Configuration Mode	Config Interface Ethernet	
History	3.6.4070	Initial release
Role	admin	
Example	<pre>switch (config router bgp)# ipv6 dhcp relay instance 1 upstream switch (config router bgp)#</pre>	
Related Commands		
Note	<ul style="list-style-type: none"> • Error will occur if interface/port is already bind to an existing instance • If instance doesn't exist, it will be created • Each interface is either upstream or downstream. Setting another value overwrites the previous • An instance must have at least one upstream and one downstream interface to become active 	

ipv6 dhcp relay instance interface-id option

ipv6 dhcp relay instance <instance-id> interface-id option [user-defined-id]

Specifies the content of the interface-id option that will be sent by the relay agent.

Syntax Description	instance-id	DHCP instance ID. Range: 1-8.
	user-defined-id	Interface-id option content. Length: 1-15 (char) Default: interface name
Default	N/A	
Configuration Mode	Config Interface Ethernet	
History	3.6.4070	Initial release
Role	admin	
Example	<pre>switch (config router bgp)# ipv6 dhcp relay instance <instance-id> interface-id option eth1/1 switch (config router bgp)#</pre>	
Related Commands		
Note		

clear ipv6 dhcp relay counters

clear ipv6 dhcp relay counters [vrf <vrf-name> | instance <instance-id> | interface <name>]

Clears DHCP relay counters for specific instance or all instances in given VRF or all instances in the system.

Syntax Description	instance-id	DHCP instance ID. Range: 1-8.
	vrf-name	VRF name
Default	N/A	
Configuration Mode	Config Interface Ethernet	
History	3.6.4070	Initial release
Role	admin	
Example	switch (config router bgp)# clear ipv6 dhcp relay counters vrf blue switch (config router bgp)#	
Related Commands		
Note		

6.10.3.2 Show Commands

show ipv6 dhcp relay

show ipv6 dhcp relay [instance <instance-id>]

Displays general DHCP configuration on all instances.
If instance id is defined then specific instance configuration is displayed.

Syntax Description	instance-id	DHCP instance ID. Range: 1-8.
Default	instance-id	No
Configuration Mode	Config	
History	3.6.4070	Initial release
Role	admin	

Example

```
switch (config router bgp)# show ipv6 dhcp relay
```

```
Instance ID: 1
VRF Name : default
DHCP Servers: 2001::1
DHCP relay agent options:
  All_DHCP_Servers : Disabled
  Interface-id : Enabled
  UDP port : 555
  Auto-helper : Disabled
  Status: Not active
```

```
Interface  Label
-----  -
```

```
Instance ID: 7
VRF Name : default
DHCP Servers:
DHCP relay agent options:
  All_DHCP_Servers: Enabled
  Interface-id : Disabled
  UDP port : 557
  Auto-helper : Enabled
  Status: Active
```

```
Interface  Label      Mode
-----  -
vlan40     N/A         upstream
vlan50     shakal     downstream
```

```
switch (config router bgp)#
```

Related Commands

Note

show ipv6 dhcp relay counters

show ipv6 dhcp relay counters [vrf <vrf-name> | instance <instance-id>]

Displays counters of all DHCP instances configured on the system.

Syntax Description	instance-id	DHCP instance ID. Range: 1-8.
Default	instance-id	No
Configuration Mode	Config	
History	3.6.4070	Initial release
Role	admin	

Example

```
switch (config router bgp)# show ipv6 dhcp relay counters
DHCP Counter flags:
SPR: Server Packets Received, SPE: Server Packets Error
SPRE: Server Packet Relayed, CPR: Client Packets Received
RP: Relay Packets, RE: Relay Errors
Instance: 1
VRF Name: vrf-default

Req/Resp    Received    Forwarded
-----
All Req     0           0
All Res     0           0

If          SPRE        SPE         SPR         CPR
-----
Packets Relayed to Server:

Server      RP          RE
-----
2001::1     0           0

Instance: 7
VRF Name: vrf-default

Req/Resp    Received    Forwarded
-----
All Req     2           2
All Res     2           2

If          SPRE        SPE         SPR         CPR
-----
vlan40      2           0           2           0
vlan50      2           0           0           2
Packets Relayed to Server:

Server      RP          RE
-----
2001::2     2           0

Instance: 8
VRF Name: Test

Req/Resp    Received    Forwarded
-----
All Req     0           0
All Res     0           0

If          SPRE        SPE         SPR         CPR
-----
vlan60      0           0           0           0

Packets Relayed to Server:

Server      RP          RE
-----

switch (config router bgp)#
```

Related Commands

Note

Appendix A: Enhancing System Security According to NIST SP 800-131A

A.1 Overview

This appendix describes how to enhance the security of a system in order to comply with the NIST SP 800-131A standard. This standard is a document which defines cryptographically “acceptable” technologies. This document explains how to protect against possible cryptographic vulnerabilities in the system by using secure methods. Because of compatibility issues, this security state is not the default of the system and it should be manually set.



Some protocols, however, cannot be operated in a manner that complies with the NIST SP 800-131A standard.

A.2 Web Certificate

HPE supports signature generation of sha256WithRSAEncryption, sha1WithRSAEncryption self-signed certificates, and importing certificates as text in PEM format.

➤ *To configure a default certificate:*

Step 1. Create a new sha256 certificate. Run:

```
switch (config) # crypto certificate name <cert name> generate self-signed hash-algorithm sha256
```



For more details and parameters refer to the command crypto certificate name in the MLNX-OS User Manual.

Step 2. Show crypto certificate detail. Run:

```
switch (config) # show crypto certificate detail
```

Search for “signature algorithm” in the output.

Step 3. Set this certificate as the default certificate. Run:

```
switch (config) # crypto certificate default-cert name <cert name>
```

➤ *To configure default parameters and create a new certificate:*

Step 1. Define the default hash algorithm. Run:

```
switch (config) # crypto certificate generation default hash-algorithm sha256
```

Step 2. Generate a new certificate with default values. Run:

```
switch (config) # crypto certificate name <cert name> generate self-signed
```




When no options are selected, the generated certificate uses the default values for each field.

To test strict mode connect to the WebUI using HTTPS and get the certificate. Search for “signature algorithm”.



There are other ways to configure the certificate to sha256. For example, it is possible to use `certificate generation default hash-algorithm` and then regenerate the certificate using these default values. Please refer to the MLNX-OS User Manual for further details.



It is recommended to delete browsing data and previous certificates before retrying to connect to the WebUI.



Make sure not to confuse “signature algorithm” with “Thumbprint algorithm”.

A.3 SNMP

SNMPv3 supports configuring username, authentication keys and privacy keys. For authentication keys it is possible to use MD5 or SHA. For privacy keys AES or DES are to be used.

➤ **To configure strict mode, create a new user with *HMAC-SHA1-96* and *AES-128*. Run:**

```
switch (config) # snmp-server user <username> v3 auth sha <password1> priv aes-128  
<password2>
```

➤ **To verify the user in the CLI, run:**

```
switch (config) # show snmp user
```



To test strict mode, configure users and check them using the CLI, then run an SNMP request with the new users.

For more information please refer to the MLNX-OS User Manual.



SNMPv1 and SNMPv2 are not considered to be secure. To run in strict mode, only use SNMPv3.

A.4 SSH

The SSH server on the switch by default uses secure and unsecure ciphers, message authentication code (MAC), key exchange methods, and public key algorithm. When configuring SSH

server to strict mode, the aforementioned security methods only use approved algorithms as detailed in the NIST 800-181A specification and the user can connect to the switch via SSH in strict mode only.

➤ **To enable strict security mode, run:**

```
switch (config) # ssh server security strict
```



The following ciphers are disabled for SSH when strict security is enabled:

- 3des-cbc
- aes256-cbc
- aes192-cbc
- aes128-cbc
- arcfour
- blowfish-cbc
- cast128-cbc
- rijndael-cbc@lysator.liu.se

The no form of the command disables strict security mode.

Make sure to configure the SSH server to work with minimum version 2 since 1 is vulnerable to security breaches.

➤ **To configure min-version to strict mode, run:**

```
switch (config) # ssh server min-version 2
```



Once this is done, the user cannot revert back to minimum version 1.

A.5 HTTPS

By default, HPE M-series Switch supports HTTPS encryption using TLS1.0 up to TLS1.2. To work in strict mode you must configure the system to use TLS1.2. Working in TLS1.2 mode also bans MD5 ciphers which are not allowed per NIST 800-131a. In strict mode, the switch supports encryption with TLS1.2 only with the following supported ciphers:

- RSA_WITH_AES_128_CBC_SHA256
- RSA_WITH_AES_256_CBC_SHA256
- DHE_RSA_WITH_AES_128_CBC_SHA256
- DHE_RSA_WITH_AES_256_CBC_SHA256
- TLS_RSA_WITH_AES_128_GCM_SHA256
- TLS_RSA_WITH_AES_256_GCM_SHA384
- TLS_DHE_RSA_WITH_AES_128_GCM_SHA256
- TLS_DHE_RSA_WITH_AES_256_GCM_SHA384

- **To enable all encryption methods, run:**

```
switch (config) # web https ssl ciphers all
```

- **To enable only TLS ciphers (enabled by default), run:**

```
switch (config) # web https ssl ciphers TLS
```

- **To enable HTTPS strict mode, run:**

```
switch (config) # web https ssl ciphers TLS1.2
```

- **To verify which encryption methods are used, run:**

```
switch (config)# show web
Web User Interface:
  Web interface enabled: yes
  HTTP enabled: yes
  HTTP port: 80
  HTTP redirect to HTTPS: no
  HTTPS enabled: yes
  HTTPS port: 443
  HTTPS ssl-ciphers: TLS1.2
  HTTPS certificate name: default-cert
  Listen enabled: yes
  No Listen Interfaces.

  Inactivity timeout: disabled
  Session timeout: 2 hr 30 min
  Session renewal: 30 min

Web file transfer proxy:
  Proxy enabled: no

Web file transfer certificate authority:
  HTTPS server cert verify: yes
  HTTPS supplemental CA list: default-ca-list
switch (config)#
```

On top of enabling HTTPS, to prevent security breaches HTTP must be disabled.

- **To disable HTTP, run:**

```
switch (config)# no web http enable
```

A.6 LDAP

By default, HPE M-series Switch supports LDAP encryption SSL version 3 or TLS1.0 up to TLS1.2. The only banned algorithm is MD5 which is not allowed per NIST 800-131a. In strict mode, the switch supports encryption with TLS1.2 only with the following supported ciphers:

- DHE-DSS-AES128-SHA256
- DHE-RSA-AES128-SHA256
- DHE-DSS-AES128-GCM-SHA256

- DHE-RSA-AES128-GCM-SHA256
- DHE-DSS-AES256-SHA256
- DHE-RSA-AES256-SHA256
- DHE-DSS-AES256-GCM-SHA384
- DHE-RSA-AES256-GCM-SHA384
- ECDH-ECDSA-AES128-SHA256
- ECDH-RSA-AES128-SHA256
- ECDH-ECDSA-AES128-GCM-SHA256
- ECDH-RSA-AES128-GCM-SHA256
- ECDH-ECDSA-AES256-SHA384
- ECDH-RSA-AES256-SHA384
- ECDH-ECDSA-AES256-GCM-SHA384
- ECDH-RSA-AES256-GCM-SHA384
- ECDHE-ECDSA-AES128-SHA256
- ECDHE-RSA-AES128-SHA256
- ECDHE-ECDSA-AES128-GCM-SHA256
- ECDHE-RSA-AES128-GCM-SHA256
- ECDHE-ECDSA-AES256-SHA384
- ECDHE-RSA-AES256-SHA384
- ECDHE-ECDSA-AES256-GCM-SHA384
- ECDHE-RSA-AES256-GCM-SHA384
- AES128-SHA256
- AES128-GCM-SHA256
- AES256-SHA256
- AES256-GCM-SHA384

➤ **To enable LDAP strict mode, run:**

```
switch (config) # ldap ssl mode {start-tls | ssl}
```



Both modes operate using SSL. The difference lies in the connection initialization and the port used.

Appendix B: Mellanox NEO™ on Switch

Mellanox NEO is a powerful platform for data center network orchestration and management. Mellanox NEO enables data center operators to efficiently provision, monitor and operate the modern data center fabric.

Mellanox NEO serves as interface to the fabric, thereby extending existing tools' capabilities into monitoring and provisioning the data center network. Mellanox NEO uses an extensive set of REST APIs to allow access to fabric-related data and provisioning activities.

Mellanox NEO eliminates the complexity of fabric management. It automates the configuration of devices, provides deep visibility into traffic and health, and provides early detection of errors and failures.

For more information on Mellanox NEO, please refer to the NEO product brief at:

http://www.mellanox.com/related-docs/prod_management_software/PB_Mellanox_NEO.pdf.

Starting with MLNX-OS® version 3.6.2000 and NEO version 1.7, Mellanox NEO is supported on switch systems with x86 CPU architecture. Mellanox NEO is able to operate as a virtual machine directly on your switch system. Running NEO on the switch is an ideal solution for small-to-medium sized fabrics, with up to 10 HPE M-series Switches. Simply allocate one (or more for high-availability) of your HPE M-series Switches to host the Mellanox NEO virtual machine. Then follow the installation instructions in [Section B.1](#).

After its deployment, NEO will automatically discover your HPE M-series Switches over the management interface allowing you to provision and monitor all of your HPE M-series Switches from a single pain-of-glass using Mellanox NEO software.

B.1 Deploying Mellanox NEO™ on a MLNX-OS® Switch

Step 1. Obtain the NEO image and Mellanox-supplied installation script and load it on a USB drive.

Step 2. Insert the USB drive into your switch system's USB port.

Step 3. Log into the switch and enter config mode. Run:

```
switch > enable
switch # config terminal
switch (config) #
```

Step 4. Enable virtual machine (VM) on the switch. Run:

```
switch (config) # virtual-machine enable
```

Step 5. Create a VM. Run:

```
switch (config)# virtual-machine host my_NEO
switch (config virtual-machine host my_NEO)#
```

Step 6. Install the NEO image from the USB drive.

Step a. To obtain an IP address from the DHCP server, run:

```
switch (config virtual-machine host my_NEO)# install-from-usb
100.0%
[#####]
VM host my_NEO MAC is: aa:bb:cc:dd:ee:ff
switch (config virtual-machine host my_NEO)#
```

Step b. Alternatively, to configure your own MAC address, run:

```
switch (config virtual-machine host my_NEO)# install-from-usb mac aa:bb:cc:dd:ee:ff
100.0%
[#####]
VM host my_NEO MAC is: aa:bb:cc:dd:ee:ff
switch (config virtual-machine host my_NEO)#
```



For more information on the command, please refer to “switch (config virtual-machine host my_NEO)# install-from-usb” on page 1349.

Step 7. Save the VM configuration. Run:

```
switch (config)# configuration write
```

Step 8. Obtain the VM’s IP address from the DHCP server by using the provided MAC address.

Step 9. Connect to NEO’s GUI by entering this IP address into your web browser.

B.2 Getting Familiar with Mellanox NEO GUI



The screen captions used in this section are relevant for NEO 1.7 only. For more up-to-date information, please refer to the Mellanox NEO User Manual.

The Mellanox NEO software has several main GUI views. Before exploring the different options, it is recommended to perform the following steps:



The steps below can be performed by administrators only.

1. Click the “Settings” tab:
 - a. Select the “Users” view to add new Mellanox NEO users, and define users’ roles and credentials.
 - b. Select the “Email” view to add recipient lists. Upon user’s definition, these lists could be used to distribute specific event alerts to a group of recipients.
2. Click the “Events” tab to activate and deactivate events, and define the severity, condition-value, description and notification parameters for each event.

B.2.1 Account Password, General Information, User Manual and Log-out Menu

By clicking on the small profile icon at the top right corner of the interface’s frame, a drop down menu appears. Users can change their account password, read about the Mellanox NEO version used, access the User Manual, and log-out of the system.

Figure 38: NEO GUI



B.2.2 Network Notifications Icon

Clicking on the small envelope icon on the top right corner of the interface’s frame, will lead to the “Notifications” tab. The number next to the icon indicates the quantity of unread network notifications.



B.2.3 Main Tabs/Categories/Navigator Buttons

The following table describes the main Mellanox NEO™ windows and categories:

Table 59 - Navigator Tabs

Icon	Function	Description
	Dashboard	Provides single view highlighting information and network status.
	Managed Elements	Provides a list of devices, inventory, ports and groups.
	Network Map	Provides a visual view of the physical connectivity between managed devices.
	Services	Provides automation tools for complex networking configurations.
	Reports	Presents several reports of information collected by the management system, and allows to save and load them.
	Tasks	Displays future scheduled Jobs.
	Jobs	Displays all the running and completed jobs in the system.
	Events	Provides notification events or critical device faults of the switch and server data events. The “Events Policy” view allows the user to activate and deactivate events, and define the severity, condition-value, description and notification parameters for each event.
	Notifications	Available for administrators only. Displays all network notifications.

Table 59 - Navigator Tabs

Icon	Function	Description
	Logs	Available for administrators only. Displays detailed logs and alarms that are filtered and sorted by category.
	System Health	Available for administrators only. Provides information on Mellanox NEO building blocks.

B.2.3.1 Dashboard Window

The Mellanox NEO dashboard enables an efficient network view from a single screen, and serves as a starting point for event or metric exploration. The central dashboard provides single view highlighting information and network status in the following smaller dashboard windows:

- Last 24 Hours Events
- Devices Heatmap
- Fabric Utilization (pie chart which also appears in the daily report)
- Top Alerted Devices
- Recent Activity

B.2.3.2 Network Map Window

The Network Map window shows the fabric, its topology, elements and properties. NEO performs automatic fabric discovery and displays the fabric elements and the connectivity between the elements. In the Network Map window you can see how the fabric and its elements are organized (e.g., switches and servers).

B.2.3.3 Services Window

The Tools panel provides automation tools for complex networking configurations. The tools available in this panel are: Virtual Modular Switch, Lossless Fabric, MLAG, and MTU.

B.2.3.4 Reports Window

The Reports panel presents several reports of information collected by the management system. Mellanox NEO™ offers several options of reports: per ports or per devices.

B.2.3.5 Tasks Window

The Tasks panel presents user's defined tasks (future scheduled Jobs). The following tasks are supported:

- Selecting a single or multiple devices and setting an action such as software upgrade or provisioning (CLI-command) and the action setting data
- Selecting specific action on device / devices and create a task from this action and its setting data
- Adding or deleting a task
- Dynamically selecting devices using filters (wildcards) tasks

B.2.3.6 Jobs Window


The Jobs panel displays all of Mellanox NEO’s running Jobs. A Job is a running task defined by a user and applied on one or more of the devices (provisioning, software upgraded, switch reboot etc.)

Mellanox NEO users can monitor the progress of a running job, as well as the time it was created, its last update description and its status. The status value can be “Running”, during operation, “Pending”, in case another job is already running, “Completed with Errors”, in case an error has occurred, and “Completed”. To cancel a pending job, right-click on the relevant job, and then choose “Abort”.

Table 60 - Job States

Job State	Description
Created	Job was created and will shortly start running.
Pending	Job is pending by Mellanox NEO. This state appears in case another job that contains at least one common device is already running.
Running	The pending job was released and is now running.
Completed	All sub-jobs were completed successfully
Completed with Errors	All sub-jobs were completed, but on some of them, errors occurred.
Aborted	A pending job was canceled by the user.

Figure 39: NEO Jobs

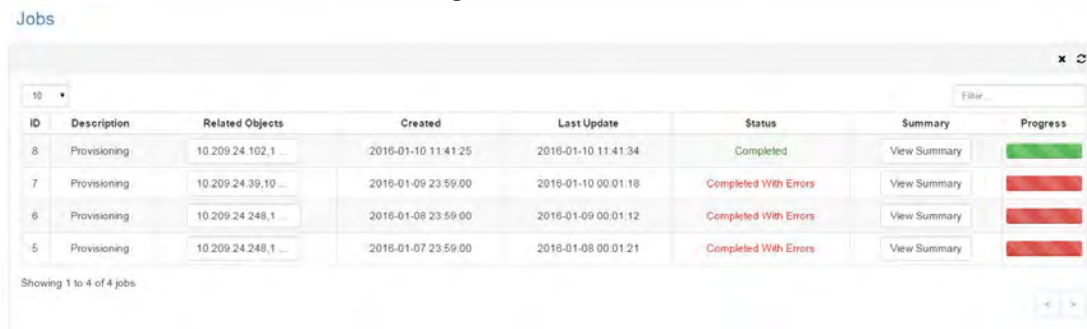

Jobs can also be tasks scheduled by the system. In such cases, the users can monitor the progress of these jobs but cannot control them.

B.2.3.7 Events Window

Mellanox NEO™ includes an advanced granular monitoring engine that provides real time access to switch and server data events. Network events can either be notification events or critical device faults. The events information includes severity, time.

B.2.3.8 Notifications Window



This panel is visible to administrators only.

The “Notifications” tab is Mellanox NEO’s incoming messages box, providing the administrators network notifications.

B.2.3.9 Logs Window



This panel is visible to administrators only.

The Logging panel presents detailed logs and alarms that are filtered and sorted by category, providing visibility into traffic and device events as well as into Mellanox NEO server activity history.

B.2.3.10 System Health Window



This panel is visible to administrators only.

The System Health panel is composed of two windows:

- Providers

Providers are the building blocks of Mellanox NEO. Each provider runs a specific service such as **Managing Device Access**, **Device Provisioning**, and **IP Discovery**. Providers are controlled by a controller. They can either run together with the controller on the same machine or separately on a different device or VM (or container in the future).

- High Availability

This window enables configures NEO high availability and is meant to grant more stability to the system.


B.3 Fabric Dashboard for On-Screen Status Monitoring



The screen captions used in this section are relevant for NEO 1.7 only. For more up-to-date information, please refer to the Mellanox NEO User Manual.

The Dashboard contains a snapshot of the network view and day to day required information such as Notifications, Events and Jobs.

Figure 40: Fabric Dashboard

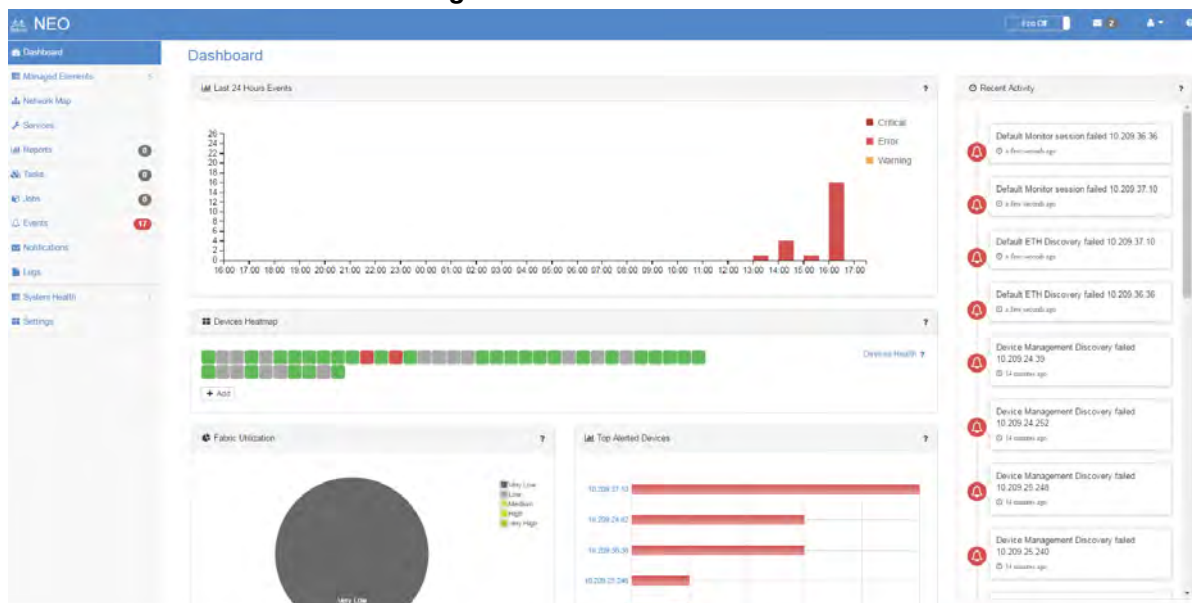


Network activities are displayed in the following manner.

B.3.1 Last 24 Hours Events

Last 24 Hours Events displays the events that occurred over the last 24 hours in an axis view where each column displays the level of severity per hour. The severity levels are grouped into one column.

Figure 41: 24-Hour View

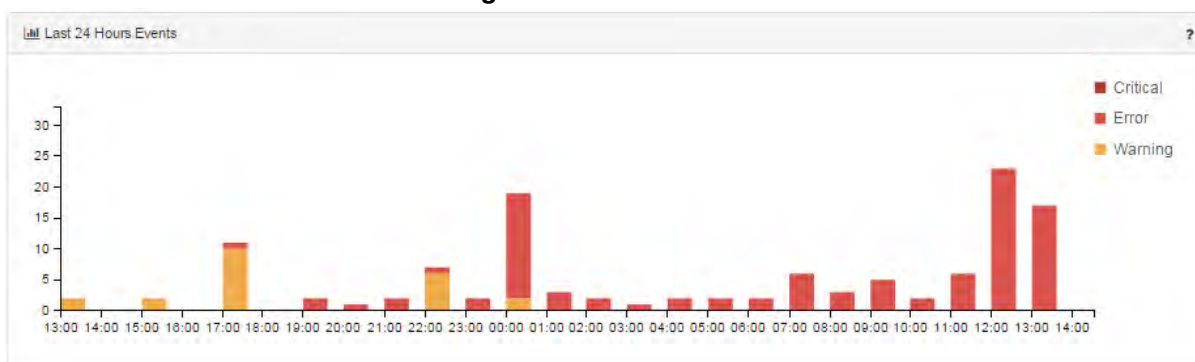

6.10.4 Devices Heatmap

Devices Heatmap displays all the devices in different colors according to the severity of their health state. Once clicked on a certain device, you will be directed to the Devices tab under Managed Elements where you can access all information about that device.

The colors imply the following health states:

- Green – OK

- Grey – Unknown
- Orange – Degraded
- Red – Major
- Dark Red – Critical


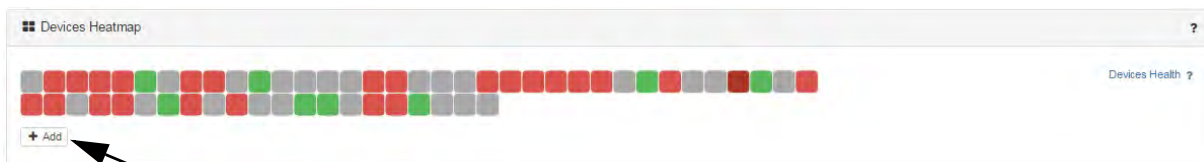
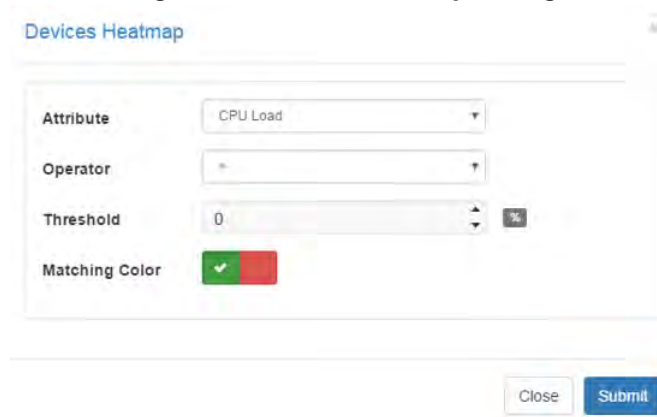
Through the Devices Heatmap panel, you can apply filters by clicking the  icon (Figure 42).

Figure 42: Device Heatmap



The following filter dialog will be displayed.

Figure 43: Device Heatmap Dialog




After customizing a certain filter for the devices, you can choose either the red or the green color to denote the devices that match your filter.

Example:

If you wish to filter for the devices that their CPU load is greater than 5, you need to select the “CPU Load” as the Attribute, the “>” icon as the Operator, and “5” as the Threshold. If you wish to view the devices you filtered in green, choose the green color as the Matching Color (Figure 44).

Figure 44: Device Heatmap Dialog Example

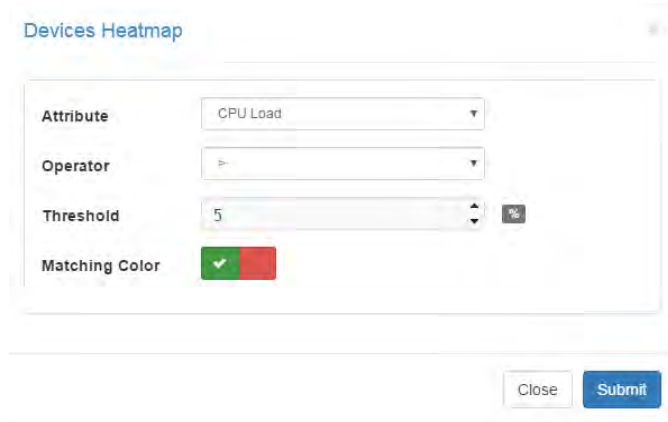

Once clicked on “Submit”, the customized filter will be added to the bottom of the Devices Heatmap panel in the Dashboard (see below). The filters will be stored in the browser’s local storage so on any user login or page reload, the heatmap panel will remain saved with all applied filters.


Figure 45: Device Heatmap Example



On the right side of the panel, you can find:

- Brief text that describes the filtered criterion, and a square icon colored with the Matching Color (in this example, CPU Load > 5, green). If you click on the description, you will be able to edit your current customized filter.
- Recycle bin icon (🗑️) that enables you to delete the filtered heatmap.
- Help icon (“?”) that displays your devices’ criteria according to the defined colors.


Figure 46: Device Heatmap Key

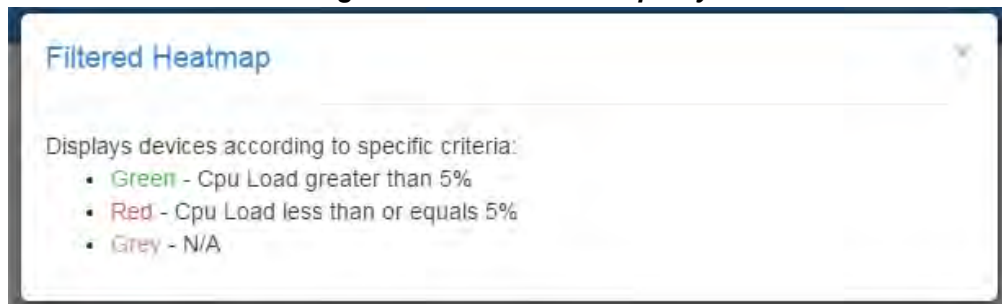

6.10.5 Fabric Utilization

Fabric Utilization displays information on groups of switches in a pie chart view where each switch belongs to a group according to its utilization status.

Figure 47: NEO Fabric Utilization Display

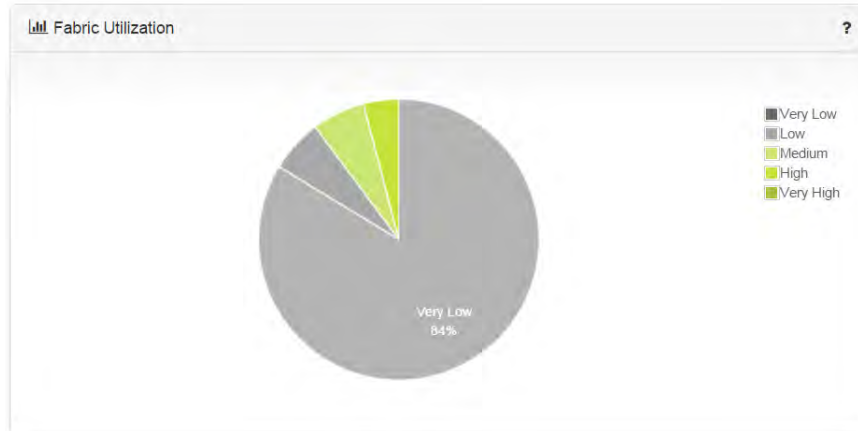

Utilization of all devices which are part of a specific category can be seen by clicking on any of the colors in the pie chart.

Figure 48: Fabric Utilization of Device per Category


Switches

IP	Value
10.209.36.140	54%
10.209.36.141	53%

6.10.6 Top Alerted Devices

Top Alerted Devices displays the total amount of critical events for the selected switches.

Figure 49: Top Alerted Devices

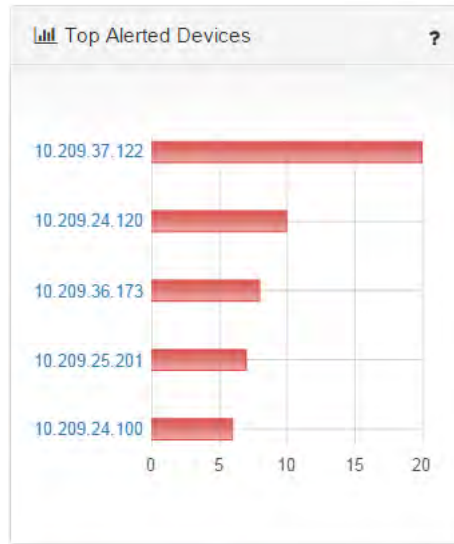

6.10.7 Recent Activity

Recent Activity provides direct access to the most recent 20 events, jobs and notifications in a date descending order.

Once clicked on the Event icon on the left side of each activity, you will be directed to the Events tab where you can access all information about that event.

Table 61 - Recent Activity Icon Description




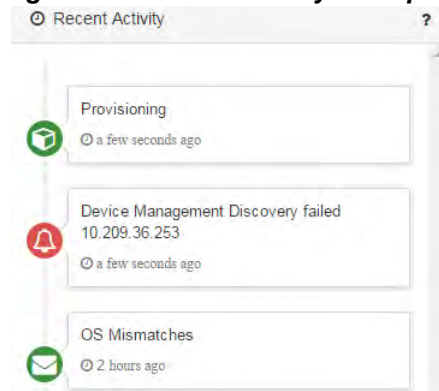
Icon	Description
	Jobs
	Events
	Notifications

Figure 50: Recent Activity Examples



Appendix C: Show Commands Supported by JSON API

Table 62 lists the “show” commands which currently support JSON API.



The character “*” indicates a wildcard.

Table 62 - JSON API Show Commands

Ethernet Commands
show interfaces ethernet transceiver
show interfaces ethernet * transceiver
show interface ethernet * status
show interface ethernet status
show interfaces ethernet * counters
show interfaces port-channel * counters
show interfaces mlag-port-channel * counters
show interfaces ethernet capabilities
show ip interface brief
show ip load-sharing
show lacp interfaces port-channel * system-identifier
show lldp timers
show lldp statistics global
show qos interface port-channel *
show vrf
show vrf *
show routing-context vrf
show interfaces ethernet * description
show interfaces ethernet description
show interfaces ethernet * transceiver diagnostics
show interfaces ethernet
show interfaces ethernet *
show dot1x interfaces ethernet
show dot1x interfaces ethernet *
show ip igmp snooping interfaces
show ip igmp snooping querier vlan *
show ip igmp snooping querier counters
show ip igmp snooping querier counters vlan *

Table 62 - JSON API Show Commands

show ip igmp snooping querier counters vlan * group *
show ip igmp snooping vlan *
show ip igmp snooping statistics
show ip igmp snooping mrouter
show interfaces vlan
show interfaces vlan *
show interfaces vlan status
show ip arp count
show ip interface vlan *
show interfaces port-channel
show interfaces port-channel *
show interfaces port-channel load-balance
show interfaces mlag-port-channel
show interfaces mlag-port-channel *
show openflow tables
show isolation-group
show isolation-group *
show interfaces proxy-arp
show interfaces proxy-arp *
show qos interface ethernet *
show qos interface mlag-port-channel *
show mac-address-table aging-time
show mac-address-table summary
show vrrp
show vrrp vr *
show vrrp interface vlan *
show vrrp interface vlan * vr
show vrrp statistics
show vrrp statistics vr *
show vrrp statistics interface vlan *
Chassis Management Commands
show leds
show leds *
show battery-backup-unit * detail
show asic-version

Table 62 - JSON API Show Commands

show bios
show inventory
show fan
show module
show system capabilities
show system profile
show version
General Commands
show ha dns
show files system
show stats sample
show stats sample *
show stats chd
show stats chd *
show stats cpu
show whoami
show users
show usernames
show xml-gw
show services small-servers
show ftp-server
show telnet-server
show memory
show configuration
show configuration expanded
show configuration running
show running-config
show running-config expanded
show running-config protocol

Support and other resources

Accessing Hewlett Packard Enterprise Support

- For live assistance, go to the Contact Hewlett Packard Enterprise Worldwide website:
<http://www.hpe.com/assistance>
- To access documentation and support services, go to the Hewlett Packard Enterprise Support Center website:
<http://www.hpe.com/support/hpesc>

Information to collect

- Technical support registration number (if applicable)
- Product name, model or version, and serial number
- Operating system name and version
- Firmware version
- Error messages
- Product-specific reports and logs
- Add-on products or components
- Third-party products or components

Accessing updates

- Some software products provide a mechanism for accessing software updates through the product interface. Review your product documentation to identify the recommended software update method.
- To download product updates:

Hewlett Packard Enterprise Support Center

www.hpe.com/support/hpesc

Hewlett Packard Enterprise Support Center: Software downloads

www.hpe.com/support/downloads

Software Depot

www.hpe.com/support/softwaredepot

- To subscribe to eNewsletters and alerts:
www.hpe.com/support/e-updates
- To view and update your entitlements, and to link your contracts and warranties with your profile, go to the Hewlett Packard Enterprise Support Center **More Information on Access to Support Materials** page:

www.hpe.com/support/AccessToSupportMaterials



Important: Access to some updates might require product entitlement when accessed through the Hewlett Packard Enterprise Support Center. You must have an HPE Passport set up with relevant entitlements.

Customer self repair

Hewlett Packard Enterprise customer self repair (CSR) programs allow you to repair your product. If a CSR part needs to be replaced, it will be shipped directly to you so that you can install it at your convenience. Some parts do not qualify for CSR. Your Hewlett Packard Enterprise authorized service provider will determine whether a repair can be accomplished by CSR.

For more information about CSR, contact your local service provider or go to the CSR website:

<http://www.hpe.com/support/selfrepair>

Remote support

Remote support is available with supported devices as part of your warranty or contractual support agreement. It provides intelligent event diagnosis, and automatic, secure submission of hardware event notifications to Hewlett Packard Enterprise, which will initiate a fast and accurate resolution based on your product's service level. Hewlett Packard Enterprise strongly recommends that you register your device for remote support.

If your product includes additional remote support details, use search to locate that information.

Remote support and Proactive Care information

HPE Get Connected

www.hpe.com/services/getconnected

HPE Proactive Care services

www.hpe.com/services/proactivecare

HPE Proactive Care service: Supported products list

www.hpe.com/services/proactivecaresupportedproducts

HPE Proactive Care advanced service: Supported products list

www.hpe.com/services/proactivecareadvancedsupportedproducts

Proactive Care customer information

Proactive Care central

www.hpe.com/services/proactivecarecentral

Proactive Care service activation

www.hpe.com/services/proactivecarecentralgetstarted

Warranty information

To view the warranty for your product or to view the Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products reference document, go to the Enterprise Safety and Compliance website:

www.hpe.com/support/Safety-Compliance-EnterpriseProducts

Additional warranty information

HPE ProLiant and x86 Servers and Options

www.hpe.com/support/ProLiantServers-Warranties

HPE Enterprise Servers

www.hpe.com/support/EnterpriseServers-Warranties

HPE Storage Products

www.hpe.com/support/Storage-Warranties

HPE Networking Products

www.hpe.com/support/Networking-Warranties

Regulatory information

To view the regulatory information for your product, view the Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products, available at the Hewlett Packard Enterprise Support Center:

www.hpe.com/support/Safety-Compliance-EnterpriseProducts

Additional regulatory information

Hewlett Packard Enterprise is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements such as REACH (Regulation EC No 1907/2006 of the European Parliament and the Council). A chemical information report for this product can be found at:

www.hpe.com/info/reach

For Hewlett Packard Enterprise product environmental and safety information and compliance data, including RoHS and REACH, see:

www.hpe.com/info/ecodata

For Hewlett Packard Enterprise environmental information, including company programs, product recycling, and energy efficiency, see:

www.hpe.com/info/environment

Documentation feedback

Hewlett Packard Enterprise is committed to providing documentation that meets your needs. To help us improve the documentation, send any errors, suggestions, or comments to Documentation Feedback (**docsfeedback@hpe.com**). When submitting your feedback, include the document title, part number, edition, and publication date located on the front cover of the document. For online help content, include the product name, product version, help edition, and publication date located on the legal notices page.

Websites

General websites

Hewlett Packard Enterprise Information Library

www.hpe.com/info/EIL

Single Point of Connectivity Knowledge (SPOCK) Storage compatibility matrix

www.hpe.com/storage/spock

Storage white papers and analyst reports

www.hpe.com/storage/whitepapers

For additional websites, see Support and other resources.